## 88 5053 41 Chest


#### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.





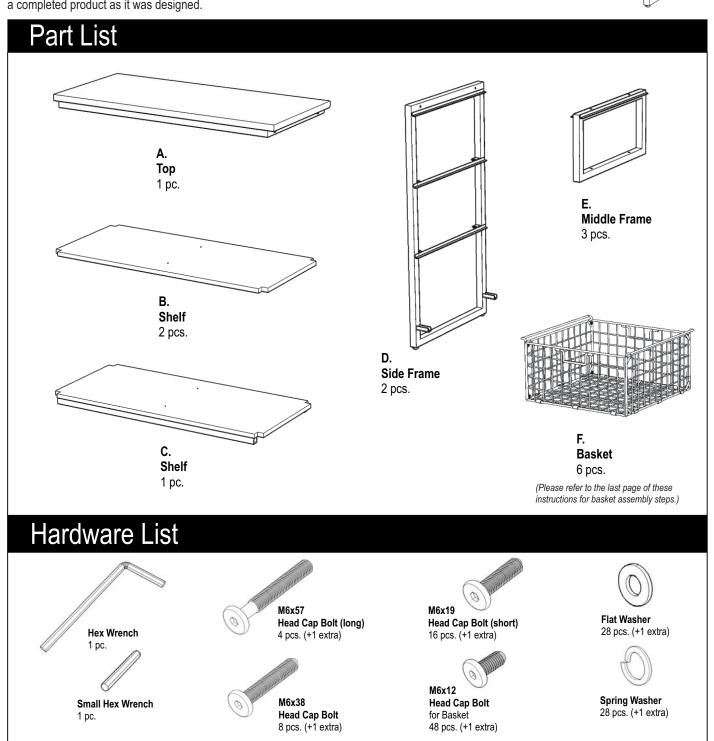


Tools required for assembly: Level

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


## Assembly Instructions 2/5

#### **IMPORTANT**

- \* Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* Do not tighten all the Head Cap Bolts until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

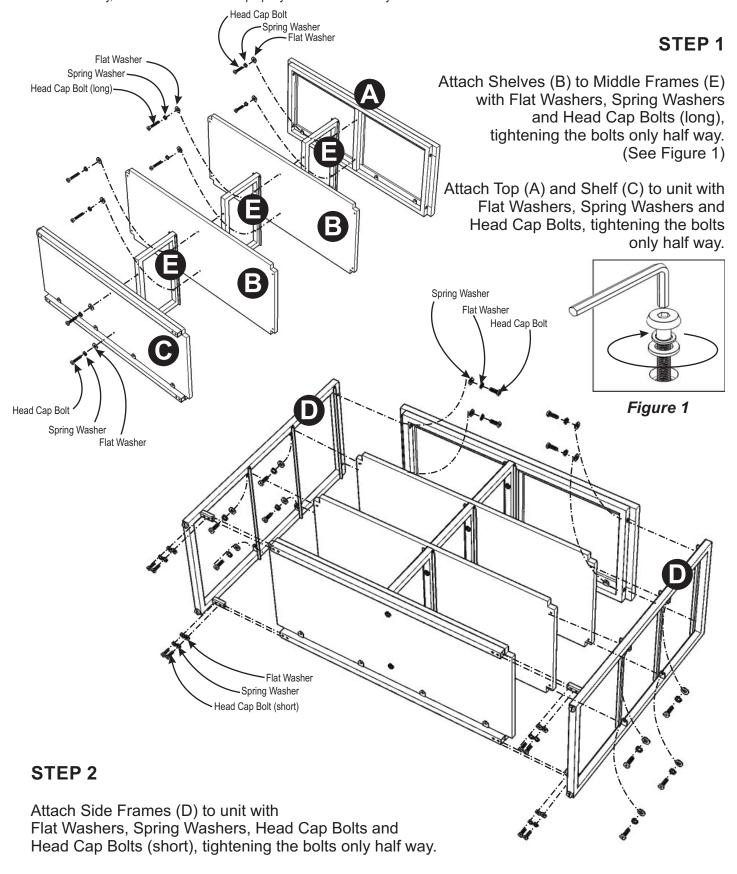

Tighten all Head Cap Bolts.

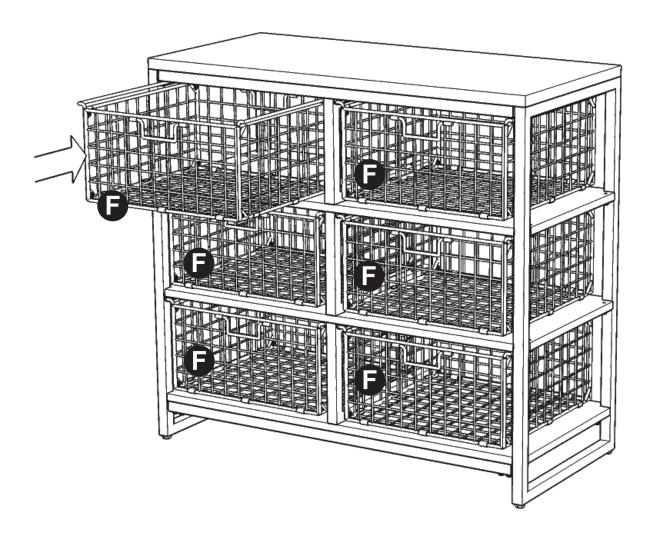

### STEP 3

Turn the unit to its' upright position.

Slide Baskets (F) into position.

To lever the unit, adjust the adjustable levelers on the bottom of unit. (See Figure 2)

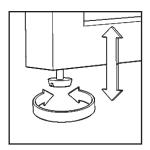


Figure 2

### Attention!

To help reduce the risk of the unit tipping over, the Tipover Restraint <u>must</u> be installed following these instructions exactly!

Place unit at desired location.

Drill a 3/8" hole in wall at the appropriate location.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Use Tipover Restraint to secure Bracket on unit to Bracket on wall. (See Figure X)

Put tie end of Tipover Restraint into loop end of Tipover Restraint and pull until tight.




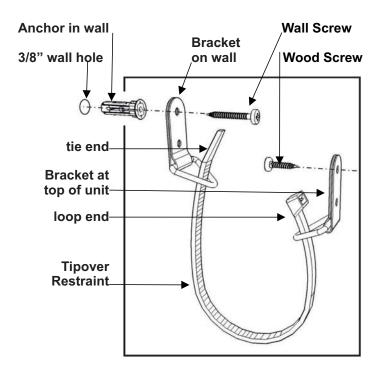



Figure X

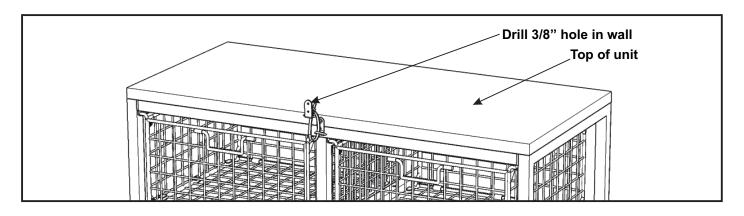

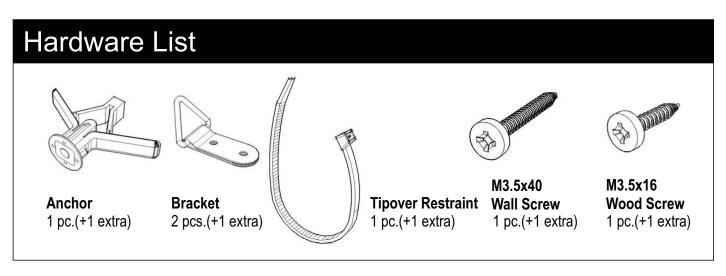

# Assembly Instructions 5/5

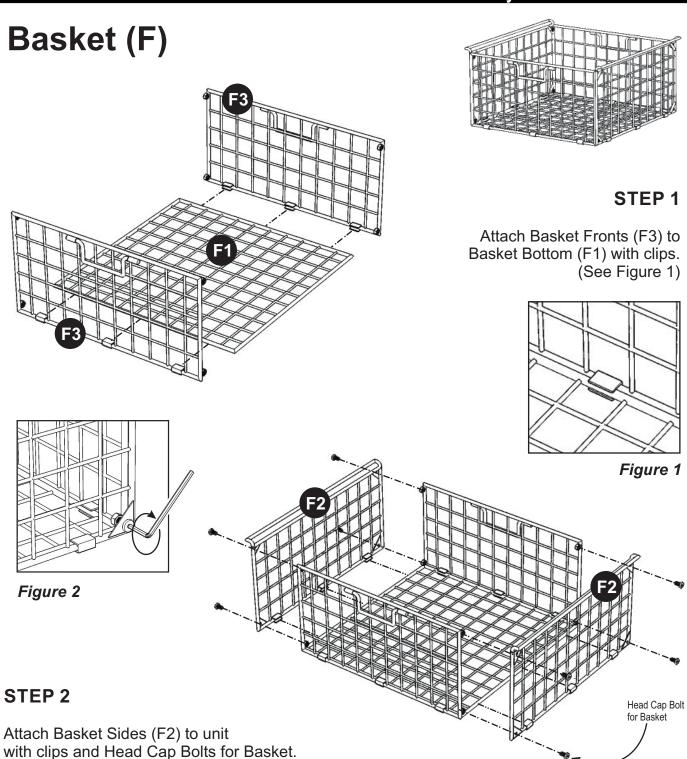

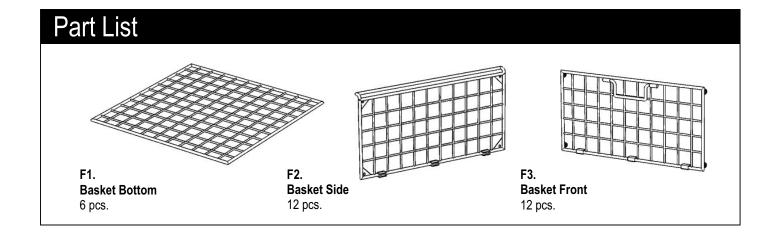

(See Figure 2)