

# GROTTO FALLS WATER FOUNTAIN WITH LED LIGHTS

## QC-236

Read the assembly instructions carefully and follow the care instructions. Save these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components of this fountain on a soft, clean surface to avoid scratching or damaging the finish.

PARTS	QTY.
Fountain	1
Electric Submersible Pump	1
Light Splitter Cable	1
AC Adapter	1



Ensure all parts are accounted for before disposing of packaging.

**NOTE:** The water tubing is built into the fountain. Take care when handling the water tube; detaching the water tube from the fountain will damage the fountain and void the product warranty.



### ASSEMBLY

1. Connect the electric submersible pump to the tubing that is built into the fountain. Place the pump into the water reservoir and run the power cord out the back of the fountain.
2. Locate the light cables inside the fountain and firmly connect them to the light splitter cable, ensuring the plastic collar is secure. Light cables and splitter are designed to be inside the fountain.
3. Run the excess light cable out the back of the fountain and firmly connect the AC adapter.
4. Fill the fountain with enough water to keep the pump fully submerged during operation.
5. Plug the power cords into a properly grounded GFCI outlet.

**Note:** When first used, there may be air in the pump. It may take several minutes for trapped air to escape, allowing water to flow.

## **IMPORTANT INFORMATION**

Over time, the paint finish may gradually mellow in color; this is part of the natural aging process.

### **USE & CARE**

- For outdoor use only.
- The lighting feature of this fountain is optional. To turn the lights off, simply unplug the 2-prong power cord.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required, avoid heavily chlorinated tap water as it may damage the fountain or pump.
- Periodically change the water to reduce scale and buildup — clean the fountain and pump regularly for optimal performance and appearance.  
DO NOT use harmful additives such as bleach, chlorine, etc.  
DO NOT use a pressure washer or abrasive materials to wash the fountain.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.
- During freezing temperatures, drain the fountain, disconnect the pump and store indoors; allowing ice to form may crack the fountain and will damage the pump.

### **TROUBLESHOOTING**

- Ensure that the pump is fully submerged and add water to the reservoir if necessary.
- Check the pump and tubing for obstructions.
- Check the flow control on the body of the pump as it may need to be adjusted to achieve the desired flow rate.
- If lights are not working, ensure the cables are fully connected and the plastic collars are adequately tightened (do not over-tighten the collars).
- If water is not flowing within several moments of the fountain being plugged in, the pump may have trapped air which can prevent water from circulating properly. Simply unplug the power supply for a few moments and plug it back in.
- Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.

*If you are still experiencing issues, please contact our customer service team through one of the methods mentioned at the top of page 1. To expedite response time, please have the item number and order information available.*

**Any modification or failure to follow the recommended care will void the product warranty.**

## **WARNING!**

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**