

BOX 1 - H	IEADBOAF	RD		BOX 3 - SIDERAILS				
PART NO.	IMAGE	DESCRIPTION	QUANTITY	PART NO.	IMAGE	DESCRIPTION	QUANTITY	
A		HEADBOARD	1	G		SIDERAIL	2	
				BOX 4 - SLAT ROLL				
В		LEFT HEADBOARD LEG	1	PART NO.	IMAGE	DESCRIPTION	QUANTITY	
С		RIGHT HEADBOARD LEG	1	н		SLAT ROLL	1	
HARDWA	RE KIT PA	CKED IN BOX 1			47			
1		ALLEN BOLT (6X35mm)	8	YOUR BOX MAY CONTAIN EXTRA HARDWARE				
2	0	SPRING WASHER (M6)	8					
3	0	FLAT WASHER (M6)	8					
		ALLEN KEY				0:30		

1

#### **BOX 2 - STORAGE FOOTBOARD**

7

PART NO.	IMAGE	DESCRIPTION	QUANTITY				
D		STORAGE FOOTBOARD	1				
E		CENTER SLAT	1				
F		LEG SUPPORT	3				
HARDWARE KIT PACKED IN BOX 2							
5	<b>©</b>	WOOD SCREW (8X30mm)	9				
6		ALLEN BOLT (6X40mm)	10				
			1				


ALLEN KEY

ALLEN KEY

### ASSEMBLE ON A SOFT SURFACE

NOT PROVIDED




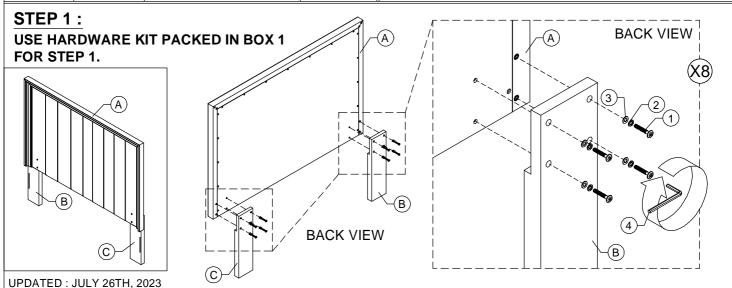




### **STEP 2:**


USE HARDWARE KIT PACKED IN BOX 2 FOR STEP 2 AND ALL REMAINING STEPS.

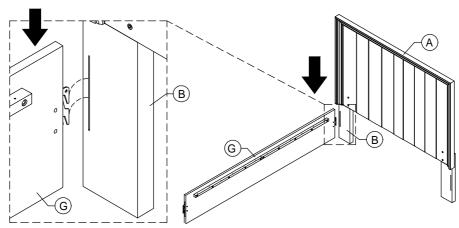


### **STEP 3:**

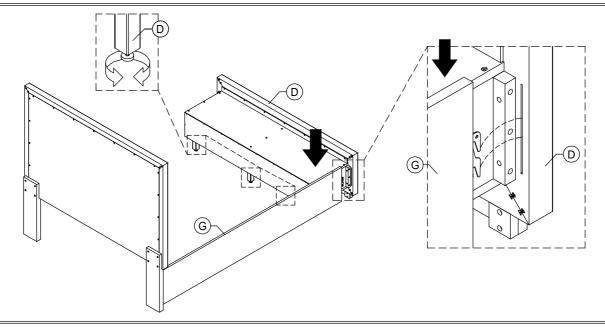



### **STEP 4:**

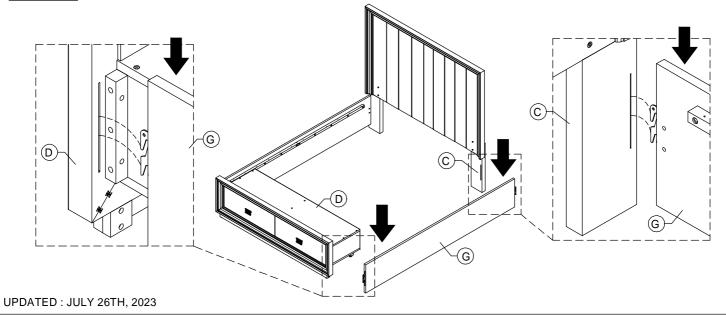





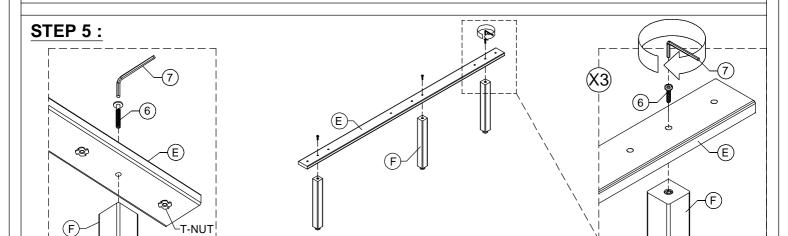

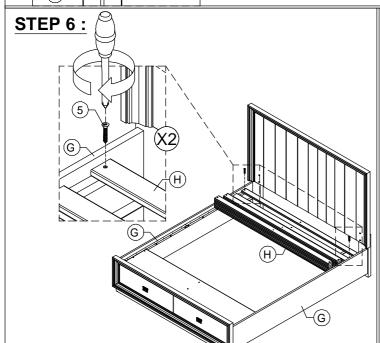

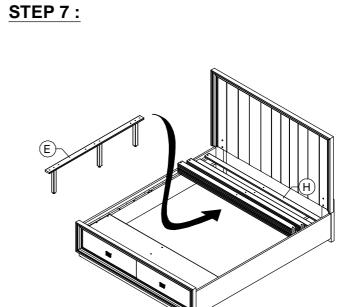


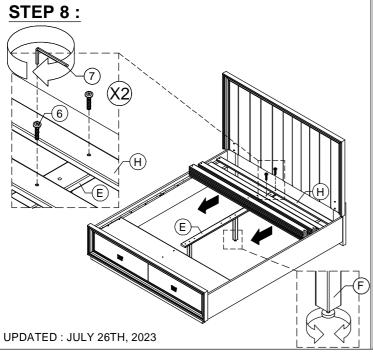


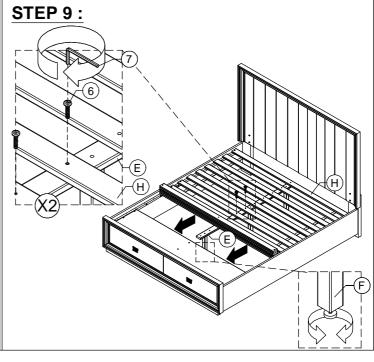



#### **STEP 10:**

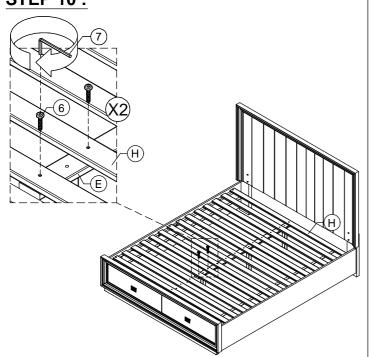

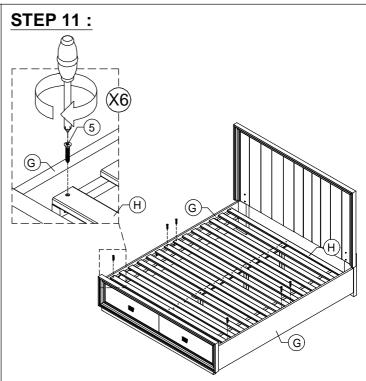

### **STEP 12:**



**ASSEMBLY COMPLETE** 

 
### INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each leg support (**F**).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

UPDATED: JULY 26TH, 2023



#### MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.