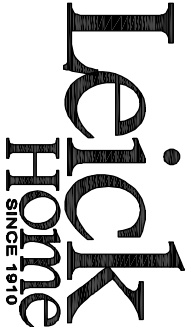 
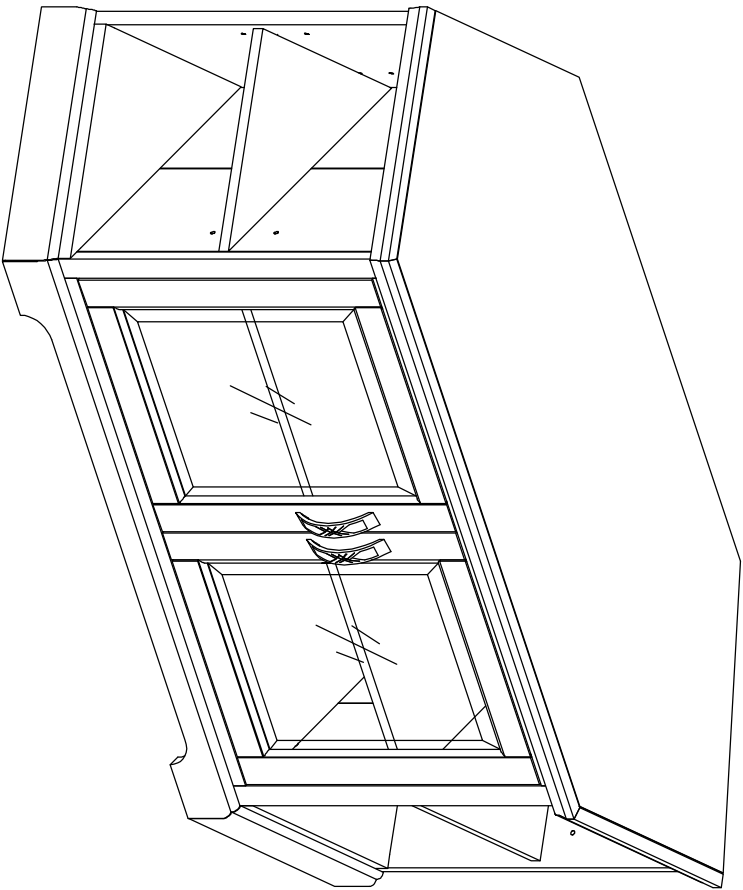 


ITEM# 81387

Chocolate Cherry & Bronze Glass 56"
Corner TV Console with Bookcase/Display



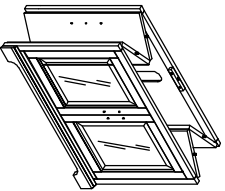 
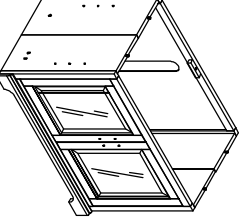 
 
 
 
 
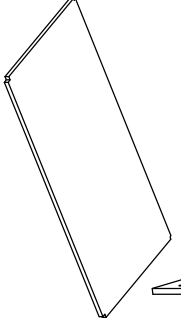 
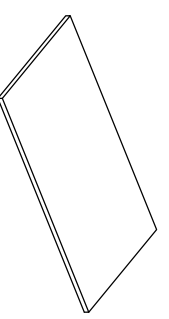 
2219 S. 19th St.
Sheboygan, WI 53081
Ph: 920-451-4060
Fax: 920-451-4063
info@leickhome.com



Hardware List

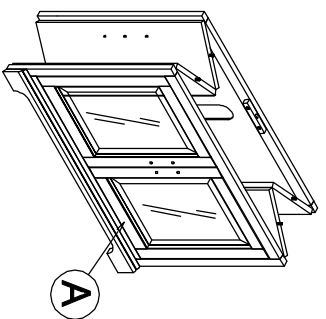 
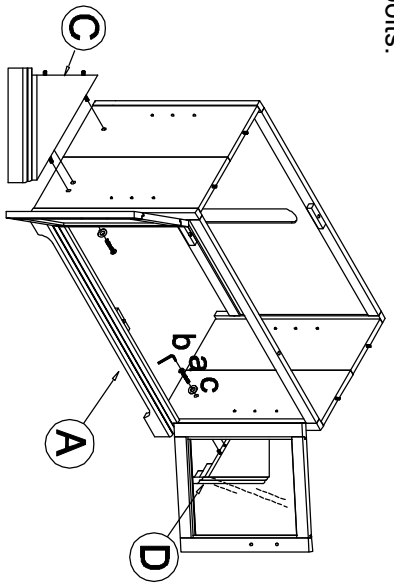 
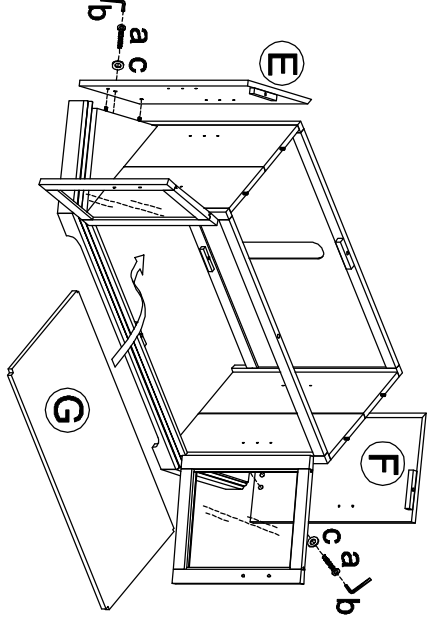 
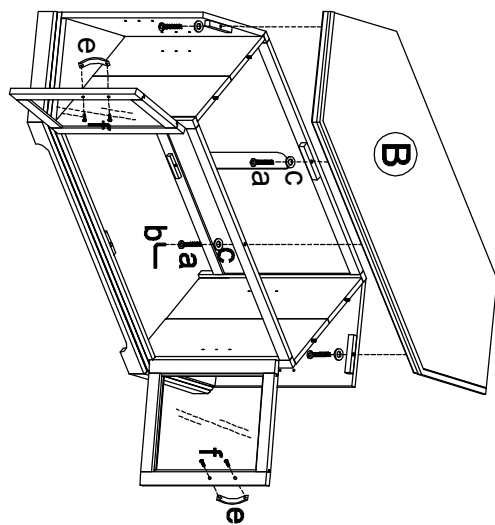 
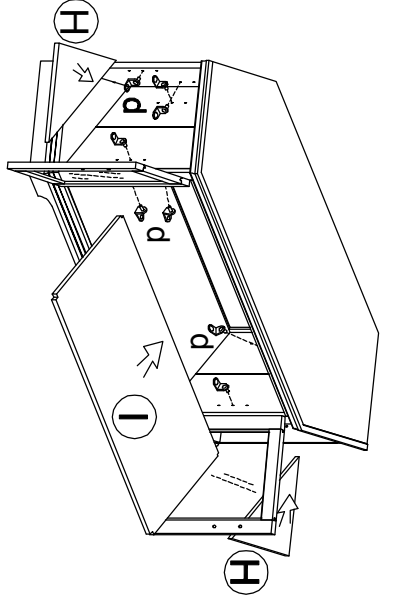 
Item	Description	Qty
a	Bolt 1/4"*1-1/8"	8PCS
b	Allen wrench	1PC
c	Washer 1/4"*12mm	8PCS
d	Shelf metal clip	12PCS
e	Door Pull	2PCS
f	Machine screw for door pull 5/32"*7/8"	4PCS
g	Wood screw 8#*1"	2PCS

Parts List

Item	Description		Qty
A	 		1PC
B	 Top Panel		1PC
C	 Left Side Bottom Panel		1PC
D	 Right Side Bottom Panel		1PC
E	 Left Side Back Panel		1PC
F	 Right Side Back Panel		1PC
G	 Middle Bottom Panel		1PC
H	 Side Adjustable Shelf		2PCS
I	 Middle Adjustable Shelf		1PC

Assembly Instructions

Two person assembly recommended.

step 1 Unfold Cabinet. 	step 2 Insert the side bottom panels and fasten with bolts. 
step 3 Insert the side back panel and fasten with bolts. Insert the center bottom panel. 	step 4 Fasten the top with 4 bolts. DO NOT OVER TIGHTEN. Install the door pulls. 
step 5 Install shelf clips and insert shelves. 	step 6 Fasten two side back panels with two screws into the cabinet. 