

Chest

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.




Part List

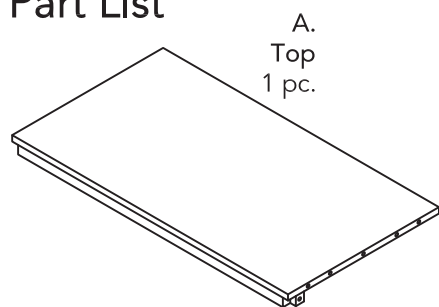


A.
Top
1 pc.

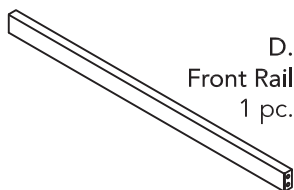


D.
Front Rail
1 pc.

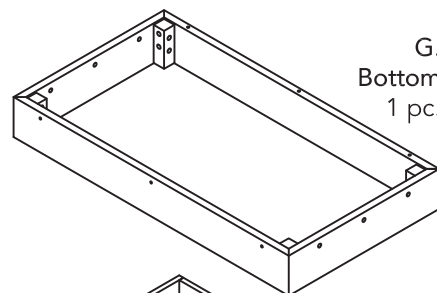


G.
Bottom
1 pc.

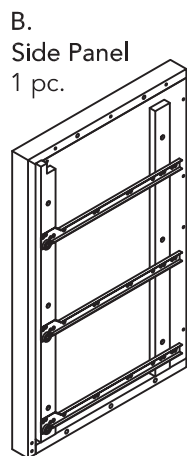


B.
Side Panel
1 pc.

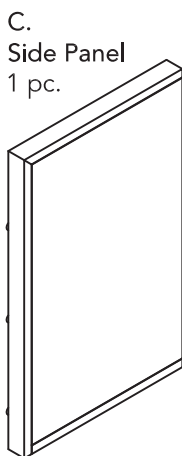


C.
Side Panel
1 pc.

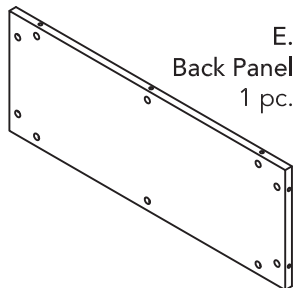


E.
Back Panel
1 pc.

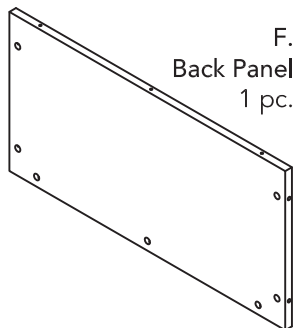

F.
Back Panel
1 pc.

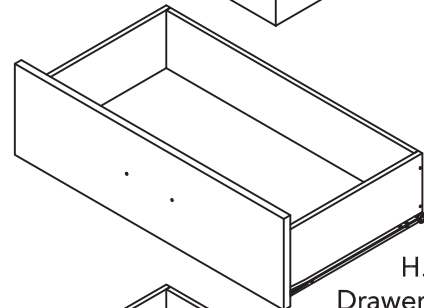

H.
Drawer
1 pc.

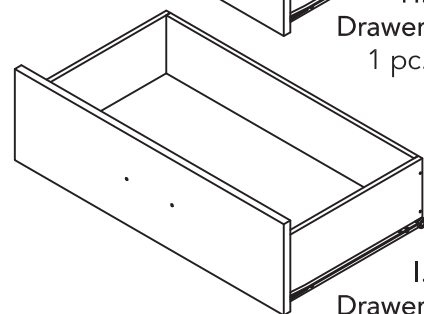

I.
Drawer
2 pcs.

Refer to later page(s) of these instructions for drawer assembly.

Hardware List



Cam Lock Screw
29 pcs. (+4 extra)



Cam Lock
29 pcs. (+4 extra)



M6x40
Head Cap Bolt
6 pcs. (+1 extra)



Spring Washer
6 pcs. (+1 extra)



Flat Washer
6 pcs. (+1 extra)



Hex Wrench
1 pc.



Hex Wrench (small)
1 pc.



M4x25
1" Round Head
Screw
3 pcs. (+1 extra)



 
M3x32
1 1/4" Flat Head
Screw
42 pcs. (+1 extra)



M3x19
3/4" Flat Head
Screw
18 pcs. (+1 extra)



5/32"x1"
Machine Screw
6 pcs.



Handle
3 pcs.



Dowel
4 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/9

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.



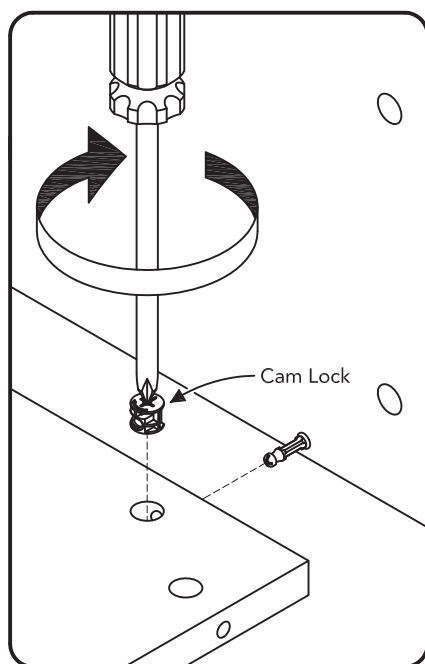


Figure 1

STEP 2

Attach Top (A) and Back Panel (F) to Back Panel (E) with Cam Locks. (See Figure 1)

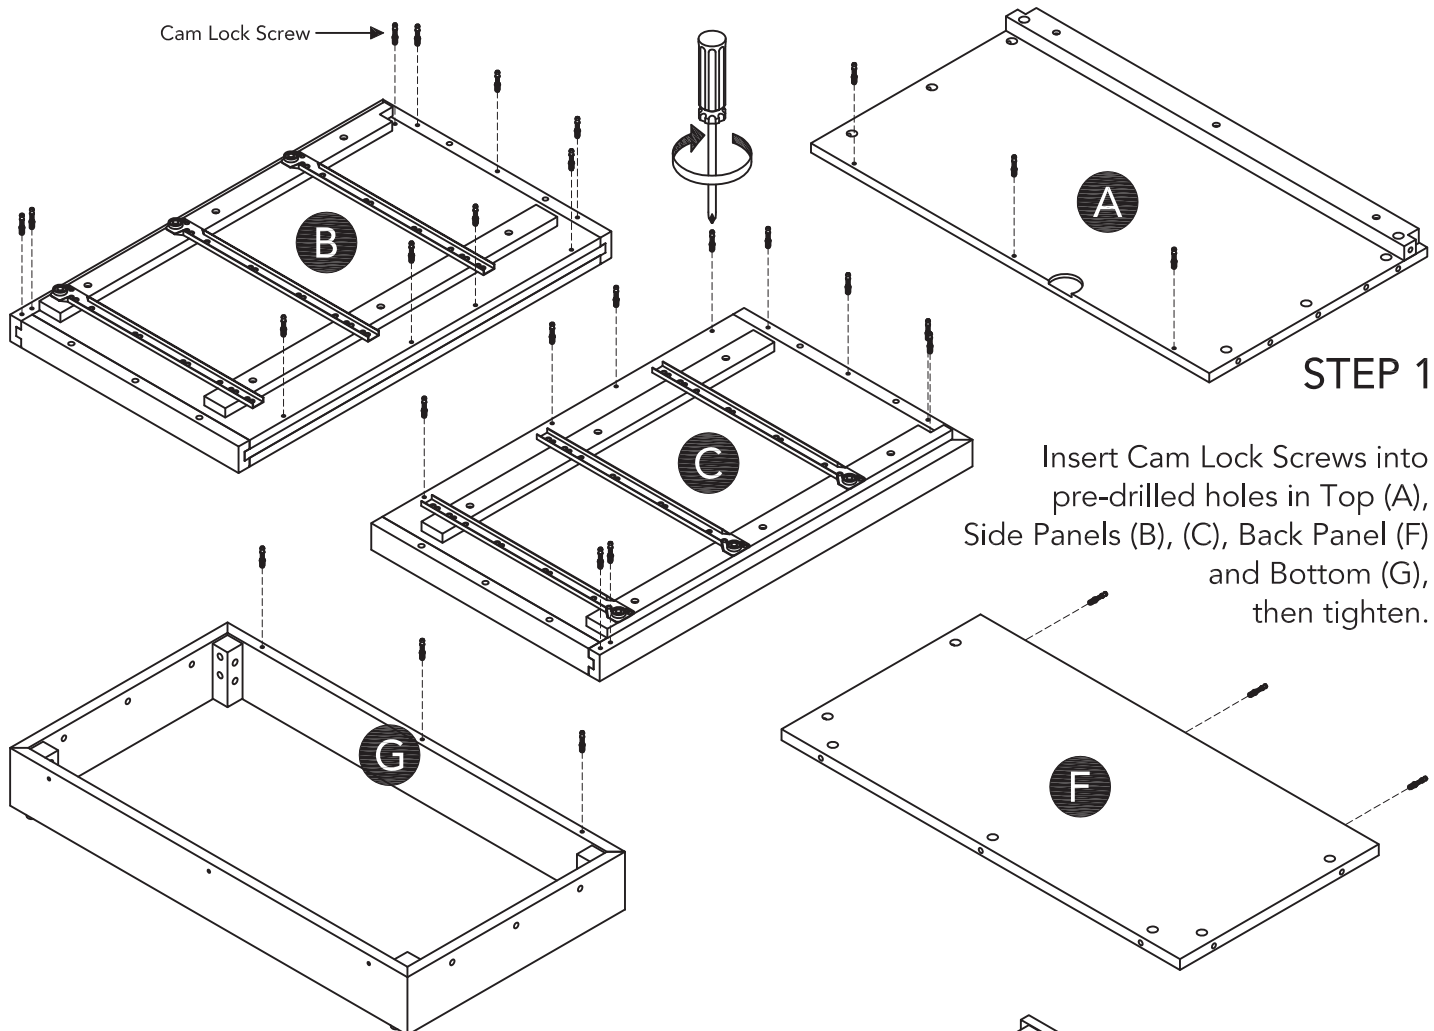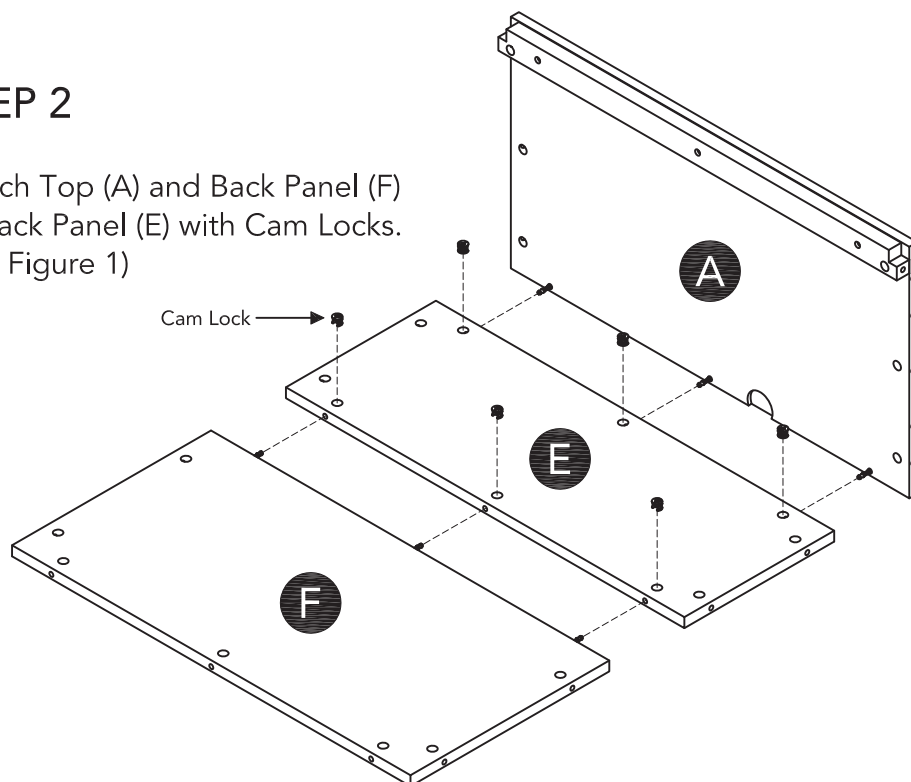

STEP 3

Attach Side Panels (B) and (C) to unit and Front Rail (D) with Dowels and Cam Locks.



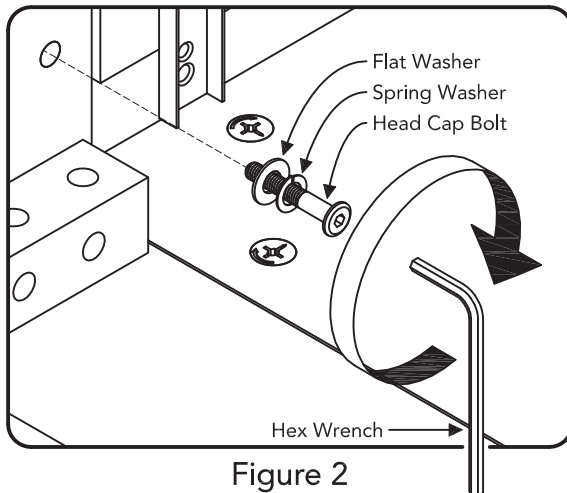


Figure 2

STEP 4

Attach Bottom (G) to unit with Cam Locks, Head Cap Bolts, Spring Washers, Flat Washers and 1" Round Head Screws.

Tighten Head Cap Bolts with Hex Wrench. (See Figure 2)

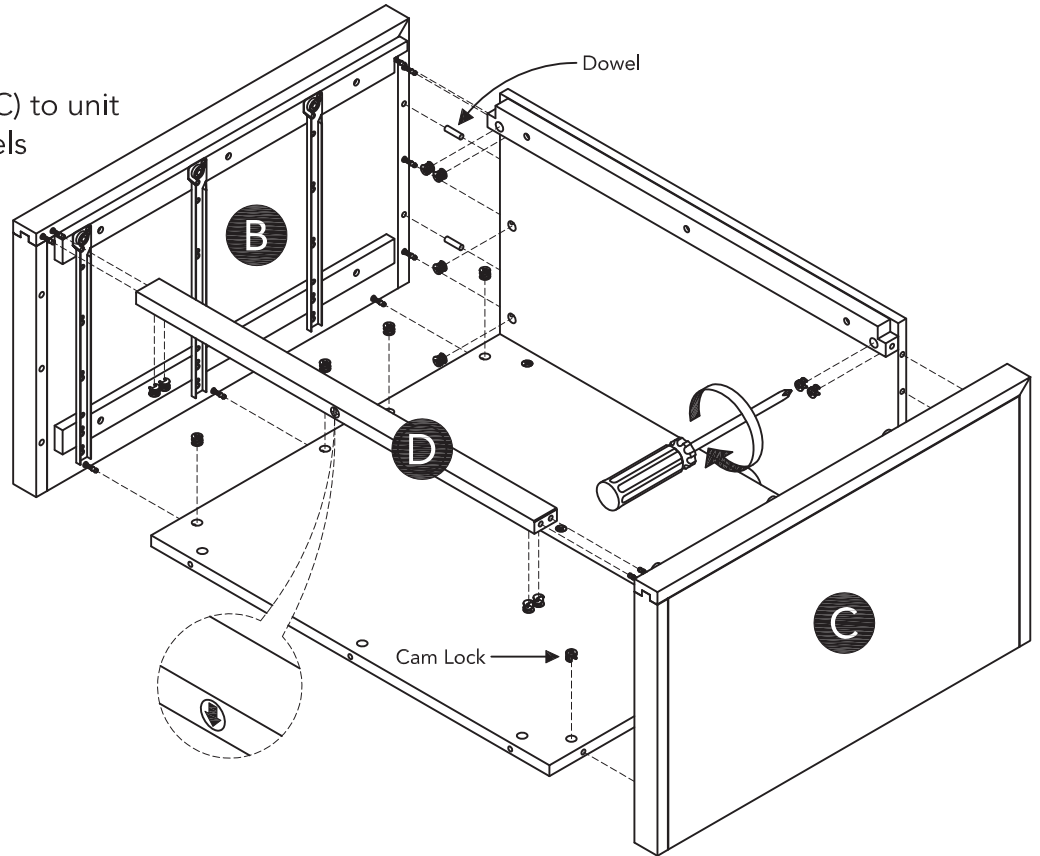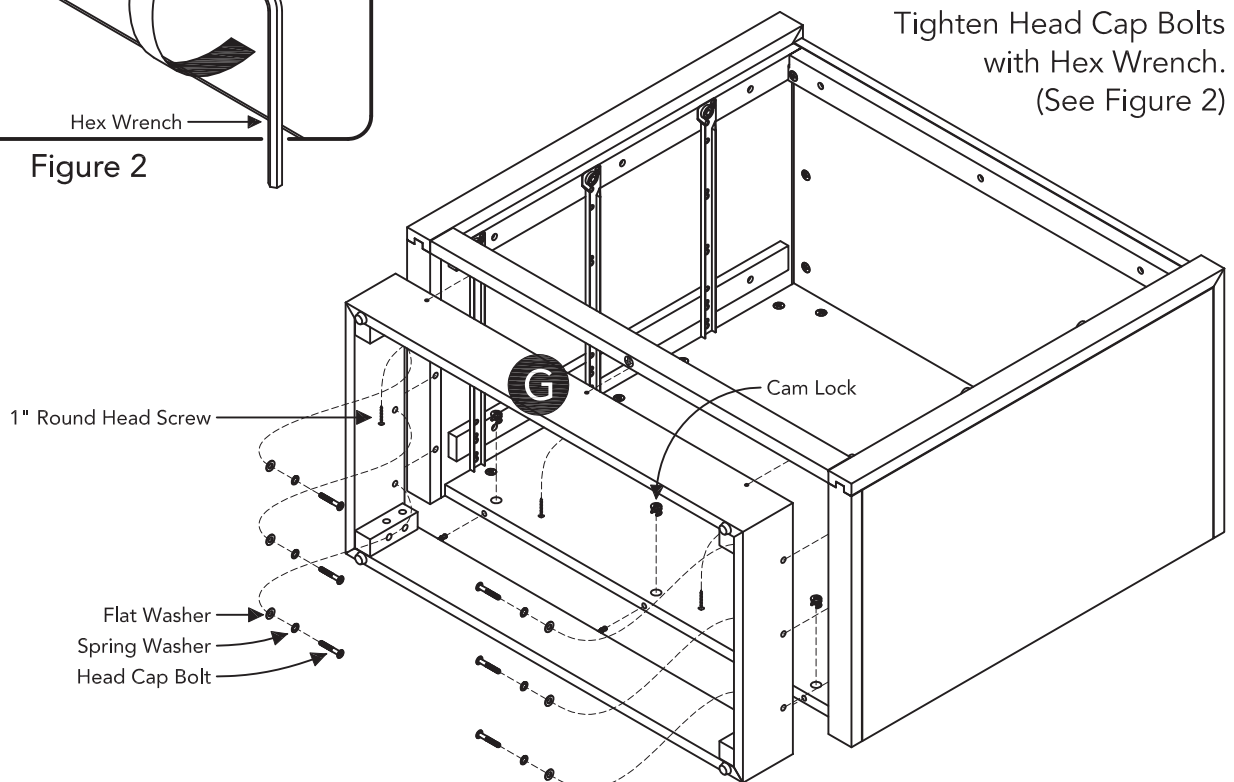

STEP 5

Turn unit to its upright position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 3)

Note: Unit must be level to work properly.

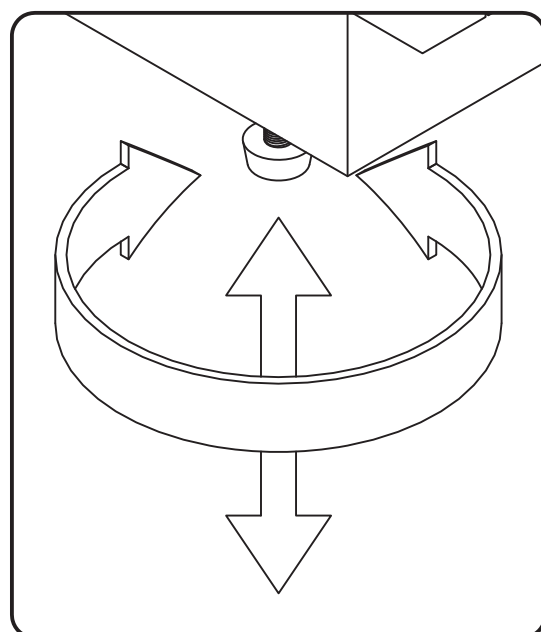
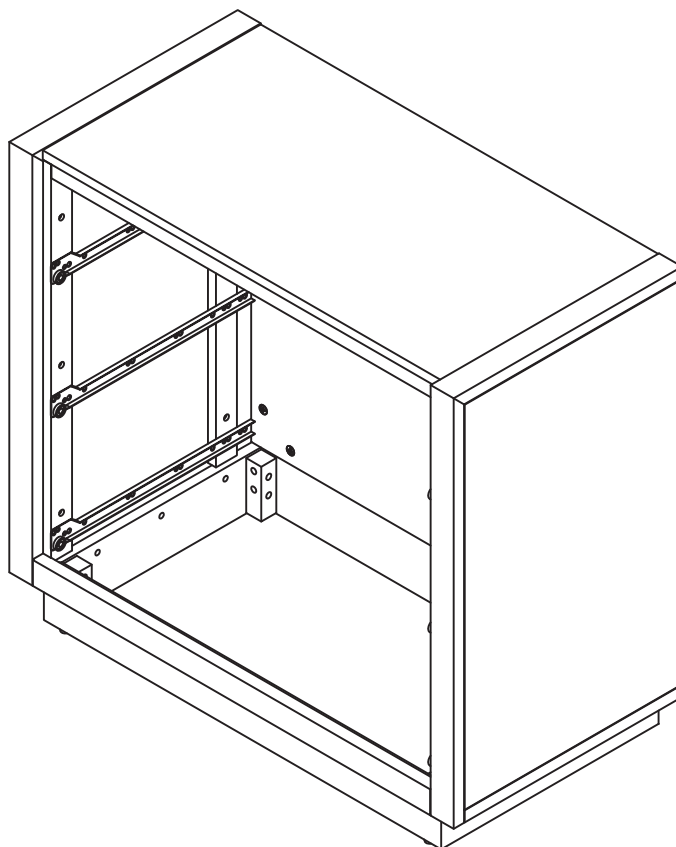


Figure 3

Assembly Instructions 5/9

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 6

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 4)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 5)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 6)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 7)

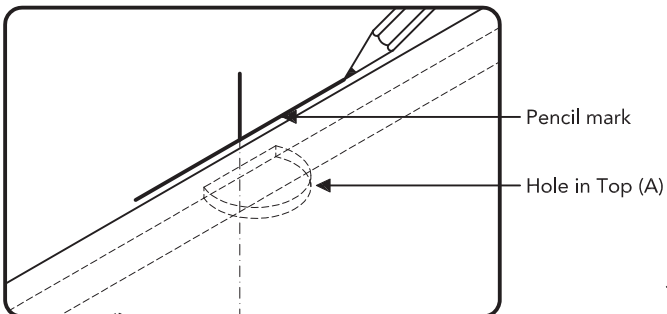
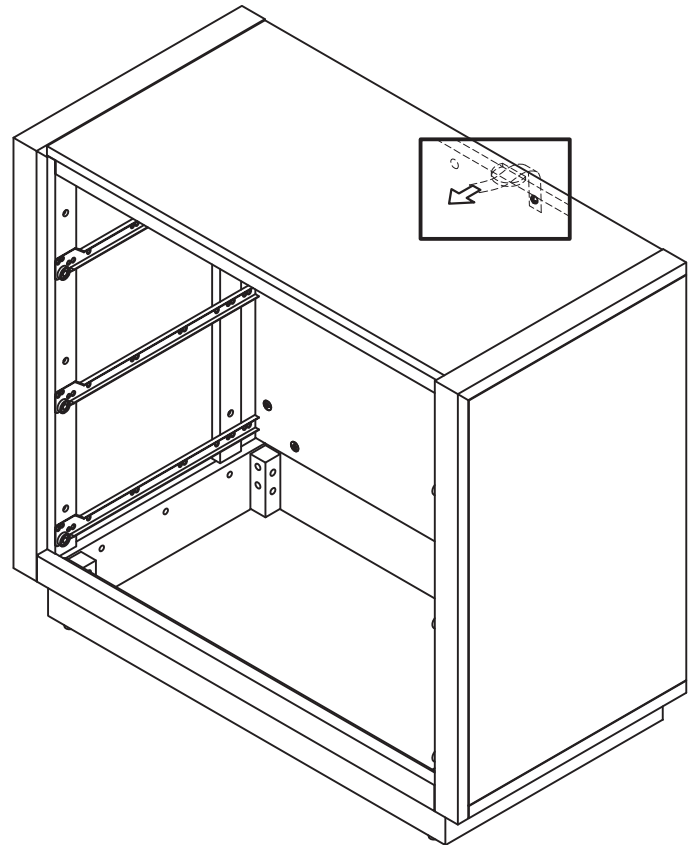


Figure 4

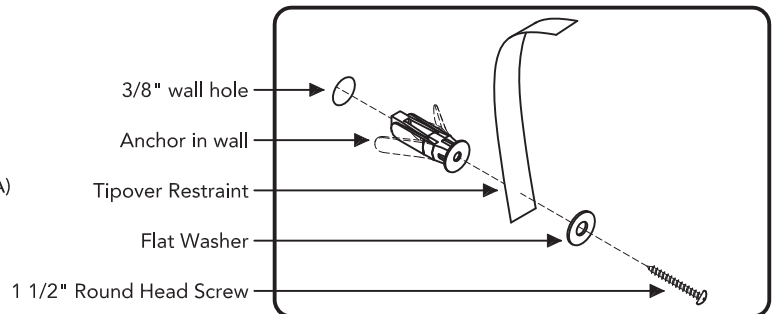


Figure 5

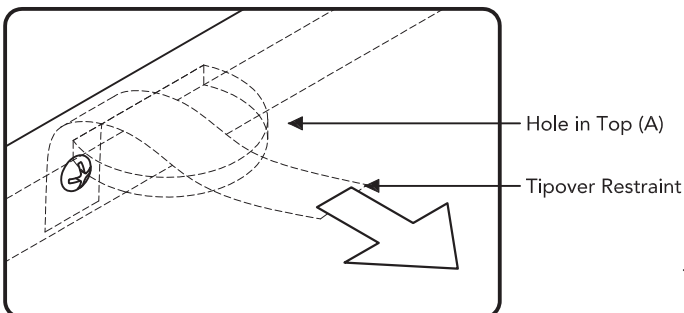


Figure 6





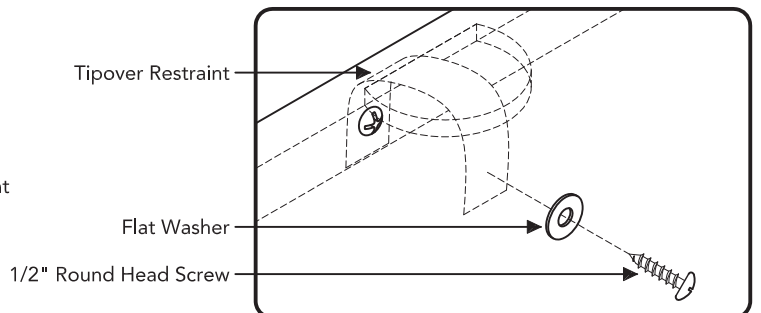


Figure 7

Hardware List

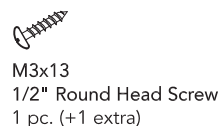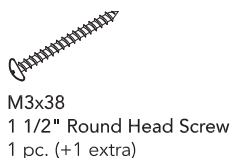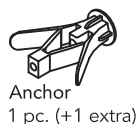

Drawer (H)

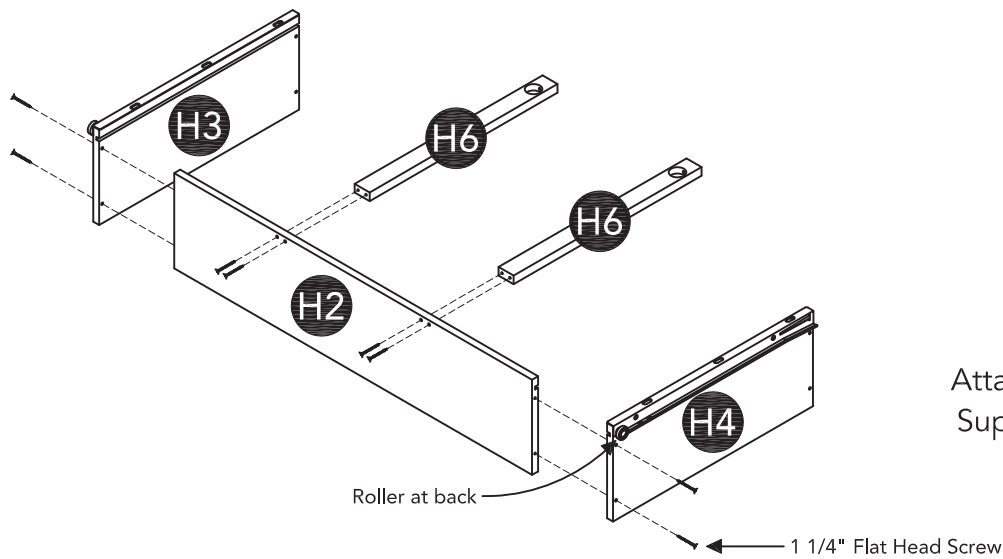



STEP 7

Attach Drawer Sides (H3), (H4) and Supports (H6) to Drawer Back (H2) with 1 1/4" Flat Head Screws.

STEP 8

Insert Drawer Bottom (H5) into groove.

Attach Drawer Front (H1) to unit with 1 1/4" Flat Head Screws.




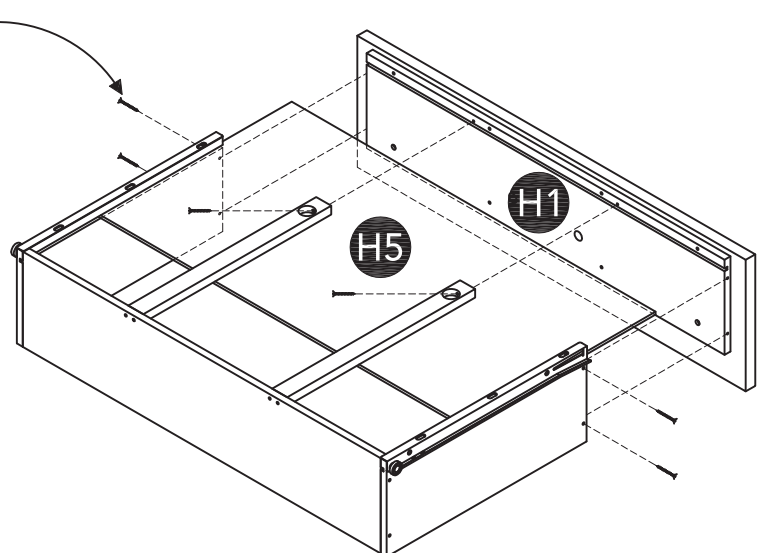
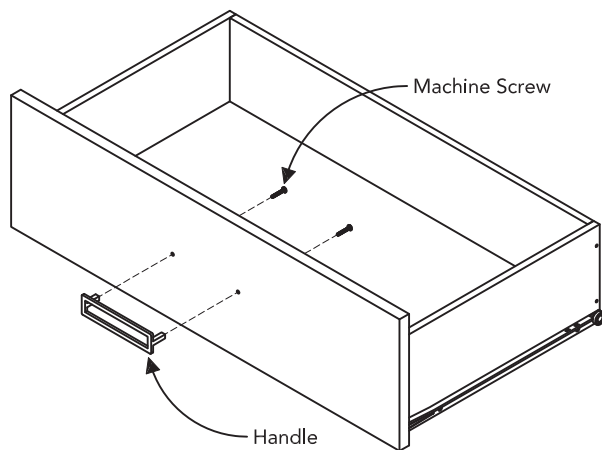


STEP 9


Attach Handle with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

Part List

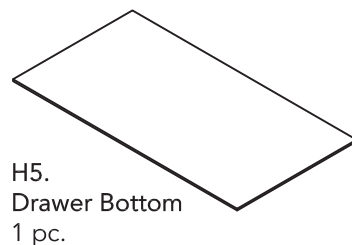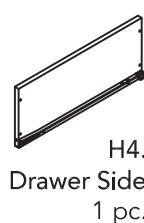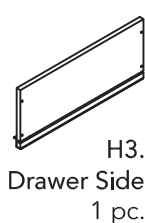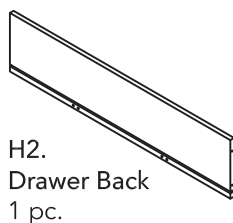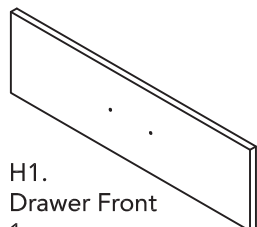

Drawer (I)

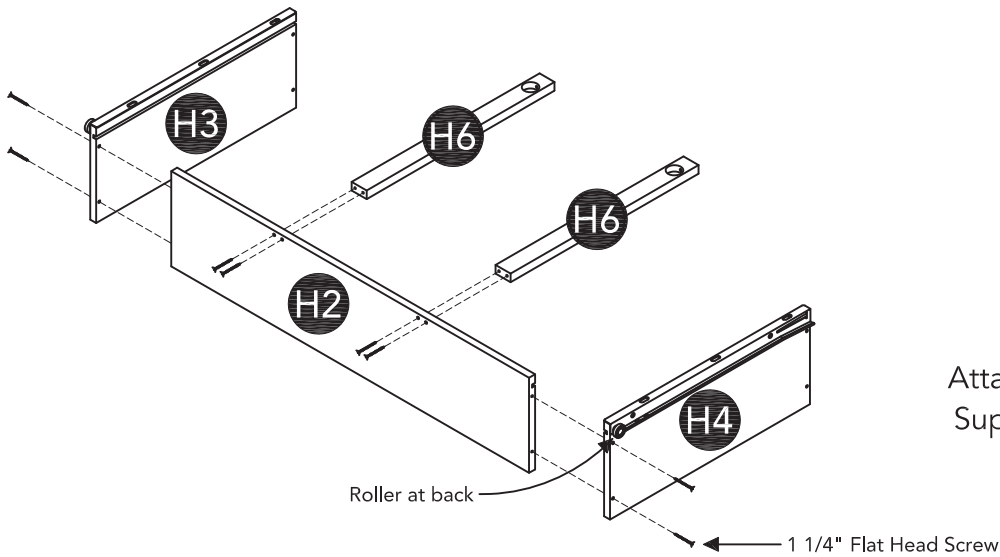



STEP 10

Attach Drawer Sides (H3), (H4) and Supports (H6) to Drawer Back (H2) with 1 1/4" Flat Head Screws.

STEP 11

Insert Drawer Bottom (I5) into groove.

Attach Drawer Front (H1) to unit with 1 1/4" Flat Head Screws.




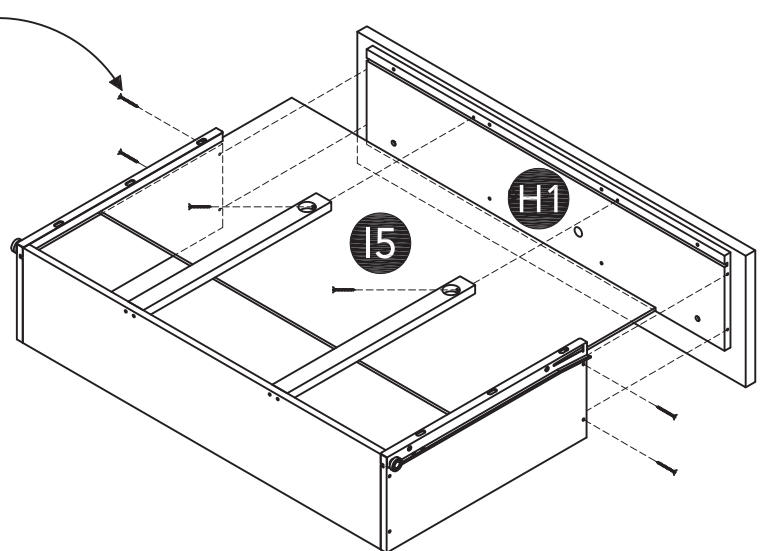
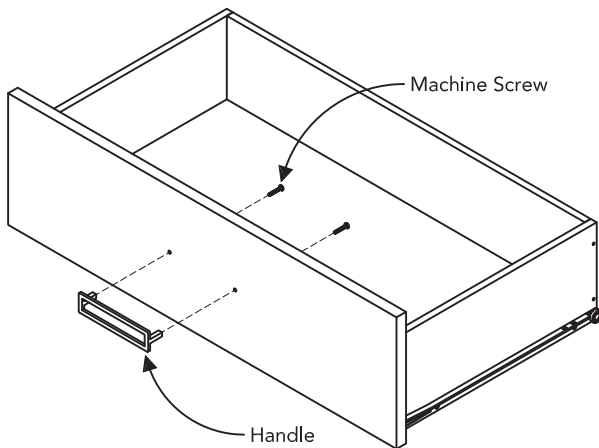


STEP 12

Attach Handle with Machine Screws.



Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

Part List

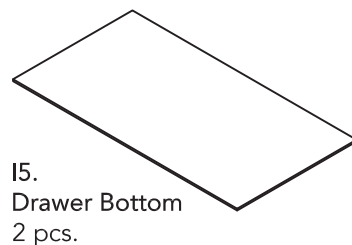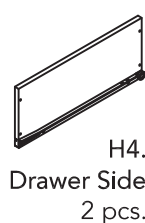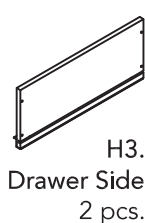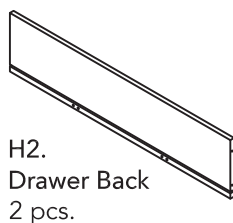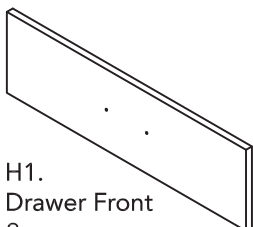

STEP 13

Loosen slightly the screws pre-installed on back of drawer fronts.

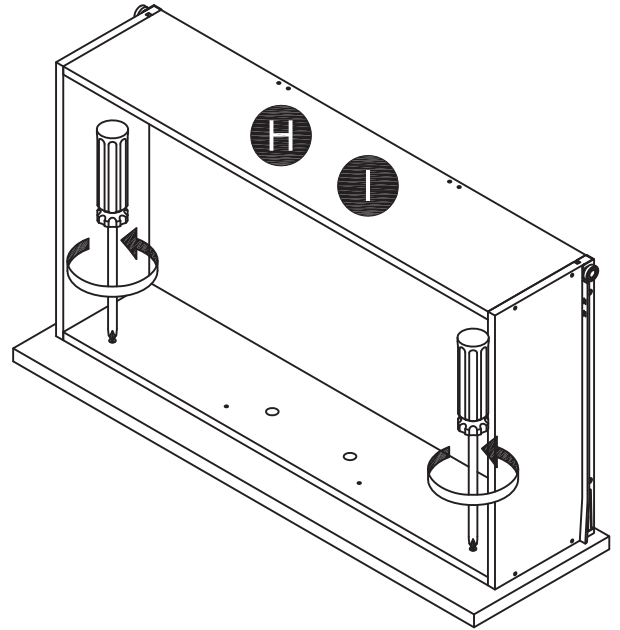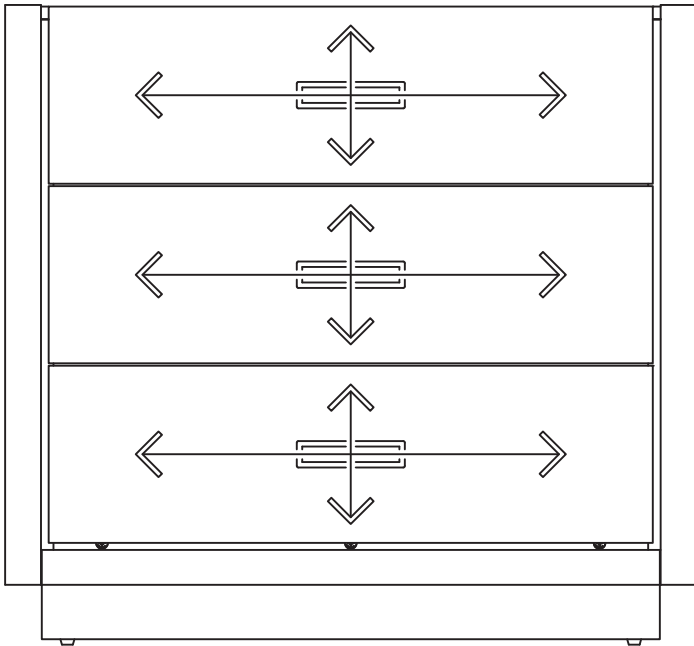

STEP 14



Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 15

Pull each drawer open slowly, then re-tighten screws from Step 13.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

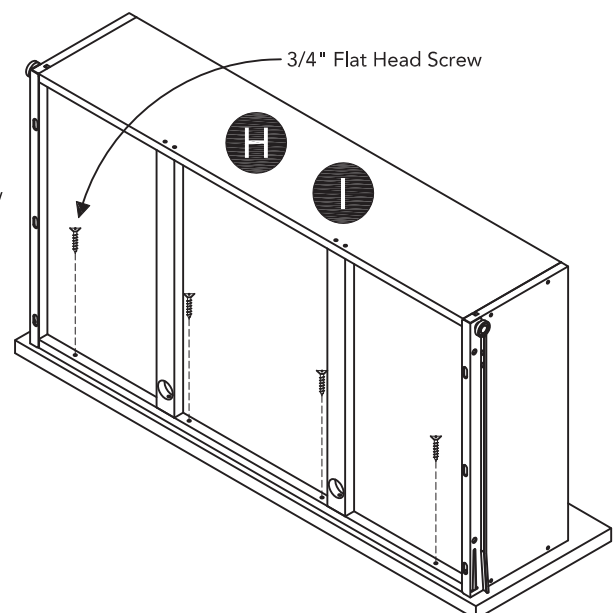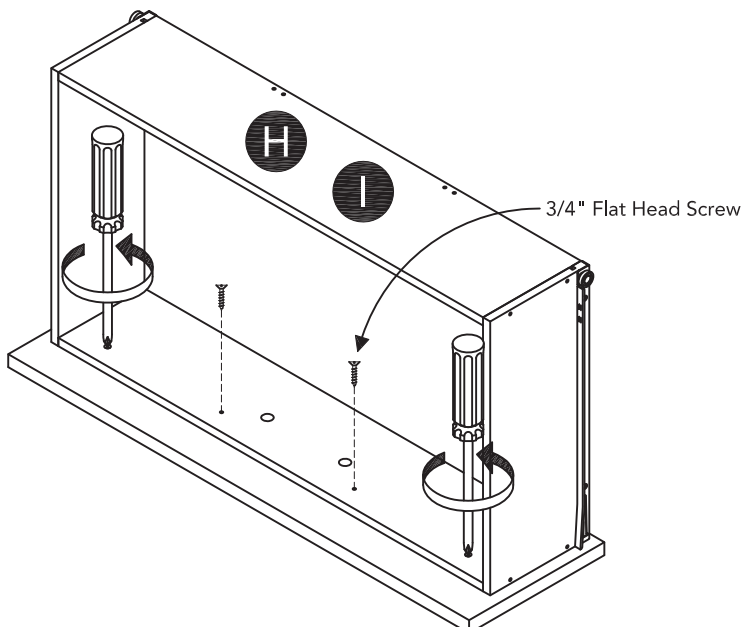

STEP 16

Slide Drawers (H) and (I) into position.

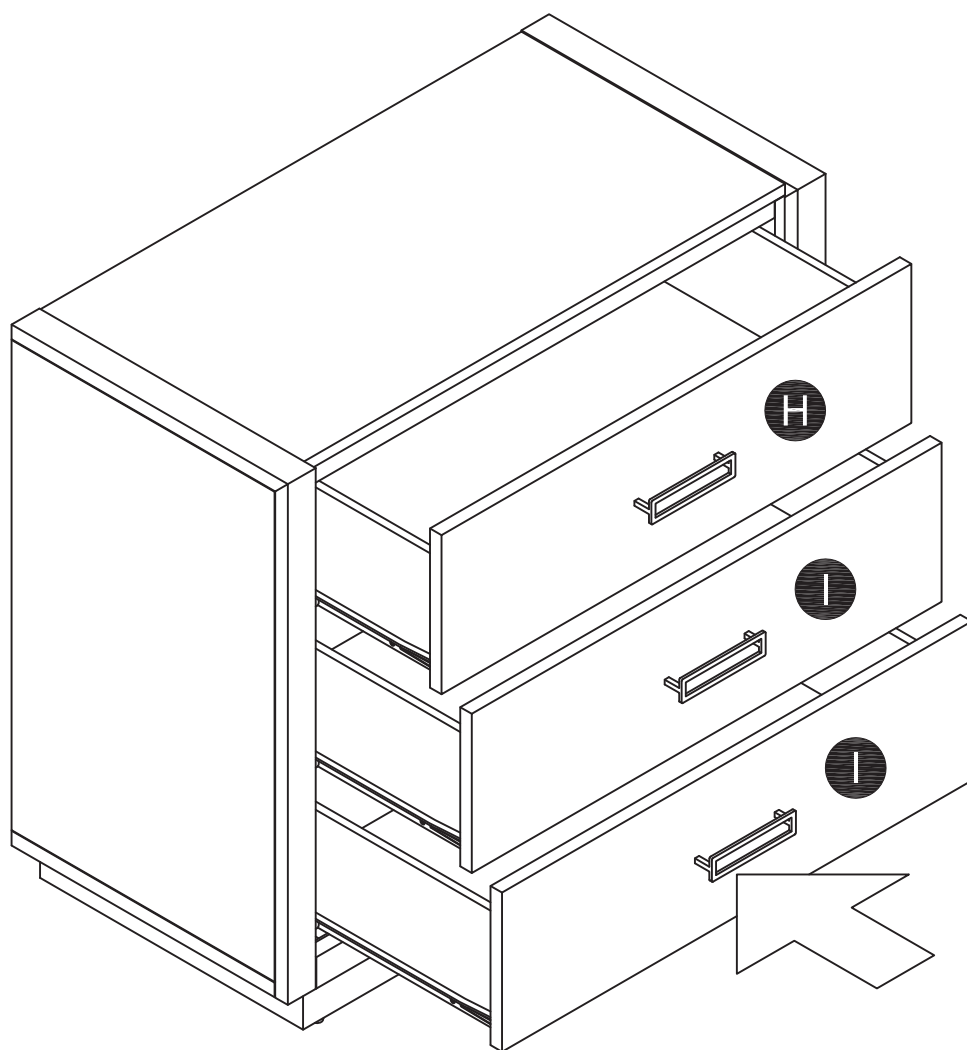

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319