 



# INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service  
Email: [journey@nemoequipment.com](mailto:journey@nemoequipment.com)  
Phone: 800-997-9301



## 1 Stake Corners

 Secure the anchors by pounding the stakes into the ground with a rock or hard object. If the ground is too hard, tie the anchors to a rock or another heavy object.




## 2 Locate Valve on Airbeam

Locate the black inflation valve with protective red cap. If the deflation cap is connected, remove by pressing the button and pulling. During takedown, reconnect the deflation cap to aid in quick deflation.



## 3 Connect Pump

Connect the black valve end of your integrated pump to the airbeam inflation valve. You should hear an audible click when your pump is connected properly.

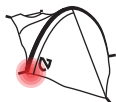

## 4 Inflate Airbeam

To inflate the Gogo™ Elite airbeam with the integrated pump, repeat the sequence of blowing into the mouthpiece and squeezing the fabric pouch until squeezing becomes difficult.



## 5 Tension

Proper tension ensures maximum water shedding and wind resistance. Once the airbeam is inflated, pull firmly on the adjustable anchors. Add a stick to the Swallowtail end of Gogo™ Elite for better tension and venting.



©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

**GOGO™ ELITE**