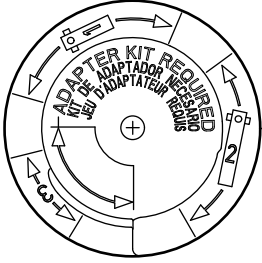
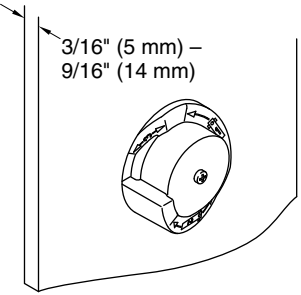
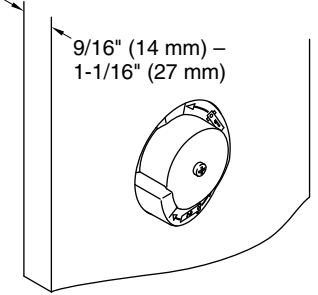
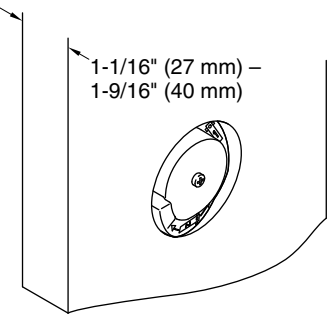
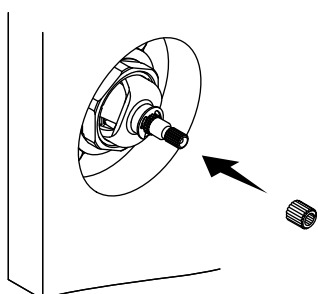
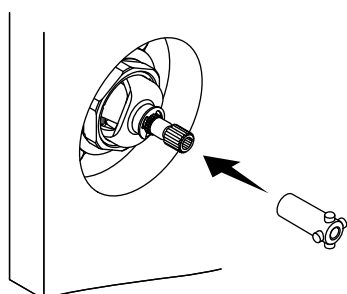
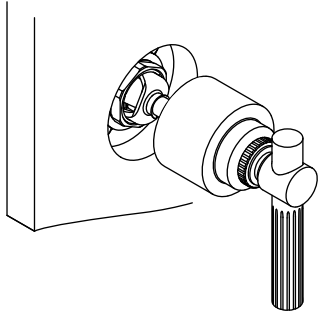
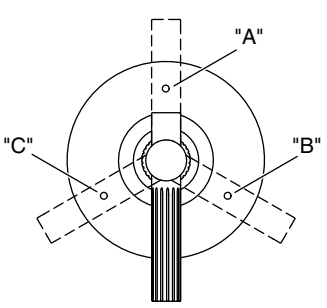
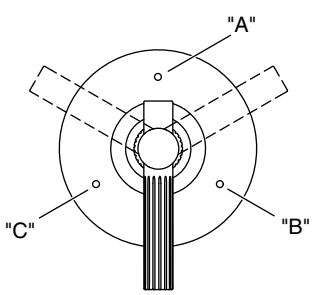
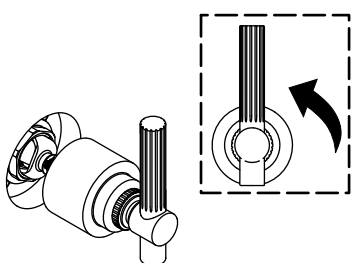
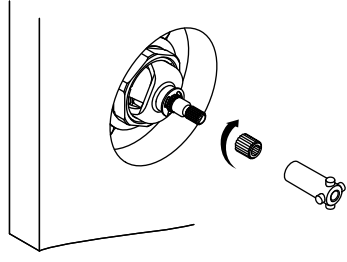
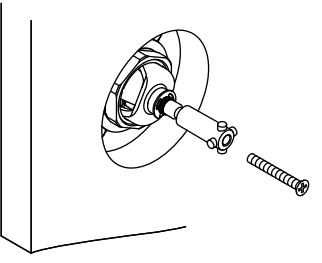
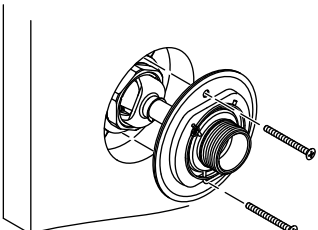
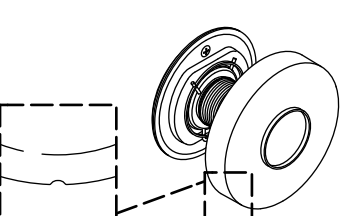
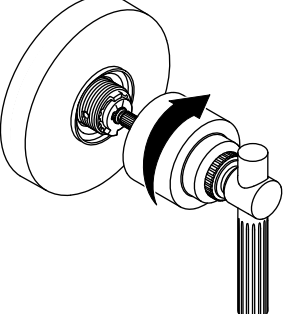


| | | | | |
|---|---|---|---|--|
| <p>Record your model number.</p> | <p>Important Information Follow all local plumbing and building codes.</p> | <p>1 Determine the valve stem adapter length. Refer to the plaster guard.</p>  | <p>Thin Wall: Use the #3 adapter and the 13/16" (21 mm) screw.</p>  | <p>Standard Wall: Use the #1 adapter and the 13/16" (21 mm) screw.</p>  |
| <p>Thick Wall: Use the #2 adapter and the 1-3/8" (35 mm) screw.</p>  | <p>2 Remove the plaster guard. Place the spline adapter on the valve stem.</p>  | <p>3 Temporarily fit the valve stem adapter on the spline adapter.</p>  | <p>4 Position the handle on the valve stem adapter.</p>  | <p>5 For Water Flow From Single Shower Accessory: Align the handle with position A, B, or C on the faceplate.</p>  |
| <p>6 For Water Flow From Two Shower Accessories: Align the handle between positions A and B, B and C, or A and C.</p>  | <p>7 Water should flow from your main shower accessory with the handle position at 12 o'clock.</p>  | <p>8 To adjust position, remove the handle and valve stem adapter. Turn the spline adapter.</p>  | <p>9 Secure the valve stem adapter with the proper length screw.</p>  | <p>10 Secure the plate assembly to the valve with proper length screws. Do not overtighten.</p>  |
| <p>11 Position the faceplate with the notch at the bottom.</p>  | <p>12 Point the handle down. Thread the bonnet onto the valve.</p>  | | | |