
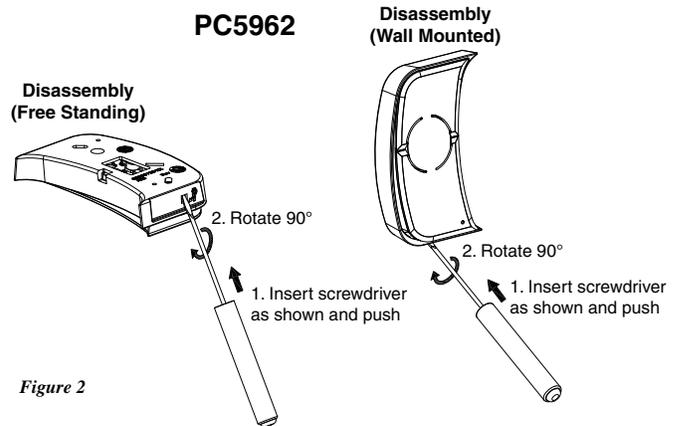


PC5961/PC5962 Audio Station Instruction Sheet

This sheet shall be used in conjunction with the associated Audio Module Installation Manual.

1. If required, remove the front cover from the backplate as follows:
 - a. Insert a small slotted screwdriver in one of the slots indicated in Figures 1 & 2.
 - b. Gently pry the cover from the backplate.
 - c. Repeat this operation on the remaining slot. Lift cover free of backplate
2. Determine the desired location.
3. Position the backplate, then mark the screw locations (see Fig. 3).

CAUTION!: DSC recommends the use of wall anchors when mounting directly onto a wall.

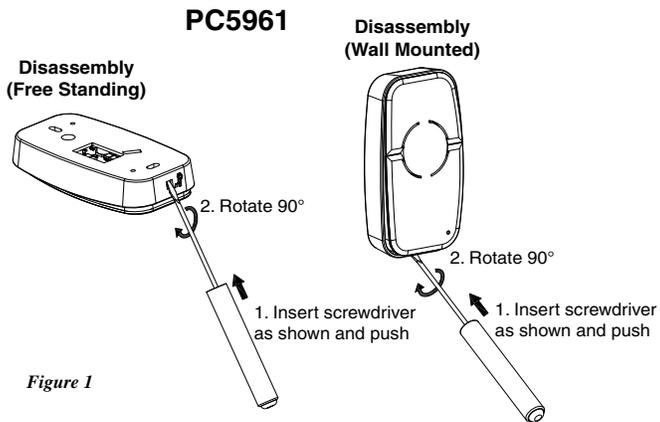

4. Route wiring as required.
5. Secure backplate to wall using the appropriate hardware.
6. Wire unit in accordance with the PC5950 wiring instructions.
7. Place front cover over backplate. Gently press until cover locks in place with an audible click.
8. Power up system then verify operation.

