


INSTRUCTION MANUAL

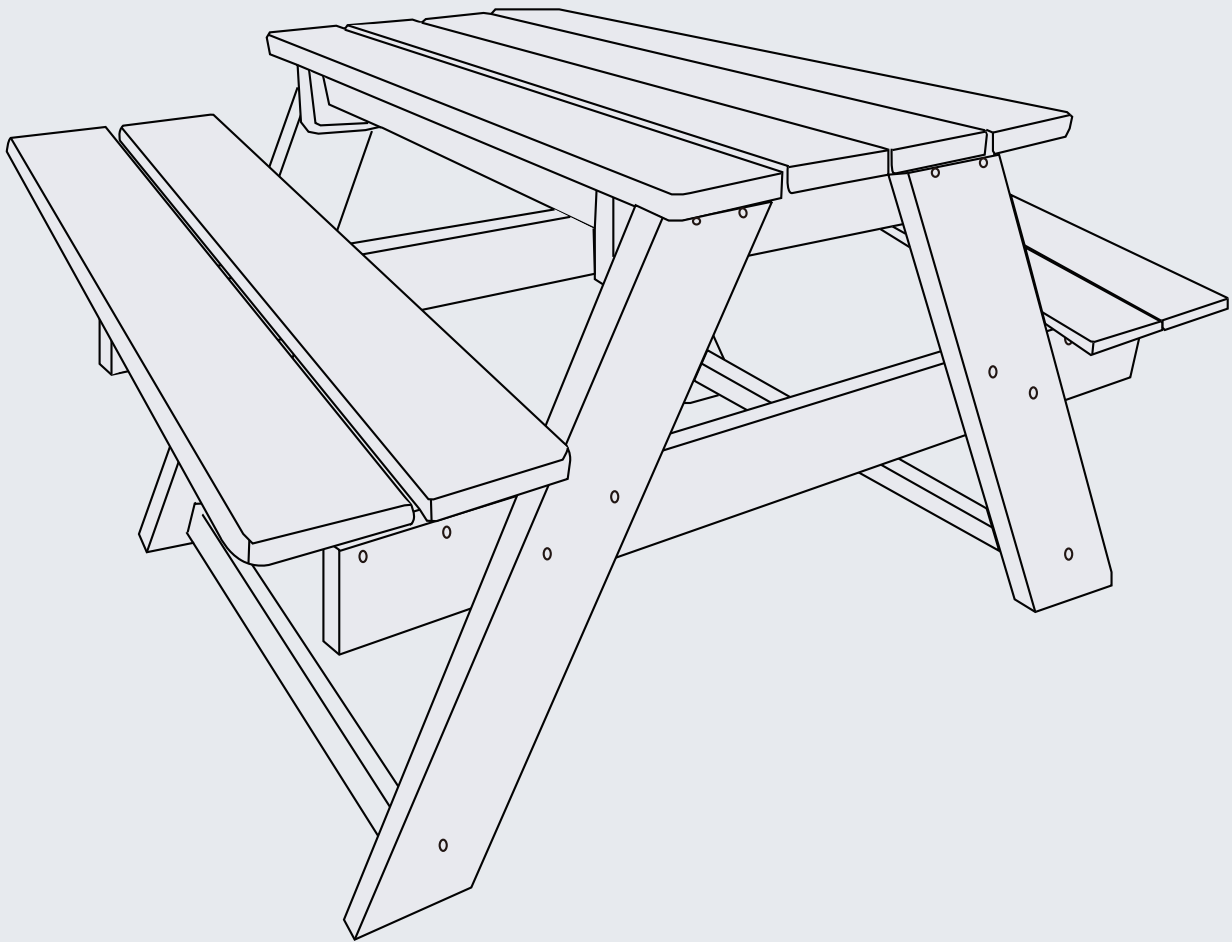

Kids Outdoor Poly Picnic Table


V1.0

! CARE & MAINTENANCE


Please keep this instruction for your future reference.

- Be careful when assembly, avoid hurting the top surface.
- Clean the table with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.


TOOLS REQUIRED

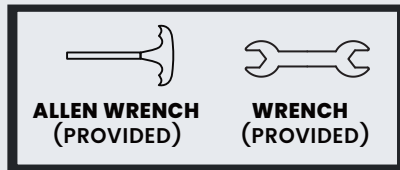


HARDWARE

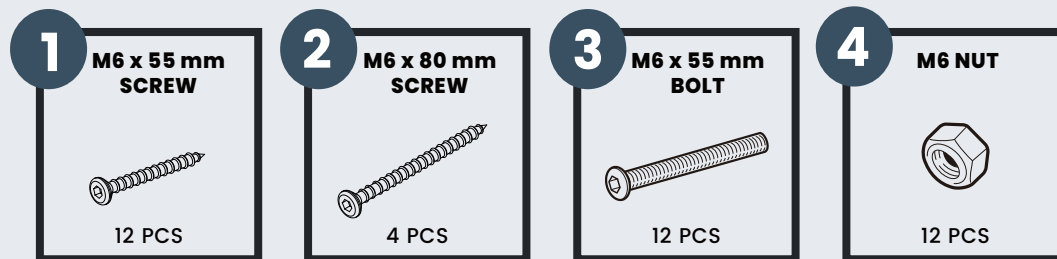

PARTS

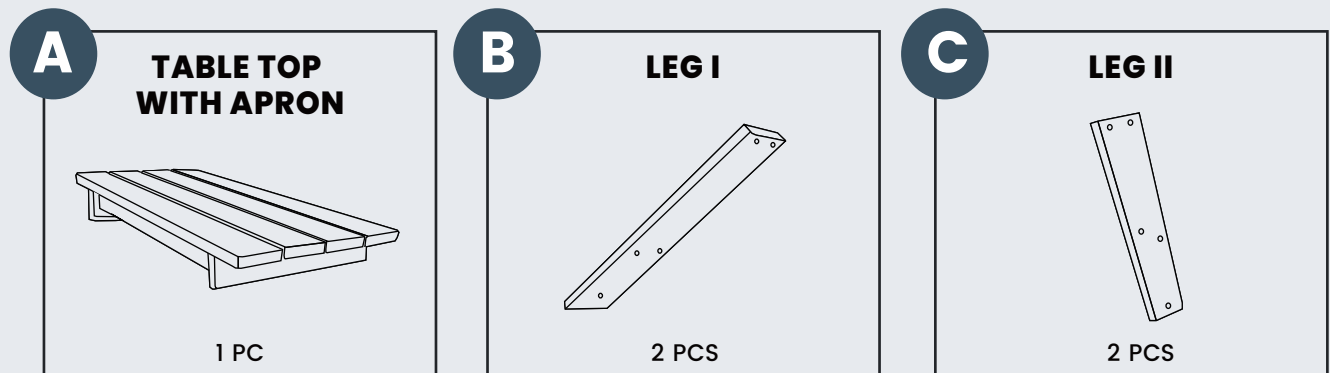


PARTS

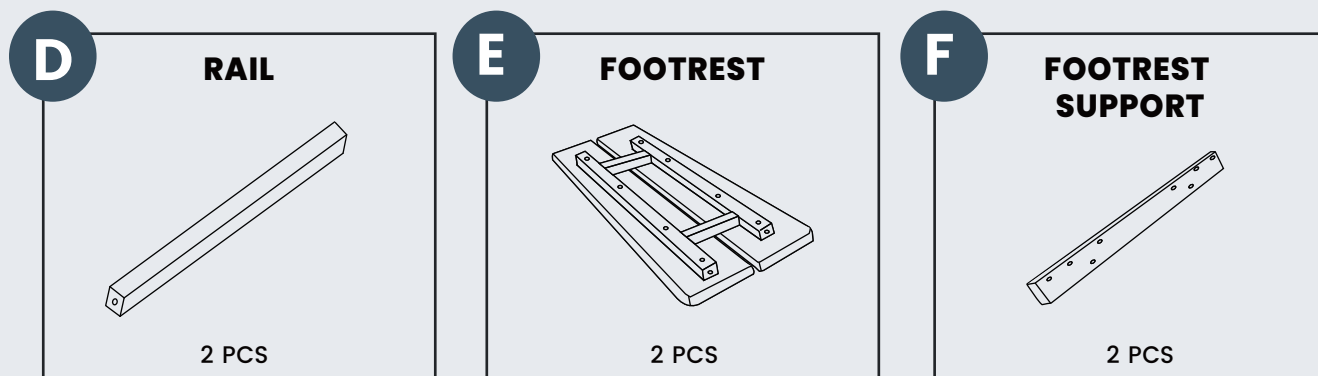

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this picnic table and learn the exact position of each part to be assembled.

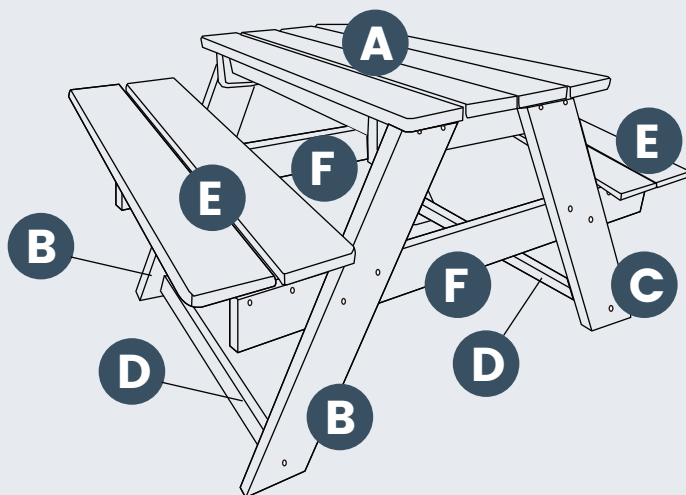

PRODUCT ASSEMBLY


1

Place **Part A Table Top** upside down on soft surface like carpet to avoid damage. Loosely attach 2 pcs of **Part B Leg I** to the apron of the **Table Top** with 2 pcs of **Hardware #2 Screw**, 2 sets of **Hardware #3 Bolt** and **#4 Nut** as below.

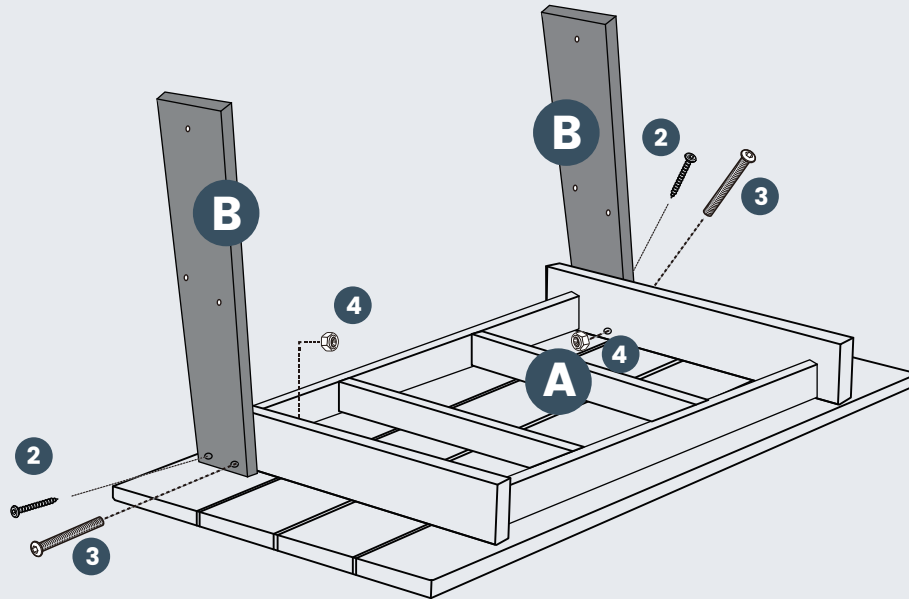

2


Do the same to attach 2 pcs of **Part C Leg II** loosely to **Part A Table Top** with 2 pcs of **Hardware #2 Screw**, 2 sets of **Hardware #3 Bolt** and **#4 Nut**.

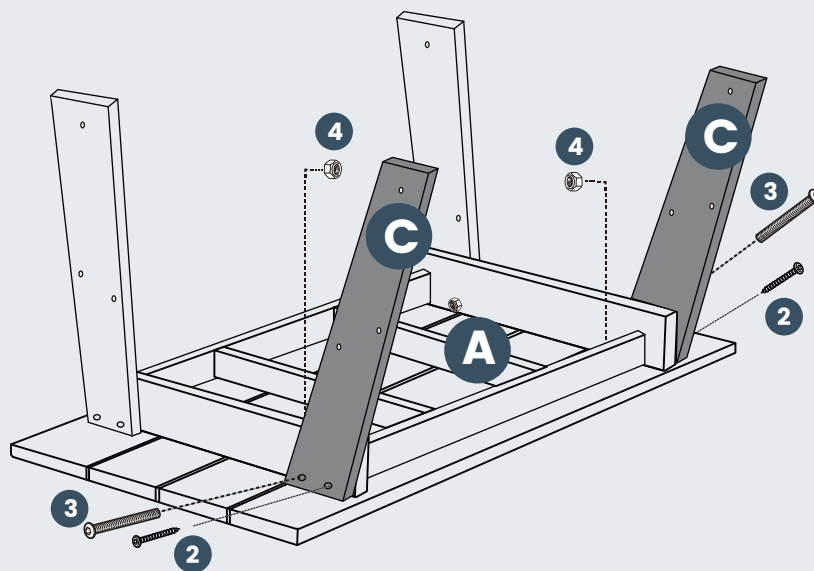

PRODUCT ASSEMBLY


3

Attach the **Part D Rail** between 2 pcs of **Part B** and **Part C** with 4 pcs of **Hardware #1 Screw**.

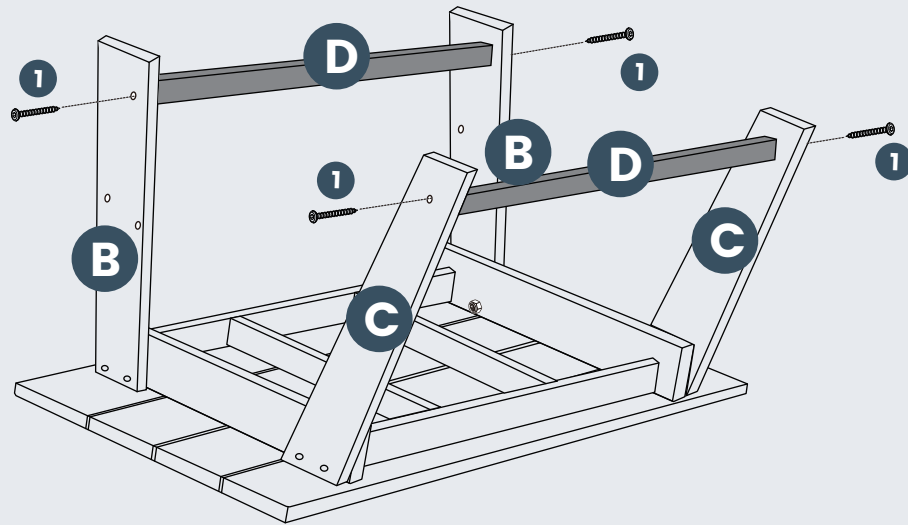

4


Attach 2 pcs of **Part F Footrest Support** to **Part B and C Legs** with 8 sets of **Hardware #3 Bolt** and **#4 Nut**.

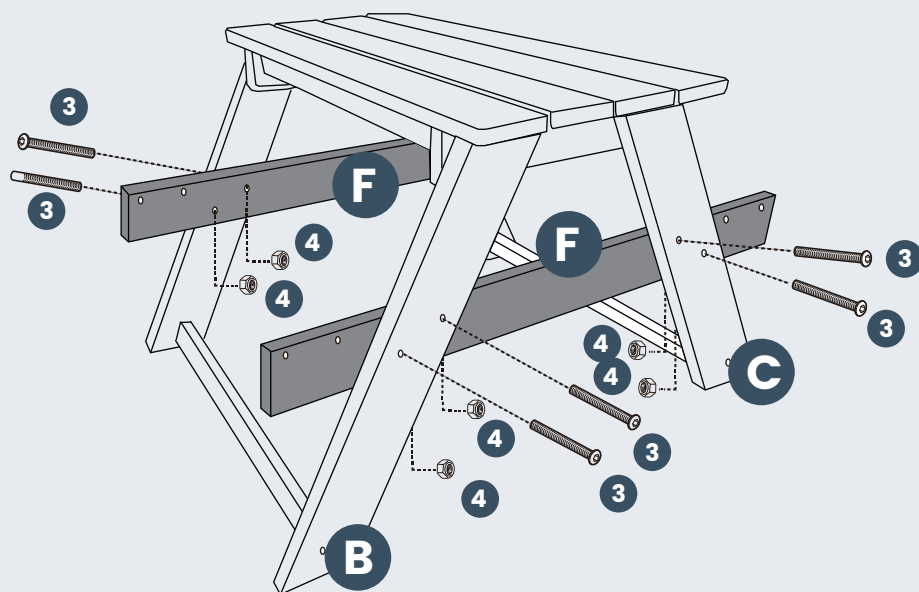

PRODUCT ASSEMBLY


5

Attach **Part E Footrest** to **Part F Footrest Support** with 8 pcs of **Hardware #1 Screw**.

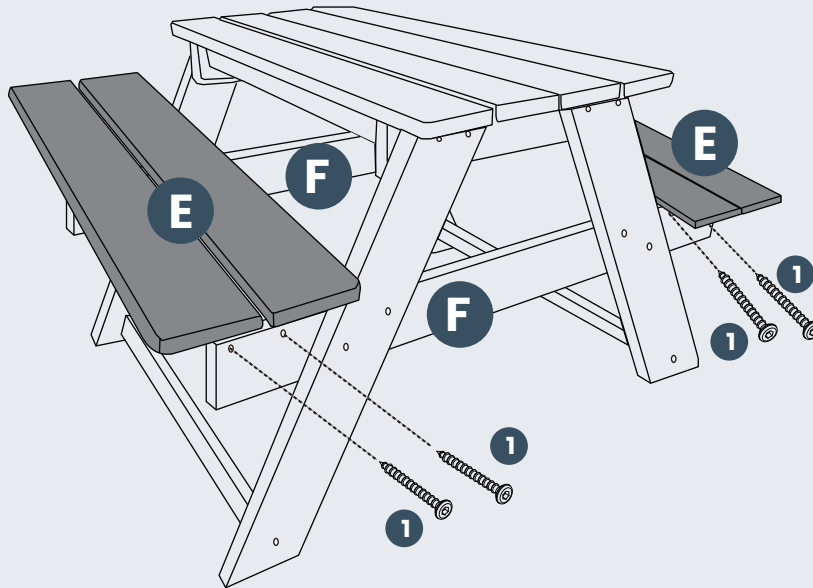

6

Tighten all the screws, bolts and nuts to ensure the steady of this table.

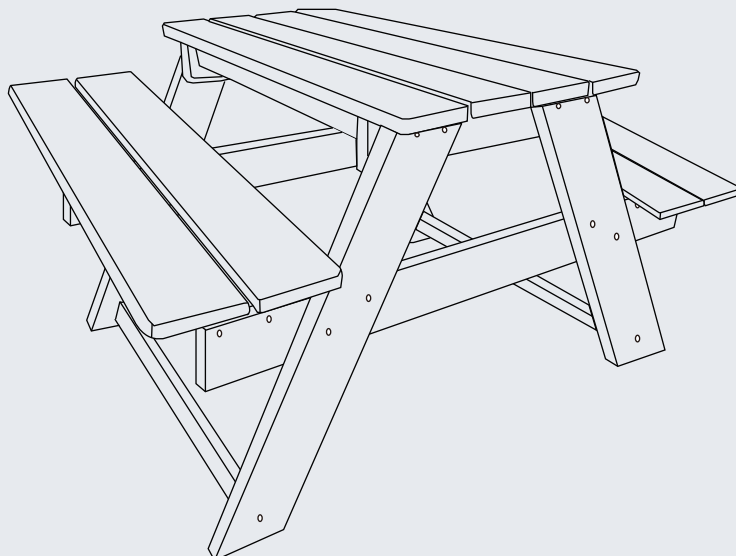

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the furniture with a damp cloth.

Regular cleaning not only preserves the aesthetic appeal of your furniture, but also helps extend its lifespan.