homestyles[°]

88 5427 431

Dresser


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



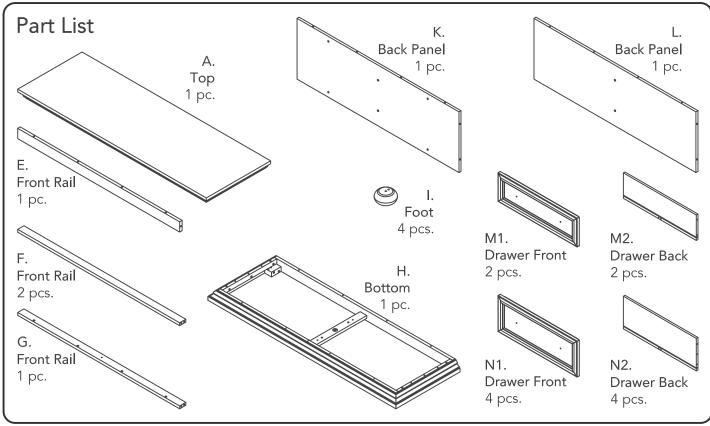

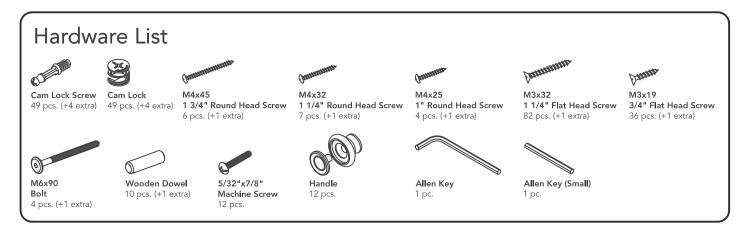


Carton 88 5427 432 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/11

IMPORTANT


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Allen Key in a safe place as the Bolts may need to be tightened up in the future.

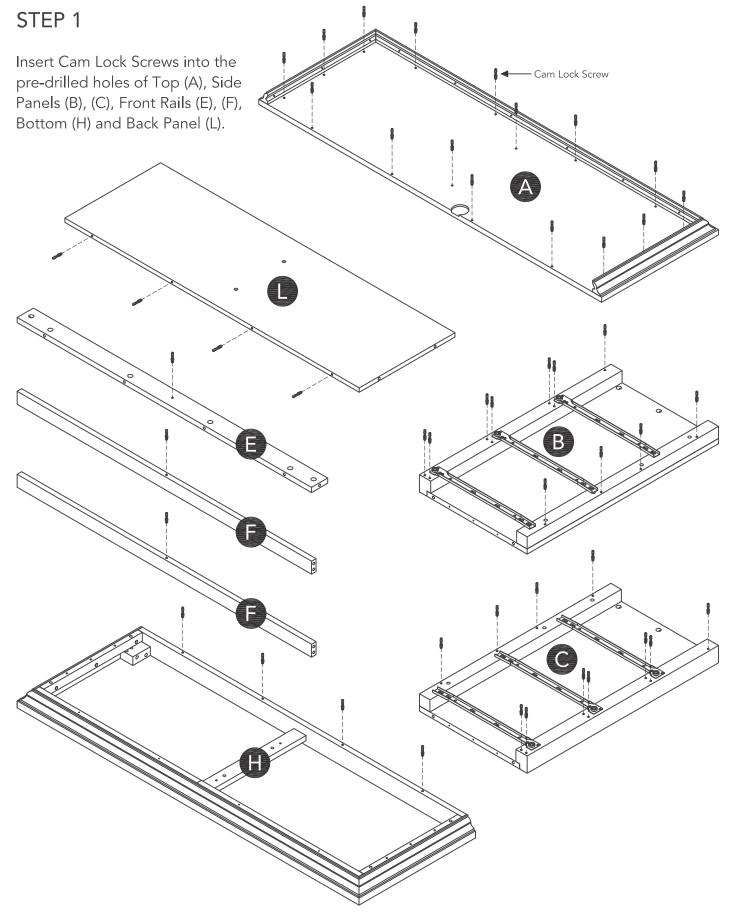

Assembly Instructions 3/11

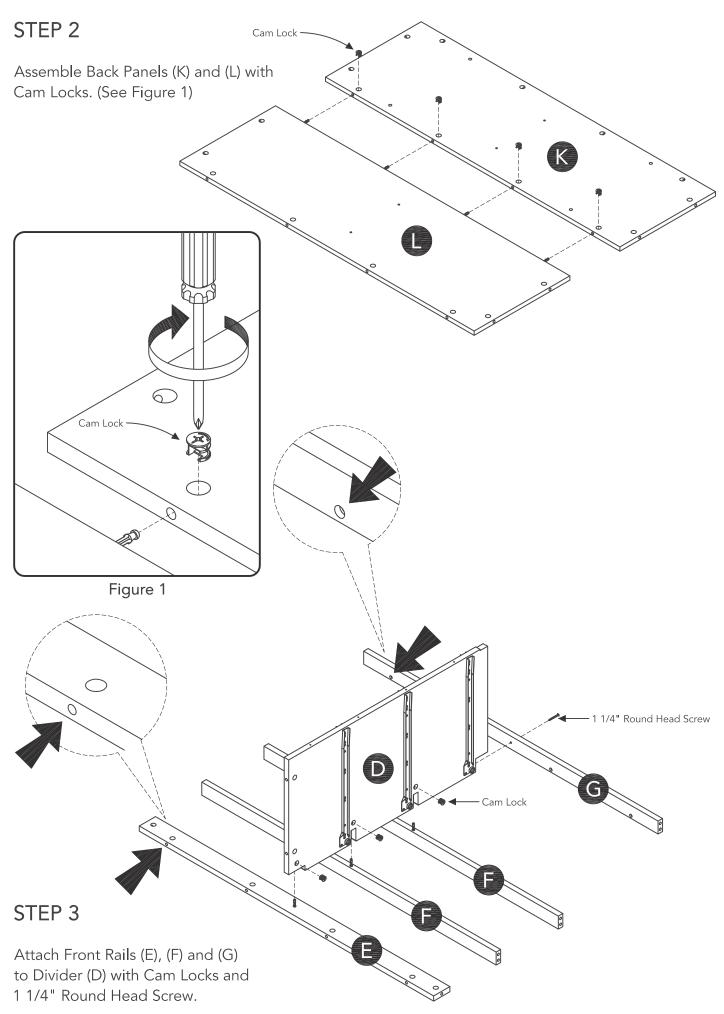


Assembly Instructions 4/11

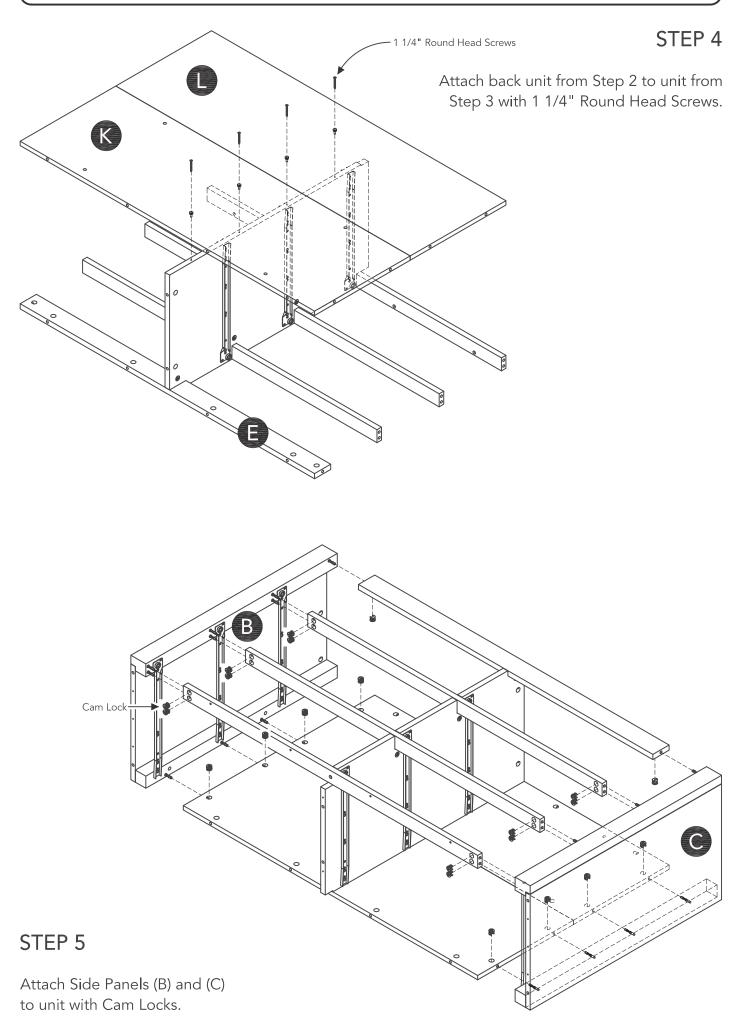

Assembly Instructions 5/11

STEP 6

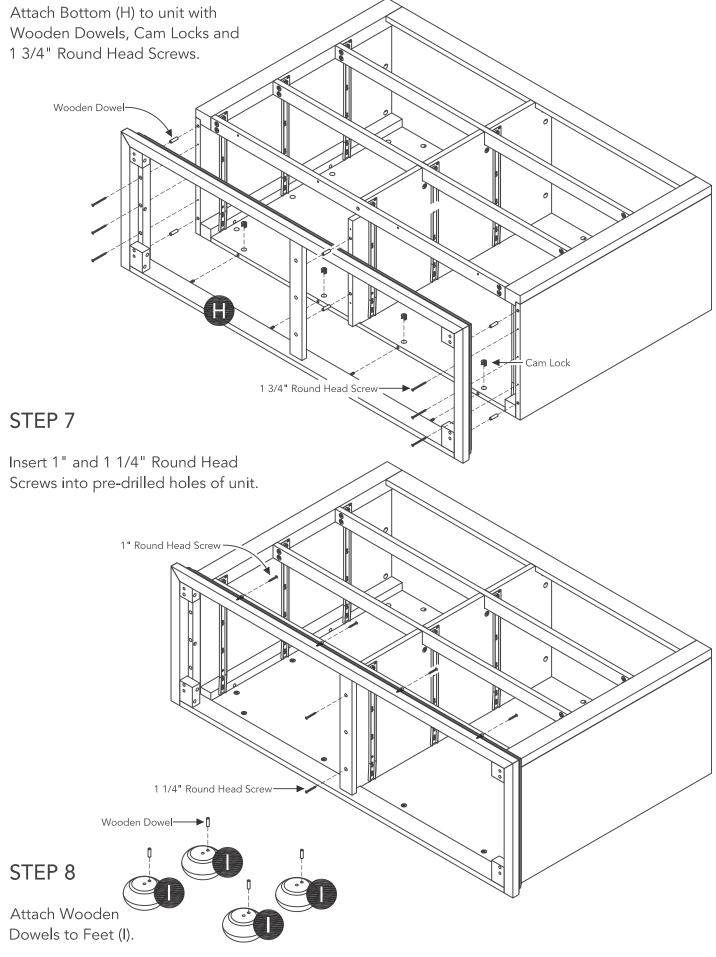

Assembly Instructions 6/11

STEP 9

Attach Center Leg (J) to unit. Attach Feet (I) to unit with Bolts. Tighten Bolts with Allen Key. Bolt -Allen Key -STEP 10 Attach Top (A) to unit wtih Cam Locks. To level unit, adjust the adjustable levelers on the bottom of unit. (See Figure 2) Note: Unit must be level to work properly.

Figure 2

Assembly Instructions 7/11

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 11

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)


Move unit.


Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tip-over Restraint into unit through hole in Top (A). (See Figure 5)

Screw Tip-over Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

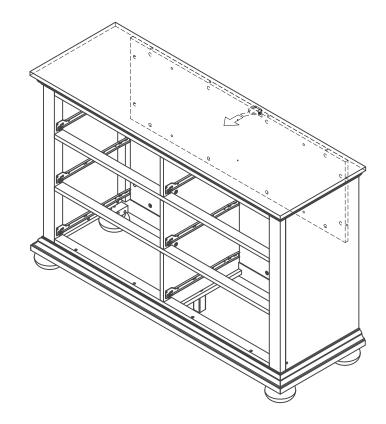

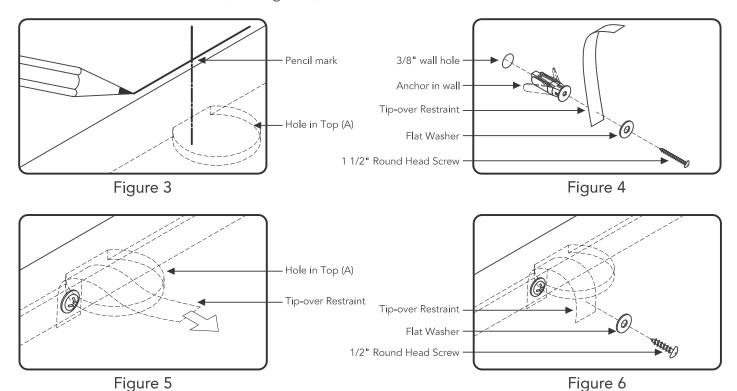









(M3x38) 1 1/2" Round Head Screw 1 pc. (+1 extra)




(M3x13) 1/2" Round Head Screw 1 pc. (+1 extra)




Flat Washer 2 pcs. (+1 extra)

Assembly Instructions 8/11

Drawer (M)

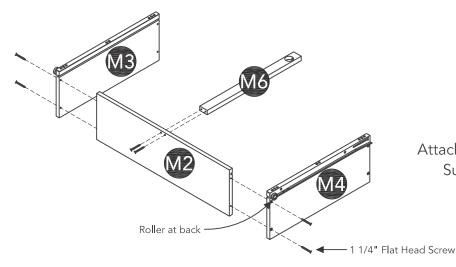

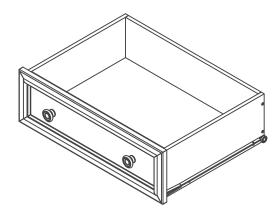


STEP 12


Attach Drawer Sides (M3), (M4) and Drawer Supports (M6) to Drawer Back (M2) with 1 1/4" Flat Head Screws.

STEP 13

Insert Drawer Bottom (M5) into the groove.

Attach Drawer Front (M1) to unit with 1 1/4" Flat Head Screws.

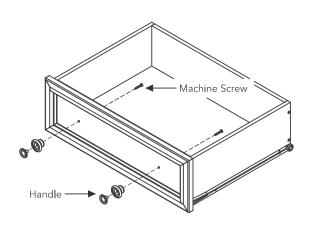


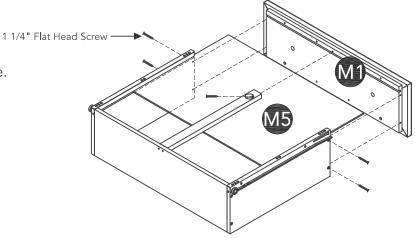

STEP 14


Attach Handles with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

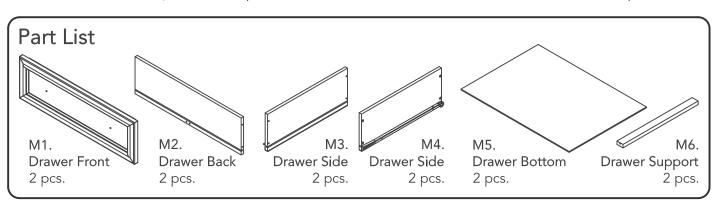

Assembly Instructions 9/11

Drawer (N)

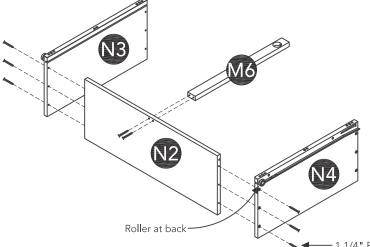

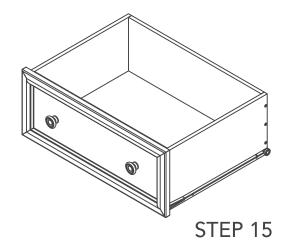



Attach Drawer Sides (N3), (N4) and Drawer Supports (M6) to Drawer Back (N2) with 1 1/4" Flat Head Screws.

STEP 16

Insert Drawer Bottom (N5) into the groove.

Attach Drawer Front (N1) to unit with 1 1/4" Flat Head Screws.

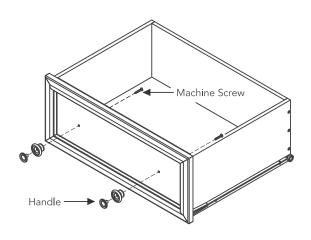


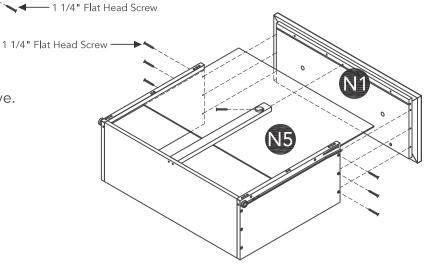

STEP 17

Attach Handles with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

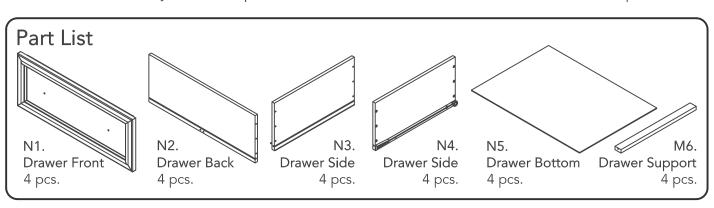


Assembly Instructions 10/11

STEP 18

Loosen slightly the screws pre-installed on the back of the drawer fronts.

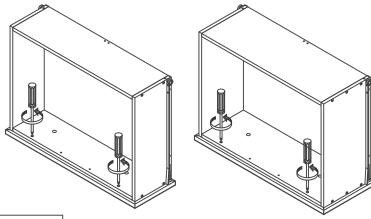

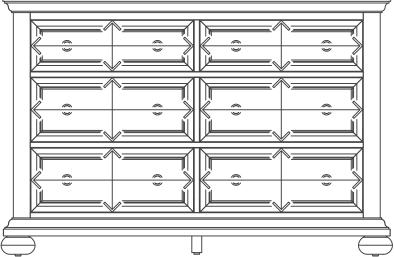

STEP 19


Insert the drawers into the unit, then adjust the drawer front panels left or right and up or down until the drawer gaps look proportional.

STEP 20

Pull each drawer open slowly and re-tighten the screws from Step 18.

Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.


Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

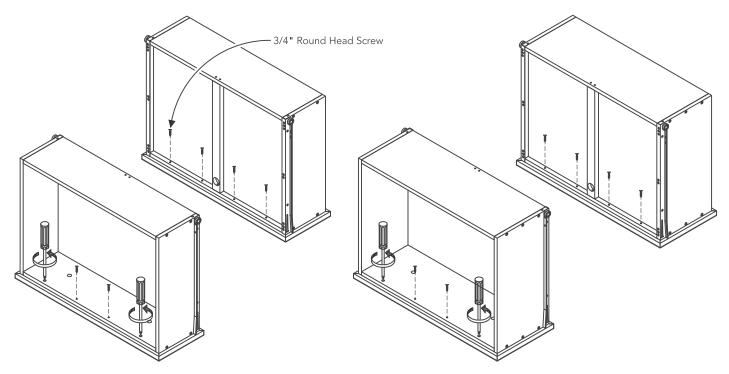

Assembly Instructions 11/11

STEP 21

Slide Drawers (M) and (N) into place.

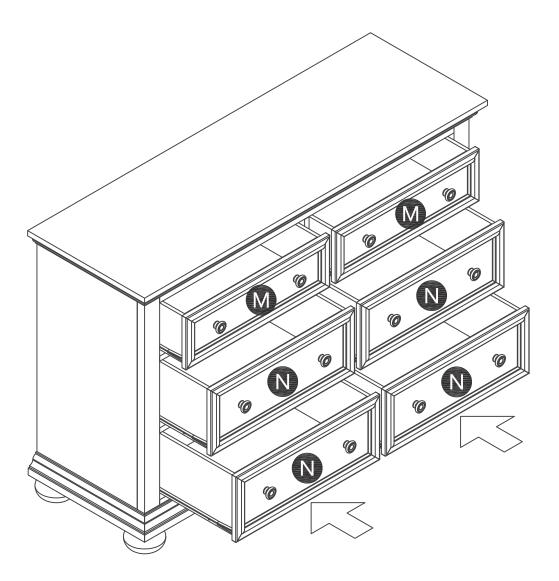

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319