

# 1 PINT PUMP OILER W/FLEX SPOUT

## ***PRIMING INSTRUCTIONS:***

1. Ensure the pump oiler is full.
2. Pull the trigger and hold it.
3. While holding the trigger, put your finger over the spout outlet to seal the end, and release the trigger.
4. Repeat the process until oil squirts out of the spout when the trigger is pulled.

