


## **ASSEMBLY INSTRUCTION**

## TV STAND

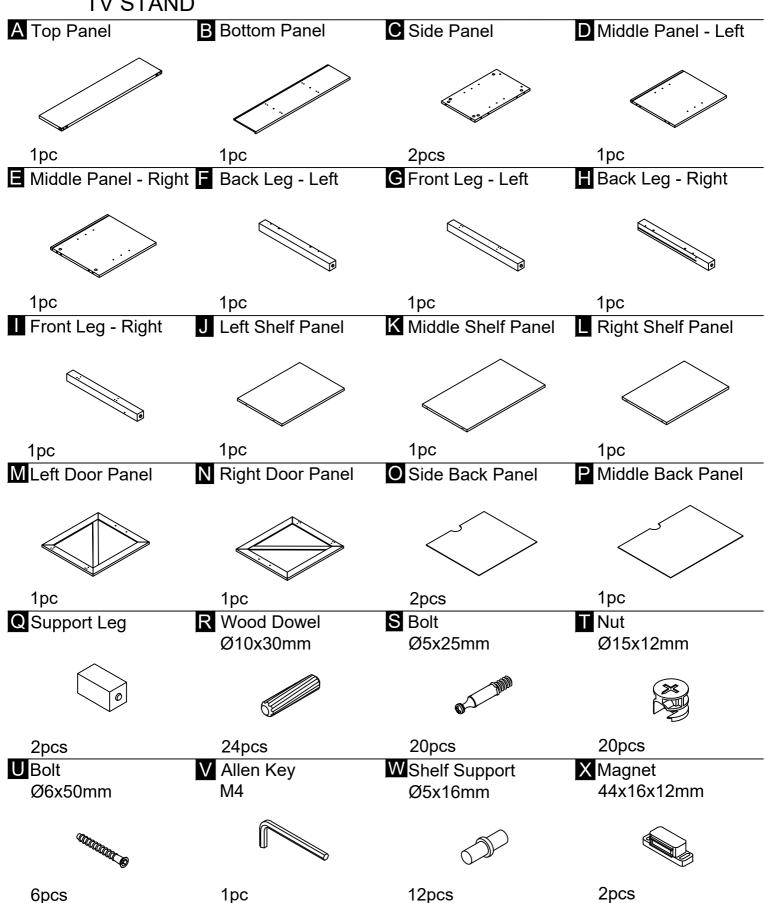

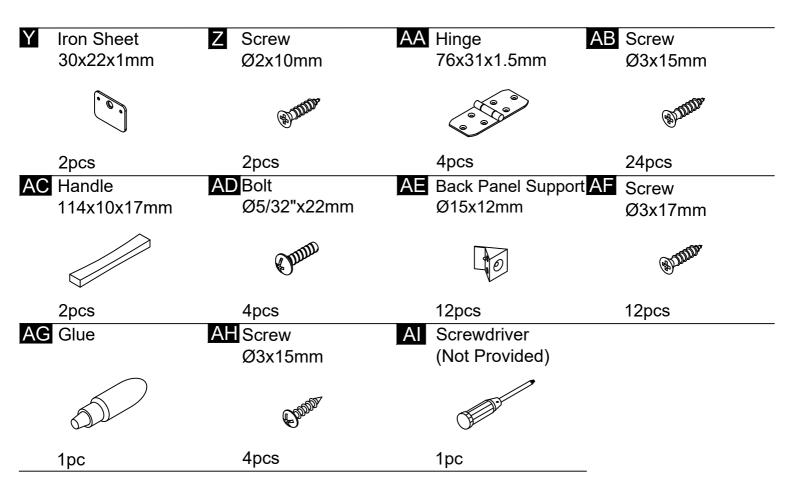

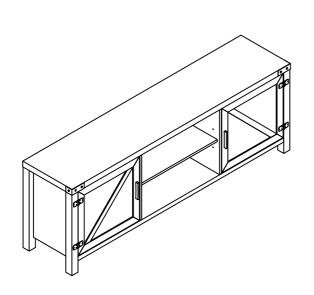


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


## **ASSEMBLY**

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.


Attach Bolt (S) & Magnet (X) to Top Panel (A), using Screw (AH) by Screwdriver (AI) as below shown.

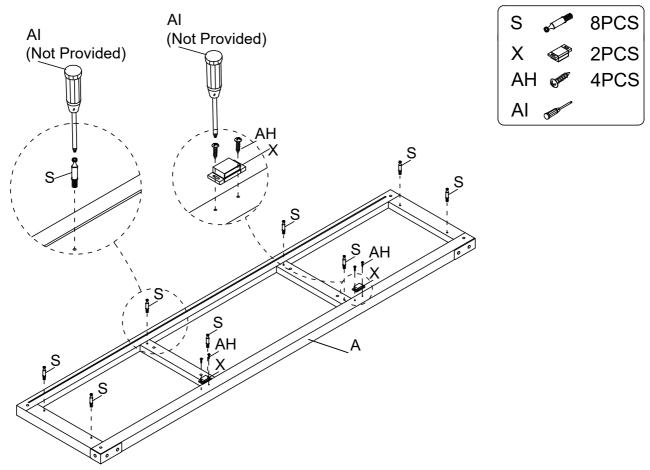


Attach Bolt (S) to Back Leg - Left (F), Front Leg - Left (G), Back Leg - Right (H), Front Leg - Right (I) by Screwdriver (AI) as below shown.

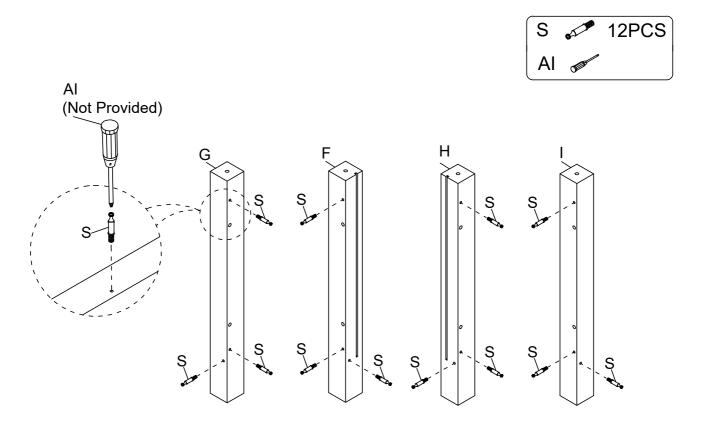


Attach two pieces of Side Panel (C) to Back Leg - Left (F), Front Leg - Left (G), Back Leg - Right (H) & Front Leg - Right (I) separately using Wood Dowel (R) by Glue (AG), then attach Nut (T) to Bolt (S) in Side Panel (C) by Screwdriver (AI) as below shown.

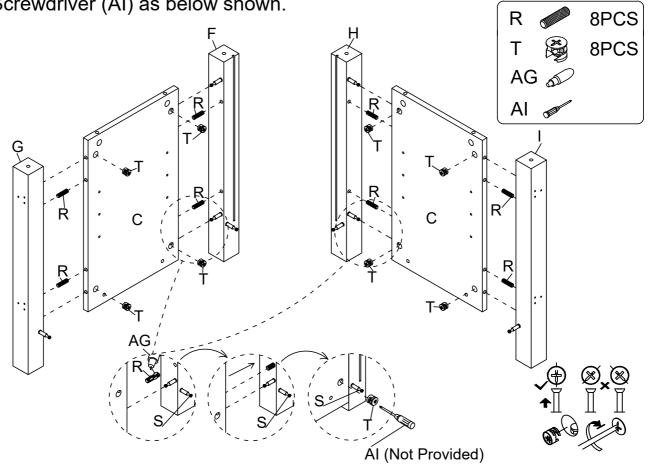


4 Attach Support Leg (Q) to Bottom Panel (B) using Bolt (U) by Allen Key (V).

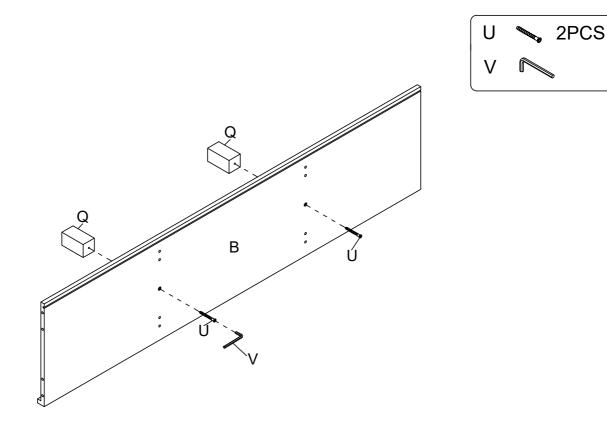


Attach the assembled Side Panel (C) to Bottom Panel (B) using Wood Dowel (R) by Glue (AG), then attach Nut (T) to Bolt (S) in Bottom Panel (B) by Screwdriver (AI) as below shown

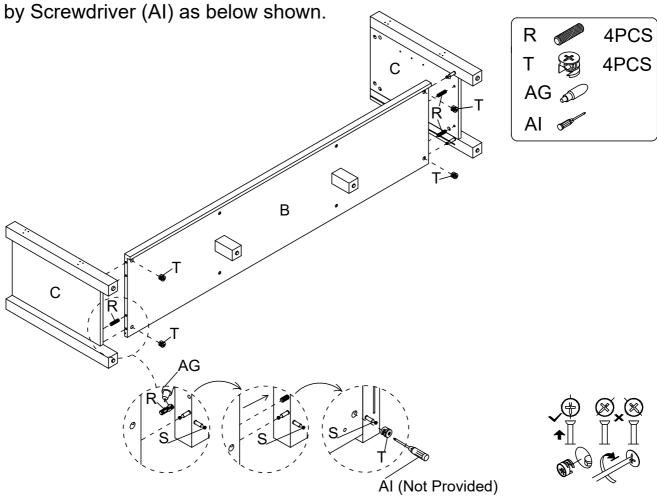


Attach Middle Panel - Right (E) & Middle Panel - Left (D) to Bottom Panel (B) using Wood Dowel (R) by Glue (AG), and using Bolt (U) to tighten by Allen Key (V).

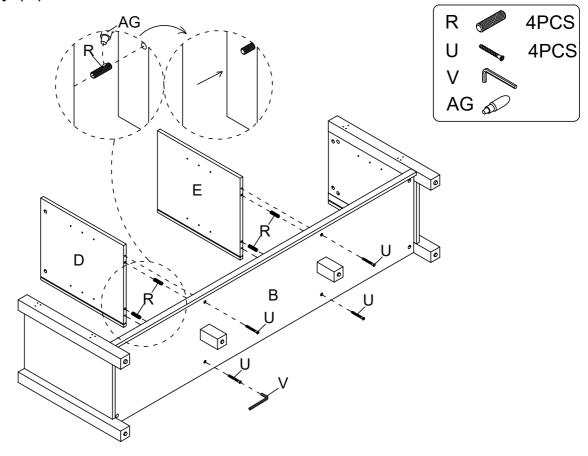


Insert Middle Back Panel (P) & Side Back Panel (O) to the assembled Back Leg - Left (F) & Back Leg - Right (H), Bottom Panel (B), Middle Panel - Left (D) & Middle Panel - Right (E) as below shown.

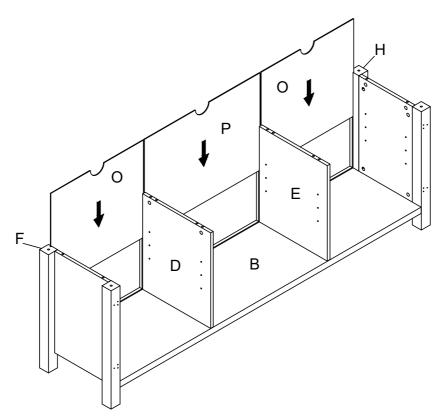


Attach Top Panel (A) to the assembled Side Panel (C), Middle Panel - Left (D) & Middle Panel - Right (E) using Wood Dowel (R) by Glue (AG), then attach Nut (T) by Screwdriver (AI) as below shown.

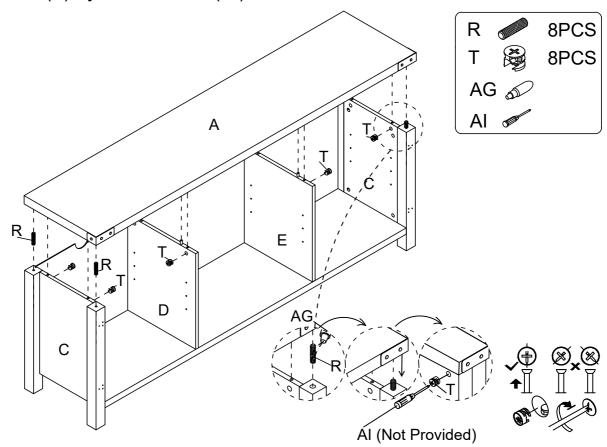


Attach Back Panel Support (AE) to Side Back Panel (O) & Middle Back Panel (P) using Screw (AF) by Screwdriver (AI) as below shown.

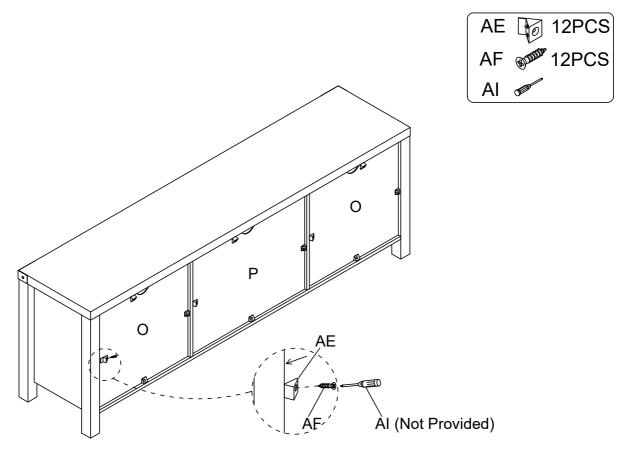


Insert Shelf Support (W) to Side Panel (C), Middle Panel - Left (D) & Middle Panel - Right (E), then attach Left Shelf Panel (J), Middle Shelf Panel (K), Right Shelf Panel (L) on the Shelf Support (W) as below shown. Remark: There are 3 opptions for you to adjust the height of the shelf support.

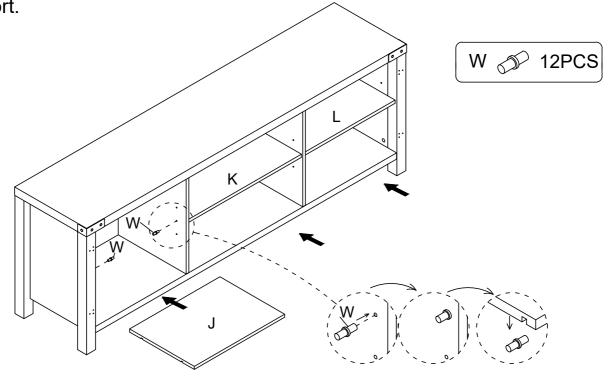


11 Attach Iron Sheet (Y) & Handle (AC) to Left Door Panel (M) & Right Door Panel (N), using Screw (Z), Bolt (AD) by Screwdriver (AI) as below shown.

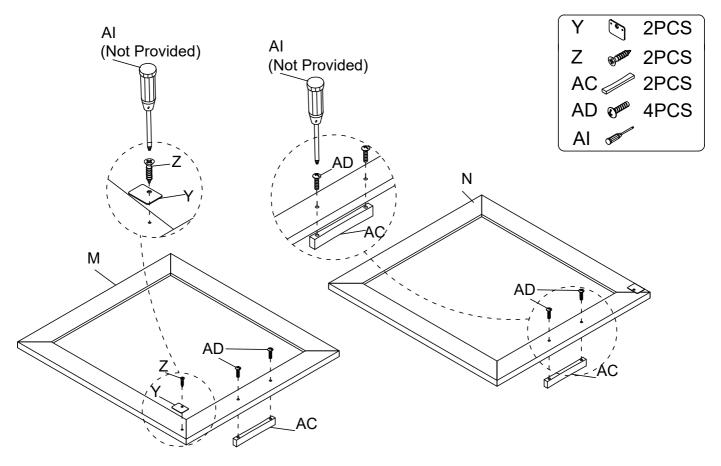

12 Attach Hinge (AA) to Left Door Panel (M) & Right Door Panel (N), using Screw (AB) by Screwdriver (AI) as below shown.

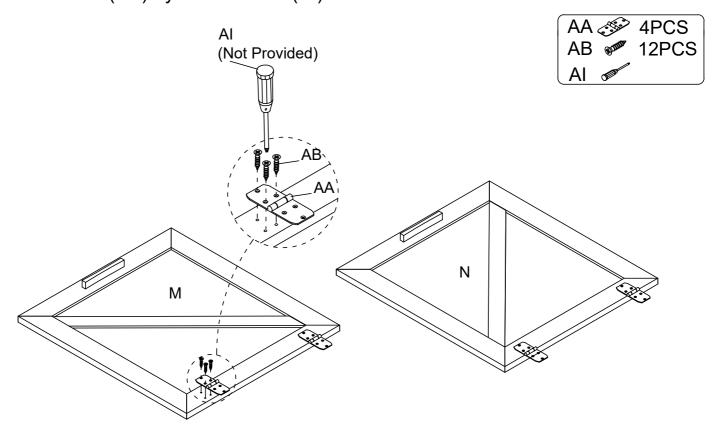

Assemble Left Door Panel (M) & Right Door Panel (N) to Front Leg - Left (G) & Front Leg - Right (I), using Hinge (AA) & Screw (AB) by Screwdriver (AI) as below shown.

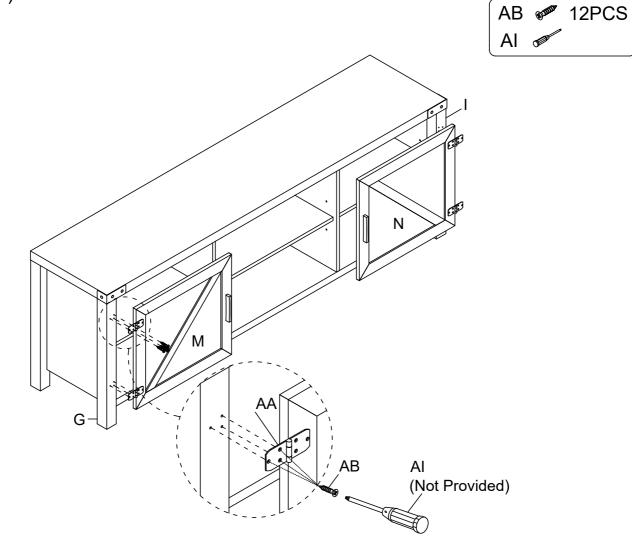

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.