


Bestway®

OWNER'S MANUAL 58941E

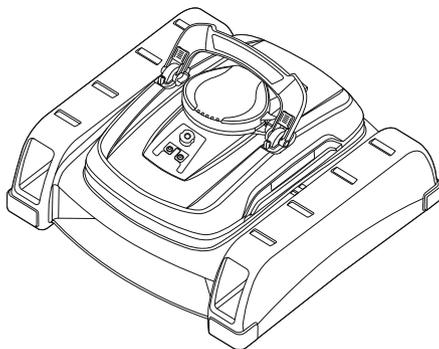

AquaTronix™ Pro G300 Robotic Pool Vacuum & Skimmer



IMPORTANT SAFETY INSTRUCTIONS

WARNING

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

• READ AND FOLLOW ALL INSTRUCTIONS.

WARNING -To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.

- Ensure that children do not attempt to access cleaner while it is operating.
- The unit must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter (GFCI). This GFCI should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the power unit without the test button being pushed, a ground current may be flowing, indicating the possibility of an electric shock. Do not use the power unit. Disconnect the power unit and contact the manufacturer for assistance.

• SAVE THESE INSTRUCTIONS.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PARTS & TOOLS



Compare the parts in your box to the parts listed in this manual. Verify that the equipment components represent the model that you had intended to purchase. If any parts are damaged or missing at the time of purchase, visit our website bestwayusa.com/support.

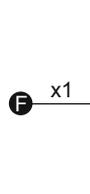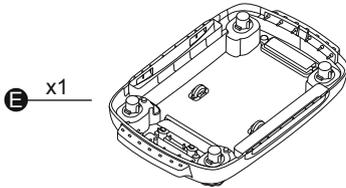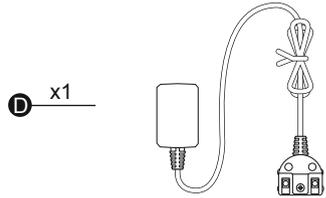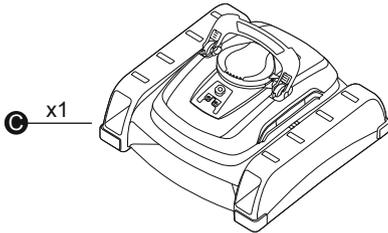

SETUP INSTRUCTIONS





- Compatible with
 - Round pools - Up to 24 ft. (7.32 m) in diameter (Bestway® Round steel wall pools included)
 - Rectangular pools - Up to 31 ft. 4 in. (9.56 m) in length
 - Oval Pools - Up to 26 ft. (7.92 m) in length
- Not compatible with
 - Bestway oval steel wall pools or any non flat-bottom pool
- The robot will stop running if the following occurs:
 - The inner liner on the pool bottom has wrinkles
 - The pool was installed on uneven, unlevel or bumpy ground
- **IMPORTANT:** To optimize the performance of the robot, turn off the filtration system. The water flow created by the filtration system will compromise the robot's typical functions.
- Only use the original charging cable.
- Make sure the charging port is clean and dry before charging.
- Make sure the robot is turned off by turning the knob to the off position prior to charging.
- Fully charge the robot (about 3 - 4 hrs) before using it for the first time.
- Remove the pool ladder, surface skimmer and other floating objects from the pool, as it may obstruct the movement of the robot.
- If you have a saltwater pool, make sure all salt is dissolved before placing the robot into the water.
- If the bottom has a large amount of debris, it is recommended to empty the basket after 10 minutes of use to optimize the robot's performance.

SETUP INSTRUCTIONS





- The motor will automatically start 10 seconds after the robot is completely submerged. This is beneficial for the robot so that it can smoothly descend to the bottom of the swimming pool and avoid rolling over on its way down.
- The robot stops for 10 seconds every 3 minutes to turn, which helps with the motion trajectory.
- **IMPORTANT:** If the robot is not fully charged after 7 hours, gently use sandpaper to remove any deposit from the charging port of the robot and the connector of the charging cable, as shown in step 6a and 6b.

Power Indicator Light

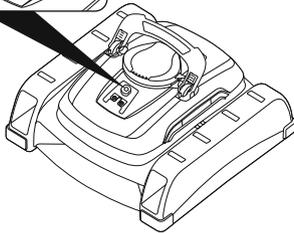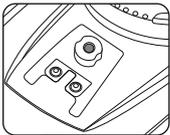

No Light	<ul style="list-style-type: none">• Switch is off• Battery is empty
Green Light	<ul style="list-style-type: none">• The robot is running normally in the pool• Charging is complete
Blinking Green Light	<ul style="list-style-type: none">• Switch is on but the robot is out of the water
Blinking Red Light	<ul style="list-style-type: none">• The robot is charging• The battery will be empty in 2 minutes
Blinking Green & Red Light	<ul style="list-style-type: none">• The filter screen is not installed properly

Icons

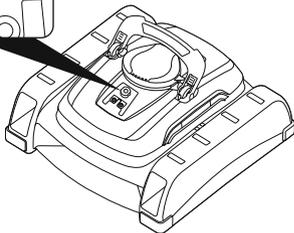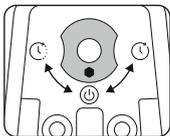

	<ul style="list-style-type: none">• 1-hour working cycle
	<ul style="list-style-type: none">• 2-hour working cycle
	<ul style="list-style-type: none">• Off

NOTE: The robot will operate for up to 120 min when fully charged.

SETUP INSTRUCTIONS



USAGE INSTRUCTIONS

For usage instructions, follow the illustrations below. Drawings are for illustration purposes only. May not reflect actual product. Not to scale.

Bestway will not be responsible for any damage caused to the product due to mishandling or failure to follow these instructions.

! The robots cannot be used while people are inside the pool.

The product propels itself along the pool bottom & water surface to collect debris.


V1: Using the Skimmer to Clean the Pool Surface

V2: Using the Vacuum to Clean the Pool Bottom



CHARGING

Parts needed: C, D


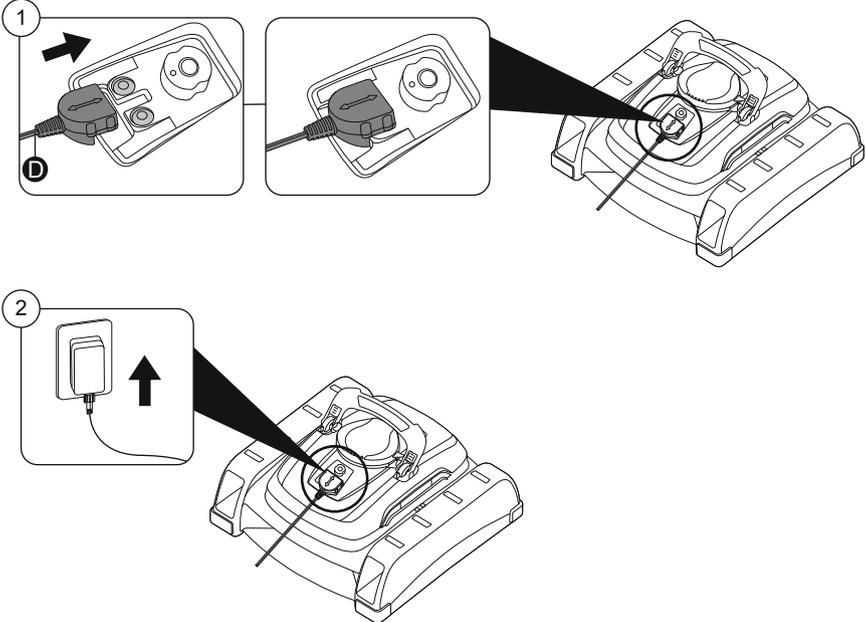






V1: USING THE SKIMMER TO CLEAN THE POOL SURFACE

Parts needed: C




1

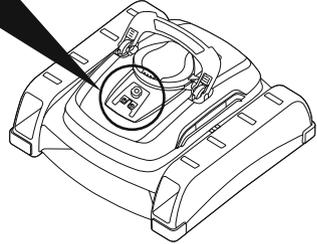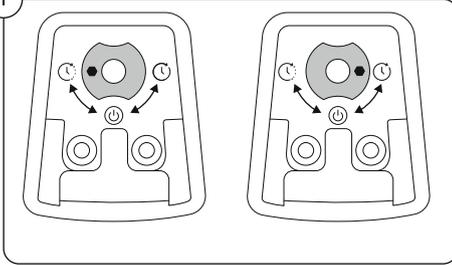

2

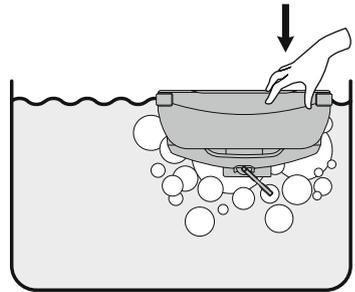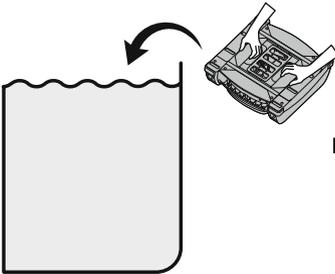

3

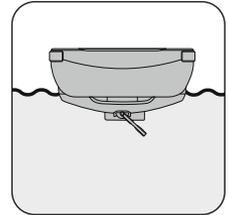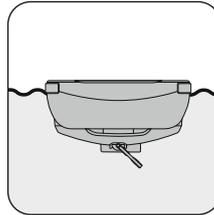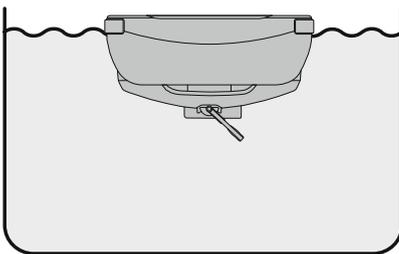






NOTE: When using the robot with Bestway® Round steel wall pools, please refer to the pool manual first to ensure that the water is filled correctly as per the guidelines.



V1: USING THE SKIMMER TO CLEAN THE POOL SURFACE

Parts needed: C



4

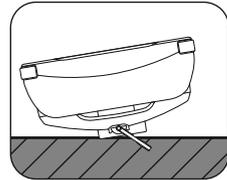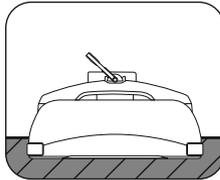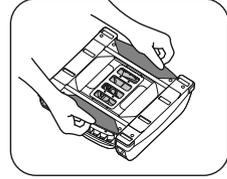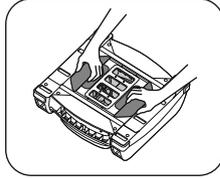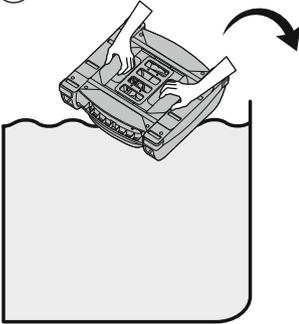

NOTE: Hold it there for 10-15 seconds or until the water in the debris compartment flows out, then remove it from the water.

NOTE: Take the robot out of the water by grabbing the middle slots. Do not place it upside down on the ground, otherwise it may damage the product.

5

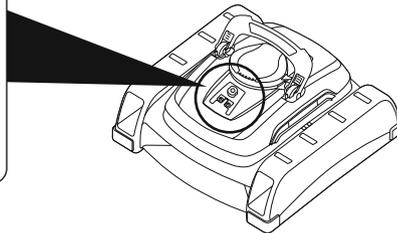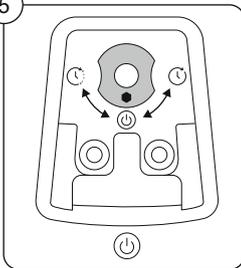





V2: USING THE VACUUM TO CLEAN THE POOL BOTTOM

Parts needed: C, E




1.1

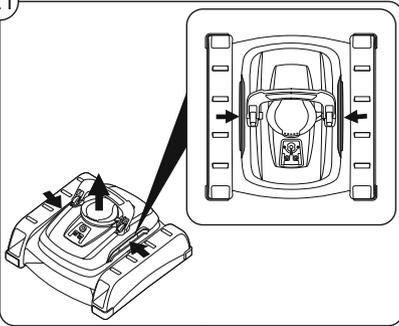

1.2

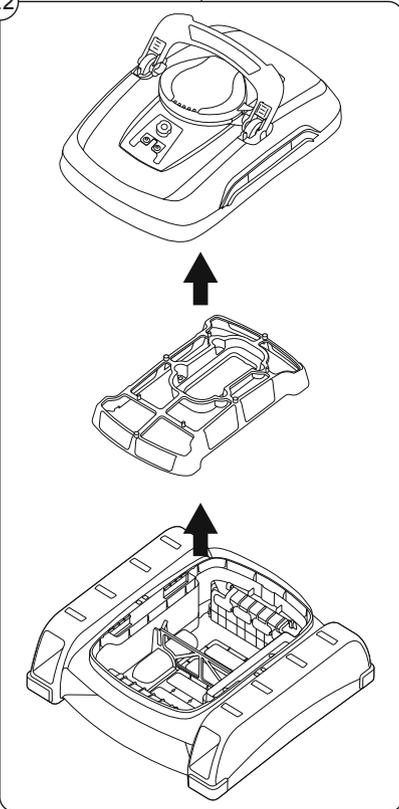


2

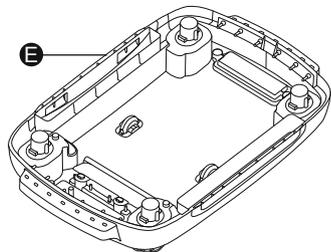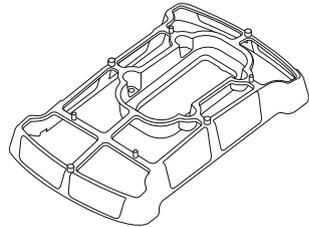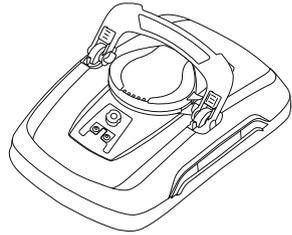




V2: USING THE VACUUM TO CLEAN THE POOL BOTTOM

Parts needed: C, E

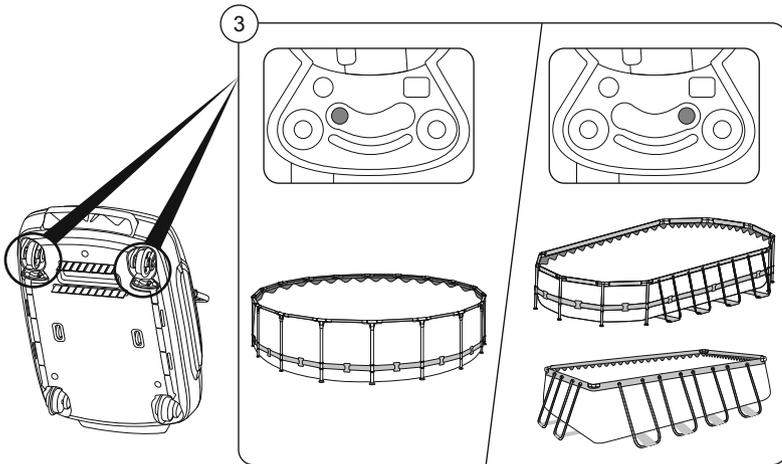

Adjust the wheel angles on the bottom of the Vacuum Attachment as needed.

Helpful Tip: These settings are for reference for different shapes of above ground pools, and you can modify them if certain areas are not being reached.



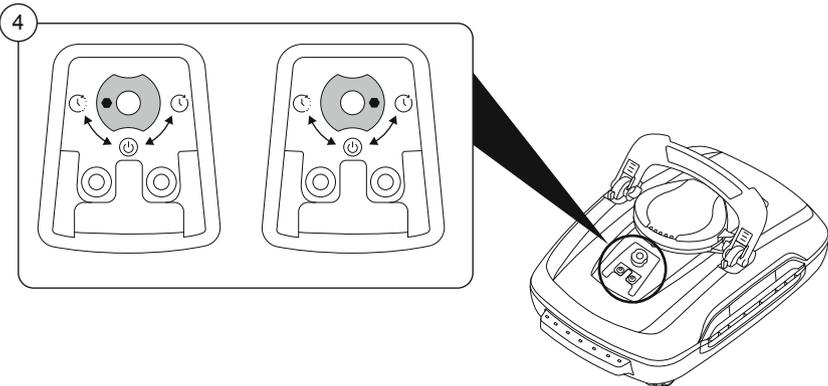




V2: USING THE VACUUM TO CLEAN THE POOL BOTTOM


Parts needed: C, E

5

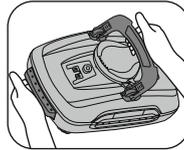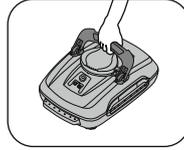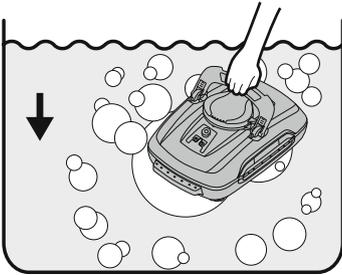

NOTE: For proper operation, lift the handle and submerge the robot into the water. Do not grasp the front or the back bumper. If either bumper falls off, please reattach it to continue.


6

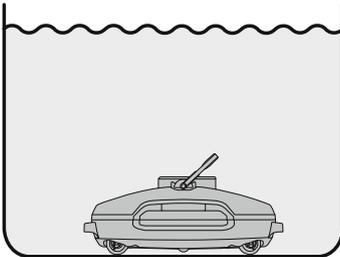






MAINTENANCE

1


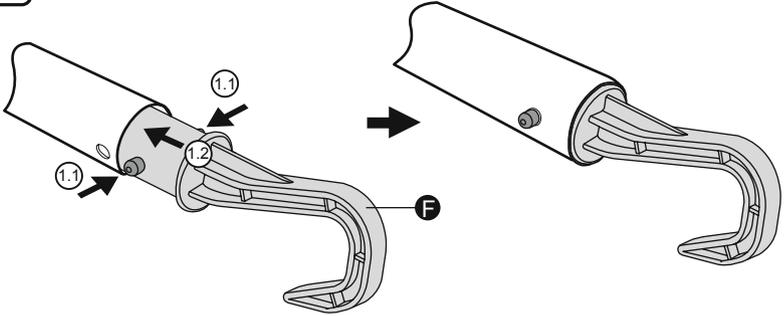


2

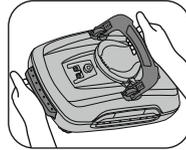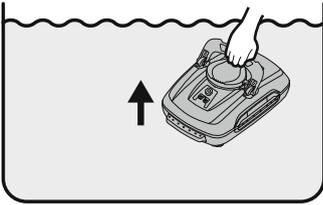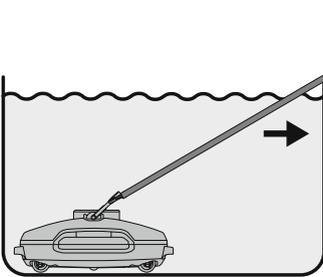

NOTE: Use the Retrieval Kit to lift the robot to the water surface. Hold it there for 10-15 seconds or until the water in the debris compartment flows out, then remove it from the water.


3

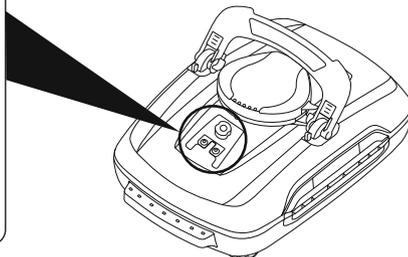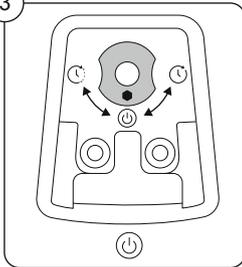




MAINTENANCE


4

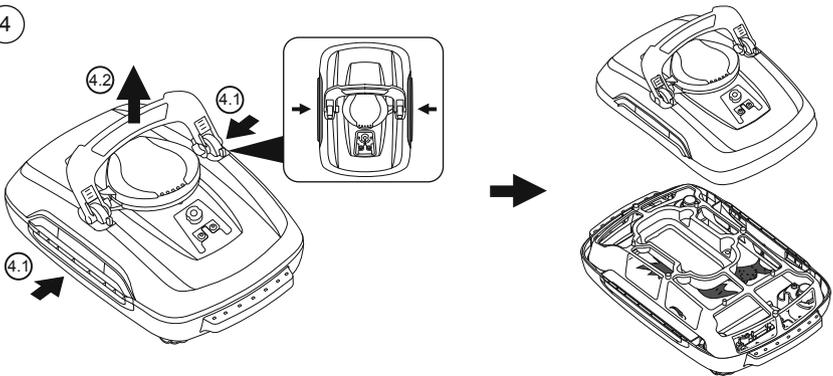


5

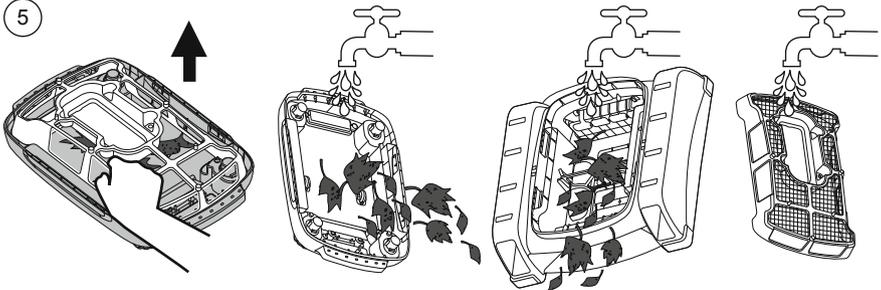


6a

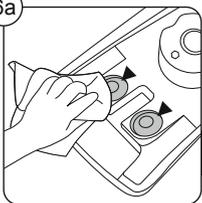

C

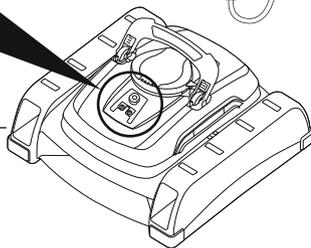

6b

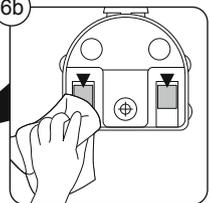

STORAGE INSTRUCTIONS

- The battery will lose charge during storage. Make sure it is fully charged before storage.
- To optimize the performance of the battery, the robot must be re-charged at least once every two months when not in use.
- Unplug the charger from the socket and then unplug the charging cable from the robot.
- Detach accessories from the robot. If necessary, rinse the robot and accessories with fresh water. DO NOT use detergent.
- Drain the water from the robot before storing it.
- Use a damp cloth to clean and dry the robot and its accessories.
- Store the product in a dry place with a moderate temperature between 50°F / 10°C and 100°F / 38°C.

NOTE: A higher or lower storage temperature may reduce the battery life.

TROUBLESHOOTING

Problem	Probable Cause	Solution
The robot does not capture debris, or it moves slowly or not at all.	The battery level is low.	Charge the robot.
	The debris compartment is full, or the debris screen is blocked.	Clean the debris compartment or the debris screen.
	The impeller is stuck or broken.	For assistance, please visit the support section on our website, bestwayusa.com/support .
The robot stops moving, but the swivel head is still rotating.	The debris compartment is full, or the debris screen is blocked.	Clean the debris compartment or the debris screen.
	The robot is jammed by debris on the bottom.	Check and remove any debris.
The swivel head does not work.	The swivel head is stuck.	Check and remove any debris that is trapped under the swivel head or the rotating robot head.
	The flapper is stuck.	Check and remove any debris that hinders the movement of the flapper.
	The swivel head no longer works.	For assistance, please visit the support section on our website, bestwayusa.com/support .
The robot works around the pool wall but cannot cover the whole pool.	Improper locking adjustment position.	Follow Step 3 of the Pool Bottom function for proper wheel angle positioning.
The robot fails to charge.	The charger is jammed with debris.	Clean and dry the port before charging. If charging is slow, gently use sandpaper to remove corrosion, as shown in Step 6a and 6b. 
	The charger does not work.	Check if the charging cable and/or the adaptor is damaged. If the charging cable and/or the adaptor is damaged, please visit the support section on our website for assistance: bestwayusa.com/support .
	The battery is damaged.	For assistance, please visit the support section on our website, bestwayusa.com/support .
The robot has been charging for more than 7 hours, but it is not fully charged.	There is poor contact between the robot and the charger.	Clean and dry the port before charging. If charging is slow, gently use sandpaper to remove corrosion, as shown in Step 6a and 6b. 
The robot stops at the inlet and outlet of the pool.	The filtration system connected to the pool is not turned off, which affects the performance of the robot while running.	Turn off the filtration system.
The robot stops at the edge of the pool.	The debris compartment is full.	Clean the debris compartment.
The robot does not park along the pool wall.	The debris screen is blocked.	Clean the debris screen.
	The robot encountered an obstacle underwater that triggered a direction change.	Smooth the bottom of the pool or remove any obstacles.
	The switch inside the robot for this function is damaged.	For assistance, please visit the support section on our website, bestwayusa.com/support .

WARRANTY INFORMATION

For support and product registration, please visit bestwayusa.com/support.

Bestway® | LIMITED WARRANTY

Bestway (Hong Kong) International Ltd. (“Bestway”) warrants to the original end-user purchaser in the United States and Canada that the products identified in the table below (“Products”) will be free from manufacturing defects for the warranty period identified for the Product in the table below. The warranty period begins on the date of purchase or the date of delivery of the Product to the original, end-user purchaser, whichever is later.

Because Bestway cannot control the quality of Products sold by unauthorized sellers, this warranty applies only to Products that were purchased from Bestway or a Bestway authorized seller in the United States and Canada, unless otherwise prohibited by law. Bestway reserves the right to reject warranty claims for Products purchased from unauthorized sellers, including unauthorized Internet sites.

This warranty does not cover any damage or defects due to:

- normal wear and tear;
- misuse, including use outside of the owner’s manual guidelines;
- alteration to the product by the end-user or any third party;
- improper storage or handling, including storage or handling not in accordance with the technical recommendations in the owner’s manual;
- negligence.

Bestway will repair or replace the damaged or defective part(s) only. Bestway will not repair or replace the complete set.

Purchasers of Products who wish to make a warranty claim based upon a Product defect should complete the warranty claim form found at <https://www.bestwayusa.com/ourwarranties>. You will be required to submit proof of purchase from an authorized seller. This warranty does not cover Products purchased as used or “second hand as is”. Bestway reserves the right to request additional information in order to process a warranty claim, including, but not limited to, Product serial numbers or photos of the Product or parts. You may also be required to the return of the Product or certain parts for additional testing or to otherwise assist in processing your claim.

There are no warranties which extend beyond those stated herein. ANY IMPLIED WARRANTIES THAT MAY BE APPLICABLE TO PRODUCTS, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY PERIOD DESCRIBED HEREIN. UNDER NO CIRCUMSTANCES SHALL BESTWAY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF THIS LIMITED WARRANTY, BREACH OF CONTRACT OR STRICT LIABILITY. Some States do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

If you have any questions about whether a seller is authorized or any other questions regarding this warranty, the warranty period, the warranty claim process or the status of a warranty claim, please contact us through the form at <https://bestwayusa.com/support> or write us at: Bestway Customer Service – 3435 S. McQueen Road – Chandler, AZ 85286

