 


IMPORTANT

 
Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

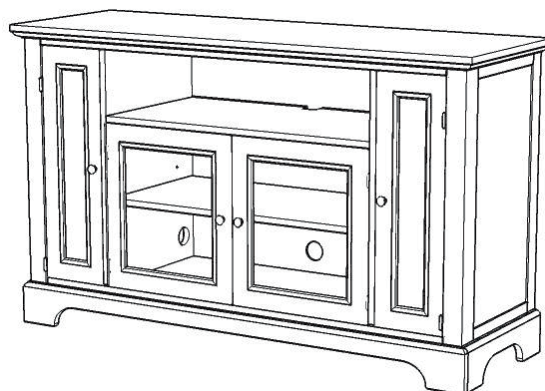

Part List

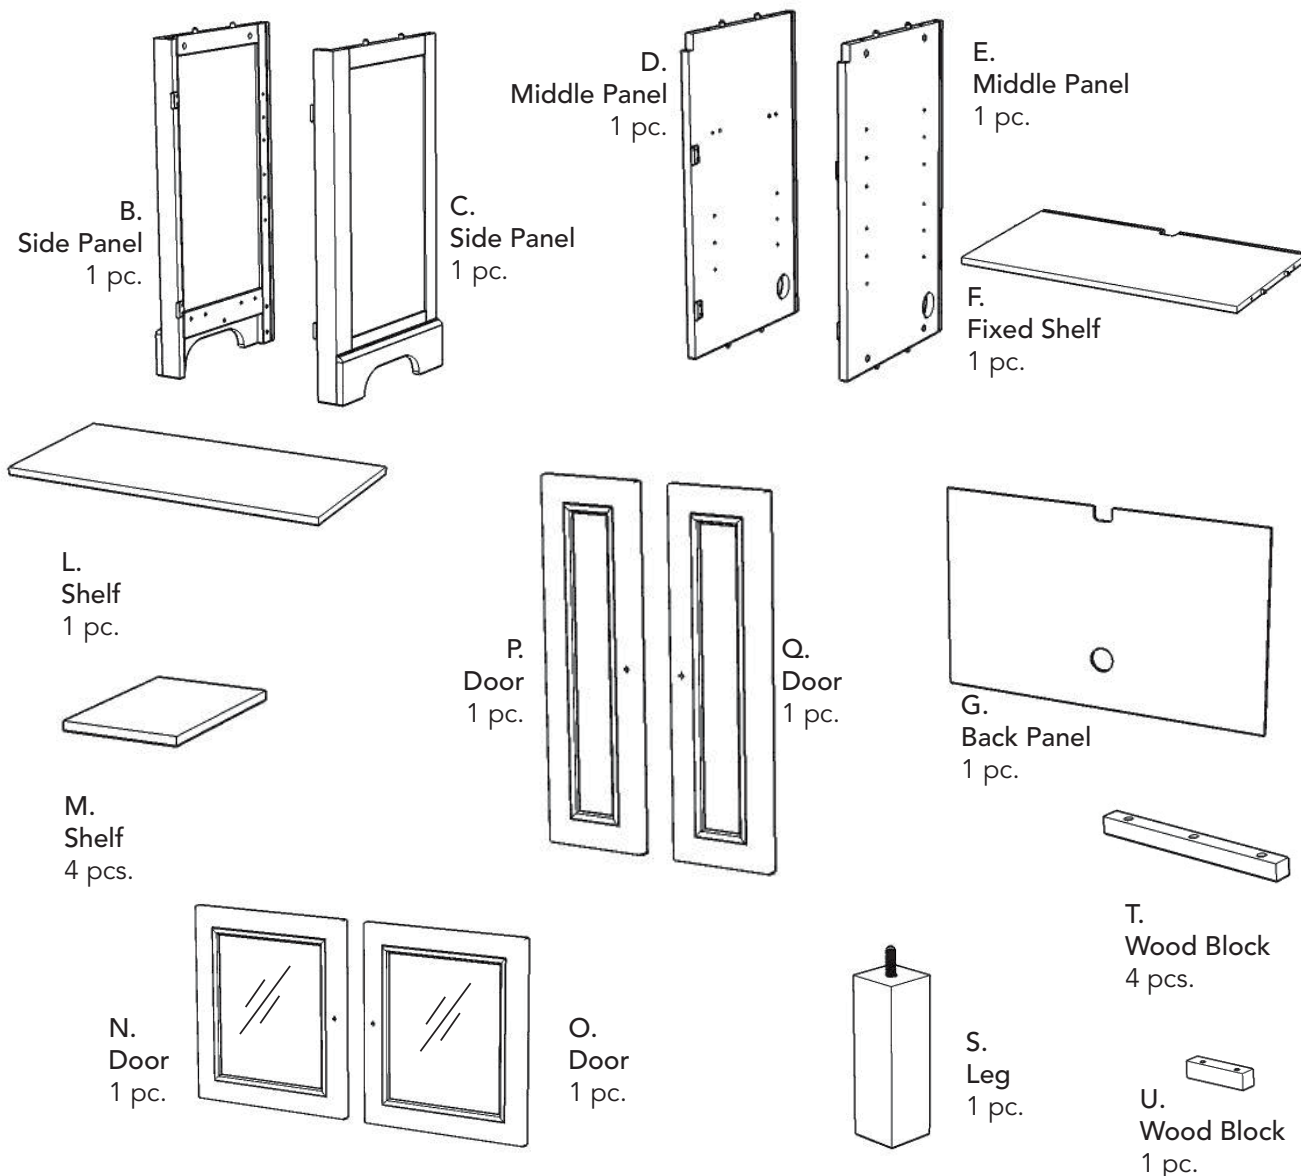

Carton 88 5530 101 is also needed for assembly.

 
Tool(s) required for assembly: Phillips screwdriver, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/6

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the wood screws until each part is properly assembled.

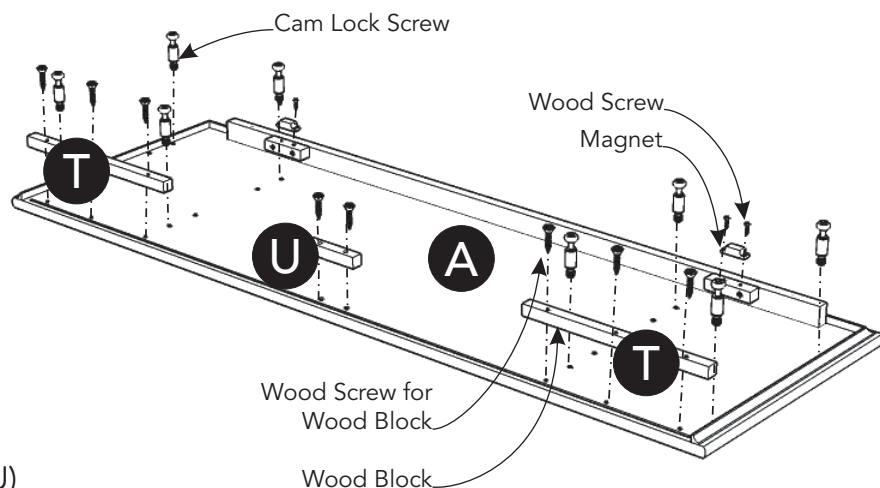

STEP 1

Attach Wood Blocks (T) and (U) to Top (A) with Wood Screws for Wood Block.

Insert Cam Lock Screws into the pre-drilled holes of Top (A).

Attach Magnets to Top (A) with Wood Screws into the pre-drilled holes.
(See Figure 1)


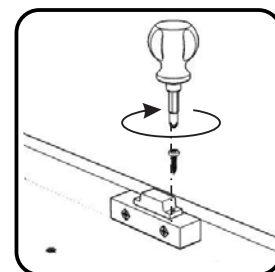 


Figure 1

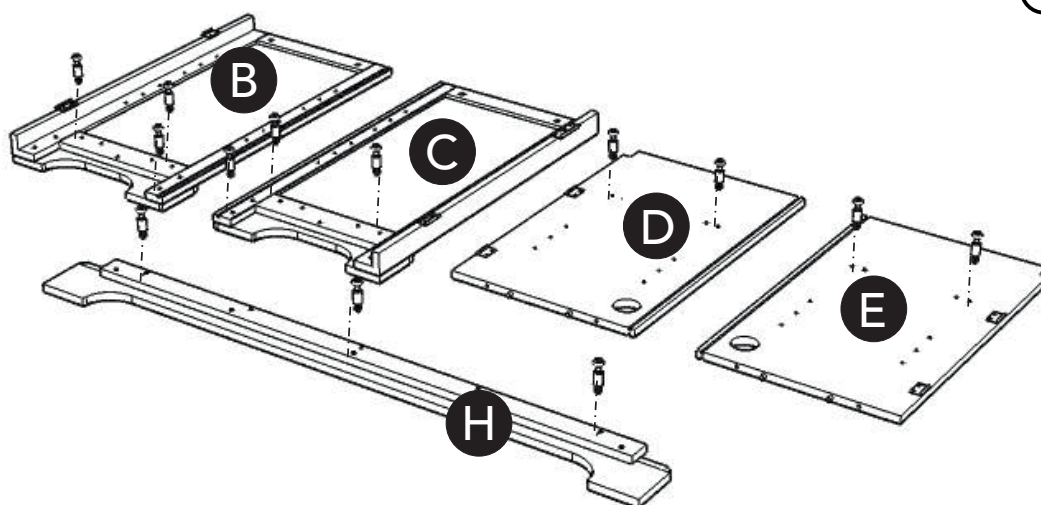 



STEP 2

Insert Cam Lock Screws into the pre-drilled holes of Side Panels (B), (C), Middle Panels (D), (E) and Plinth (H).

STEP 3

Attach Wood Blocks (T) to Base (I) with Wood Screws for Wood Block.

  Insert Cam Lock Screws into the pre-drilled holes of Base (I).

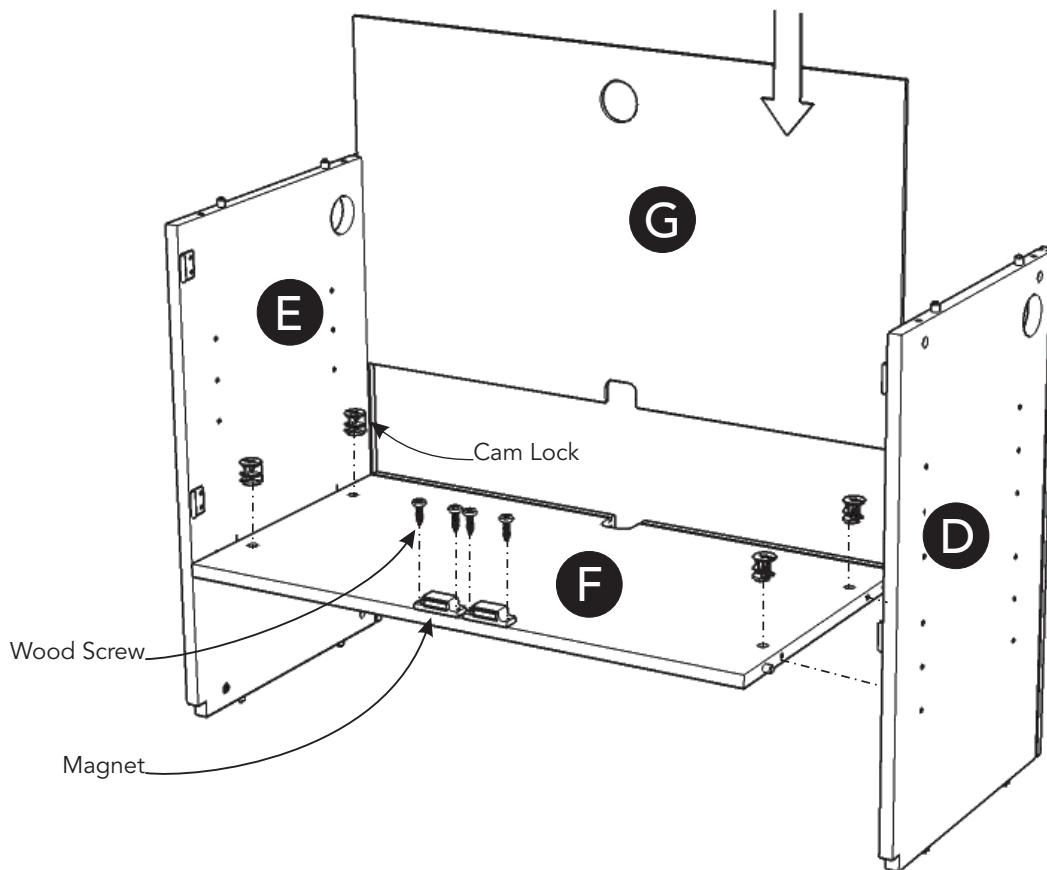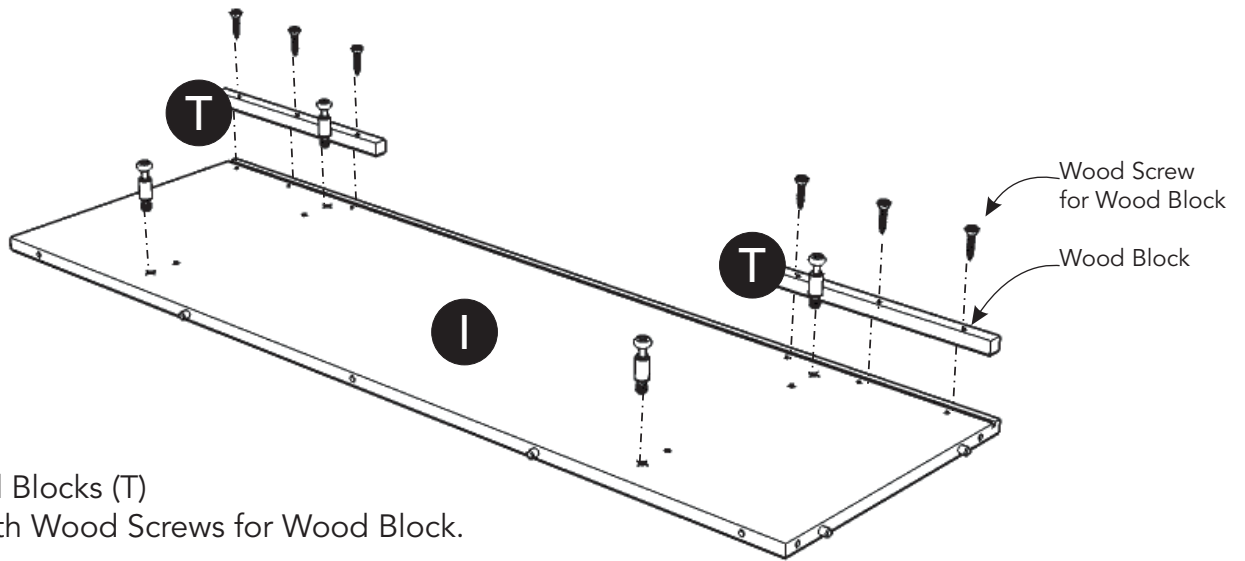

STEP 4

Attach Magnets to Fixed Shelf (F) with Wood Screws.

Attach Fixed Shelf (F) to Middle Panels (D) and (E) with Cam Locks (See Figure 2), then slide Back Panel (G) into position.


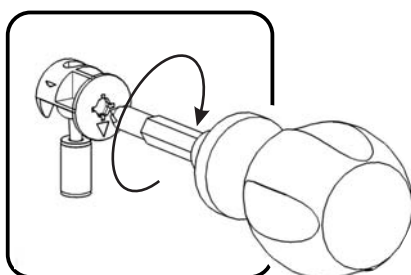 


Figure 2

 Assembly Instructions 4/6

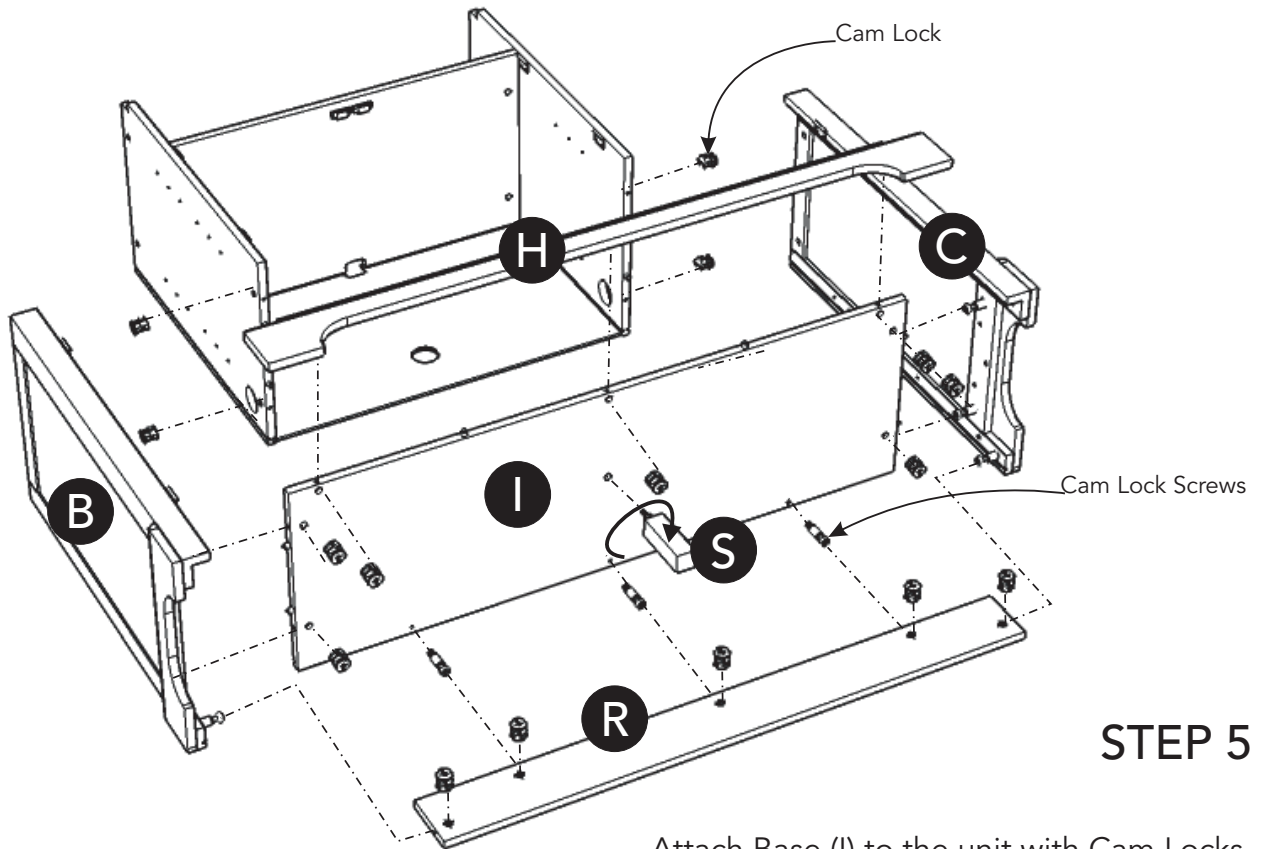

STEP 5

Attach Base (I) to the unit with Cam Locks.

Put 3X Cam Lock Screws into the pre-drilled holes of Base (I) as shown, then attach Back Support (R) to Base (I) with Cam Locks and attach Side Panels (B) and (C) and Plinth (H) to the unit with Cam Locks.

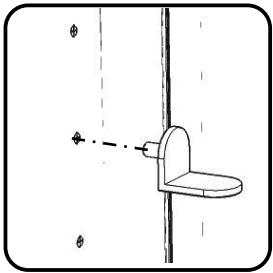 


Figure 3

Tighten up Leg (S) into the pre-drilled hole of unit as shown.


STEP 6

Slide Back Panels (J) and (K) into place.

Attach Top (A) to the unit with Cam Locks.

Insert Adjustable Pins into side panels and middle panels at the desired level. (See Figure 3)

Place Shelves (L) and (M) into position.

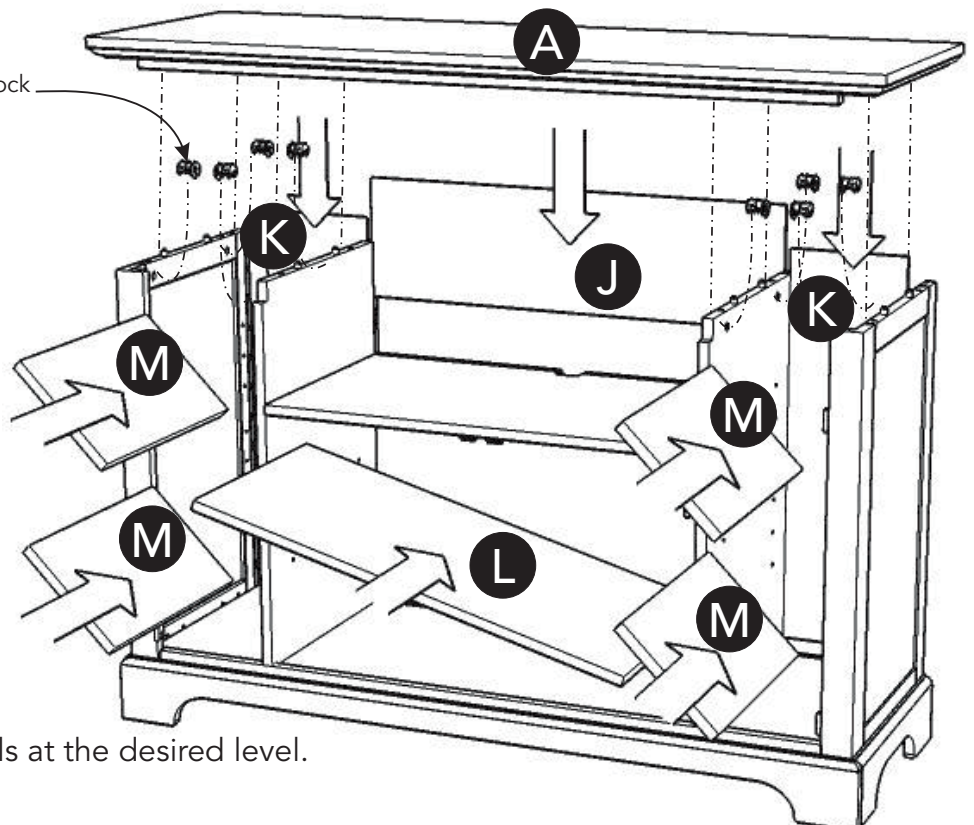 

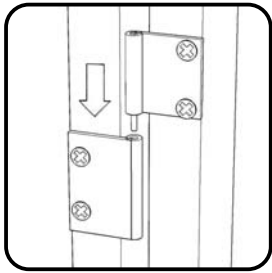 


Figure 4


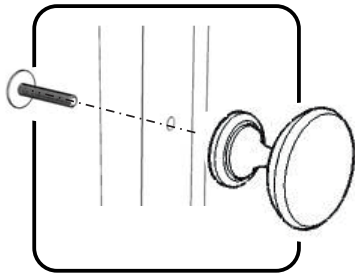 


Figure 5

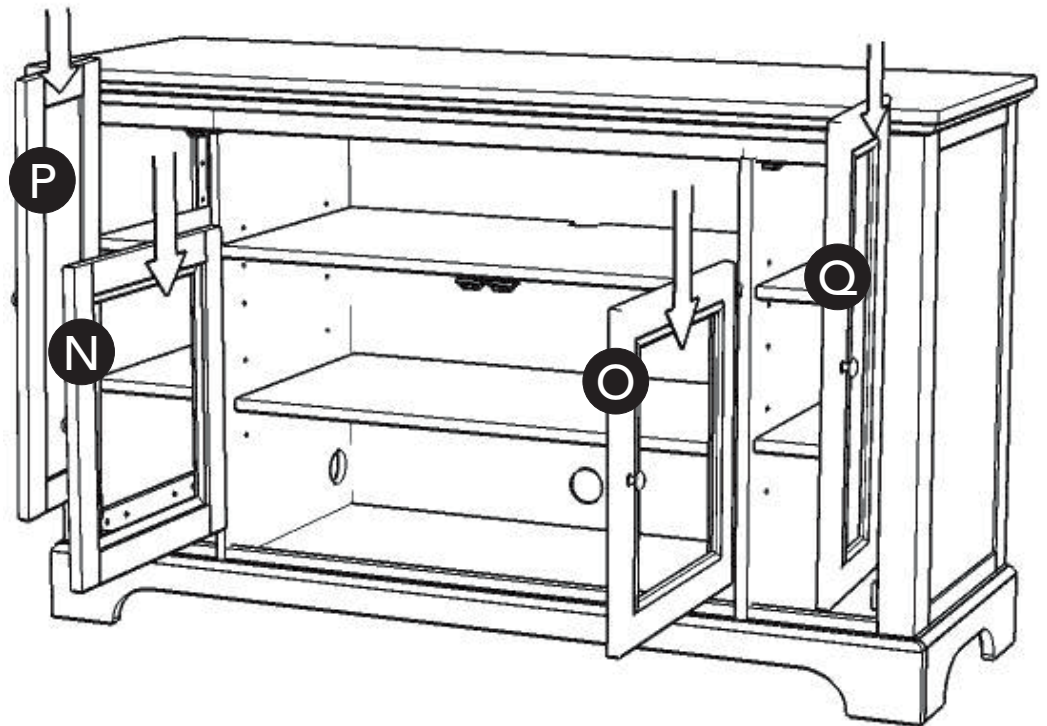 

STEP 7

Attach Doors (N), (O), (P) and (Q) by sliding the door lift hinges into the side panels lift hinges. (See Figure 4)

Assemble Pull Handles to Doors with Machine Screws. (See Figure 5)

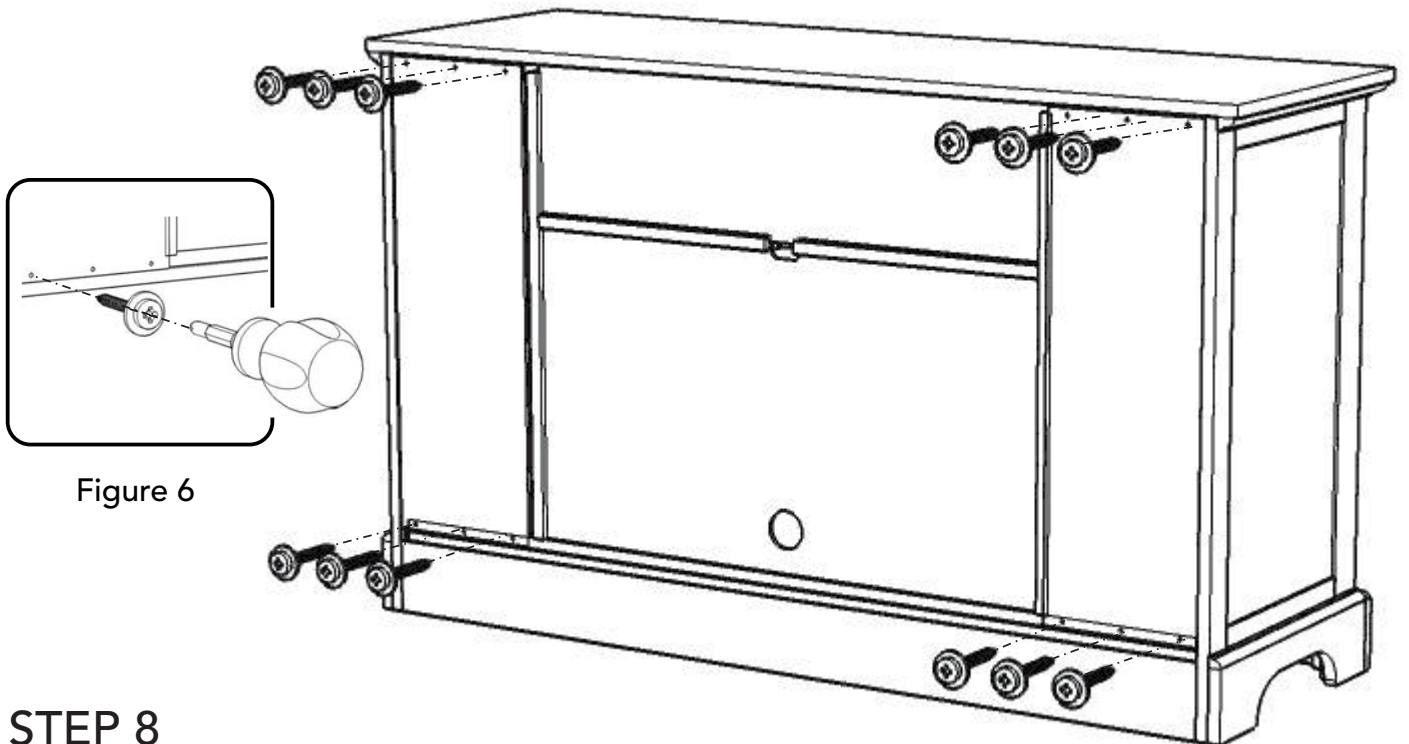 


Figure 6

STEP 8

Insert 12X Wood Screws from the back of the unit, then tighten up all the Wood Screws. (See Figure 6)

Note: Please make sure unit is level before tightening these screws.

Assembly Instructions 6/6

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 9

Place unit at desired location.

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit.
(See Figure 7)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.



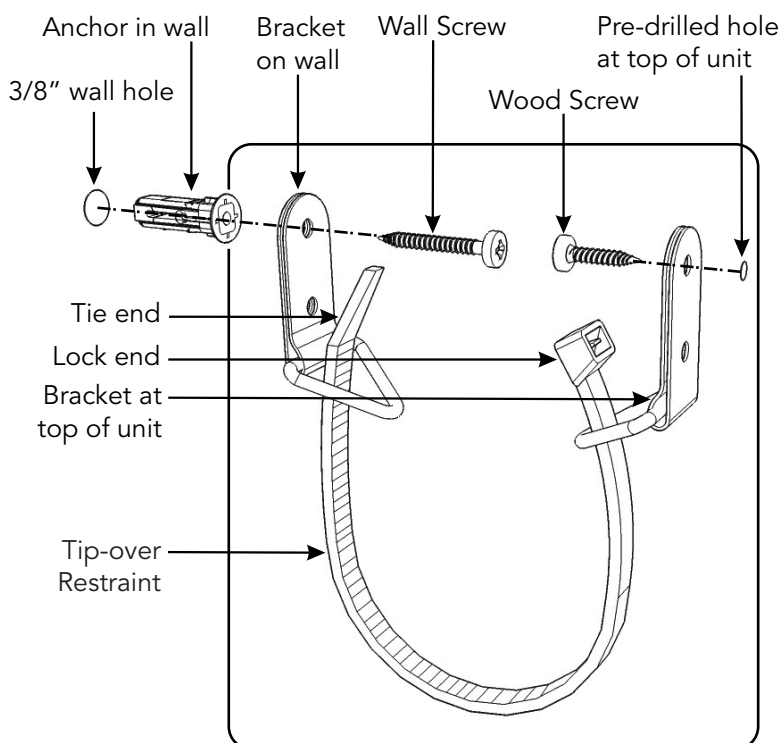 



Figure 7

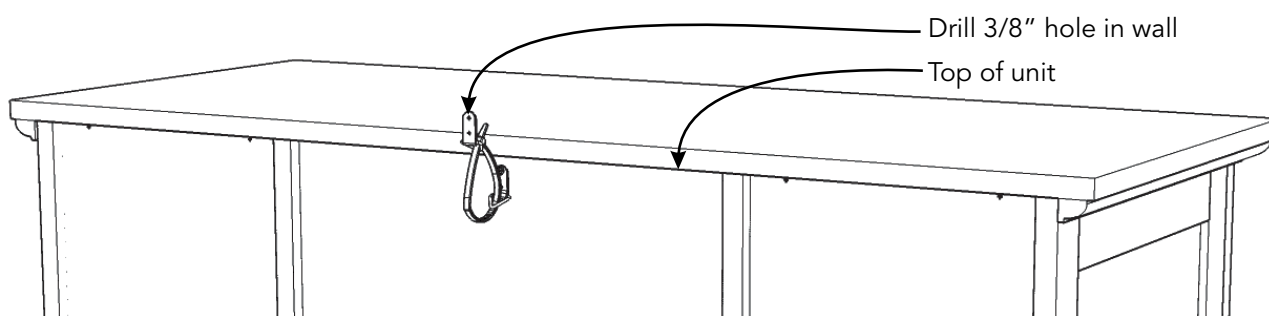 

Hardware List

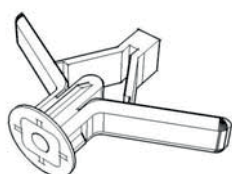 

Anchor
1 pc. (+1 extra)

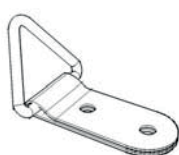 


Bracket
2 pcs. (+1 extra)



Tip-over Restraint
1 pc. (+1 extra)



 M3.5x40
Wall Screw
1 pc. (+1 extra)



M3.5x16
Wood Screw
1 pc. (+1 extra)

CARE INSTRUCTIONS

NEVER

 
allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**

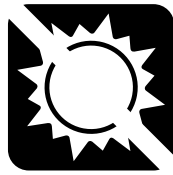


Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



 Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

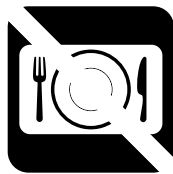

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319