

SELECTING CORE PE PUNCH

1. Select the punch based on the core diameter and length.

