



⚠ WARNING

- Not for permanent installation.
- For outdoor use only
- Use caution with all electric appliances, tools, extension cords and lights on and around table.
- Surface can become hot in direct sun or high temperatures.
- Maximum top weight load of 75 LBS
- Use only on level surfaces.
- Do not allow children to climb the product.
- The table surface may be slippery. Ensure all objects placed on the table are stable before use.

Customer Service Hotline
1-866-994-6390






DO NOT RETURN PRODUCT TO THE STORE



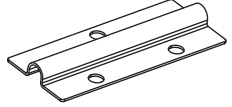
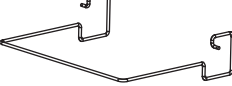
Before visiting your local retailer, please email consumercare@thefulhamgroup.com, call 1-866-994-6390, or visit www.thefulhamgroup.com to online chat with a representative. To best serve you, our Representatives are available to answer your calls and live chats Monday to Friday, 9 AM - 5 PM EST.

Table of Contents	2
Package Contents List	3
Assembly Instructions	4
Care and Maintenance	10
Exploded View	10
Parts List	11
Warranty & Contact	12





WHAT'S IN THE BOX

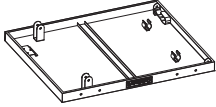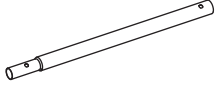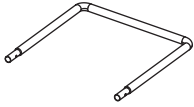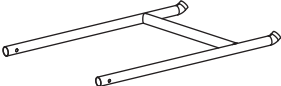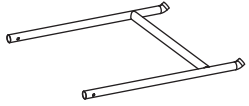



COMPONENTS

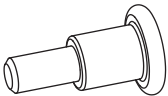PART	DESCRIPTION	PART IMAGE	QTY
1	Table Top		(x1)
3	Upper Leg B		(x2)
4	Upper Leg A		(x1)
5	Lower Leg A		(x1)
6	Lower Leg B		(x1)

PART	DESCRIPTION	PART IMAGE	QTY
7	Tool Hook		(x4)
8	Paper Towel Holder		(x1)
9	Bracket		(x1)
10	Trash Bag Frame		(x1)

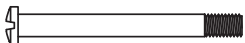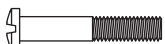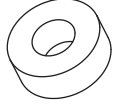HARDWARE

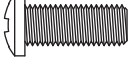PART	DESCRIPTION	PART IMAGE	QTY
A	Phillips Head Screw 1/4" x 2-3/8"		(x2)
B	Phillips Head Screw 1/4" x 1-3/8"		(x2)
C	Nylon Washer		(x2)
D	Rubber Washer		(x4)

PART	DESCRIPTION	PART IMAGE	QTY
E	Phillips Head Screw 5/32" x 3/8"		(x3)
F	Lock Nut 1/4"		(x4)
G	Hex Nut 1/4"		(x4)
H	Cotter Pin		(x2)

ASSEMBLY INSTRUCTIONS



Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts against components list on p. 3. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

NOTE: You will need a Phillips head screw driver and an adjustable wrench to perform this assembly (not included).





STEP 1

- Lay the table top upside down on a surface that will not scratch the paint, like the cardboard box. Attach the four Tool Hooks (7) to the front of the table using Hex Nut (G) by hand. Do not over tighten because you may damage the tool hooks.

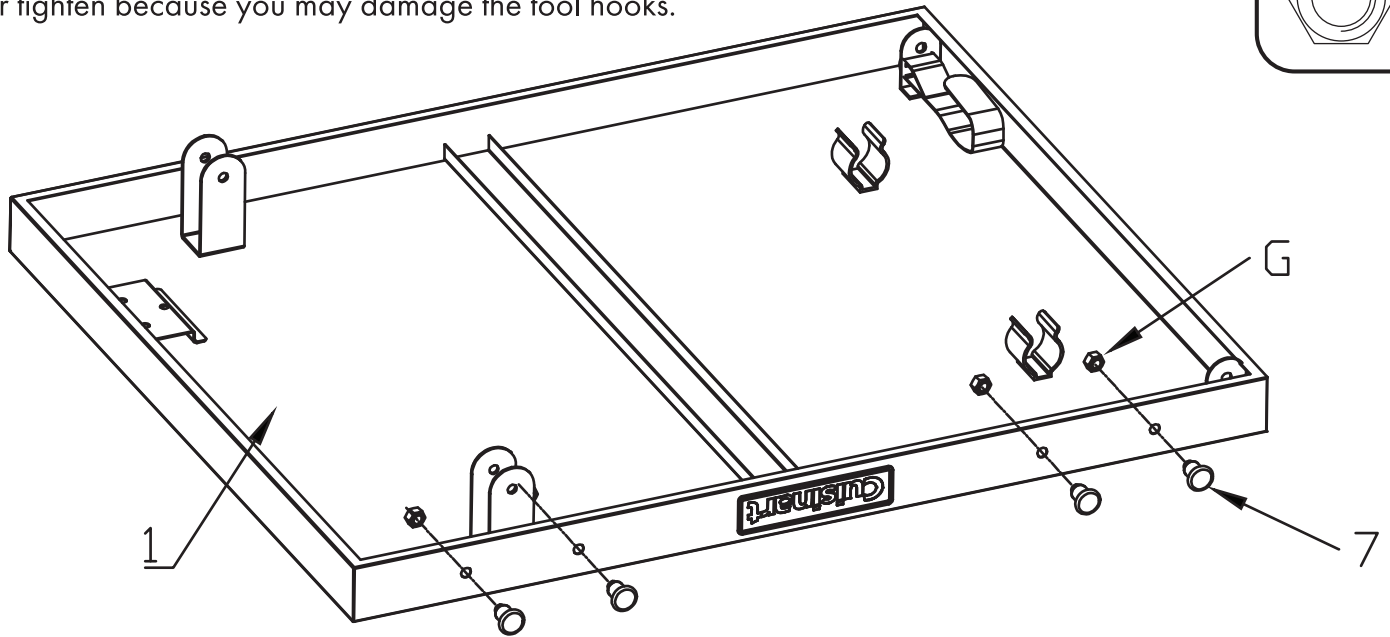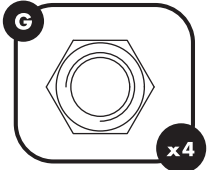

STEP 2


- Attach the Paper Towel Holder (8) to the table top using Bracket (9) and 3 Screws (E).

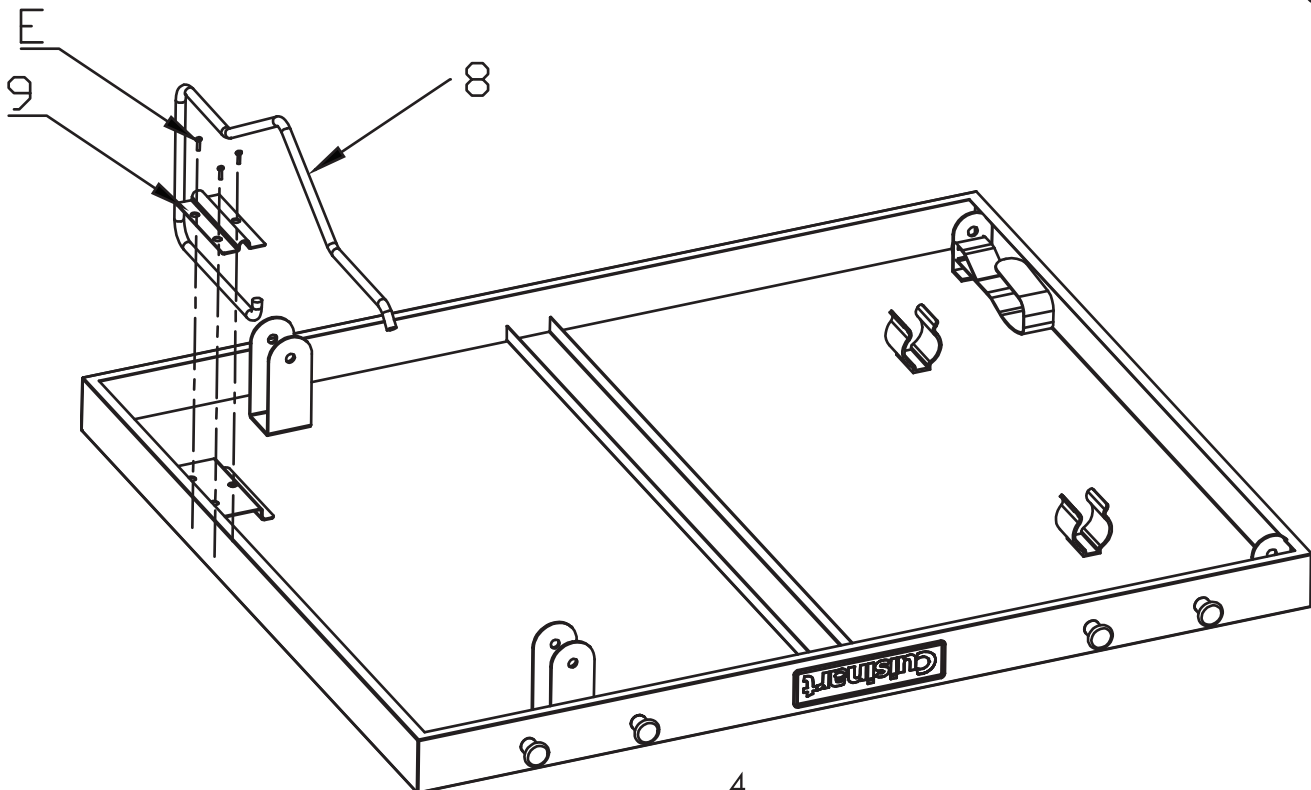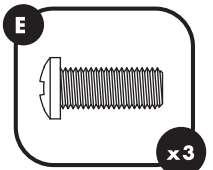

ASSEMBLY INSTRUCTIONS

STEP 3


- Insert the ends of the Trash Bag Frame (10) into the holes on the brackets as shown. Secure the frame to the table top using two Cotter Pins (H).

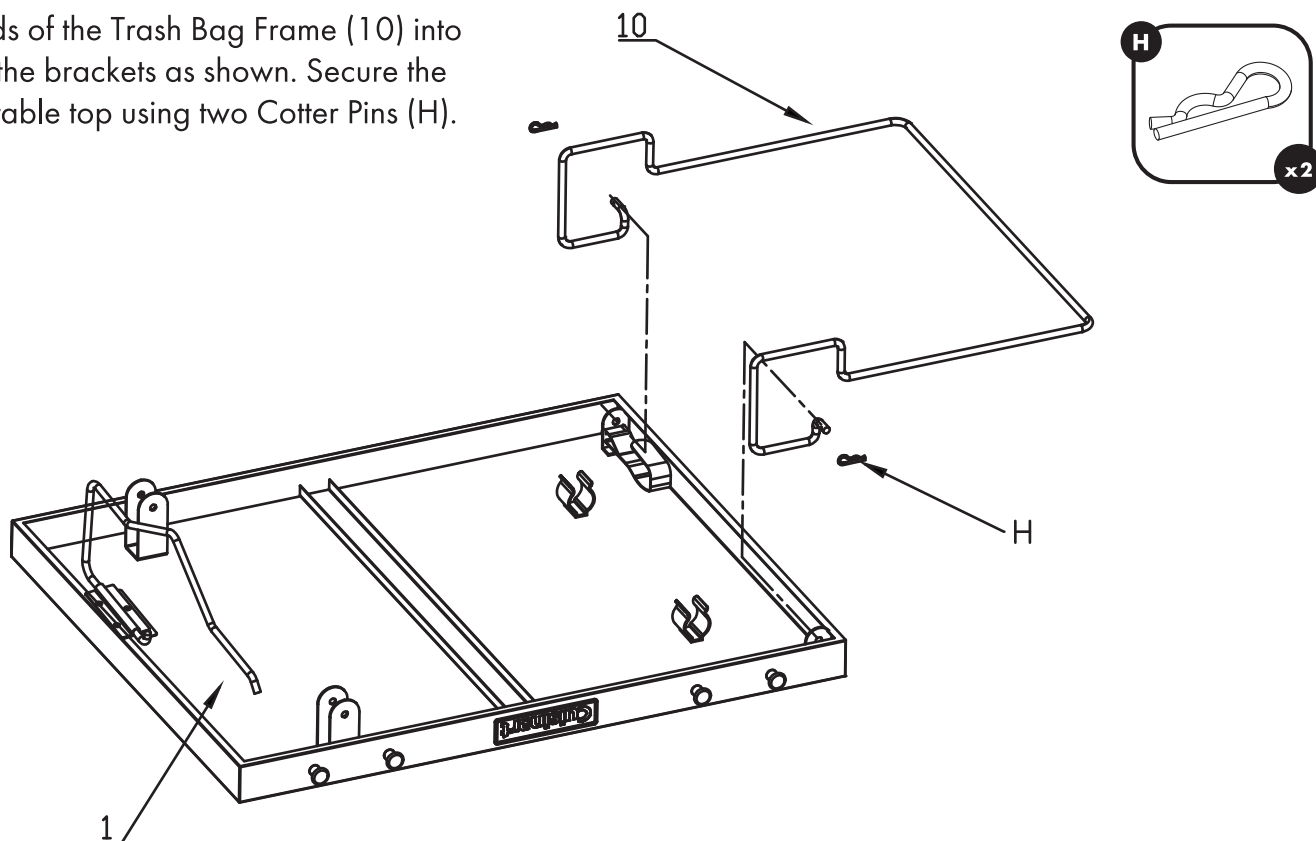

STEP 4

- Create Leg A by assembling Upper Leg A (4) to Lower Leg A (5) ensuring the holes in the middle of both parts line up. No Screws are required at this time.


Note: the lower legs are labeled to easily tell them apart.

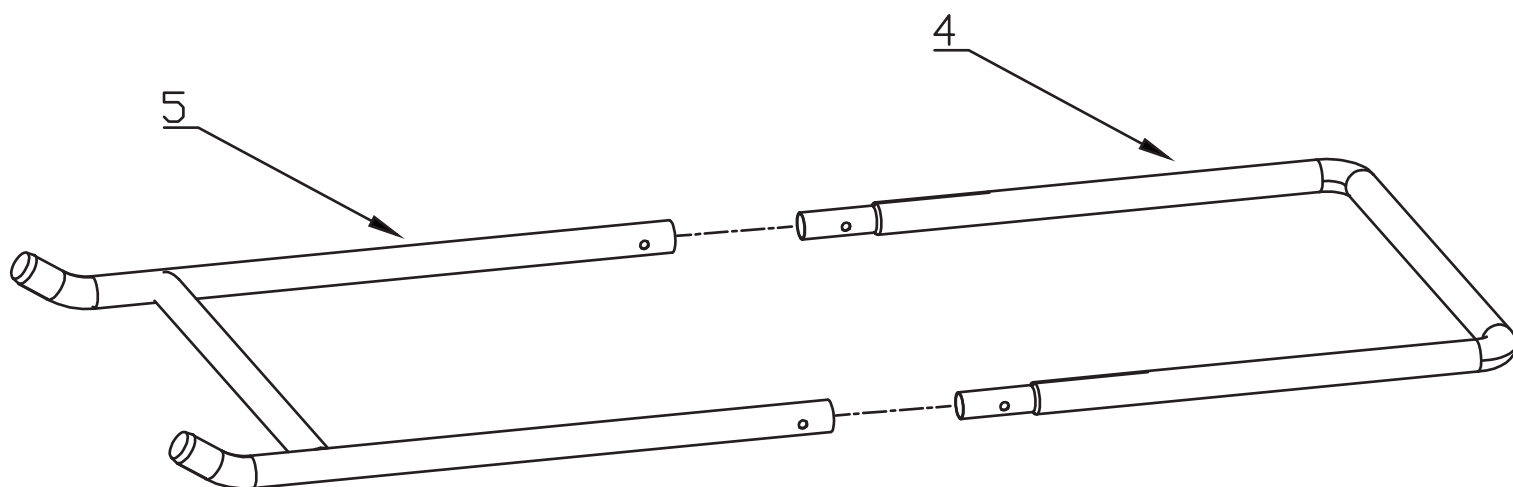

ASSEMBLY INSTRUCTIONS



STEP 5

- Create Leg B by assembling 2 Upper Leg B (3) to Lower Leg B (6) ensuring the holes in the middle line up. No screws are required at this time

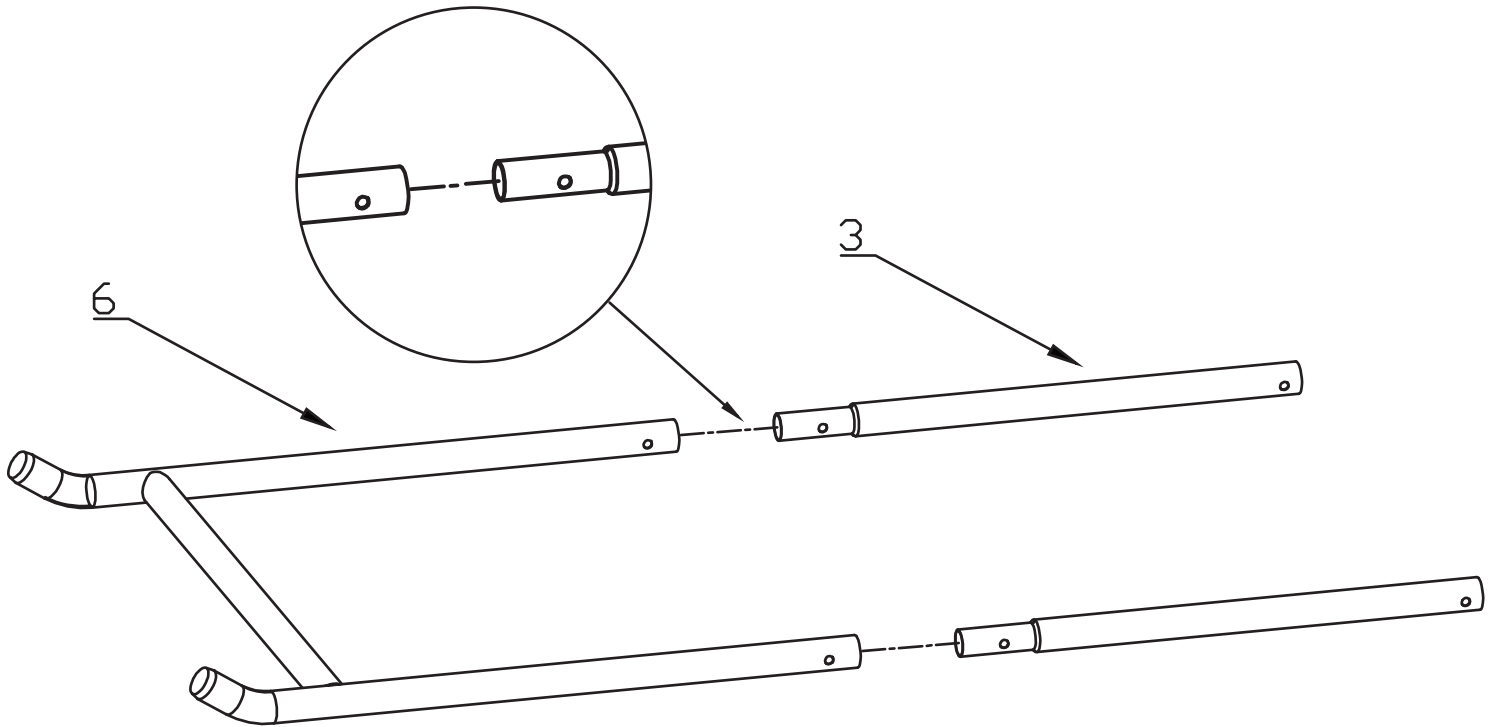

STEP 6






- Set Leg B flat on a surface with the feet facing up and to the left.
- Place Leg A on top of leg B with the feet facing down and to the left.
- Ensure all the holes are lined up. Using a screwdriver and adjustable wrench assemble the legs together at two locations with Screw (A) through both legs, Nylon Washer (C) in between, and Lock Nut (F).

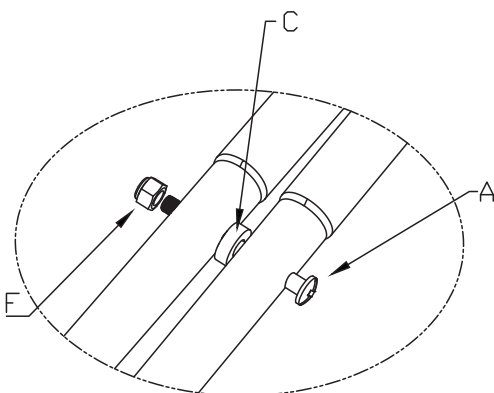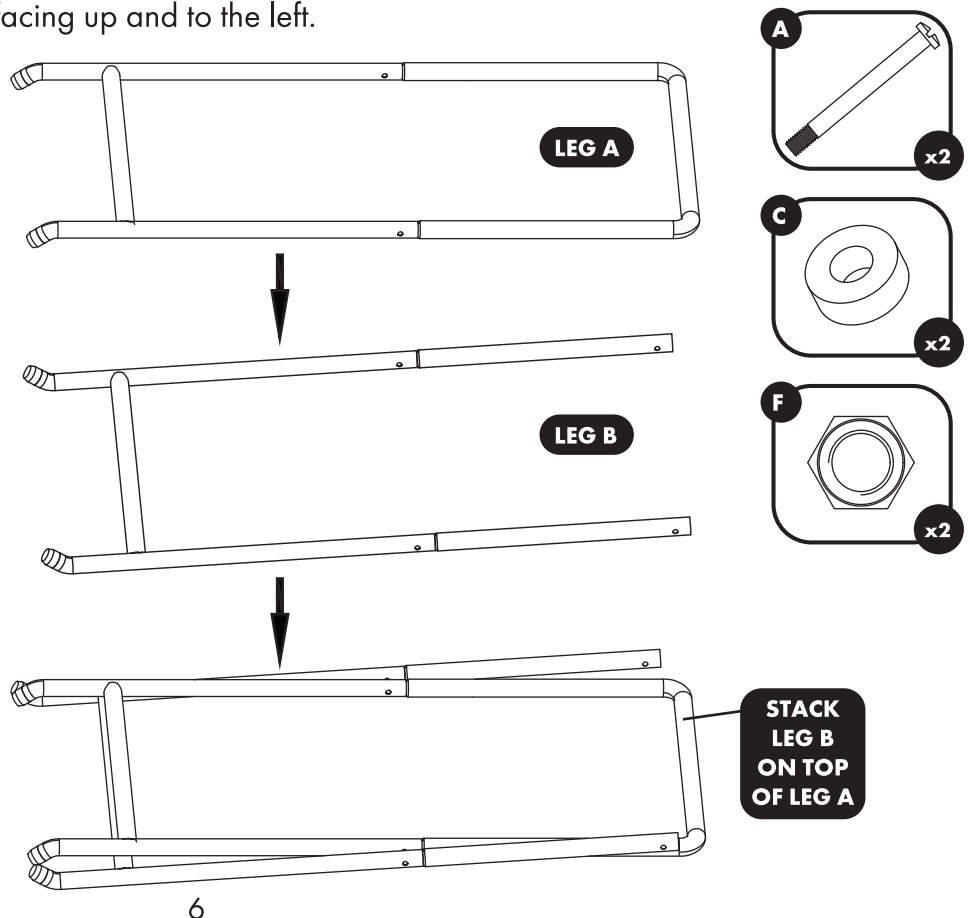

ASSEMBLY INSTRUCTIONS

STEP 7


- Place the leg assembly on top of the upside-down table and position the upper tubes of Leg B in the brackets of the table.
- Place two Rubber Washers (D) on either side of the leg tube ensuring the tube is nested inside the round grooves of the washers
- Line up all the holes between the table bracket, rubber washers, and leg tube, then using a screwdriver and adjustable wrench attach the legs to the table with Screw (B) and Lock Nut (F).

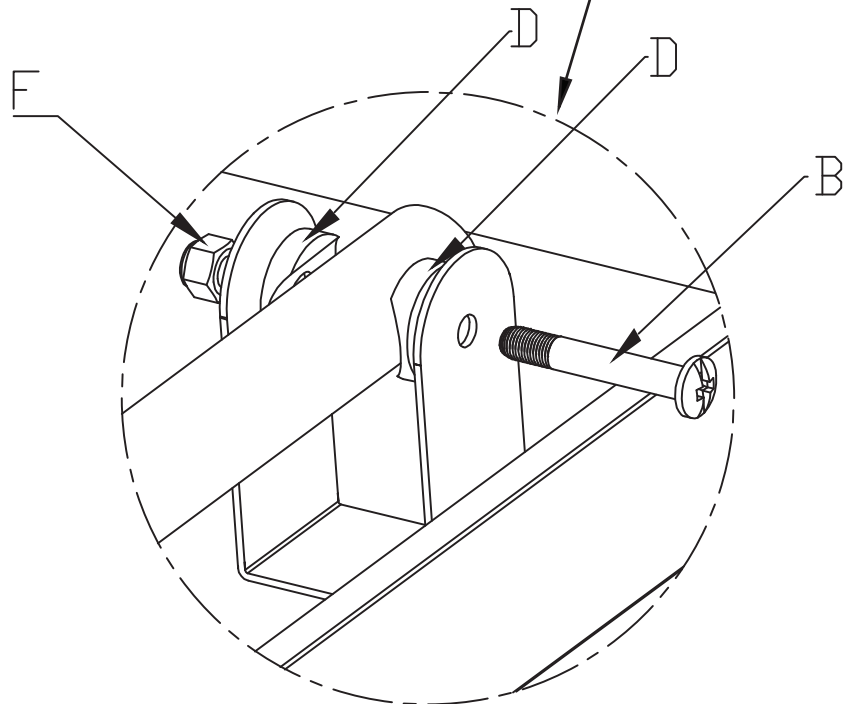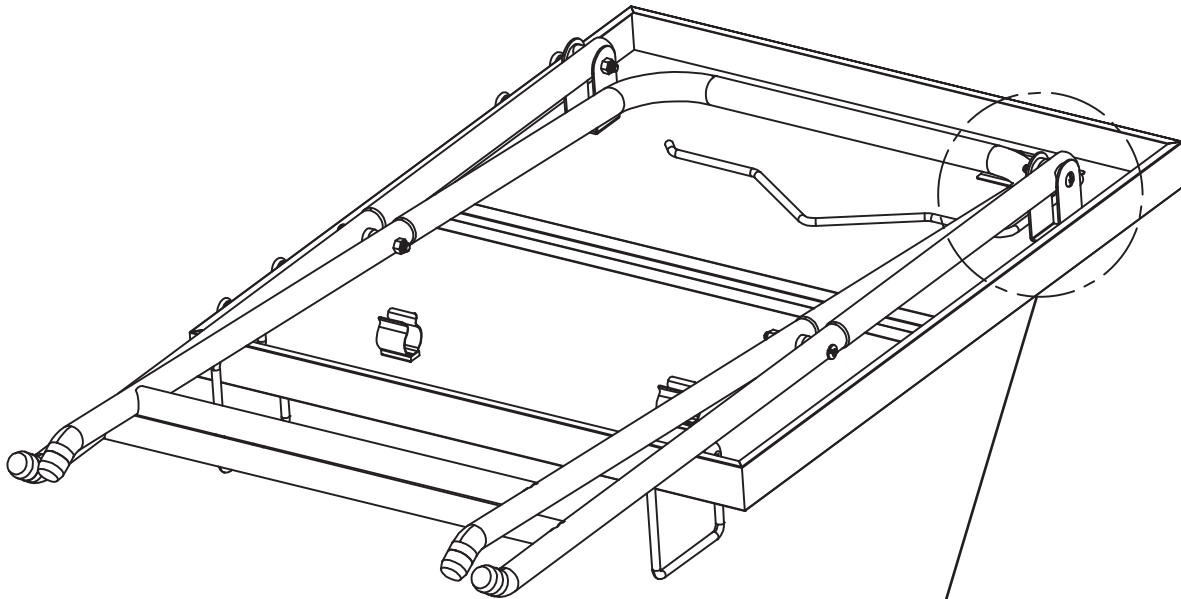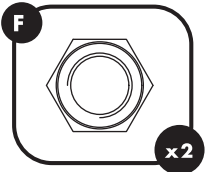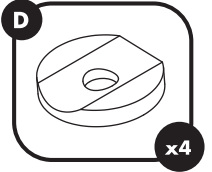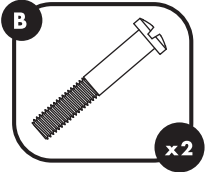

ASSEMBLY INSTRUCTIONS

STEP 8


- Lift the legs up and snap the U-shaped side of Leg A into the clips under the table.
- Flip the table right side up and screw the adjustable feet out to stabilize the table with your floor if necessary.

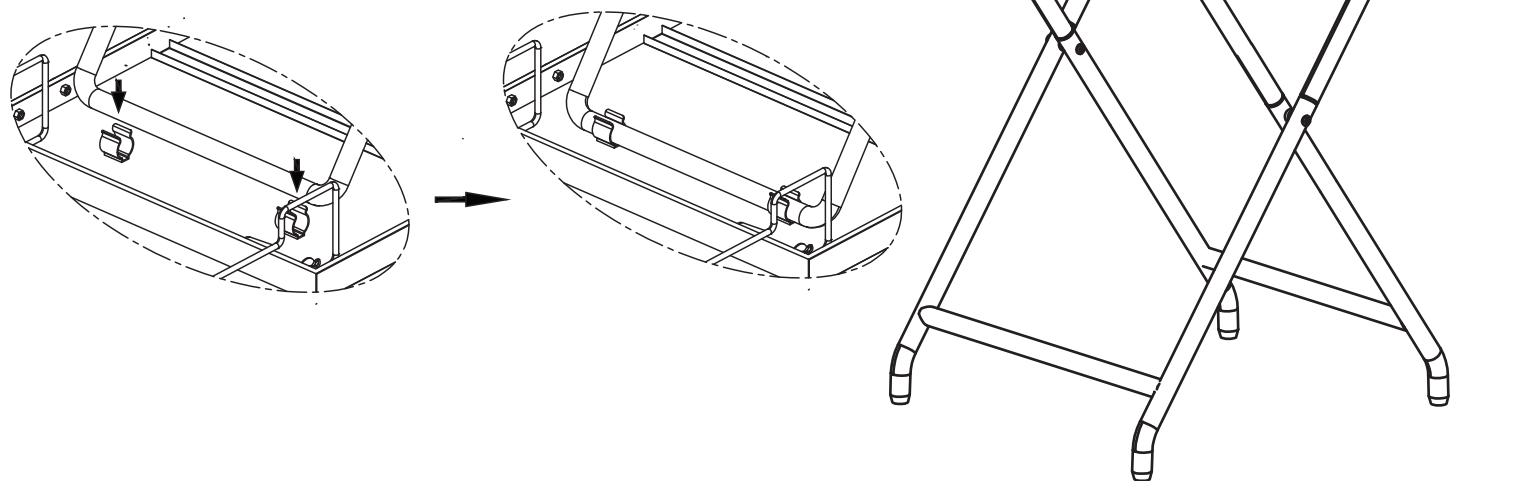

TO FOLD

STEP 1


- Fold the trash bag frame in.

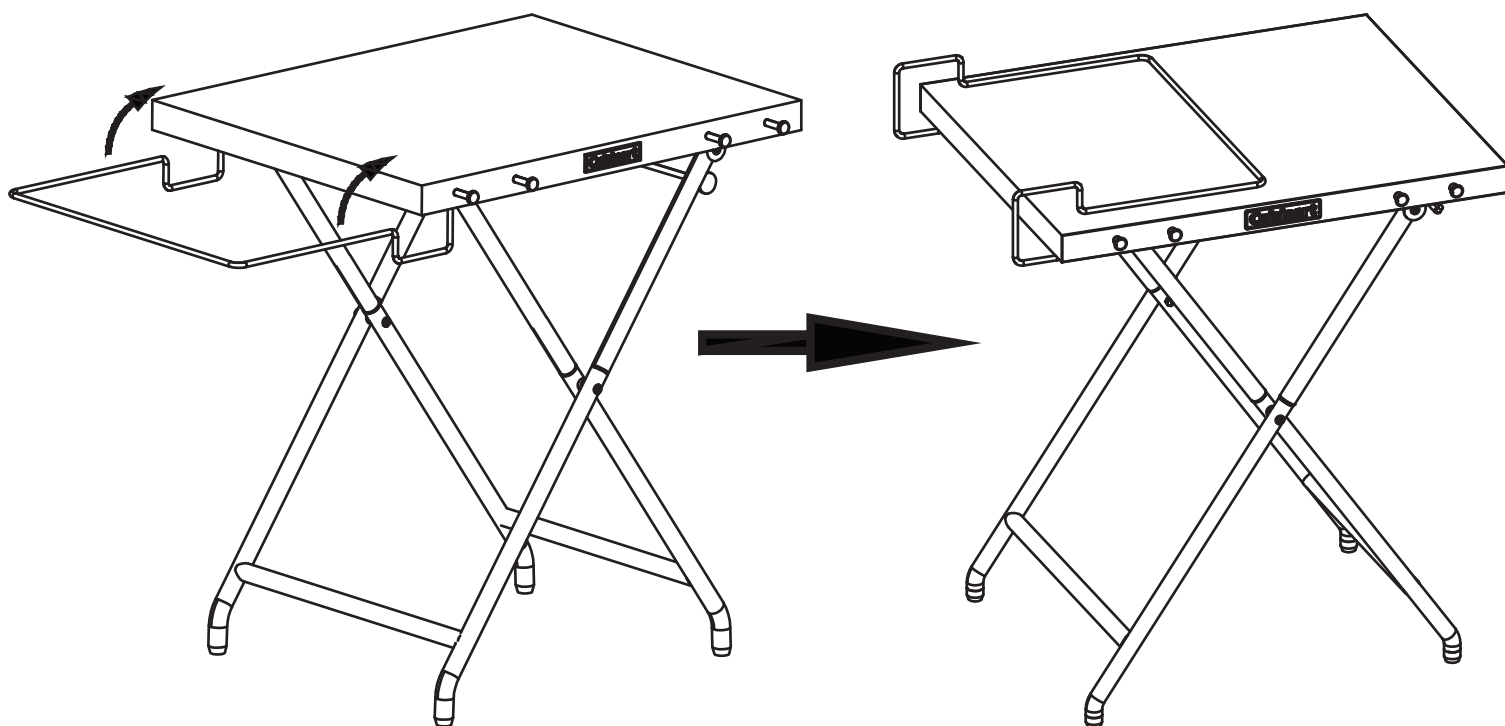

TO FOLD


STEP 2

- Unsnap the U side of the leg from the clips under the table and fold the legs as shown.

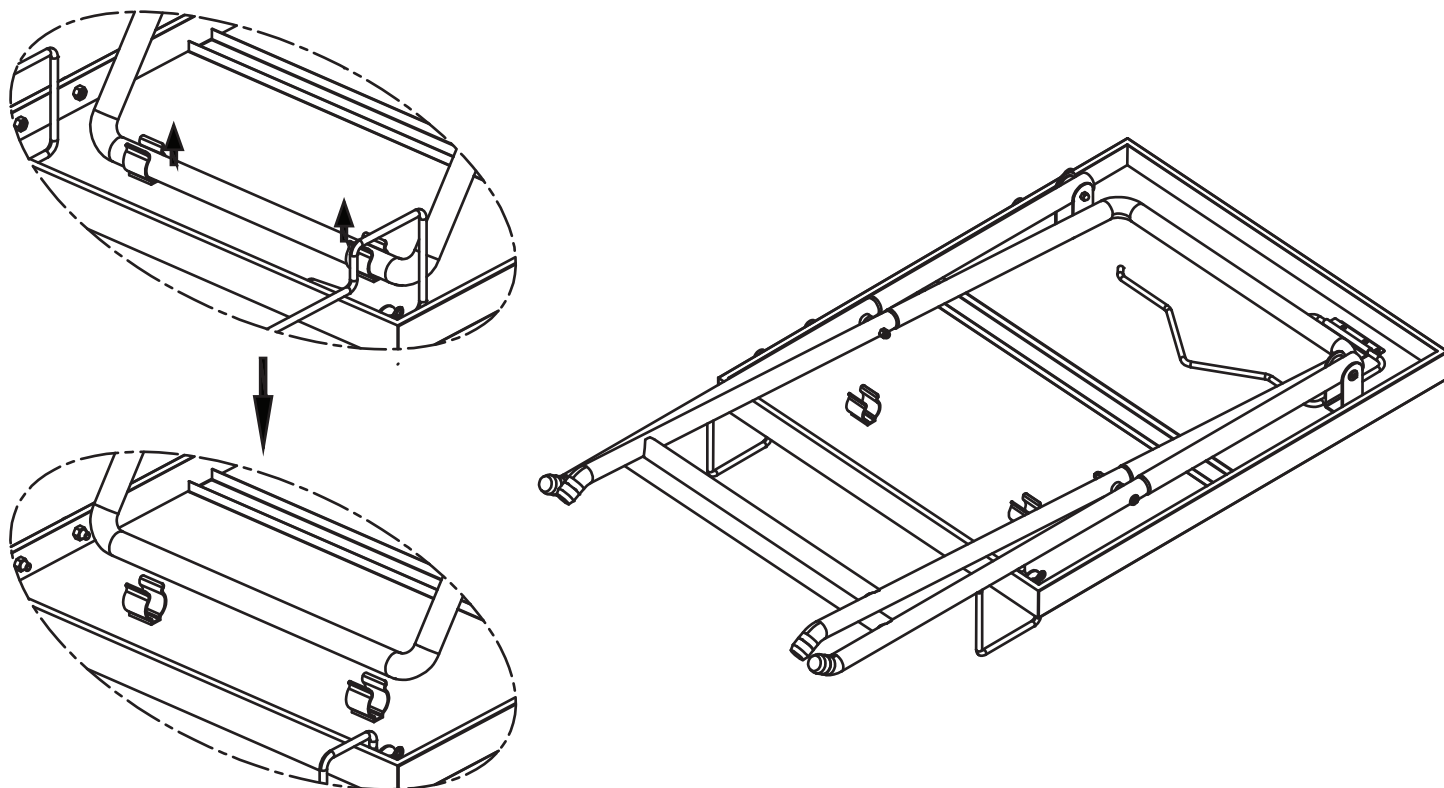

STEP 3

- Secure the legs firmly to the table top using the strap. The legs should have little to no movement and the trash bag frame should be held in place by the legs.

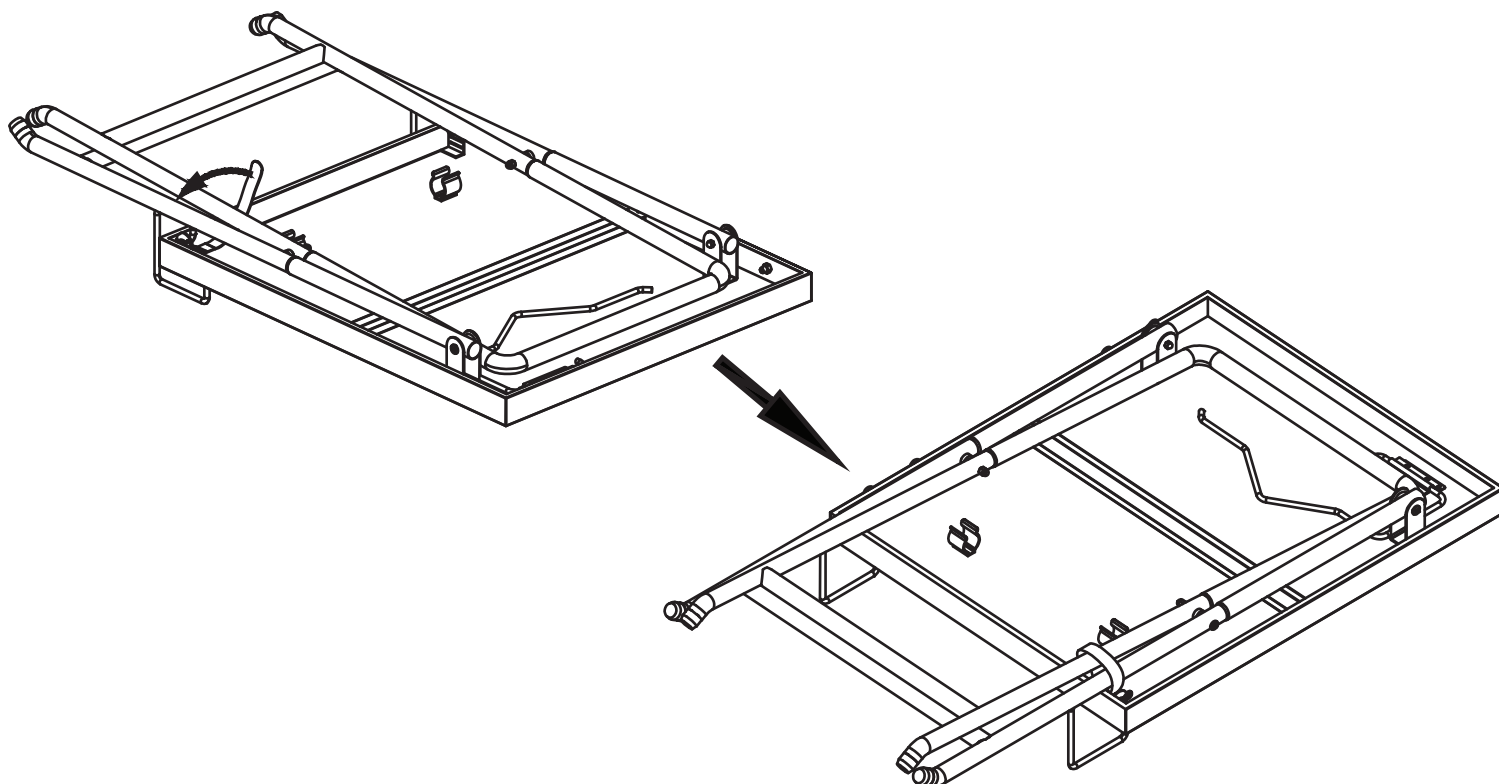


CARE AND MAINTENANCE

CLEANING

- **Painted surfaces:** Wash with mild detergent or non-abrasive cleaner and warm water. Be careful not to damage the painted surface, as this will expose the steel underneath to moisture which can result in rust.

EXPLODED VIEW

For replacement parts, call our customer service department at 866-994-6390, 9 a.m. - 5 p.m., EST, Monday - Friday or email consumercare@thefulhamgroup.com. NOTE: Not all parts are replaceable.

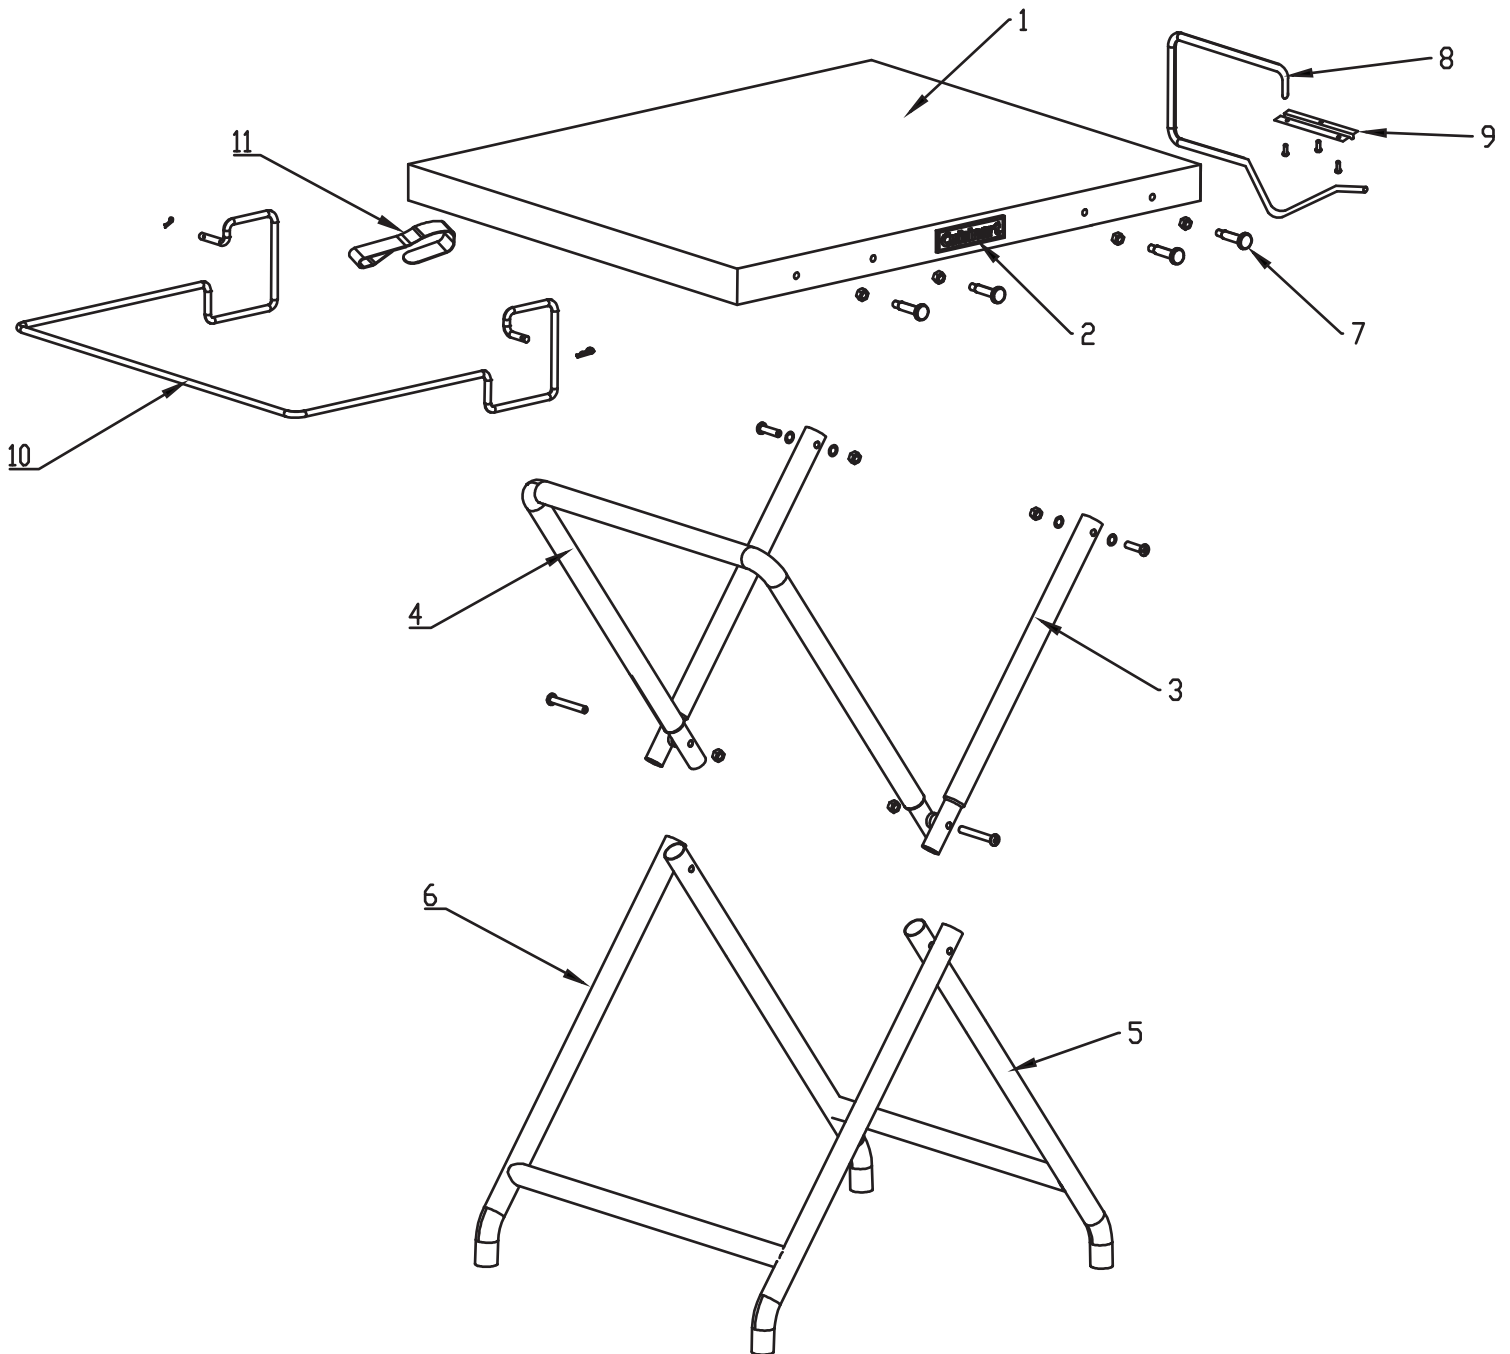

PARTS LIST

ITEM #	PART	DESCRIPTION	QTY
S60213	1	Table Top	(x1)
	2	Logo Badge	(x1)
S60214	3	Upper Leg B	(x2)
S60215	4	Upper Leg A	(x1)
S60216	5	Lower Leg A	(x1)
S60217	6	Lower Leg B	(x1)
S60218	7	Tool Hook	(x4)
S60219	8	Paper Towel Holder	(x1)
S60220	9	Bracket	(x1)
S60221	10	Trash Bag Frame	(x1)
S60222	11	Strap	(x1)
S60229		Hardware Pack	(x1)

WARRANTY AND REPLACEMENT PARTS

WARRANTY

- PROOF OF PURCHASE is required to access this warranty program, which is in effect from the date of purchase.
- Customers will be subject to parts, shipping, and handling fees if unable to provide proof of the purchase or after the warranty has expired.
- If you have any questions or problems, you can call our customer service department at 1-866-994-6390 from 9:00am to 5:00pm Eastern time, Monday through Friday for assistance.
- This limited warranty applies to the functionality of the product ONLY and does not cover cosmetic issues such as scratches, dents, corrosion or discoloring by heat, abrasive and chemical cleaners or any tools used in the assembly or installation of the table, surface rust, or the discoloration of stainless steel surfaces. Paint is not warranted and will require touch up. RUST is not considered a manufacturing or materials defect.
- This limited warranty will not reimburse you for the cost of any inconvenience, food, personal injury or property damage

LIMITED WARRANTY

- All parts warranted 1-years from date of purchase.

WARRANTY PROVISIONS

- This warranty is non-transferable and does not cover failures due to misuse of improper installation or maintenance.
- This warranty is for replacement of defective parts only. We are not responsible for incidental or consequential damages or labor costs.
- This warranty does not cover corrosion or discoloration after the table is used, or lack of maintenance, hostile environments, accidents, alterations, abuse or neglect.
- This warranty does not cover damage caused by heat, abrasive and chemical cleaners, or any damage to other components used in the installation or operation of the table.
- Paint is not warranted and may require touch-up. Items considered to be consumable such as batteries are not covered under this warranty.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

- Repair or replacement of defective parts is your exclusive remedy under the terms of this limited warranty.
- Manufacturer will not be responsible for any consequential or incidental damages caused by weather. This limited warranty or any applicable implied warranty does not cover damage resulting from acts of God, improper care and maintenance, accident, alteration, replacement of parts by anyone other than manufacturer, misuse, transportation, commercial use, hostile environments (inclement weather, act of nature, animal tampering), improper installation not in accordance with local codes or printed manufacturer instructions.
- For replacement parts, call our customer service department at 1-866-994-6390 from 9:00am to 5:00pm Eastern time, Monday through Friday
- To register your Cuisinart product, please visit <https://cuisinart.registria.com>.
- For FAQ's and replacement parts, please contact us at consumercare@thefulhamgroup.com. For our consumer care department, please contact us at consumercare@thefulhamgroup.com or call 1-866-994-6390.

Get Social With Us @CuisinartBBQ    YouTube

See our full line of premium Cuisinart® Outdoor Cooking Products at www.cuisinart.com/outdoorgrilling

©2022 Cuisinart
Cuisinart® is a registered trademark under license to The Fulham Group.
Distributed by The Fulham Group, Newton, MA. 02466 U.S.A. MADE IN CHINA.
Contact us at consumercare@thefulhamgroup.com

Model # CPT-2110
North American Distributor:
The Fulham Group
Newton, MA 02466

Cuisinart
SAVOR THE GOOD LIFE