

Daintree® EZ Connect App


Commissioning Steps



Daintree EZ Connect wireless lighting controls solution allows a group of adjacent fixtures to communicate with each other directly, without the need for a separate hub, gateway or cloud operating system. Each fixture has an embedded wireless Occupancy and Daylight sensor (WIT100 or WHS20) and is connected as part of a room based lighting control system. Current offers many fixtures with sensors pre-installed. In Lumination Indoor Lighting Fixtures, order with WIT100 sensor with controls catalog logic "TT". In Albeo High Bay Fixtures order with WHS20 high bay sensor with controls catalog logic "DF". The system can be commissioned, put into rooms, groups or zones and control parameters can be set via the Daintree EZ Connect app that can be downloaded on the Apple® App Store



1

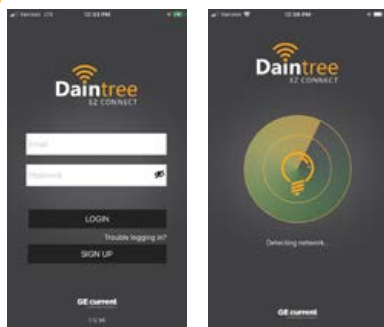

Open application


You will be asked to create a username and password the first time you open the App.

Project Name _____

Date _____ Type _____

Catalog Number _____

2

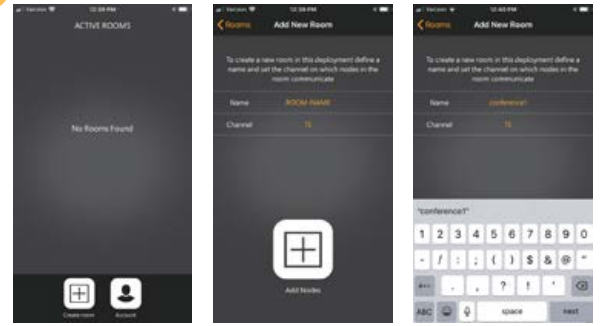


Adding new room or zoned networks

A zone is a grouping of fixtures that all act together according to parameters that are set.

Channels 15, 20, 25 or 26 are preferred to minimize signal conflict.

Different room or zones can be on the same channel.

3

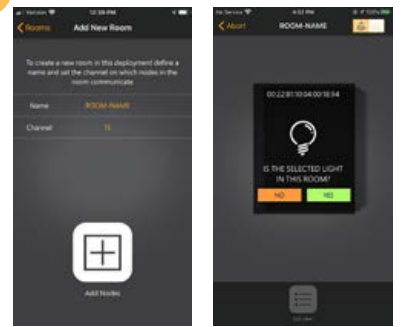

Add nodes to your room or zone

Nodes are any Daintree Control component that wirelessly to the system. The nodes can include components such as sensors integrated into Current lighting fixtures, wall controls or fixtures connected to LCA kit.

The Daintree EZ Connect app will search for available nodes and the light fixtures will blink when successfully paired with the app.


The user can choose to add the fixture to the room or zone.

This process will continue until all the devices within the communication range are discovered.

Max 30 nodes per room zone, but the system can accommodate thousands of independent rooms or zones.

Daintree® | EZ Connect App Commissioning Steps

4

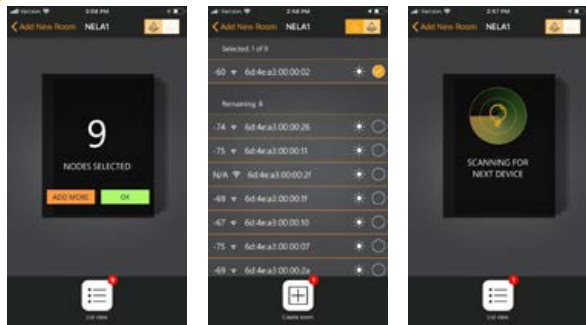


Room commissioning

If you have not discovered all of the devices you intend to include in a group, you can choose to **ADD MORE** devices.

Note: The commissioning process responds to fixtures that are closer in proximity to make it easier for field commissioning. You may want to move closer to devices you want to commission in the room or zone.

If all the devices have been selected, choose **OK**

5

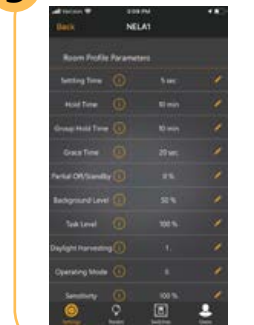

Group profile configuration

The group profile can be customized based on the needs of the room and the requirements of the user.

Setting Definitions:

Settling Time – Time required for occupancy to be detected before a change of state is initiated.

Hold Time – Amount of time the device will stay at task level before going to background level when no occupancy is detected.

Grace Time – In vacancy mode, amount of time when fixture is in background mode and no occupancy is detected before it will switch the fixture off and can only be manually switched back on.

Background Level – Light level when no occupancy is detected, but occupancy is detected by a fixture in the group.


Task Level – Light Level when occupancy is detected under the luminaire.

DLH – Daylight Harvesting Function enabled or disabled

Operating Mode – Vacancy-Detection or Automatic (Occupancy).

See Daintree EZ Connect website for the user manual for more details on parameters and default settings.

6

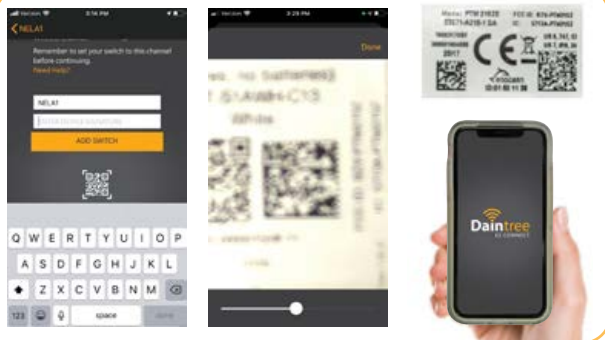

Adding a switch to control the room network

See Daintree EZ Connect website for compatible switches. Select "Add new switch". You will be asked to scan the QR code on the back of the switch. The app will pair the switch to the appropriate zone.