

Cuisinart® Nonstick Cookware

CUISINART® NONSTICK COOKWARE

Cookware heats quickly and spreads heat evenly. Aluminum core ensures unsurpassed heat distribution, and eliminates hot spots.

- Premium nonstick cooking surface provides lifetime food release, healthier cooking, and easy cleaning.
- Aluminum core heats quickly and cooks at an even temperature.
- Protective metallic finish guards the aluminum core for lasting performance. Its exterior is finished for enhanced beauty and easy cleaning.
- Cuisinart Easy Grip™ riveted silicone handles are designed to provide a secure and comfortable grip.
- Tight-fitting tempered glass covers seal in flavors and nutrients.
- Oven safe to 350°F.

BEFORE USING FOR THE FIRST TIME

Remove all labels. Wash cookware and covers in warm water with a mild dishwashing soap. Rinse thoroughly in warm water and wipe dry with a soft dish towel.

HEALTHIER COOKING, EASY CLEANING

When cooking with your Cuisinart® Nonstick Cookware, you do not need to add oil or butter to prevent foods from sticking. If you wish to enhance the flavor and appearance of foods, you need add only a minimum amount to the nonstick surface of your cookware. Use of cooking spray is not recommended as it may cause buildup of residue on the cooking surface.

STOVETOP COOKING

Select a burner size that matches the diameter of the pan bottom. When cooking over a gas burner, make certain that the flame touches only the bottom of the pan. If the flame extends up the sides of the pan, energy is wasted and flames may permanently discolor the cookware exterior. Please use caution or care when using this cookware on smooth-top cooking surfaces to avoid scratching or damage.

ESSENTIAL PRECAUTIONS

Never use Cuisinart® Nonstick Cookware on high heat or food will burn. The aluminum core of this cookware heats quickly, and its even heat distribution prevents hot spots. The dark interior color also allows food to cook more quickly with less heat. We recommend using a low to medium setting for most cooking. To boil water, medium-high is sufficient. Never leave Cuisinart® Nonstick Cookware or any pan empty over a hot burner. Doing so can ruin the pan and cause damage to the stovetop.

OVEN COOKING TEMPERATURE

Cuisinart® Cookware can be used in the oven up to 350°F for short amounts of time, not to exceed 20 minutes. Using Cuisinart® Nonstick Cookware in the oven will cause the handles as well as the pan to become hot. Use potholders or oven mitts when removing the cookware from the oven. DO NOT place Cuisinart® Nonstick Cookware under the broiler.

PROPER COOKING UTENSILS

We recommend using plastic or wooden utensils in your Cuisinart® Nonstick Cookware to maintain its appearance and performance. Refrain from cutting foods or using sharp utensils such as forks, knives, mashers, or whisks that can scratch the cooking surface.

EASY MAINTENANCE

Let your Cuisinart® Nonstick Cookware cool before cleaning. The reinforced nonstick system and the smooth exterior ensure easy cleaning. Cookware should be washed by hand with hot sudsy water and a sponge or soft dishcloth. Do not use steel wool or other metal or abrasive pads that can scratch your cookware. After washing, rinse thoroughly and dry immediately to maintain your Cuisinart® Nonstick Cookware's finish. You may clean the Cuisinart® Nonstick Cookware in the dishwasher; be sure to use a non-lemon detergent.

CONVENIENT STORAGE

Hanging pans by their handles on a cookware rack provides convenient, safe storage for your Cuisinart® Nonstick Cookware. Use care if you store your cookware in cabinets or drawers. Careless stacking and crowding may cause scratches.

LIFETIME WARRANTY

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Cookware will be free from material defects in materials and workmanship under normal home use conditions throughout the original purchaser's lifetime, beginning on the date this Nonstick Cookware was purchased in its original, sealed packaging, unless otherwise specified in this Lifetime Warranty. This Lifetime Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Nonstick Cookware from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Lifetime Warranty does NOT cover:

- Normal wear and tear;
- Any Nonstick Cookware purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Nonstick Cookware after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Nonstick Cookware, including labor, installation, or other costs incurred by you without prior Cuisinart approval;

- Damage to the Nonstick Cookware, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, abnormal conditions (such as a mechanical or environmental); (2) usage not in accordance with Nonstick Cookware instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart's control
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void, this Lifetime Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart, may void this Lifetime Warranty; and
- Any Nonstick Cookware where the original Nonstick Cookware identification markings (trademark or serial number) have been removed, altered, or obliterated from the Nonstick Cookware.

It is recommended that you visit the website, <https://cuisinart.registria.com>, for a fast, efficient way to complete your Nonstick Cookware registration. However, Nonstick Cookware registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Lifetime Warranty will be the date of manufacture.

HASSLE-FREE WARRANTY

If the Nonstick Cookware that is the subject of this Lifetime Warranty fails during the warranty period for reasons covered by this Lifetime Warranty, Cuisinart will, at its option, repair the Nonstick Cookware, replace the Nonstick Cookware with another identical or reasonably equivalent Nonstick Cookware, or if Cuisinart is unable to repair or replace the Nonstick Cookware, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Nonstick Cookware. To obtain a return shipping label, visit us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Nonstick Cookware, Cuisinart will inspect the Nonstick Cookware and, if required under this Lifetime Warranty, attempt to repair, replace, or refund the Nonstick Cookware within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Nonstick Cookware is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Nonstick Cookware is serviced with the correct parts, and the Nonstick Cookware is still under warranty.

CALIFORNIA RESIDENTS ONLY

The Lifetime Warranty period begins on the date the Nonstick Cookware was delivered, which may be different than the date the Nonstick Cookware was purchased. California residents also have the option of obtaining the benefits of this Lifetime Warranty by bringing the Nonstick Cookware to (A) the store where it was purchased or (B) another retail store that sells Cuisinart Nonstick Cookware of the same type. The retail store shall then, according to its preference, either repair the Nonstick Cookware, refer the consumer to an independent repair facility, replace the Nonstick Cookware with another identical or reasonably equivalent Nonstick Cookware, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Nonstick Cookware. California residents may also, according to their preference, return nonconforming Nonstick Cookware directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent Nonstick Cookware by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming Nonstick Cookware under warranty.

THIS LIFETIME WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIFETIME WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE NONSTICK COOKWARE), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Lifetime Warranty is issued by:

Conair LLC
 1 Cummings Point Road
 Stamford, CT 06902
 1-800-726-0190