

LOCK/UNLOCK FEATURE

Press and hold the Auto Lock/Unlock button and press and Power On button to turn motor on. Once motor is on, you can release the Auto Lock/Unlock button. You can also press the Power button first, holding it down as you press the Auto Lock/Unlock button to turn motor on. Do not hold Power button down for more than 2 minutes at a time. To turn the blender motor off, release the Power On button.

CHARGING YOUR BLENDER/BATTERY LIFE

The batteries in your Cuisinart® Cordless Smart Stick® Hand Blender and Knife have not been fully charged. Before the first use of this appliance, the batteries must be charged until the GREEN battery indicator light illuminates.

With a full charge, your stick blender will run for approximately 20 minutes, depending on load. Your stick blender will be fully charged in approximately 2-2.5 hours. You can “quick charge” your stick blender for 5 minutes of run time in 30 minutes. Battery Life Indicator Lights:

Green: When the unit displays a green power light, you are between 100% and 75% of battery power **Orange:** When illuminated in Orange, you are between 75% and 25% of battery power. When Red, you are at less than 25% and will need to charge soon.

Note: Do not leave your stick blender uncharged for an extended period of time, as it will affect the life of the rechargeable battery.

CARVING AND SLICING

The knife blades should be assembled and inserted into gearbox before attaching gearbox to the power handle.

1. Press gearbox onto power handle until you hear a click.
2. The knife has its own Lock/Unlock switch on top of the gearbox. Slide the switch and immediately press and hold the power button on the gearbox.
3. Continue pressing the power button as you cut, keeping the blade straight so thickness of slices is consistent. **CAUTION:** NEVER place your hand on top of the blade to support it while operating the knife, as the blades are designed to move only back and forth.
4. Blades will automatically stop when power trigger is released. Press the two blade release buttons on either side of gearbox to release the blades.



IMPORTANT!

Do not discard. Read before operating your new Smart Stick® Cordless Hand Blender. Keep for further reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure proper operation and optimum performance, please read the entire Instruction Booklet.

QUICK REFERENCE GUIDE

Cuisinart®

Cordless Smart Stick® Hand Blender and Knife



INTRODUCTION

Introducing another first from Cuisinart. Your new Cordless Smart Stick® Hand Blender and Knife is also a full size, full-power Electric Knife. Slip our exclusive new attachment onto the power handle to carve meat or slice bread. With no cord to get in the way, you can slice a smoked turkey, or blend and whisk right in a bowl on the counter or pot at the stove. Want to do even more? Attach the handle onto the chopper/grinder and find out what we mean when we say we've just taken multifunctionality over the top!

FEATURES AND COMPONENTS

Power Handle

No cord! Operates on two rechargeable 4.0 volt lithium-ion batteries, with power button within easy reach. Shaped like a stirring utensil for comfortable control.

- a. Auto Lock/Unlock Switch for safe operation.
- b. Battery Indicator Lights.
Red/Low: Less than 25%.
Orange/Normal Use Range: 25–75%.
Green/High: 75–100%.
- c. Blue Speed Indicators. Five bars light up to indicate low to high speed selection.
- d. Speed Control. Push button to left or right to select speed.
- e. Power On Button. Press and hold before or right after pushing Auto Lock/Unlock switch. NOTE: Operation stops instantly and locks when Power button is released.

