

Cuisinart® Culinary Collection

BEFORE USING THE FIRST TIME

Remove all labels. Wash cookware in warm water with a mild dish soap. Rinse thoroughly in warm water and wipe dry with a soft dish towel.

HEALTHIER COOKING, EASY CLEANING

When cooking with your Cuisinart® Culinary Collection Cookware, you do not need to add oil or butter to prevent foods from sticking. If you wish to enhance the flavor and appearance of foods, you need add only a minimum amount to the nonstick surface of your cookware.

ENERGY-EFFICIENT COOKING

Safe for all stovetops (gas, electric, halogen, ceramic, glass top, and induction). Select a burner size that matches the diameter of the bottom of the pan. When cooking over a gas burner, make certain that the flame touches only the bottom of the pan. If the flame extends up the sides of the pan, energy is wasted.

FOR USE ON INDUCTION STOVETOP

Please consult your induction stovetop manual for information on use. Please always center the cooking vessel on the burner for optimal performance.

ESSENTIAL PRECAUTIONS

Never use Cuisinart® Culinary Collection Cookware on high heat or food will burn. The aluminum core of this cookware heats quickly, and its even heat distribution prevents hot spots.

We recommend using a low to medium setting for most cooking. To boil water, medium-high is sufficient. Never leave Cuisinart® Culinary Collection Cookware or any pan empty over a hot burner. Doing so can ruin the pan and void the warranty, and cause damage to the stovetop.

OVEN COOKING TEMPERATURE

Cuisinart® Culinary Collection Cookware can be used in the oven up to 450°F. Using Cuisinart® Culinary Collection Cookware in the oven will cause the handles as well as the pan to become hot. Use oven mitts when removing the cookware from the oven. DO NOT place Cuisinart® Culinary Collection Cookware under the broiler.

PROPER COOKING UTENSILS

We recommend using plastic or wooden utensils in your Cuisinart® Culinary Collection Cookware to maintain its appearance and performance. Refrain from cutting foods and using sharp utensils, such as forks, knives, mashers, and whisks, in your cookware, as doing so can scratch the cooking surface. Slight surface marks and abrasions are normal and will not affect the performance of Cuisinart's exclusive PURELYCERAMIC™ nonstick coating.

EASY MAINTENANCE

Let your Cuisinart® Culinary Collection Cookware cool before cleaning. Cookware is dishwasher safe. Do not use steel wool or other metal or abrasive pads that can scratch your cookware. Do not soak cookware in water for an extended period of time as this can affect the nonstick performance. After washing, rinse thoroughly and dry immediately.

CLEANING THE EXTERIOR

Cuisinart® Culinary Collection Cookware has a smooth exterior finish, making it easier to clean and maintain. Food residue or buildup on the exterior of your cookware can easily be removed with hot, soapy water and a scrub pad. The exterior of Cuisinart® Culinary Collection Cookware, like other brands, may show wear with continuous use. This condition will not in any way affect the superior cooking performance of your cookware.

CONVENIENT STORAGE

Hanging pans by their handles on a cookware rack provides convenient, safe storage for your Cuisinart® Culinary Collection Cookware. Do not store cookware in direct sunlight. Use care if you store your cookware in cabinets or drawers. Careless stacking and crowding may cause scratches or chipping of the ceramic interior surface.

LIFETIME WARRANTY (U.S. AND CANADA ONLY)

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Cookware will be free from material defects in materials and workmanship under normal home use conditions throughout the original purchaser's lifetime, beginning on the date this Culinary Collection Cookware was purchased in its original, sealed packaging, unless otherwise specified in this Lifetime Warranty. This Lifetime Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Culinary Collection Cookware from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Lifetime Warranty does NOT cover:

- Normal wear and tear;
- Any Culinary Collection Cookware purchased by commercial purchasers or for commercial or nonhousehold uses;
- Accessories, parts, or software added to the Culinary Collection Cookware after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Culinary Collection Cookware, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Culinary Collection Cookware, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Culinary Collection Cookware instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void this Lifetime Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart may void this Lifetime Warranty; and
- Any Culinary Collection Cookware where the original Culinary Collection Cookware identification markings (trademark or serial number) have been removed, altered, or obliterated from the Culinary Collection Cookware.

It is recommended that you visit the website <https://cuisinart.registria.com> for a fast, efficient way to complete your Culinary Collection Cookware registration. However, Culinary Collection Cookware registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Lifetime Warranty will be the date of manufacture.

HASSLE-FREE REPLACEMENT WARRANTY

If the Culinary Collection Cookware that is the subject of this Lifetime Warranty fails during the warranty period for reasons covered by this Lifetime Warranty, Cuisinart will, at its option, repair the Culinary Collection Cookware, replace the Culinary Collection Cookware with another identical or reasonably equivalent Culinary Collection Cookware, or if Cuisinart is unable to repair or replace the Culinary Collection Cookware, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Culinary Collection Cookware. To obtain a return shipping label, visit us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Culinary Collection Cookware, Cuisinart will inspect the Culinary Collection Cookware and, if required under this Lifetime Warranty, attempt to repair, replace, or refund the Culinary Collection Cookware within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Culinary Collection Cookware is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Culinary Collection Cookware is serviced with the correct parts, and the Culinary Collection Cookware is still under warranty.

CALIFORNIA RESIDENTS ONLY

The Lifetime Warranty period begins on the date the Culinary Collection Cookware was delivered, which may be different than the date the Culinary Collection Cookware was purchased. California residents also have the option of obtaining the benefits of this Lifetime Warranty by bringing the Culinary Collection Cookware to (A) the store where it was purchased or (B) another retail store that sells Cuisinart Culinary Collection Cookware of the same type. The retail store shall then, according to its preference, either repair the Culinary Collection Cookware, refer the consumer to an independent repair facility, replace the Culinary Collection Cookware with another identical or reasonably equivalent Culinary Collection Cookware, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Culinary Collection Cookware. California residents may also, according to their preference, return nonconforming Culinary Collection Cookware directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent Culinary Collection Cookware by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming Culinary Collection Cookware under warranty.

THIS LIFETIME WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIFETIME WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE CULINARY COLLECTION COOKWARE), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Lifetime Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190