

Cuisinart®

Dishwasher Safe Hard Anodized Cookware

CUISINART ADVANTAGE® PRO DISHWASHER SAFE HARD ANODIZED COOKWARE

Hard anodized construction ensures unsurpassed heat distribution. Cookware heats quickly and spreads heat evenly. Eliminates hot spots.

MULTI-LAYER CONSTRUCTION DELIVERS DURABILITY AND PROFESSIONAL COOKING PERFORMANCE

1. Premium nonstick cooking surface provides healthier cooking, lasting food release, and easy cleanup. Metal-utensil safe.
2. Aluminum core heats quickly and cooks at an even temperature.
3. Hard anodized exterior is dense and nonporous. Exterior is smoothly finished for enhanced beauty and easy cleaning.
4. Exclusive Cuisinart ArmorGuard™ technology allows convenient dishwasher cleanup. Stay-cool stainless steel riveted stick handles are comfortable and designed for hanging storage. Tight-fitting tempered glass covers seal in flavors and nutrients.

Important Note: Tempered glass covers are oven safe to 450°F only.

BEFORE USING FOR THE FIRST TIME

Remove all labels. Wash cookware and covers in warm water with a mild dish soap. Rinse thoroughly in warm water and wipe dry with a soft dishtowel.

HEALTHY COOKING, EASY CLEANING

When cooking with your Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware, you do not need to add oil or butter to prevent foods from sticking. If you wish to enhance the flavor and appearance of foods, you need add only a minimum amount to the nonstick surface of your cookware. We do not recommend using spray oils as they may cause a buildup of residue on the cooking surface.

STOVETOP COOKING

Select a burner size that matches the diameter of the pan bottom. When cooking over a gas burner, make certain that the flame touches only the bottom of the pan. If the flame extends up the sides of the pan, energy is wasted.

ESSENTIAL PRECAUTIONS

Never use Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware on high heat, or food will burn. The aluminum core of this cookware heats quickly, and its even heat distribution prevents hot spots. The dark interior color also allows food to cook more quickly with less heat. We recommend using low to medium heat for most cooking. To boil water, medium-high heat is sufficient. Never leave Cuisinart® Cookware or any pan empty over a hot burner. Doing so can ruin the pan and cause damage to the stovetop.

COOKING ON A GLASS STOVETOP

To avoid scratching a glass cooktop, do not slide cookware on the glass surface. Please consult your glass cooktop manual for information and recommendations on use.

OVEN COOKING TEMPERATURE

Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware can be used in the oven up to 500°F. Using Cuisinart® Cookware in the oven will cause the handles as well as the pan to become hot. Use Cuisinart® kitchen textiles pot holders or oven mitts when removing cookware from the oven.

IMPORTANT NOTE: Tempered glass covers are oven safe to 450°F only.

PROPER COOKING UTENSILS

We recommend using plastic or wooden utensils in your Cuisinart® Cookware to maintain its appearance and performance. Our Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware is metal-utensil safe. However, refrain from cutting foods or using sharp utensils such as forks, knives, mashers, or whisks that can scratch the cooking surface.

WHAT ABOUT THE DISHWASHER?

Let your Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware cool before cleaning. Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware is dishwasher safe, but remember that soil from other dishes may be abrasive. If the dishwasher is carelessly packed, other dishes or flatware may mar the surface of the cookware. Over a long period, regular dishwasher cleaning will eventually scratch any pan. We recommend using a non-lemon detergent.

CLEANING THE EXTERIOR

Cuisinart Advantage® Pro Dishwasher Safe Hard Anodized Cookware has a smooth exterior finish, making it easier to clean and maintain. Food residue or buildup on the exterior of your cookware can easily be removed with any non-abrasive cleaning product. The exterior of Cuisinart® Cookware, like other brands, will show wear with continuous use. This condition will not in any way affect the superior cooking performance of your cookware.

CUISINART® KITCHEN TOOLS

Kitchen tools are heat resistant up to 400°F and safe for nonstick cookware. Dishwasher safe for top rack only. Hand-wash for best results.

CONVENIENT STORAGE

Hanging pans by their handles on a cookware rack provides convenient, safe storage for your Cuisinart® Cookware. Use care if you store your cookware in cabinets or drawers. Careless stacking and crowding may cause scratches.

LIFETIME WARRANTY

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart (“Cuisinart”) warrants that the Cuisinart Cutlery will be free from material defects in materials and workmanship under normal home use conditions throughout the original purchaser’s lifetime, beginning on the date this Product was purchased in its original, sealed packaging, unless otherwise specified in this Lifetime Warranty. This Lifetime Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Lifetime Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart’s control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void, this Lifetime Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart, may void this Lifetime Warranty; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

It is recommended that you visit the website, <https://cuisinart.registria.com>, for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Lifetime Warranty will be the date of manufacture.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Lifetime Warranty fails during the warranty period for reasons covered by this Lifetime Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer’s prior usage of the Product. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Lifetime Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart’s control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Cuisinart’s Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The Lifetime Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Lifetime Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer’s prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIFETIME WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIFETIME WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART’S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Lifetime Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190