

Cuisinart® Bakeware

Cuisinart® Bakeware is an investment that will prove its worth every time you use it. When properly cared for, your Cuisinart® Bakeware will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain the cookware's original beauty.

BEFORE YOU BAKE

Wash the pan in warm, sudsy water. Rinse and dry thoroughly. The performance of your Cuisinart® Bakeware depends on a thoroughly clean baking surface. See cleaning instructions below.

BAKING WITH CUISINART® BAKEWARE

Prepping the pan: Prepare the pan according to recipe instructions. Grease and flour if directed. Although the surface of Cuisinart® Bakeware is designed for easy release, following the recipe instructions always gives the best results. You may use spray oils with Cuisinart® Bakeware. The special nonstick formula used in our bakeware makes spray oils easy to remove. (However, DO NOT use spray oils to cook in any Cuisinart® cookware items. The nature and content of spray oils cause them to leave a gummy residue on cookware that is very difficult to remove completely and as a result, food may actually stick, even on nonstick cookware!)

Preheat the oven: Preheat the oven to the temperature recommended in the recipe. Keep in mind, however, that no two ovens are calibrated exactly the same. We recommend that you watch foods closely the first few times you bake. This will help you to determine how and when to adjust either the baking temperature or the baking time. Bakeware is oven safe to 450°F. Do not use under the broiler.

Utensils: Use only nylon, wood, or coated utensils with Cuisinart® Bakeware. This will help prevent scratches and maintain the appearance and performance of your bakeware. Using metal utensils on any nonstick surface will damage the surface over time. Always remove food from the pan before slicing or cutting. The surface of Cuisinart® Bakeware makes it easy to remove foods cleanly and completely.

Cleaning: We recommend that you hand-wash your bakeware thoroughly, inside and out, after every use. However, Cuisinart® Bakeware can be cleaned in the dishwasher if necessary. Before you put the pan in water, allow it to cool. Putting a hot pan in cooler water can warp the pan and can create sudden steaming and hot water spattering, which can cause burns. Use a sponge or dishcloth with hot, sudsy water to remove food from the pan's baking surface and exterior surfaces.

For burned-on or stubborn spots caused by high baking temperatures, use Soft Scrub® and a soft nylon or nylon-covered cleaning pad. (Keeping the exterior free of built-up grease and food stains helps to maintain the pan's appearance and performance.) **DO NOT IMMERSE OR SOAK** your insulated bakeware. Insulated bakeware is designed to "breathe" and is not watertight. Soaking can result in water collecting in the airspace between the pan layers. (The nonstick finish releases foods so easily, you should never really need to soak any Cuisinart® Bakeware.) To dry out an insulated pan in which water has collected, put the pan upside down in a 250°F oven for 30 minutes. **DO NOT USE** abrasive cleansers or cleaning pads, oven cleaners or other caustic solutions, baking soda, or dishwasher detergent. These cleaners will damage the surface and void the Lifetime Warranty.

Storage: DO NOT stack or nest bakeware items without a protective layer. This can result in scratches on your nonstick surfaces. Like any bakeware, Cuisinart® Bakeware will show wear after continued use. This will not affect the bakeware's performance.

LIFETIME WARRANTY (U.S. AND CANADA ONLY)

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Bakeware will be free from material defects in materials and workmanship under normal home use conditions throughout the original purchaser's lifetime, beginning on the date this Bakeware was purchased in its original, sealed packaging, unless otherwise specified in this Lifetime Warranty. This Lifetime Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Bakeware from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Lifetime Warranty does NOT cover:

- Normal wear and tear;
- Any Bakeware purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Bakeware after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Bakeware including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Bakeware, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Bakeware

instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other Cuisinart's control;

- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void, this Lifetime Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart, may void this Lifetime Warranty; and
- Any Bakeware where the original Bakeware identification markings (trademark or serial number) have been removed, altered, or obliterated from the Bakeware.

It is recommended that you visit the website, <https://cuisinart.registria.com>, for a fast, efficient way to complete your Bakeware registration. However, Bakeware registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Lifetime Warranty will be the date of manufacture.

Hassle-Free Replacement Warranty

If the Bakeware that is the subject of this Lifetime Warranty fails during the warranty period for reasons covered by this Lifetime Warranty, Cuisinart will, at its option, repair the Bakeware replace the Bakeware with another identical or reasonably equivalent Bakeware, or if Cuisinart is unable to repair or replace the Bakeware, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Bakeware. To obtain a return shipping label, visit us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Bakeware, Cuisinart will inspect the Bakeware and, if required under this Lifetime Warranty, attempt to repair, replace, or refund the Bakeware within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Bakeware is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Bakeware is serviced with the correct parts, and the Bakeware is still under warranty.

California Residents Only

The Lifetime Warranty period begins on the date the Bakeware was delivered, which may be different than the date the Bakeware was purchased. California residents also have the option of obtaining the benefits of this Lifetime Warranty by bringing the Bakeware to (A) the store where it was purchased or (B) another retail store that sells Cuisinart Bakeware of the same type. The retail store shall then, according to its preference, either repair the Bakeware, refer the consumer to an independent repair facility, replace the Bakeware with another identical or reasonably equivalent Bakeware, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Bakeware. California residents may also, according to their preference, return nonconforming Bakeware directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent Bakeware by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming Bakeware under warranty.

THIS LIFETIME WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIFETIME WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE BAKEWARE), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Lifetime Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190