

ALTAIR io™ 4 - Daily start up procedure

1.



2.



3.



If enabled

4.



If enabled

5.



If enabled

6.



**DO NOT
OBSTRUCT**

7.



8.



Do not use




9.




10.



A1

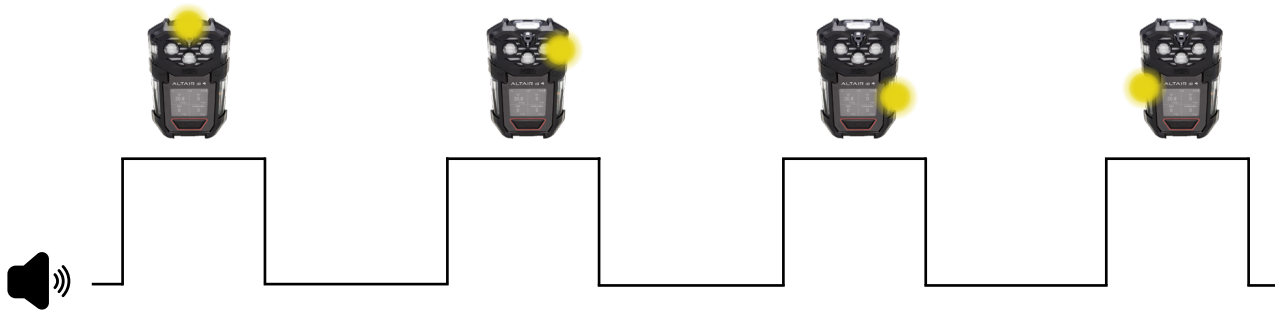

! A2

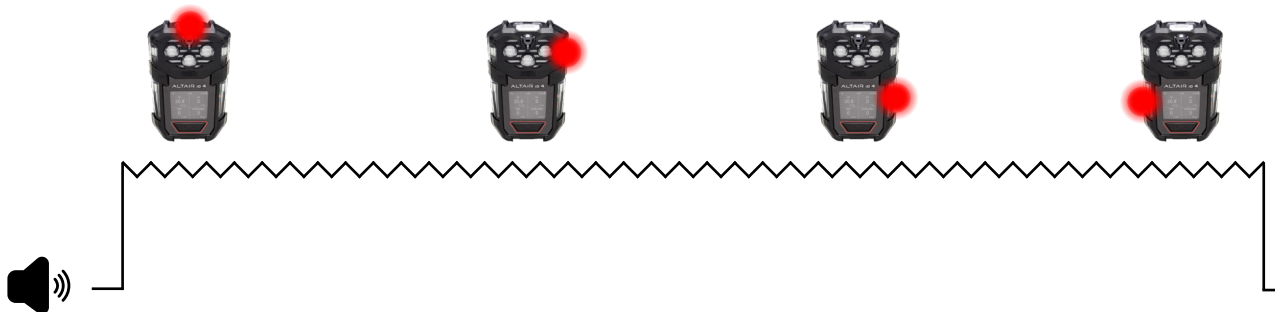

11.



3
sec

ACTIVATE
SOS

12.



3
sec

STOP
SOS