


ICONICS™

HOCKEY TABLE ASSEMBLY INSTRUCTIONS

MODEL # TTOP-HT24



WARNING: CHOKING HAZARD
THIS TOY CONTAINS SMALL PUCKS
AND PARTS. NOT INTENDED FOR
CHILDREN 3 YEARS OF AGE OR YOUNGER

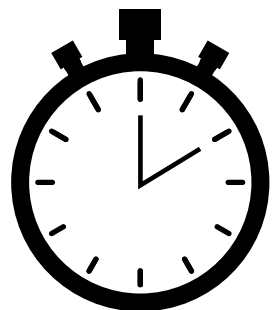



**ASSEMBLY TIME:
ABOUT 10 MINUTES**



IMPORTANT!

Before attempting assembly, please read through the assembly instructions to familiarize yourself with all the parts and assembly steps. Please refer to the Parts Identifier below and be sure that all parts have been included. Please keep your instructions.

 PARTS IDENTIFIER

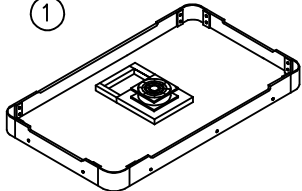 AIR HOCKEY TABLE 1EA	 GOAL BOX 2EA	 ALLEN WRENCH 1EA	 3.5X12MM WASHER HEAD SCREW 8EA
 PUSHER 2EA	 PUCK 2EA	 FELT PAD 2EA	

ASSEMBLY INSTRUCTIONS


Requires 6 AAA batteries to operate fan (not included.)

Step 1-Open the carton of your new hockey game near where your game will be played. Select a clear level floor. Use the bottom carton to assemble the game. Carefully cut or tear the carton corners so that bottom carton becomes a flat working surface area. It is recommended to use a hand screw driver instead of electric to avoid over stripping.

CAUTION:

Install batteries to correct polarity.
Do not mix different types of new or used batteries.
Installation by adult required.
Dispose of batteries responsibly.
Do not dispose of in fire.

FIG.1A

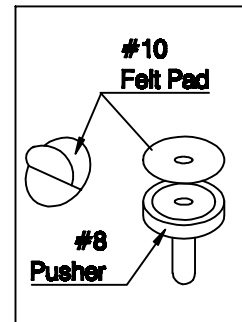

Step 2-Attach the two Goal Boxes (#2) to the hockey end aprons using four of Washer Head Screws (#4) per Goal Box. See FIG.1.
Step 3-Peel the backing off the Felt Pad (#7) and attach to the Pusher (#5) as shown in Fig 1A.
Step 4-Install the batteries turn the switch on.

Have fun.

ICONICS™ is a registered trademark of DMI Sports.
DMI Sports, Inc.
Fort Washington, PA 19067
www.dmisports.com
800.423.3220

FIG.1

