

Item# 45-6710SU



42" Air Powered Hockey



CAUTION: SUPERVISION REQUIRED.
ELECTRIC TOY- UNPLUG WHEN NOT IN USE.
INPUT: 120V AC 60Hz 0.09A
OUTPUT: 12V DC 500mA

CAUTION: ELECTRIC TOY:

Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Please keep this instruction manual for future reference

If you have any problems with your new product, please visit our website www.triumphsportsusa.com for the fastest expedited service possible for your replacement part ordering needs. Please have a copy of your receipt of purchase. For any technical support or warranty issues, please contact Triumph Sports USA at 1-866-815-4173 or email us at csr@triumphsportsusa.com

Limited 90-Day Triumph Sports USA, Inc. Warranty

All Triumph Sports USA, Inc. (TSU) games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

Warnings



WARNING:

CHOKING HAZARD - Product contains small parts and small balls. Not for children under 3 years.



WARNING: Adult Assembly Required.

Be sure to check out all the exciting games  **has to offer.**

Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES



DARTBOARDS

Triumph Sports USA
11327 W Lincoln Ave.
West Allis, WI 53227
www.triumphsportsusa.com
©2015 Triumph Sports USA. All Rights Reserved.

 
 
 
 
 
 
 
 
Important Safety Instructions

1. **Read all Instructions** - All the safety and operating instructions should be read carefully before the hockey game is played.
2. **Caution** - This is not a child's toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with to avoid possible injuries.
3. **Power sources** - This hockey game should be operated only from **110-120 V A.C., 60** cycle current as indicated on the identification label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
4. **Power cord protection** - Power cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to cords at plugs, convenience receptacles, and the point of exit from the game.
5. **Overloading** - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock
6. **Object and liquid entry** - Never push objects of any kind into this game through openings as they may touch dangerous voltage points or short-out parts which could result in a fire or electric shock. Never spill liquid of any kind on the game.
7. **Ventilation** - Openings in the game are provided for the exhaust air to create a cushion effect. The openings on the air blower are for the intake air. Keep clear of the air blower when it is on. Do not put hand or other objects near the intake openings. To ensure reliable operation of the game and protect it from overheating these openings must not be blocked or covered.
8. **Damage requiring service** - Unplug the game from the wall outlet. Do not attempt to service the blower yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer servicing to qualified service personnel under the following conditions.
 - A. *When the power supply cord or plug is damaged.*
 - B. *If liquid has spilled, or objects have fallen into the blower.*
 - C. *When the air blower exhibits a distinct change in performance e.g. abnormal noise, this indicates a need for service*
9. **CAUTION-ELECTRICALLY OPERATED PRODUCT** - Not recommended for children under **6** years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.
10. We recommend that the game be periodically examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In the event such conditions exist, the game should not be used until properly repaired
11. **RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS WARNING** - When using electric appliances, basic precautions should always be followed, including the following:
 - A. *Read all the instructions before using the appliances.*
 - B. *To reduce the risk of injury, close supervision is necessary when an appliance is used near children.*
 - C. *Do not contact moving parts.*
 - D. *Only use attachment recommended or sold by the manufacturer.*
 - E. *Do not use outdoors.*
 - F. *For a cord-connected appliance, the following shall be included:*
 - *To disconnect, turn all controls to the off position, then remove plug from outlet.*
 - *Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.*
 - *Unplug from outlet when not in use and before servicing or cleaning.*
 - *Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.*

SAVE THESE INSTRUCTIONS

**WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.
For Household use only.**

Parts List

1  Main Cabinet 1 pc	2  Right Leg 2 pcs	3  Left Leg 2 pcs	4  Leg End Panel 2 pcs
5  Goal and Scorer 2 pcs	6  M6 X 30mm Bolt 12 pcs	7  M6 Washer 12 pcs	8  3.5 x 12mm Screw 30 pcs
9  Allen Key 1 pc	10  Leg Side Panel 4 pcs	11  Puck 2 pcs	12  Pusher 2 pcs
13  Adaptor 1 pc	14  Felt Pad 2 pcs	15 PRE-INSTALLED  Fan 1 pc	16 PRE-INSTALLED  Apron Corner 4 pcs

Assembly Tips:

Attention: If you are using an electric screwdriver in the assembly, please set at low torque and do not over tighten the hardware. When assembling individual parts, loosely tighten screws until all screws are inserted, then tighten completely

Assembly Instructions

NOTE: We recommend that two adults work together to assemble this game.

Step.1

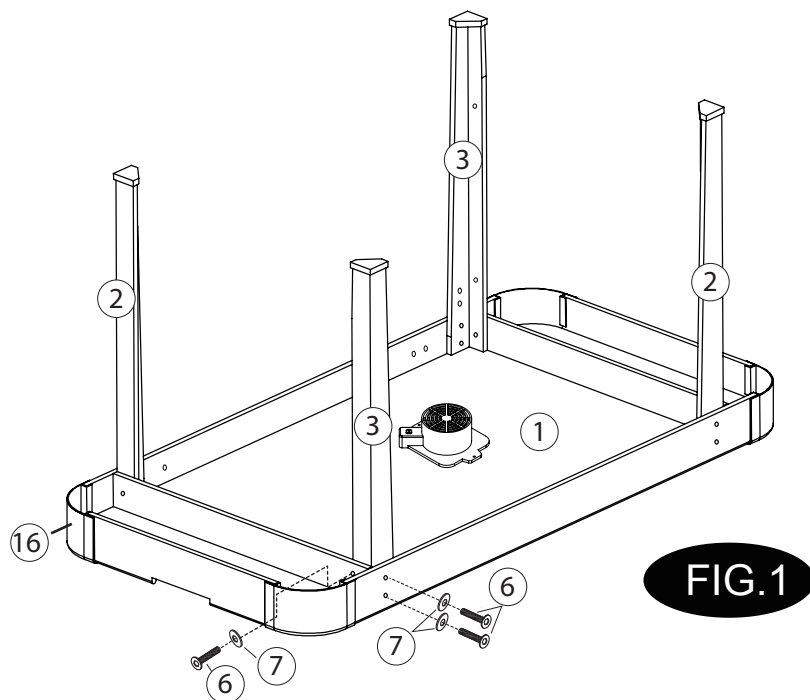
Find a clean, level place to begin the assembly of your Hockey Table. The table will be assembled upside down and then turned over on its legs once the assembly is completed.

Step.2

Remove all the parts from the box and verify that you have all of the parts as shown on the parts list above. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.


Step.3

Place the Main Cabinet (#1) face down on a clean and flat surface, Attach the Right Legs (#2) and Left Legs (#3) to the Main Cabinet using three Bolts (#6) and three Washers (#7) per Leg.



Step.4

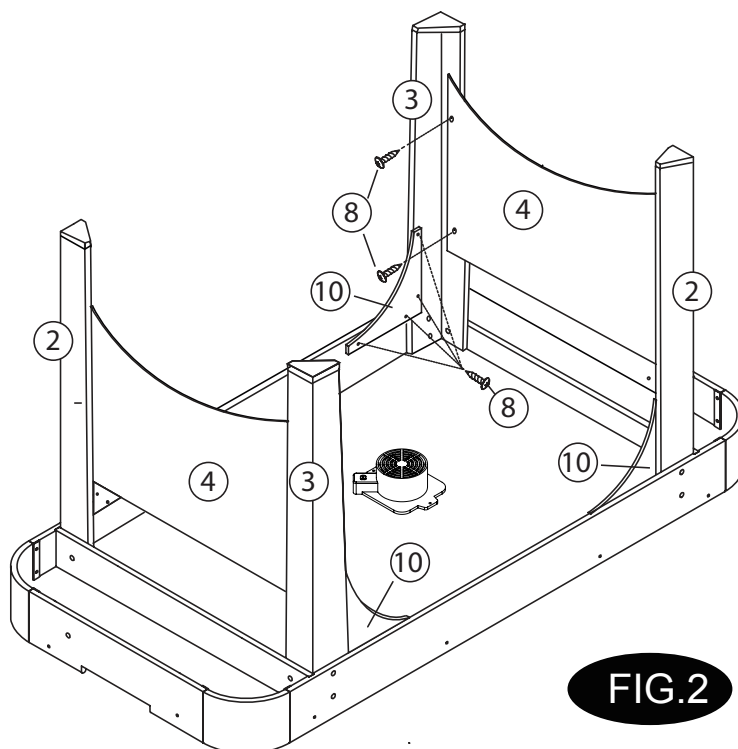
Attach the Leg End Panels (#4) to the legs using two Screws (#8) per leg. Attach the Leg Side Panel (#10) to the leg and side apron using four Screws (#8).



Step.5 .Lift the table assembly from the floor with at least two strong adults, turn it over,and set the table assembly on its legs in the location where you play.

CAUTION:Two strong adults are recommended to turn the table over as shown.

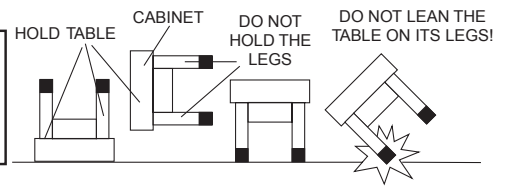1. Lift the table off the ground.
2. Turn the table over, using caution to clear the legs as you turn.
3. Place the table on all four legs at the same time.






Step.6

Attach the Goal Boxes (#5) to each End Apron using three Screws (#8).

Insert the Adaptor wire (#13) into the DC Jack on the Fan (#15).

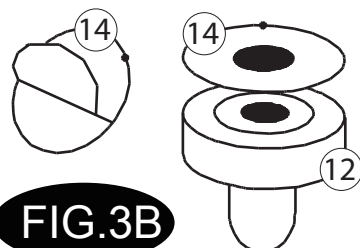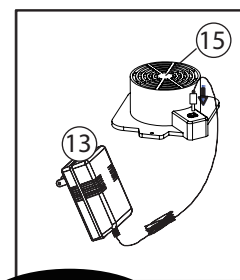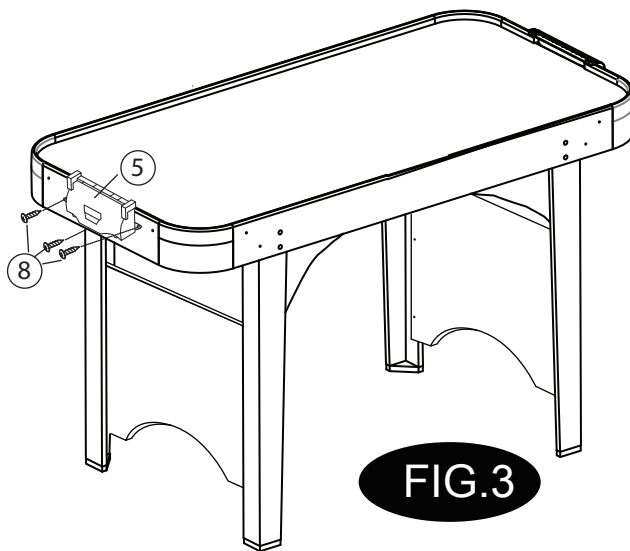Peel off Backing on Felt Pad (#14), Flip over and apply to Pusher (#12), Repeat for both pushers.



YOU ARE NOW READY TO PLAY.

Air Powered Hockey Rules of Play

The Object of the Game

The object of Air Powered Hockey is to be the first player to score 10 goals against the opposing player.

Beginning the Game

A coin toss is used to determine which player will go first ("serve"). The player winning the coin toss gets the puck and begins play by striking the puck with his/her pusher to the opponent's side.

During Play

Players can strike the puck anywhere on their half of the playing surface. Players cannot cross the centerline to strike the puck. If a goal is scored when a player strikes the puck over the centerline, it does not count.

A player may stand anywhere around the table on his/her side of the centerline. Players may not stand past that line. When the puck contacts any part of the centerline, either player may strike the puck to score.

Scoring

A goal is scored when the puck enters and drops inside the opponent's goal.

The player scored upon receives possession of the puck for the next serve.

What Counts as a Goal?

If the puck stops in the goal and has tilted into the goal drop, it counts as a goal.

If the puck stops in the goal and has not tilted into the goal, it does not count as a goal.

Player can move the puck out of the goal area with his/her hand or pusher.

If the puck rebounds out of the goal, the point does not count.

Winning

The first player to score 10 points is declared the winner.