



Be sure to write your model number and serial number here for future reference. You can find these numbers printed on the bottom of the table.

**MODEL NO.:** T8466F

**DESCRIPTION :** 6' TABLE TENNIS, PONG TOSS & MULTI-FUNCTION LIGHT DUTY UTILITY TABLE

**DATE CODE :** CPSIA#2-T8466F-\_\_\_\_\_-SY

**PURCHASE DATE :** \_\_\_\_\_

## OWNER'S MANUAL

1. **Read this manual carefully before starting assembly.** Read each step completely before beginning each step.
2. **Check inside all parts and cartons before assembling or ordering parts.**
3. To make assembly as easy as possible, place all parts of the table tennis in a cleared area and remove the packaging material. Organize all parts as per parts identifier in the assembly manual. Do not dispose of the packing material until assembly is completed.
4. Avoid scratching table tennis top and metal tube parts during the assembly process.
5. Assemble product on clean, level and flat surface.
6. **Take time to correctly orientate parts exactly as per each assembly diagram.**
7. **Save this instruction in the event that the manufacturer has to be contacted for replacement parts.**



**CAUTION:**

**READ ASSEMBLY, OPERATING AND SAFETY INSTRUCTIONS CAREFULLY! AT LEAST TWO ADULTS ARE NEEDED TO PUT THIS TABLE TOGETHER!**

Thank you for buying our product. We try hard to ensure that our products are of high quality and free of problems, such as Manufacturing defects or missing parts. However, if you have any problems with your new product, please **DO NOT RETURN IT TO THE STORE!**

### Please Do Not Return This Product To The Store!

Contact Escalade® Sports customer service department at:

**Phone:** 1-866-873-3528

**Toll-Free!**

**Fax:** 1-866-873-3533

**Toll-Free!**

**E-mail:** [tabletennis@escaladesports.com](mailto:tabletennis@escaladesports.com)

**Mailing Address (correspondence only):**

**Escalade Sports**

**PO Box 889**

**Evansville, IN 47706**

Please provide model number and/or part number of the product and/or part when you call or write. These numbers can be found on the product, packaging, and/or in this Owner's Manual.

**Please visit our website at: [www.escaladesports.com](http://www.escaladesports.com)**

**ON-LINE TROUBLE SHOOTING**

**TECHNICAL ASSISTANCE**

**ON-LINE PARTS REQUESTS**

**FREQUENTLY ASKED QUESTIONS**

**ADDITIONAL ESCALADE® SPORTS PRODUCT INFORMANTION**

# ESCALADE®

## S P O R T S

# CARE AND MAINTENANCE

You have purchased a quality product that will give you years of enjoyment. By following these simple maintenance steps, you will add to the life of your new table.

## THE TABLE TOP

The top (playing surface) of your table is made of Mid-Density Board. Like all products made of wood, it can be affected by atmospheric changes in both temperature and humidity. This may cause a slight sag or distortion as the top expands or contracts. This is normal and should not cause concern as it does not detract from the play or utility value of the table. After assembly of the table, you can minimize the effects of temperature and humidity changes by storing the table in a dry area when table is not in use.

## STORAGE OF YOUR TABLE

This table must be stored indoors to prevent damage to the playing surface. Dampness and extreme temperature changes can cause the wood to warp, swell, crack or blister. When your table is not in use, it should be stored in a dry area. Due to the nature of particle board, table top may bow. Damp and humid conditions will amplify this. This is normal and will not affect playability of table. One may want to consider keeping the shipping carton for storage for this product.

## CLEANING YOUR TABLE

To clean your table use a soft, damp (NOT WET) cloth only. To prevent damage to your table's playing surface, DO NOT USE ANY CHEMICALS, ABRASIVE OR CLEANING PRODUCTS on your table's playing surface.

## MAINTENANCE OF YOUR TABLE

Be sure to oil all moving parts of your table including the pivot points. This will insure the safety and ease of use of your table.

This table must be kept indoors to prevent damage to the playing surface. Dampness and extreme temperature changes which occur on patios or similar areas can cause wood to warp, swell, crack or blister.


## UNEVEL FLOORS

If table does not seem level, it is probably due to uneven or unlevel floors. Set the table in its PLAYING POSITION and move table several inches in different directions to find the best location for the table. If the floor is extremely unlevel, table may not play or operate properly. If table is high in the center, shim up under the outer legs.

### **CAUTION:**

**Do not sit on table tops.  
Do not lean against table tops.  
Do not stand on table tops.  
Do not allow children or pets under table tops.**

# PARTS IDENTIFIER (Not to Scale)

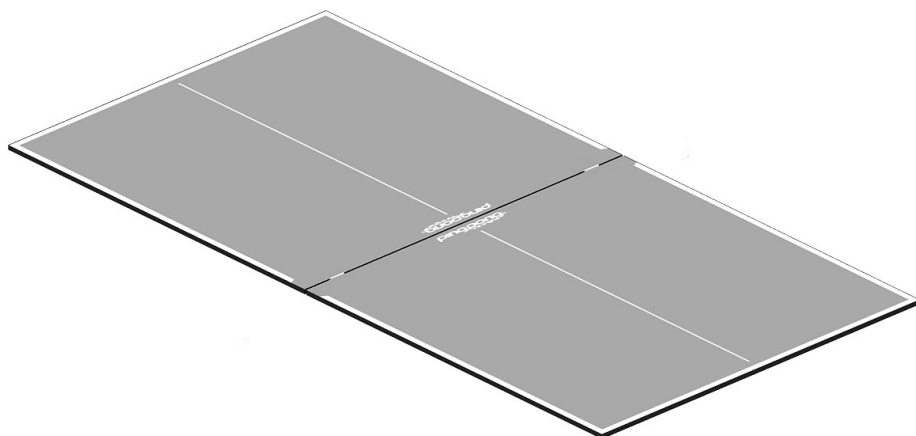


P1 - Table Tennis Top  
(1 pc)  
Pong Toss Game on Reverse Side



P2 - Pop-Up Leg Assembly  
(1 pc)



P3 - Net Post  
(2 pcs)

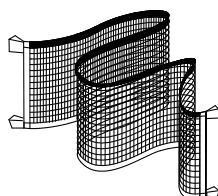

P4 - Table Tennis Net  
(1 pc)




P5 - Storage Strap  
(Pre-installed on P2)  
(1 pc)



P6 - Table Tennis Paddle  
(2 pcs)



P7 - White Table Tennis Ball  
(2 pcs)

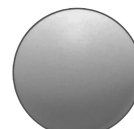

P8 - Orange Table Tennis Ball  
(1 pc)

## PARTS REQUIRED


1 pc - **P1** Table Tennis Table Top with Hinge Assembly  
 1 pc - **P2** Pop-Up Leg Assembly 1 pc - **P5** Storage Clip

## IMPORTANT NOTE:

WE HIGHLY RECOMMEND TWO ADULTS WORK TOGETHER TO EXPAND OR RETRACT THE LEG ASSEMBLY.

### STEP 1:

Remove the **P5** Storage Strap from the **P2** Pop-Up Leg Assembly as shown in **DETAIL A**. Put the **P2** Pop-Up Leg Assembly on a flat surface and expand it with a pull on an each corner as shown in **FIGURE 1A** to its expanded state as shown in **FIGURE 1B**.

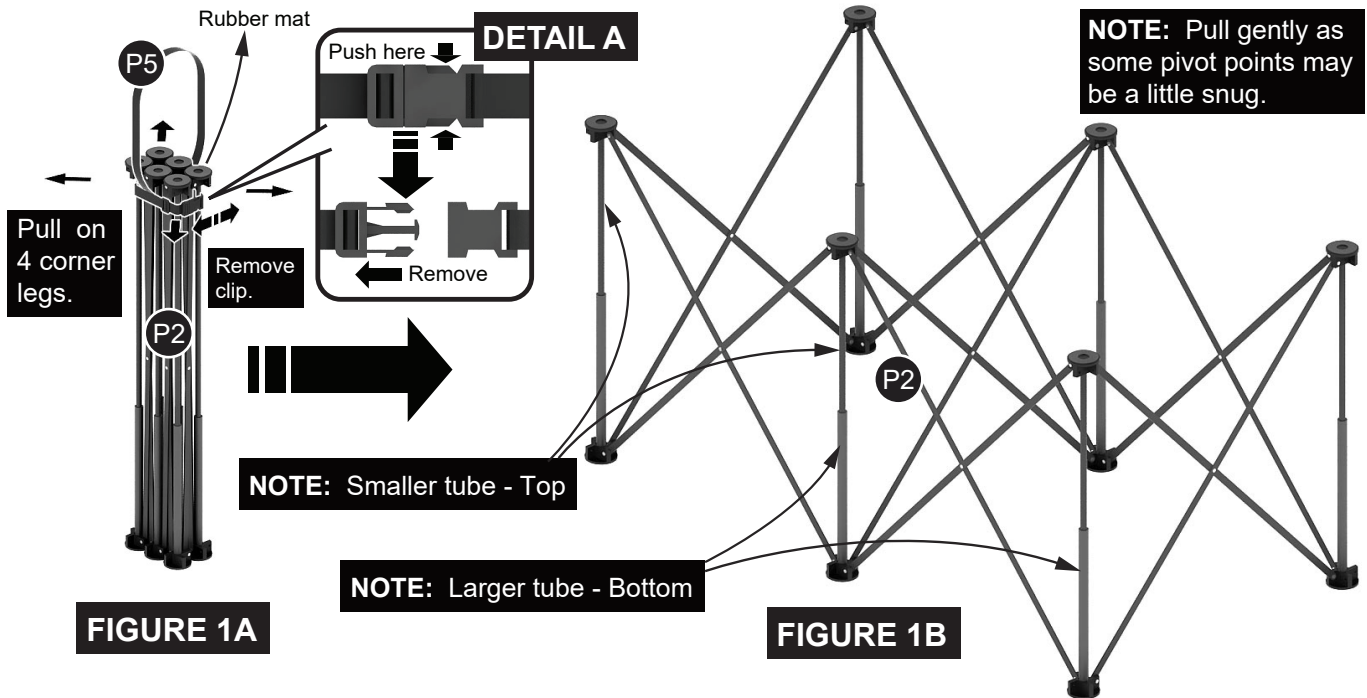


### STEP 2:

Place the **P1** Table Tennis Table Top with Hinge Assembly onto the expanded **P2** Pop-Up Leg Assembly. Put 1 side of the half table onto half area of middle leg's rubber pad as per diagram **DETAIL B**. Unfold the table as shown on **FIGURE 2**.

## CAUTION:

THIS STEP REQUIRES TWO OR MORE ADULTS. CAREFULLY PLACE THE TABLE TOP AND SET IT ON THE POP-UP LEG ASSEMBLY.

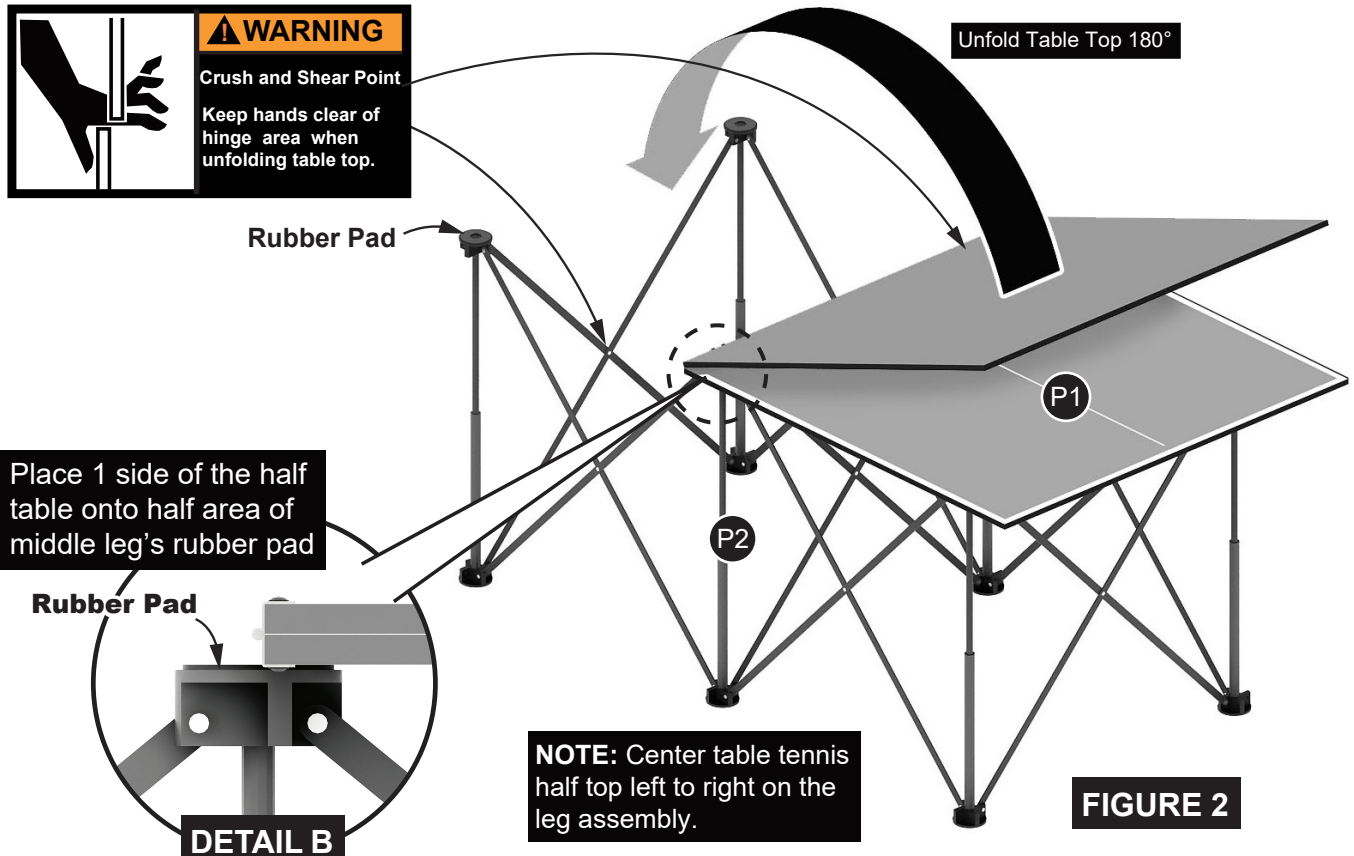

## PARTS REQUIRED


2 pcs - P3 Net Post

1 pc - P4 Table Tennis Net

### STEP 3:

Install P3 Net Posts onto the center of the P1 Table Tennis Table Top. Slide P4 Net sleeve onto P3 Net Posts as shown on FIGURE 3.

FIGURE 3

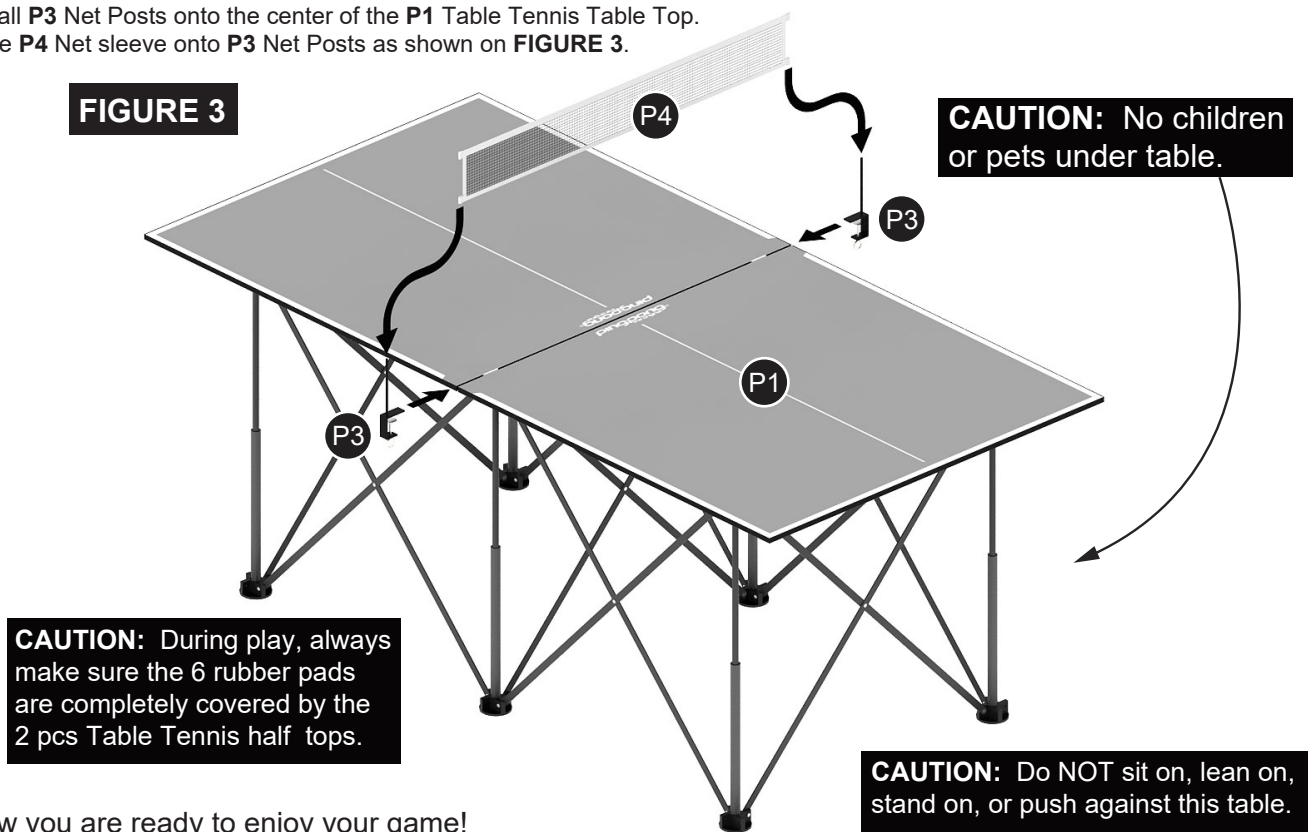

Now you are ready to enjoy your game!

### STEP 4:

To compress table back into storage position, simply do Steps 3, 2 and 1 in reverse.

### PONG-TOSS GAME

The second game feature of this product is "PONG TOSS". Remove the Table Tennis net and net posts first. Carefully, and with three adults, lift and flip the Ping Pong surface upside down to reveal this game shown in FIGURE 4. Double check that the table top is centered and sitting on the 6 leg assembly rubber pads evenly.

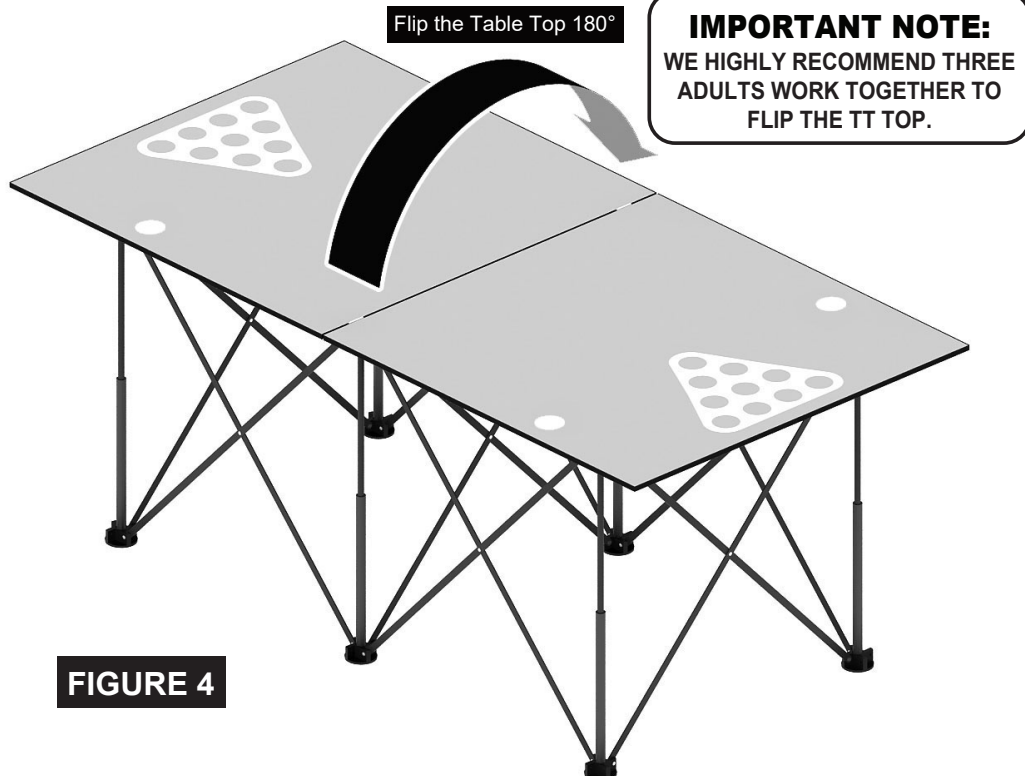


FIGURE 4

## TABLE TENNIS RULES AND GAME PLAY

There are 2 types popular Table Tennis rules known in the world-wide:

### 1. 11 Points Game Play

The ITTF has adopted the 11 Point Game for legal tournaments including the Olympic Games. This is most popular game rule.

- Each player serves 2 balls each serve. After a player serves 2 balls, the serve changes to opponent. When serving, the ball must bounce on player's side and then bounce on opponent's side. If the ball bounces on opponent's side without bouncing on player's side first, this is a fail serve and opponent gets score.
- When a player serves the ball and it bounces on player's side first, touches the net and then bounces on opponent's side, it will be determined as a NET BALL. Player should serve again until he performs a good serve or a out ball.
- When a player serves the ball and it bounces on player's side first then misses opponent's side (didn't bounce on each side of table), it will be determined as an OUT BALL. Also, if it touches the net and then misses the table, it will also be determined as an OUT BALL and opponent gets score.
- If score reaches 10-10, it is in DEUCE condition. In this condition, each player serves 1 ball. To finish the match, the score difference between players must be 2.
- In normal condition, player who first gets 11 points is the winner.

### 2. 21 Points Game Play

In a 21 Point Game, the rules are almost same as 11 Point Game. The difference is the game will end when one of the players reach point 21. Each player serves 5 balls and DEUCE condition is when both player reach 20-20.

The rules are below:

- Each player serves 5 balls each serve. After a player serves 5 balls, the serve changes to opponent. When serving, the ball must bounce on player's side and then bounce to opponent's side. If the ball bounces on opponent's side without bouncing on player's side first, this is a fail serve and opponent gets score.
- When a player serves the ball and it bounces on player's side first, touches the net and then bounces on opponent's side, it will be determined as a NET BALL. Player should serve again until he performs a good serve or an out ball.
- When a player serves the ball and it bounces on player's side first then misses opponent's side (didn't bounce on each side of table), it will be determined as an OUT BALL. Also, if it touches the net and then misses the table, it will also be determined as an OUT BALL and opponent gets score.
- If score reaches 20-20, it is in DEUCE condition. In this condition, each player serves 1 ball. To finish the match, the score difference between players must be 2.
- In normal condition, player who first gets 21 points is the winner.

## PONG TOSS RULES AND GAME PLAY

Pong Toss is generally played by teams of two in which each team takes turns bouncing ping pong balls into the other teams cups. Once a ball is lands in a cup , the cup is taken away. If both teammates hit a cup, those cups are taken away, and the balls are rolled back and they get to shoot again. Once a team removes all of their opponents cups – THEY WIN !

**Note:** A total of 20 plastic cups ( NOT Included ) are required to play this game.

## THIRD PRODUCT FEATURE

Multi-function light duty utility table. This table can also be used as a dining table or light duty utility table. It is suggested to cover the playing surface properly to protect the playing surface.

**Important Note:** LIGHT DUTY USE ONLY! And always make sure the table top is slitting evenly on the 6 leg assembly rubber pads.

# T8466F TABLE TENNIS TABLE SPARE PARTS

| Key# | Part No.   | Description                                          | Qty |
|------|------------|------------------------------------------------------|-----|
| P1   | T8466SY-P1 | Table Tennis Top with Pong Toss Game on Reverse Side | 1   |
| P2   | T8466SY-P2 | Pop-Up Leg Assembly                                  | 1   |
| P3   | T8466SY-P3 | Net Post                                             | 2   |
| P4   | T8466SY-P4 | Table Tennis Net                                     | 1   |
| P5   | T8466SY-P5 | Storage Strap                                        | 1   |
| P6   | T8466SY-P6 | Table Tennis Paddle                                  | 2   |
| P7   | T8466SY-P7 | White Table Tennis Ball                              | 2   |
| P8   | T8466SY-P8 | Orange Table Tennis Ball                             | 1   |

# 90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE® SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of ninety (90) days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE® SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above ninety (90) day warranty period, ESCALADE® SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-866-873-3528 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706 - Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE® SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE NINETY (90) DAY WARRANTY PERIOD. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty give you specific legal rights and you may also have other rights which may vary from state to state.

**pingpong®**  
the original