

BULLSHOOTER[™]

by Arachnid[®]

Paper Dartboard Set Model # BUS25

Setup / Mounting Instructions

Choose a location to hang the dartboard where there is about 10 feet of open space in front of the board. The "toe-line" should be 7' 9 1/4" from the face of the dartboard. After the dartboard is mounted to the wall, the dartboards center bulls eye should be 5'8" from the floor.

Dartboard Mounting Instructions

1. Try to locate a wall stud first. The paper dartboard comes with a built in hanger bracket on the top of the dartboard. This bracket will be hung on the screw that you drill into the wall stud. Measure with a ruler the distance from the top of the hanging bracket to the center of the bulls eye. Add that distance you just measured to 68" and make a pencil mark on the wall stud to determine the correct overall height for your hanging screw. Drill a wood screw into the stud where you made your mark.
(Screw not included) Hang the dartboard on the screw. The center bullseye should be 5'8" from the floor when it's mounted on the screw.

POPULAR DART GAMES

301 - 901

This popular tournament and pub game is played by subtracting each dart from the starting number **(301)** until the player reaches exactly 0 (zero). (You can start the game with any point total you wish ranging 301-901) If a player goes past zero it is considered a "*Bust*" and the score returns to where it was at the start of that round. For example, if a player needs a 32 to finish the game and he/she hits a 20, 8, and 10 (totals 38), the score goes back to 32 for the next round.

In playing the game, the double in / double out rules can be used.

- **Double In** - A double must be hit before points are subtracted from the total. In other words, a player's scoring does not begin until a double is hit.
- **Double Out** - A double must be hit to end the game. This means that an even number is necessary to finish the game.
- **Double In and Double Out** - A double is required to start and end scoring of the game by each player.

CRICKET

Cricket is a strategic game for accomplished players and beginners alike. Players throw for numbers best suited for them and can force opponents to throw for numbers not as suitable for them. The object of Cricket is to "close" all of the appropriate numbers before one's opponent while racking up the highest number of points.

Only the numbers 15 through 20 and the inner/outer bull's-eye are used. Each player must hit a number 3 times to "open" that segment for scoring. A player is then awarded the number of points of the "open" segment each time he/she throws a dart that lands in that segment, provided their opponent has not closed that segment. Hitting the double ring counts as two hits, and the triple ring counts as 3 hits.

Numbers can be opened or closed in any order. A number is "closed" when the other player(s) hit the open segment 3 times. Once a number has been "closed", any player for the remainder of the game can no longer score on it.

Winning - The side closing all the numbers first and accumulating the highest point total is the winner. If a player "closes" all numbers first but is behind in points, he/she must continue to score on the "open" numbers. If the player does not make up the point deficit before the opposing player(s) "closes" all the numbers, the opposing side wins. Play continues until all segments are closed - the winner is the player with the highest score.

WARNING: Darts are not a toy for use by children. Darts can cause serious or fatal injury. Keep out of the reach of children. Do not use when any person or animal is in the vicinity of the intended flight path of the dart or target area.

Customer Service 1.800.399.4402
FAX: 215.283.9573

Please have your model number ready when calling.

DMI Sports Inc
1300 Virginia Drive, Suite 401
Ft. Washington, PA, 19034
www.dmisports.com

For any warranty issues or problems,

DO NOT RETURN THIS PRODUCT TO THE STORE WHERE PURCHASED

WARRANTY: This dartboard is guaranteed against defects in materials and workmanship for 90 days. (Note: flights, shafts and points wear out and/or break as a normal part of play; this is not a defect and is not covered under the guarantee.) This guarantee is void if merchandise is misused, abused, neglected, shopworn, scratched or if you cannot provide a valid proof of purchase.