



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3535

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

 
Your Model Number: **45-6291-BJWF**

Date Code: **2-45-6291-BJWF-** **-JL**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

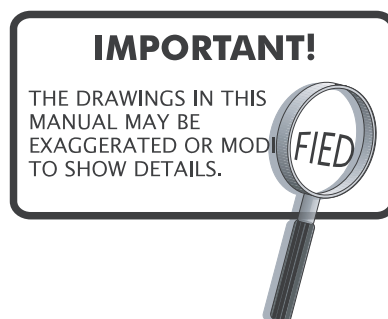

TWO (2) ADULTS ARE REQUIRED TO ASSEMBLE THIS SPACE SAVER 2 PLAYER BASKETBALL

Tools Needed:

Allen Wrench (provided)
Phillips Screwdriver
Pliers

IMPORTANT !

Make sure you understand the following tips before you begin to assemble your basketball shootout.

1. This game (with Mechanical Scoring Arm) can be played outdoors in dry weather - but must be stored indoors.
2. Tighten hardware as instructed.
3. Do not over tighten hardware, as you could crush the tubing.
4. Some drawings or images in this manual may not look exactly like your product.
5. To prevent damage to the electronics or to your wall, do not place this unit any closer than six inches from the wall.

 


ATTENTION:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE REQUIRED TO ASSEMBLE THIS GAME TABLE.**

HARDWARE IDENTIFIER


(To Scale)

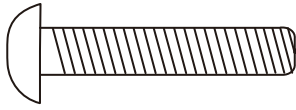


H1 - M6 x 34mm
Allen Head Bolt
(4 pcs)

 

H2 - M6 x 30mm
Allen Head Bolt
(8 pcs)

 


H3 - M6 x 28mm
Allen Head Bolt
(10 pcs)

 

H4 - M6
Flat Washer
(44 pcs)



 
H5 - M6 Nut
(22 pcs)




H6 - Plastic Bushing
(4 pcs)



 H7 - Wing Nut
(1 pc)

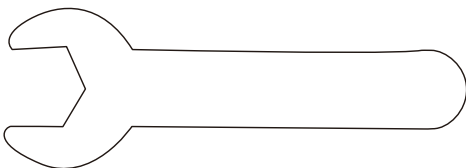


T1 - Wrench
(1 pc)

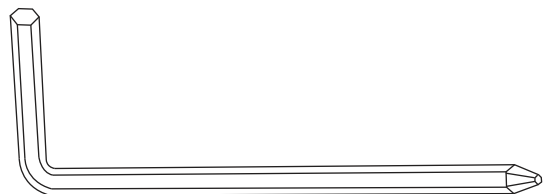 

T2 - Allen Wrench with Phillips Driver
(1 pc)

 
PARTS IDENTIFIER (Not to Scale)




P1 - Board L
Tube Top
(2 pcs)



 P2 - Board Tube
(2 pcs)

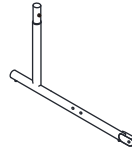


P3 - Base Tube
(2 pcs)

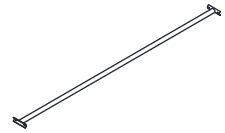 

P4 - Base Connect
Tube
(2 pcs)



 
P5 - Telescoping Tube
(2 pcs)

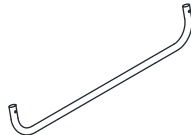


P6 - Ramp U Tube
(1 pc)



 P7 - Lower Frame
Curved Tube
(2 pcs)

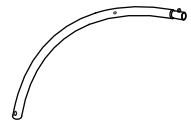


P8 - Upper Frame
Curved Tube
(2 pcs)

 


P9 - Ramp L Tube
(2 pcs)



 
P10 - Support Tube
(2 pcs)

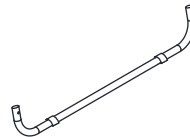


P11 - Support U Tube
(1 pc)

 

P12 - Ramp Tube
(1 pc)

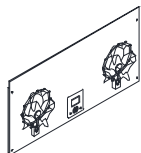 

 P13 - Backboard with
Rims, Nets, Scoring
Arms and Electronic
Scorer attached
(1 pc)

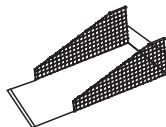

P14 - Ramp Chute
(1 pc)

 


P15 - Control Box With Wire
(1 pc)

ACCESSORY IDENTIFIER (Not to Scale)



A1 - Basketball
(4 pcs)



A2 - Air Pump with Needle
(1 pc)

Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts List.

NOTE: STEP 1, 2 requires a second adult to help “hold” the assemblies as being assembled

NOTE: When unfolding assemblies, be careful not to bend any parts.

PARTS REQUIRED:

2 pcs - **P3** Base Tube

1 pc - **P4** Base Connect Tube

4 pcs - **H3** M6 x 28mm Allen Head Bolt

4 pcs - **H5** M6 Nut

8 pcs - **H4** M6 Flat Washer

STEP 1

Attach the Base connect tube **P4** to the Base tubes **P3** using Nuts **H5**, Washers **H4** and Bolts **H3** as shown in **FIGURE 1**.

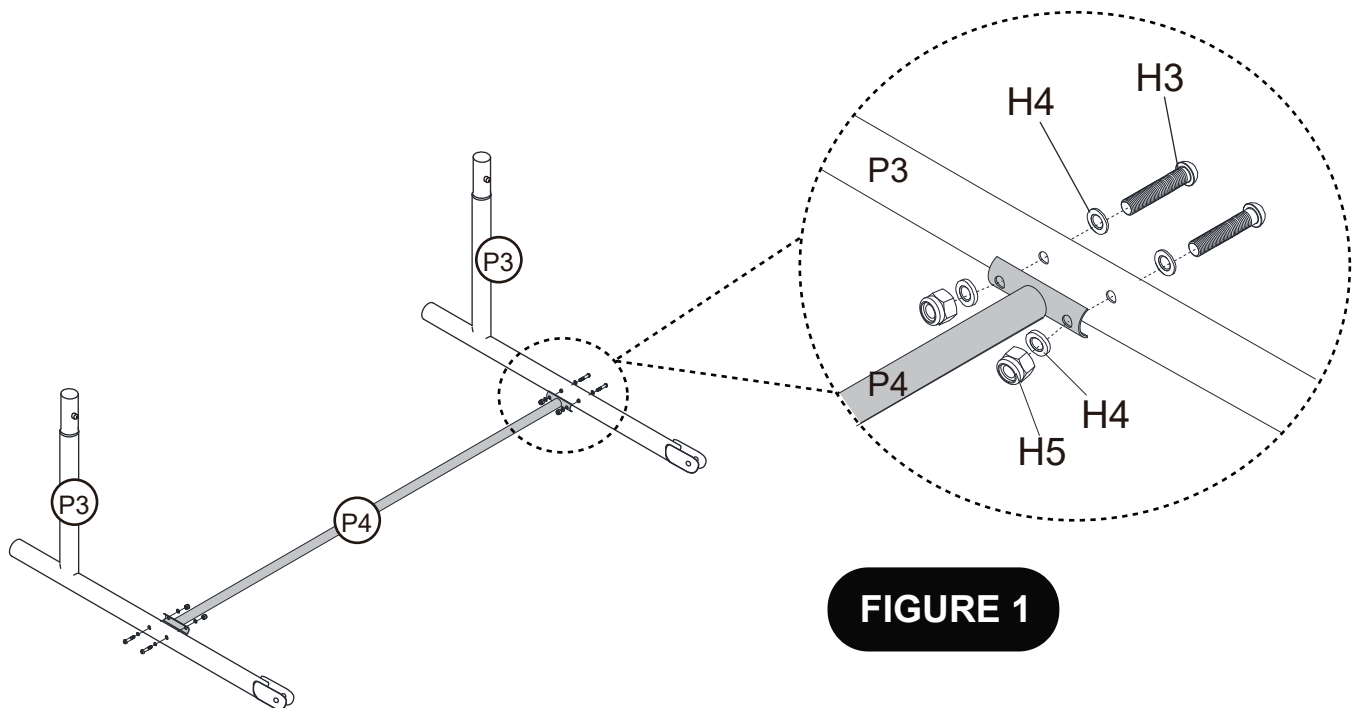 


FIGURE 1

PARTS REQUIRED:

 
2 pcs - **P2** Board Tube
1 pc - **P4** Base Connect Tube

4 pcs - **H3** M6 x 28mm Allen Head Bolt
8 pcs - **H4** M6 Flat Washer

4 pcs - **H5** M6 Nut

STEP 2

Attach the Board Tubes **P2** to the Base tubes **P3** using Spring Lock as shown in **FIGURE 2**.

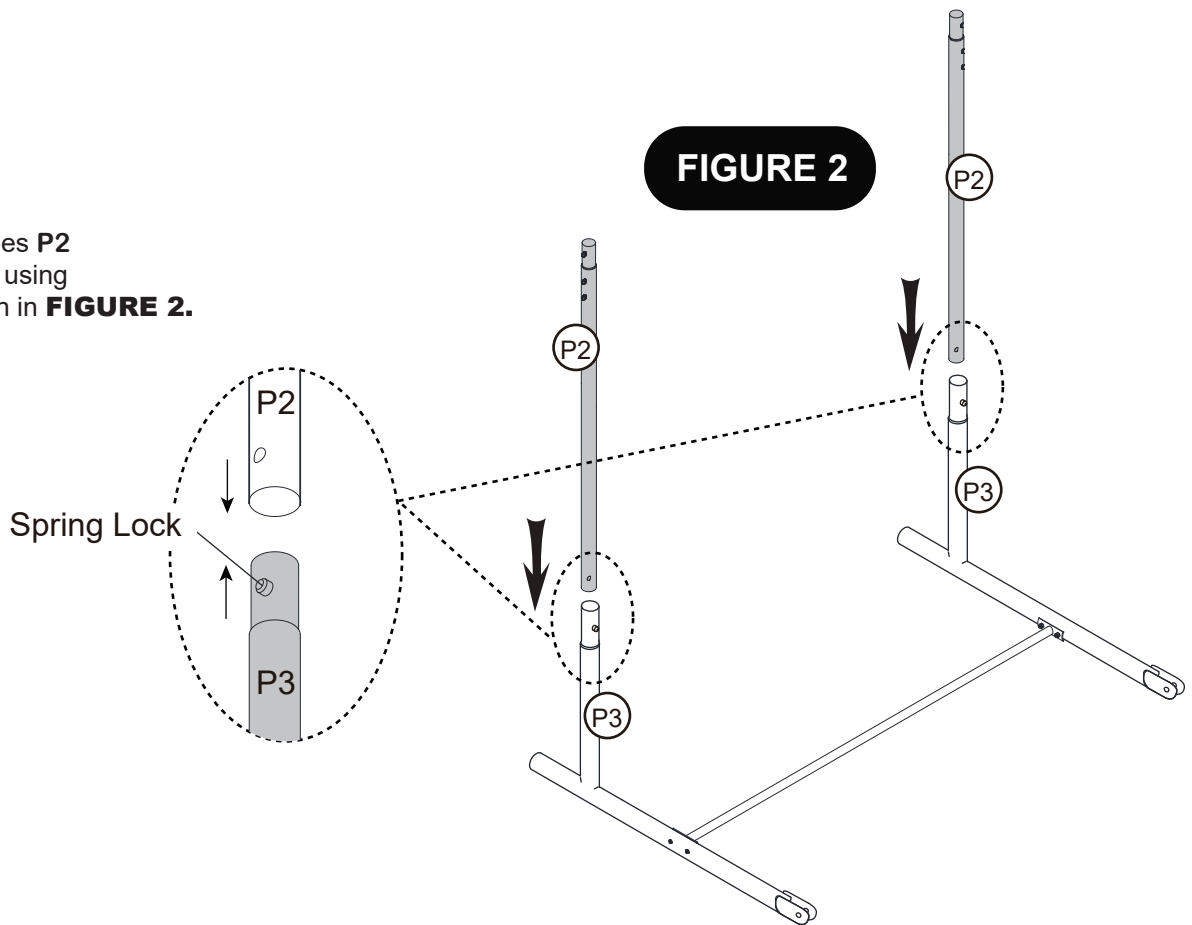

STEP 3

Attach the Base connect tube **P4** to the Board Tubes **P2** using Nuts **H5**, Washers **H4** and Bolts **H3** as shown in **FIGURE 3**.

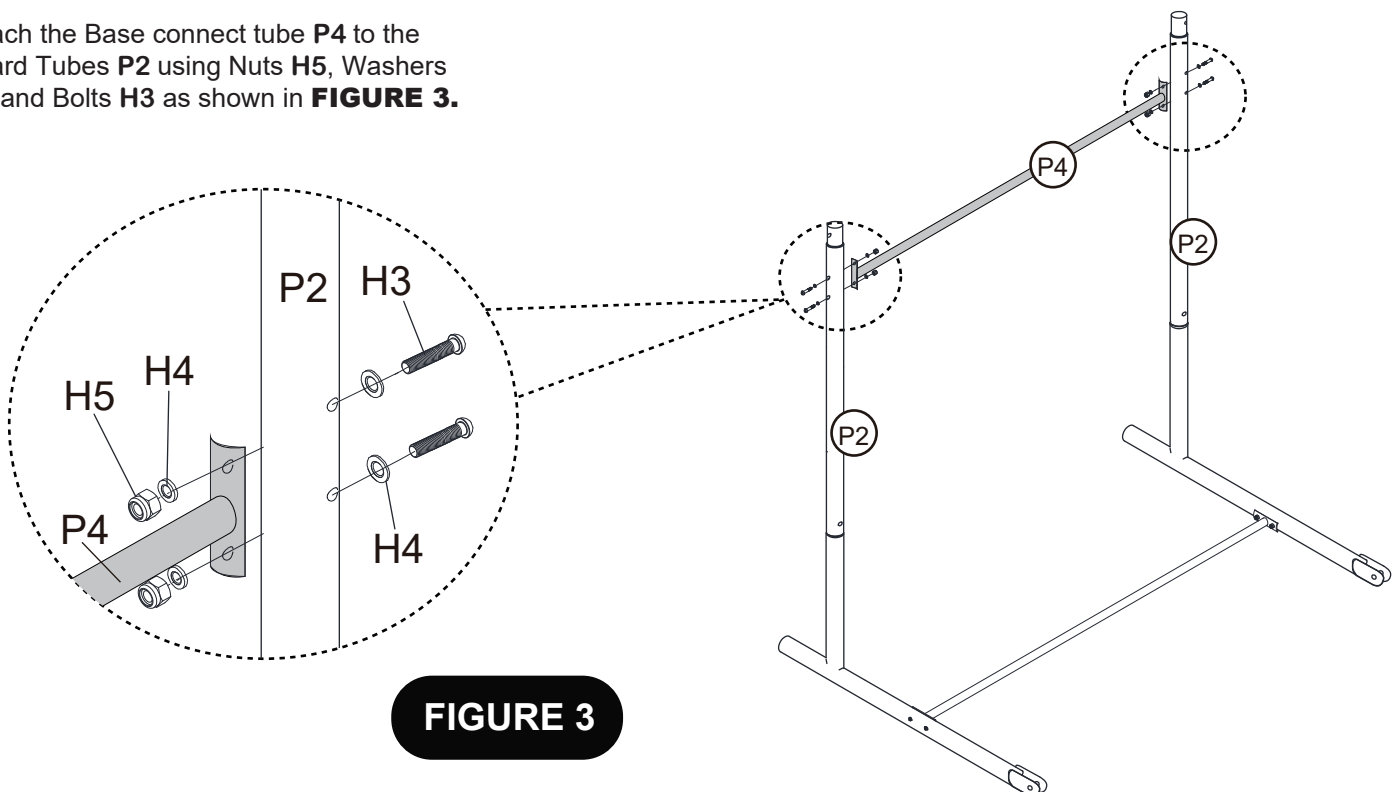 


FIGURE 3

PARTS REQUIRED:

2 pcs - **P1** Board L Tube Top

2 pcs - **H2** M6 x 30mm Allen Head Bolt

2 pcs - **P7** Lower Frame Curved Tube

4 pcs - **H4** M6 Flat Washer

2 pcs - **P8** Upper Frame Curved Tube

2 pcs - **H5** M6 Nut

STEP 4

Attach the Board L Tube Top **P1** to the Board Tubes **P2** as shown in **FIGURE 4**.

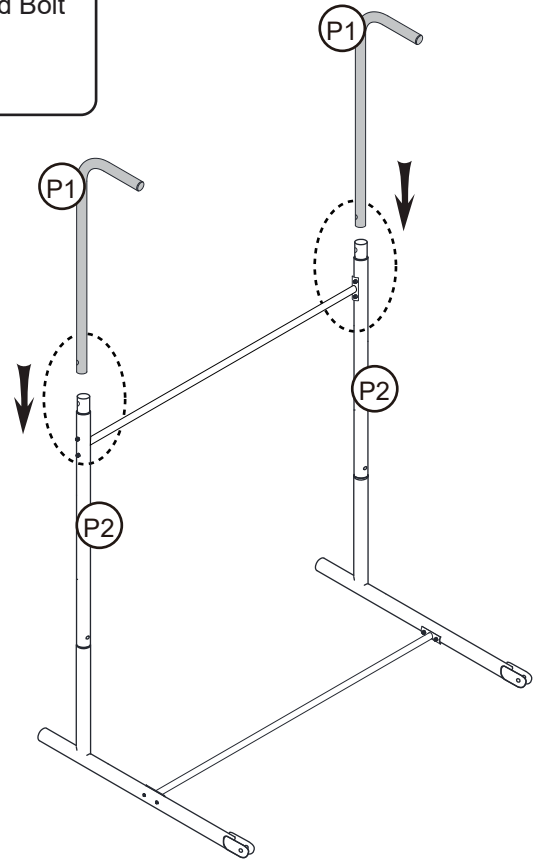 


FIGURE 4

STEP 5

Attach the Lower Frame Curved Tubes **P7** to the Base Tubes **P3** using Nuts **H5**, Washers **H4** and Bolts **H2** as shown in **FIGURE 5**.

Connect the Upper Frame Curved Tubes **P8** to the Lower Frame Curved Tubes **P7** using Spring Lock as shown in **FIGURE 5**.

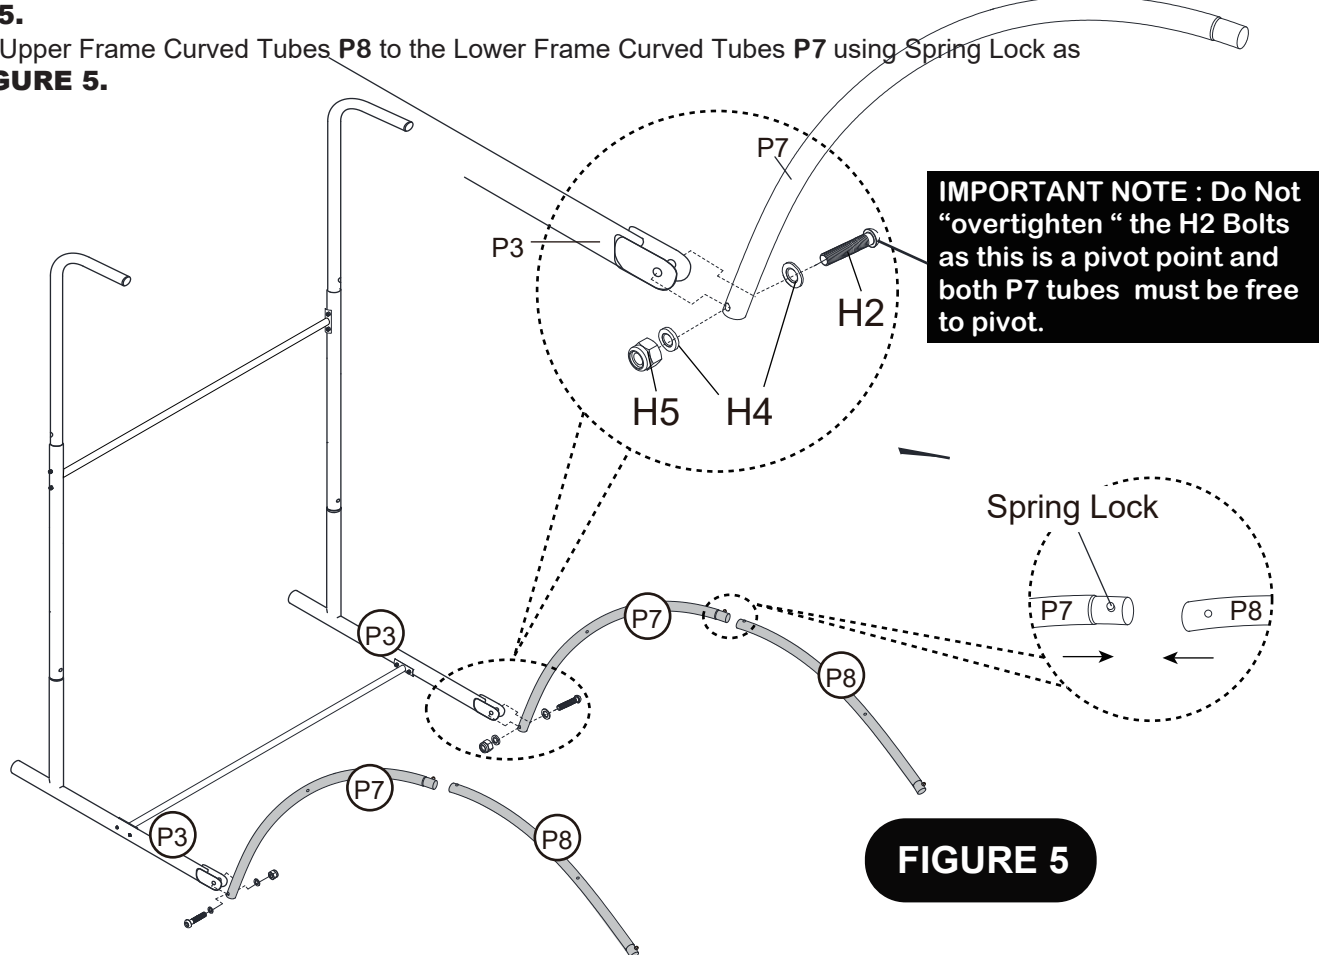 


FIGURE 5

PARTS REQUIRED:

 
2 pcs - **P9** Ramp L Tube
2 pcs - **P10** Support Tube
1 pc - **P6** Ramp U Tube

2 pcs - **H2** M6 x 30mm Allen Head Bolt
4 pcs - **H4** M6 Flat Washer
1 pc - **P11** Support U Tube

2 pcs - **H5** M6 Nut


STEP 6

Attach the Support Tubes **P10** to the Upper Frame Curved Tubes **P8** using Nuts **H5**, Washers **H4** and Bolts **H2** as shown in **FIGURE 6**. Connect the Ramp L Tubes **P9** to the Upper Frame Curved Tubes **P8** using Spring Locks as shown in **FIGURE 6**.

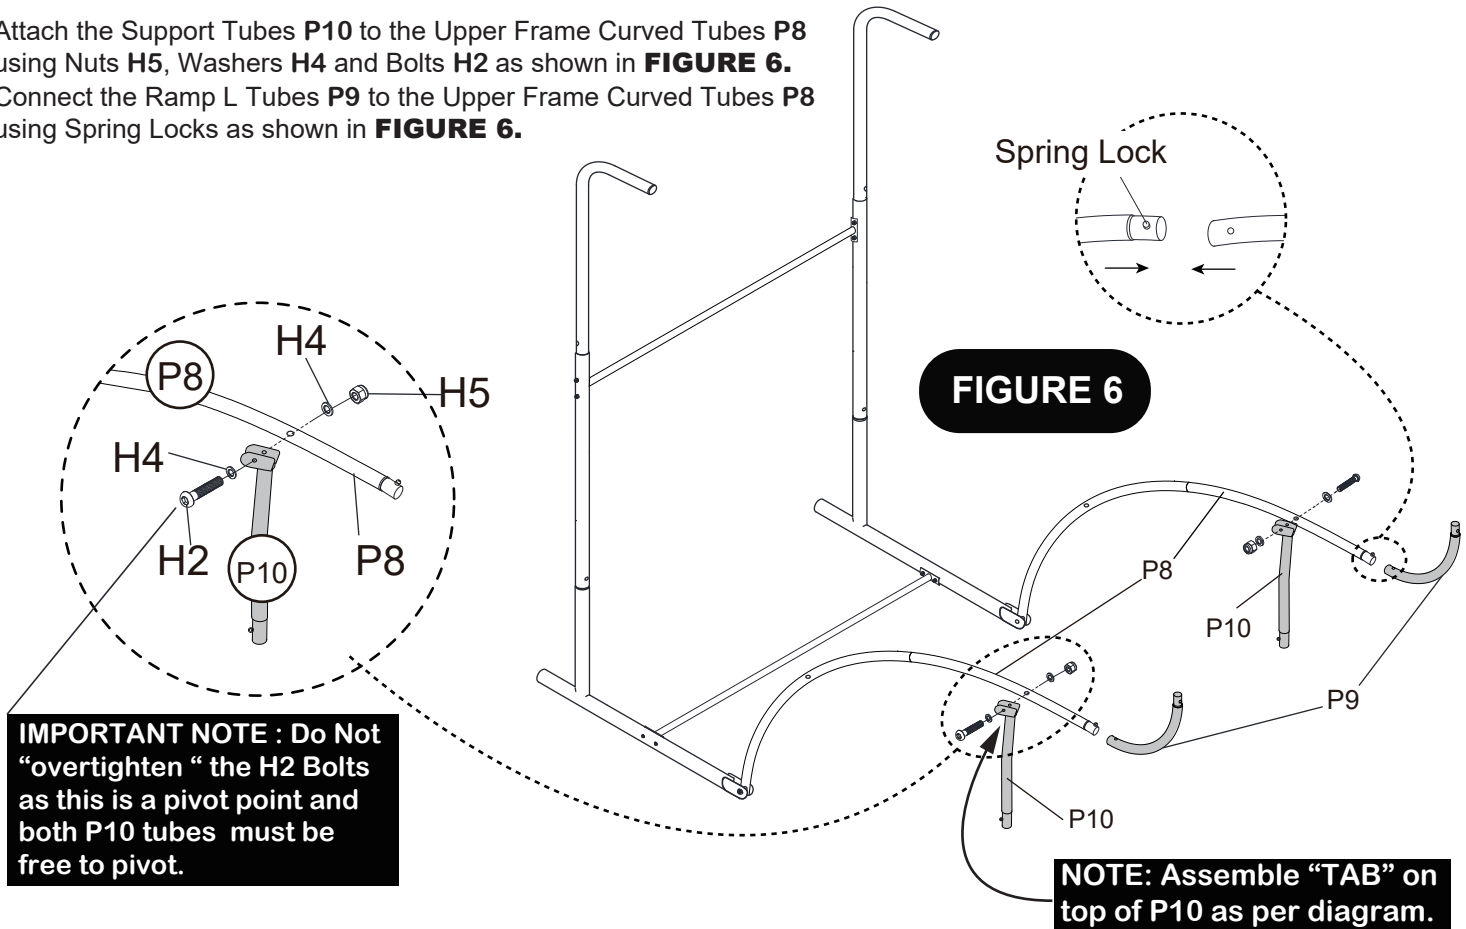

STEP 7

 Attach the Ramp U Tubes **P6** to the Ramp L Tubes **P9** using Spring Lock as shown in **FIGURE 7**. Attach the Support U Tubes **P11** to the Support Tubes **P10** using Spring Lock as shown in **FIGURE 7**.

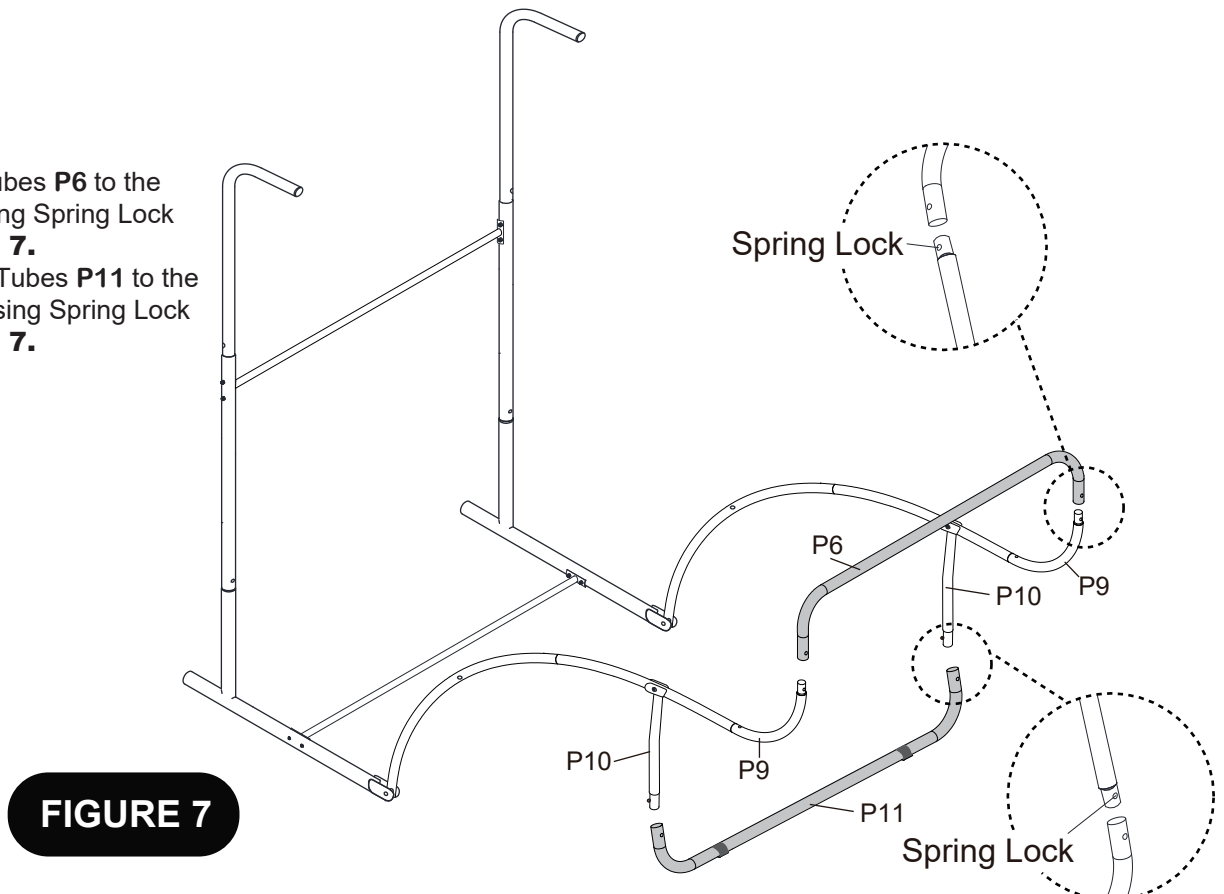

PARTS REQUIRED:

2 pcs - **P5** Telescoping Tube

4 pcs - **H5** M6 Nut

4 pcs - **H2** M6 x 30mm Allen Head Bolt

8 pcs - **H4** M6 Flat Washer

4 pcs - **H6** M6 Plastic Washer

STEP 8

Loosen the Telescoping Tubes **P5** and adjust the tube to a suitable length for the next step as shown in **FIGURE 8**.

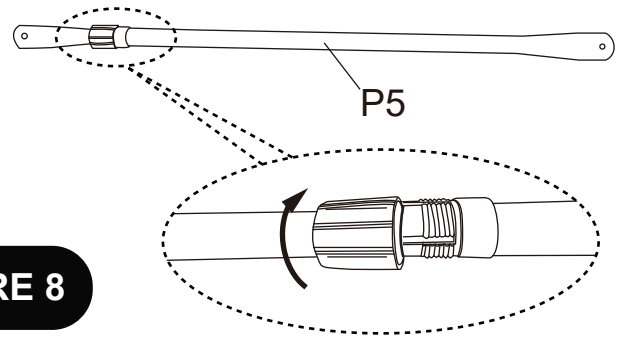 


FIGURE 8

STEP 9

Attach the Telescoping Tubes **P5** to the Board L Tube Top **P1** using Nuts **H5**, Washers **H4**, Plastic Washer **H6** and Bolts **H2** as shown in **FIGURE 9**.

Attach the Telescoping Tubes **P5** to the Lower Frame Curved Tubes **P7** using Nuts **H5**, Washers **H4** and Bolts **H2** as shown in **FIGURE 9**.

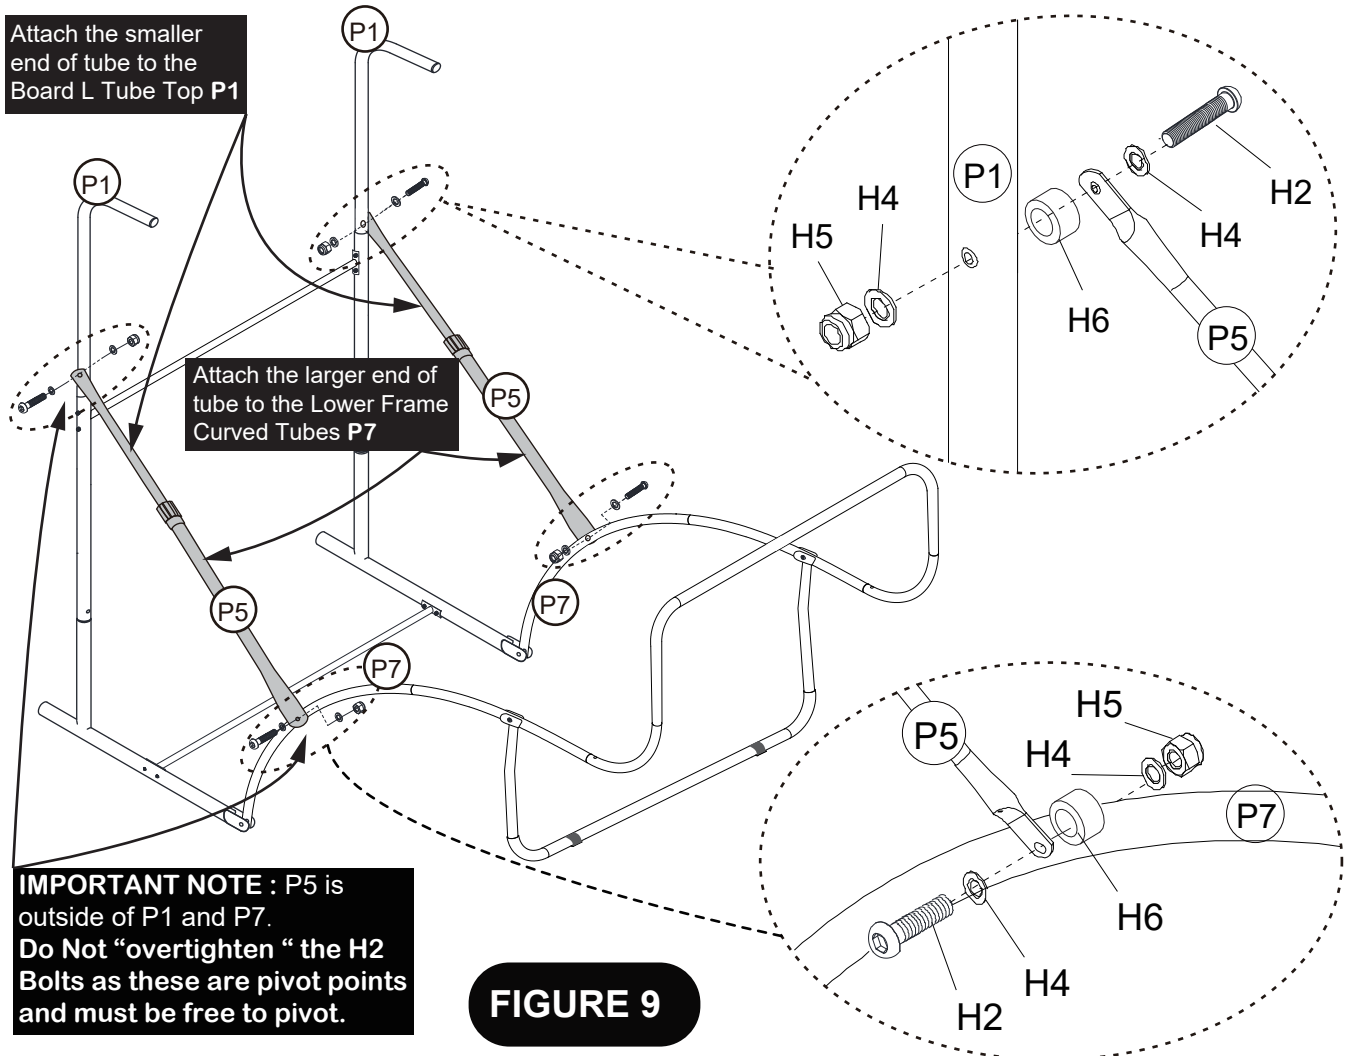 


FIGURE 9

PARTS REQUIRED:

1 pc - **P13** Backboard
4 pcs - **H4** M6 Flat Washer

2 pcs - **H1** M6 x 34mm Allen Head Bolt
2 pcs - **H5** M6 Nut

STEP 10

With the help of another adult, attach the Backboard **P13** to the front side of the Board L Tube Top **P1** using Nuts **H5**, Washers **H4** and Bolts **H1** as shown in **FIGURE 10**.

Carefully fold down
Rims and Scoring Arms

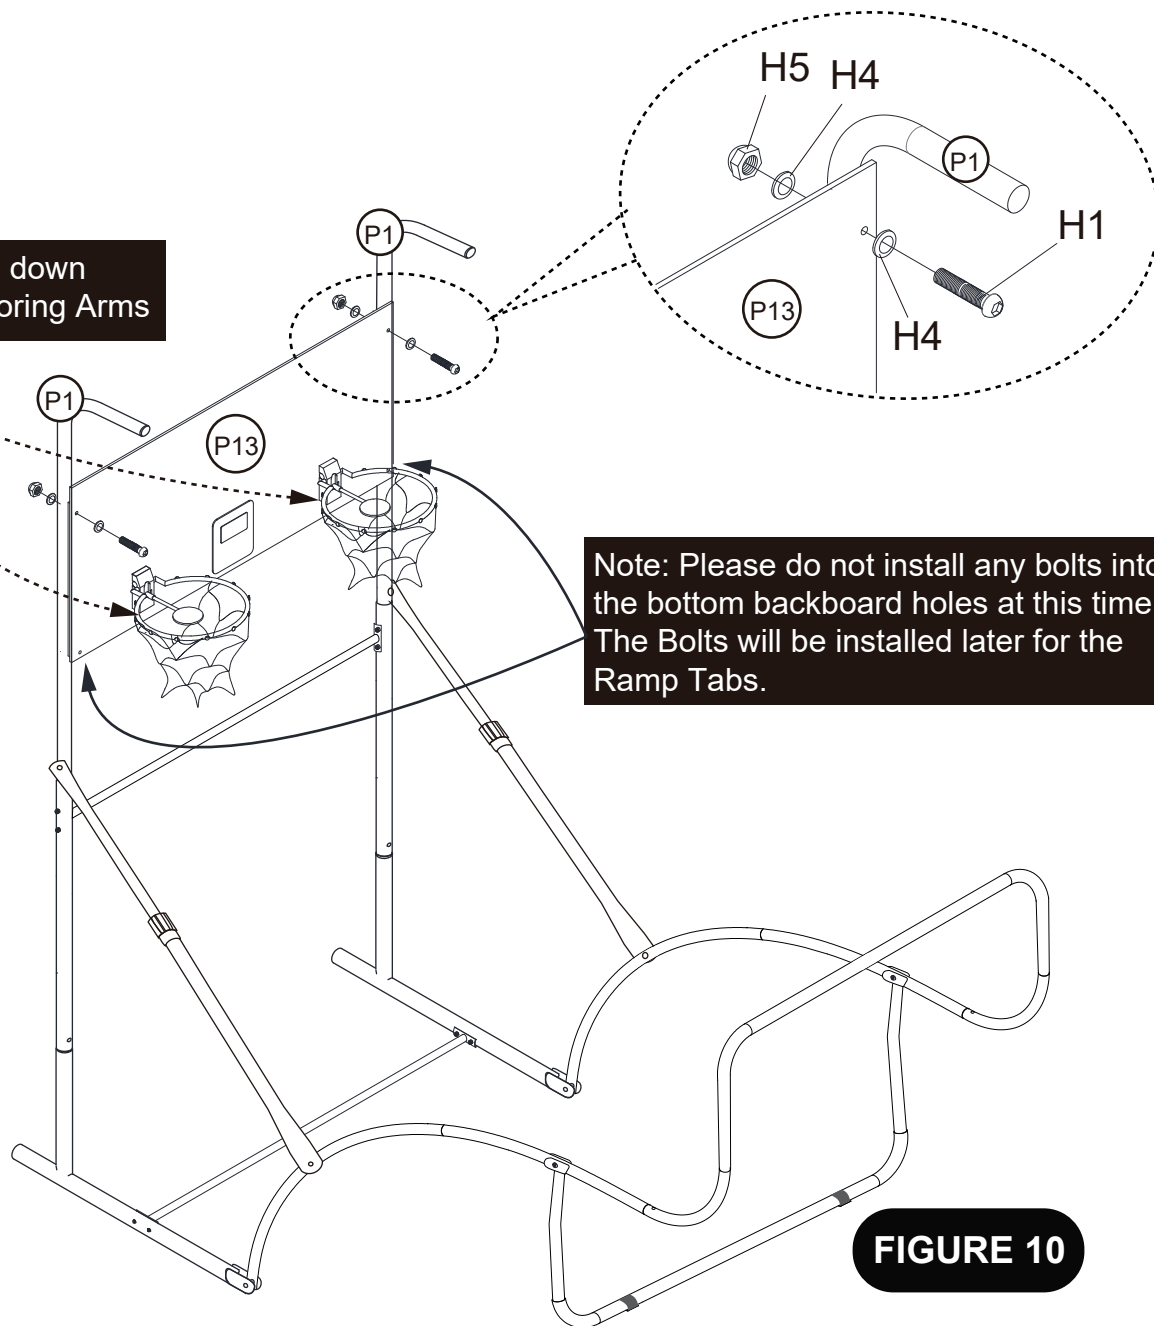 


FIGURE 10

 
PARTS REQUIRED:

1 pc - **P14** Ramp Chute

STEP 11

Slide elastic straps and the sleeve of the Ramp Chute **P14** onto the Board L-Tube Top **P1** as shown in **FIGURE 11**.

At the front of Ramp Chute **P14**, bring the ramp down and secure using hook and loop straps as shown in **FIGURE 11**. Secure all hook and loop straps on the shootout as shown in **FIGURE 11**.

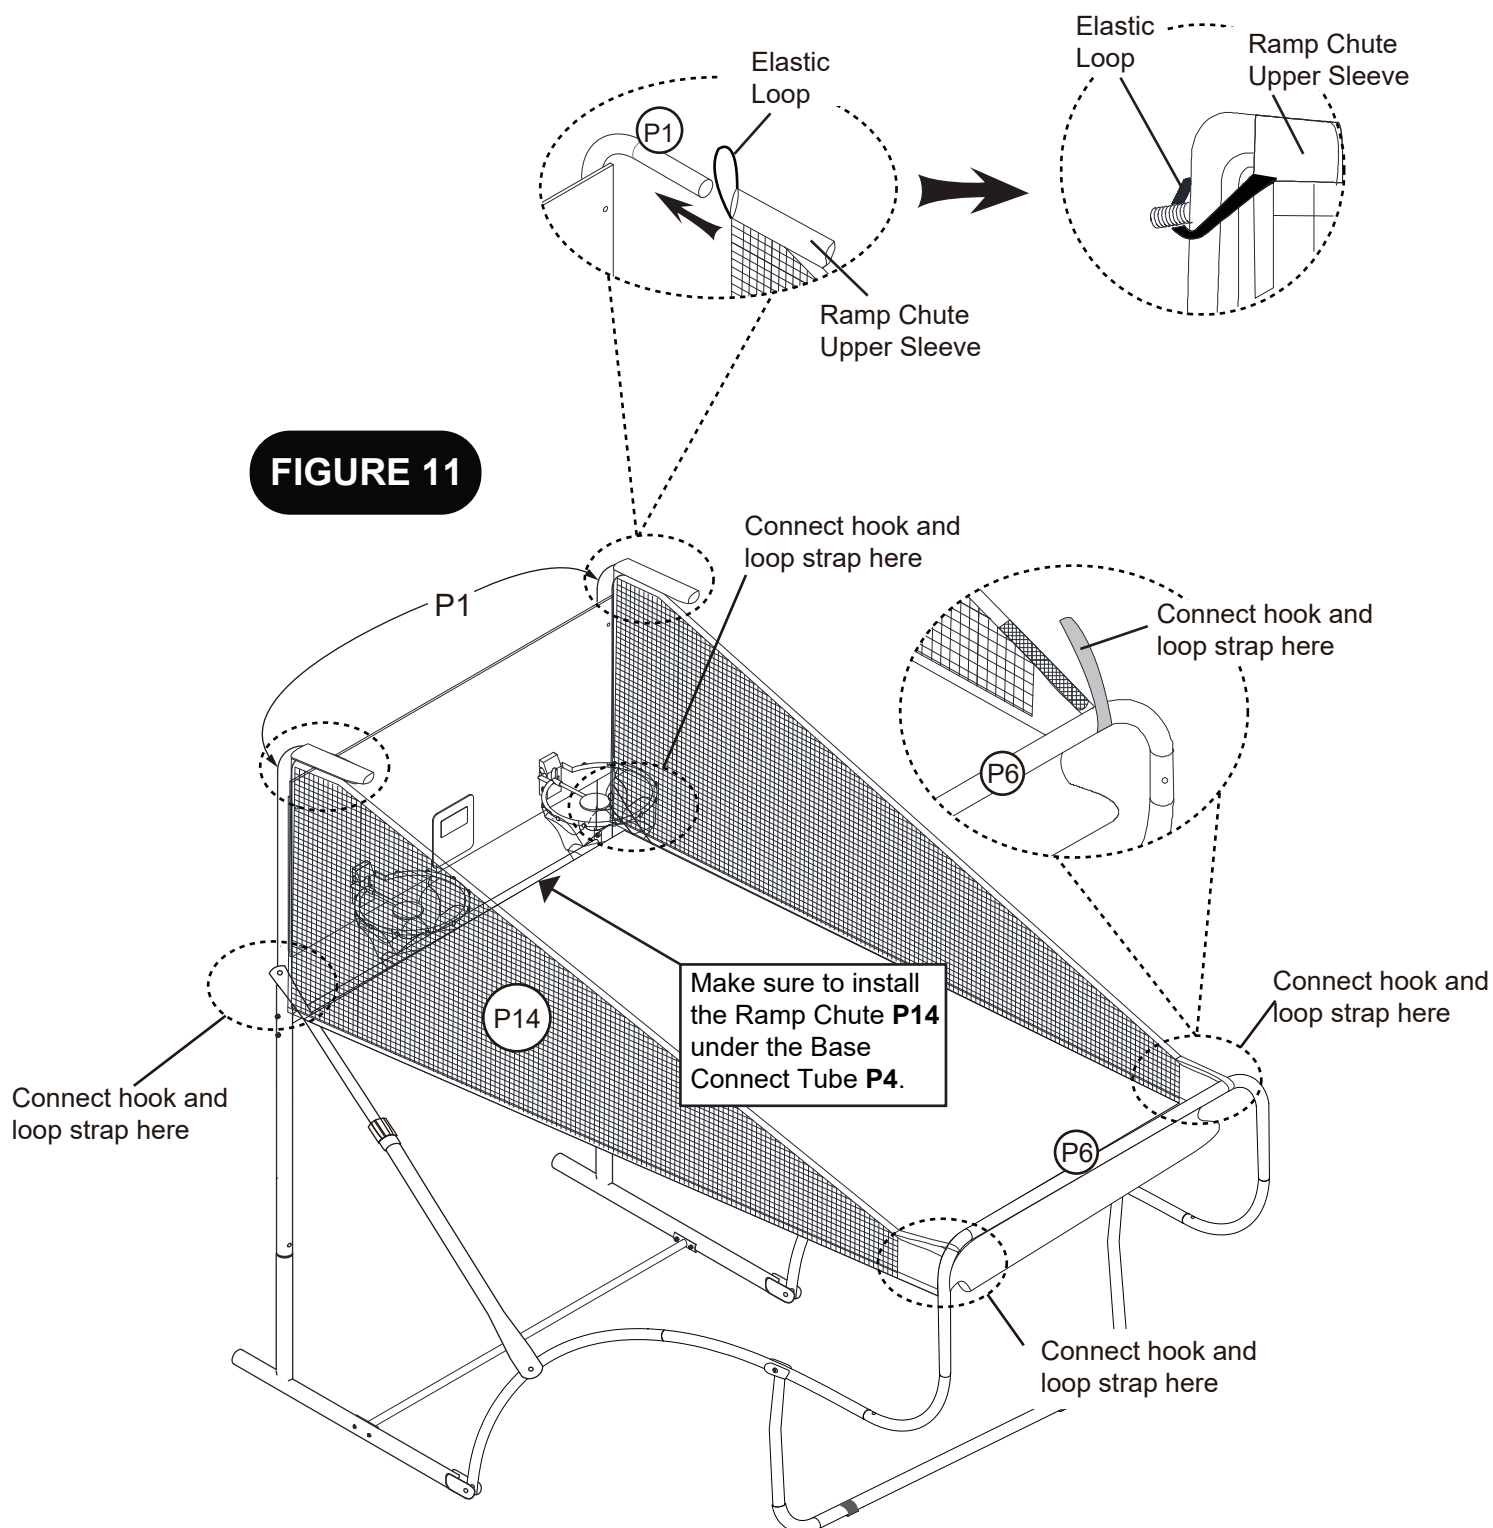

PARTS REQUIRED:

1 pc - **P12** Ramp Tube
2 pcs - **H5** M6 Nut

2 pcs - **H3** M6 x 28mm Allen Head Bolt
4 pcs - **H4** M6 Flat Washer

STEP 12

Slide the Ramp Tube **P12** into the front sleeve of the Ramp Chute **P14** as shown in **FIGURE 12**. Attach the Ramp Tube **P12** to the inside of the Ramp U Tube **P6** using Nuts **H5**, Washers **H4** and Bolts **H3** as shown in **FIGURE 12**.

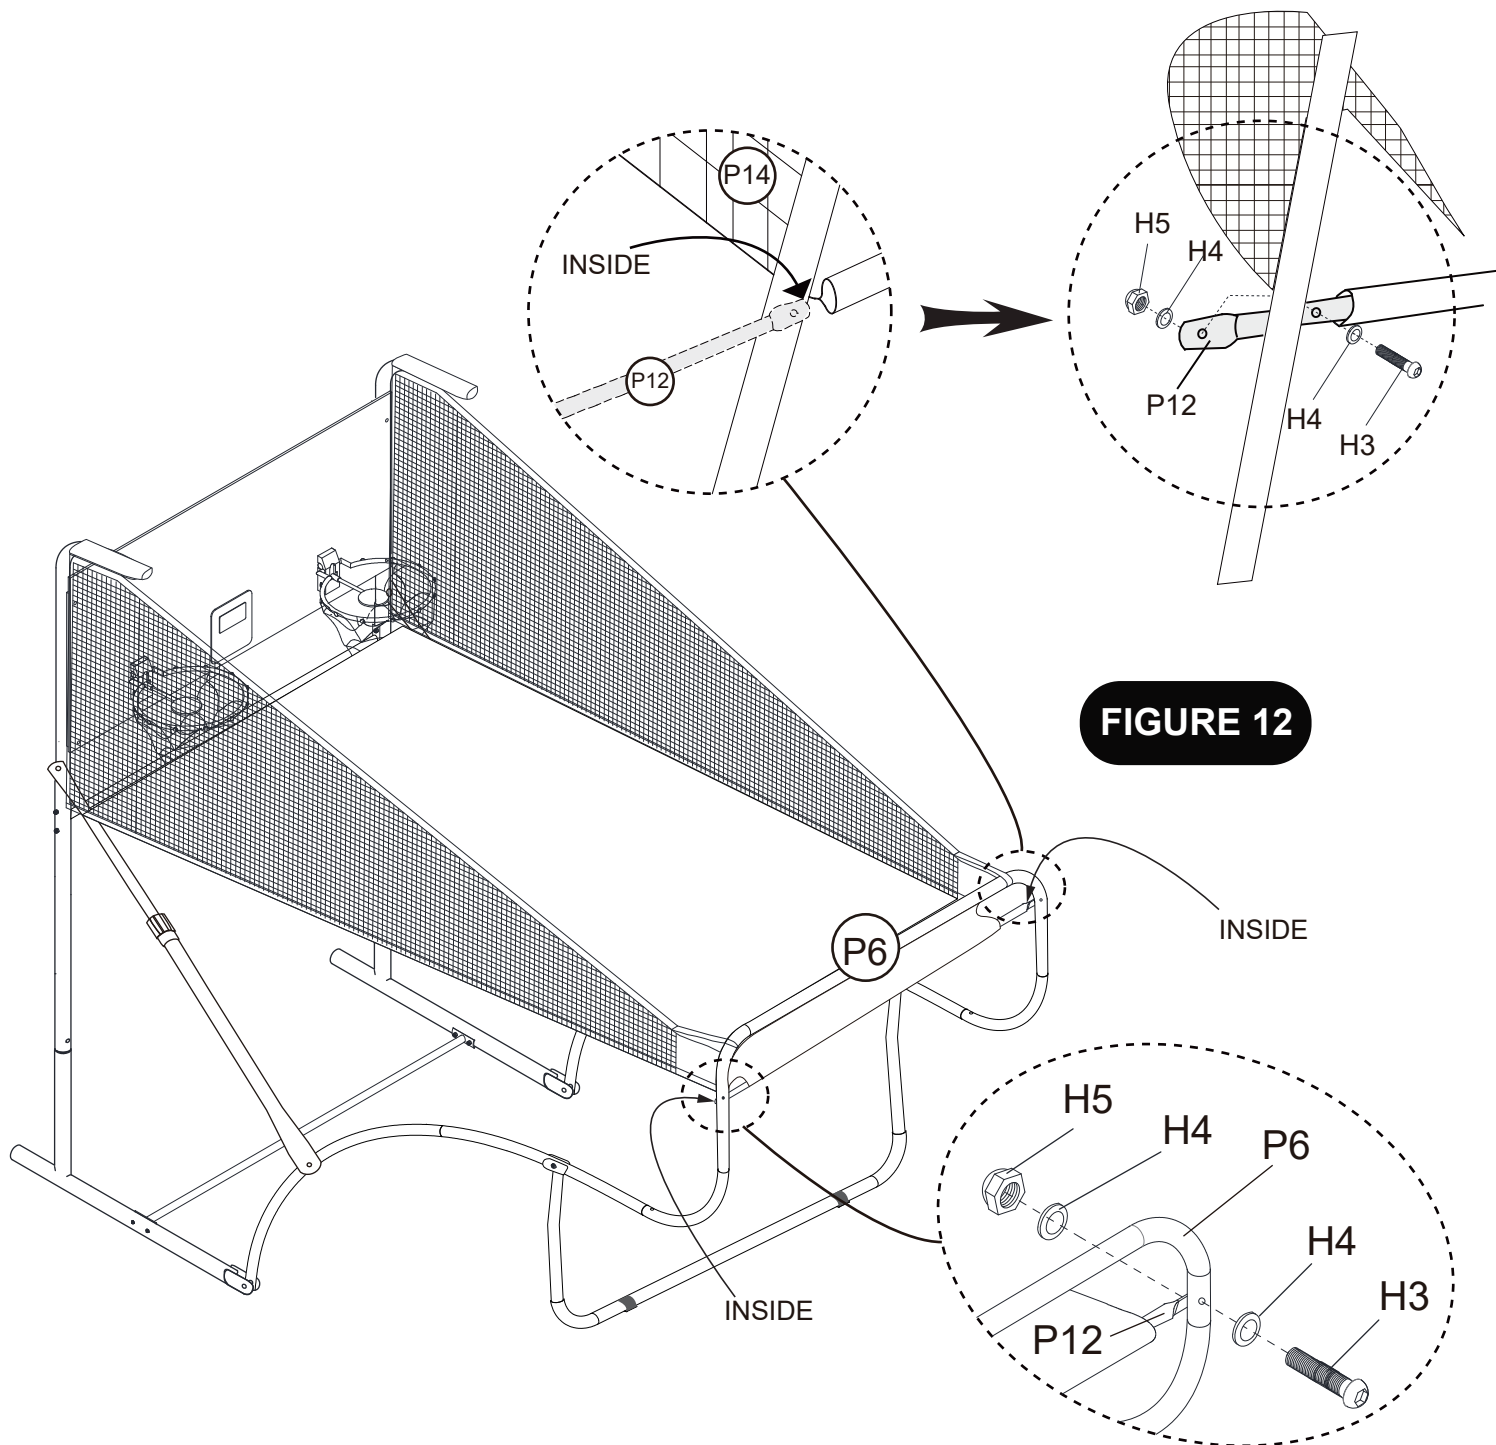 


FIGURE 12

PARTS REQUIRED:

2 pcs - **H1** M6 x 34mm Allen Head Bolt
2 pcs - **H5** M6 Nut

4 pcs - **H4** M6 Flat Washer
1 pc - **H7** Wing Nut

 
1 pc - **P15** Control Box

STEP 13

At the bottom hole of the Backboard **P13**, bring the ramp up behind Board L-Tube Top **P1**, attach the ramp tabs of Ramp Chute **P14** using Nuts **H5**, Washers **H4** and Bolts **H1** as shown in **FIGURE 13**.


Attach the **P15** Control Box onto the **P6** Ramp U Tube using the **H7** Wing Nut as shown in the **FIGURE 13**.

Important Operational / Safety Note :
please read and obey the safety notes
on top of Page 16 regarding the correct
and safe use of the P5 telescoping tubes.

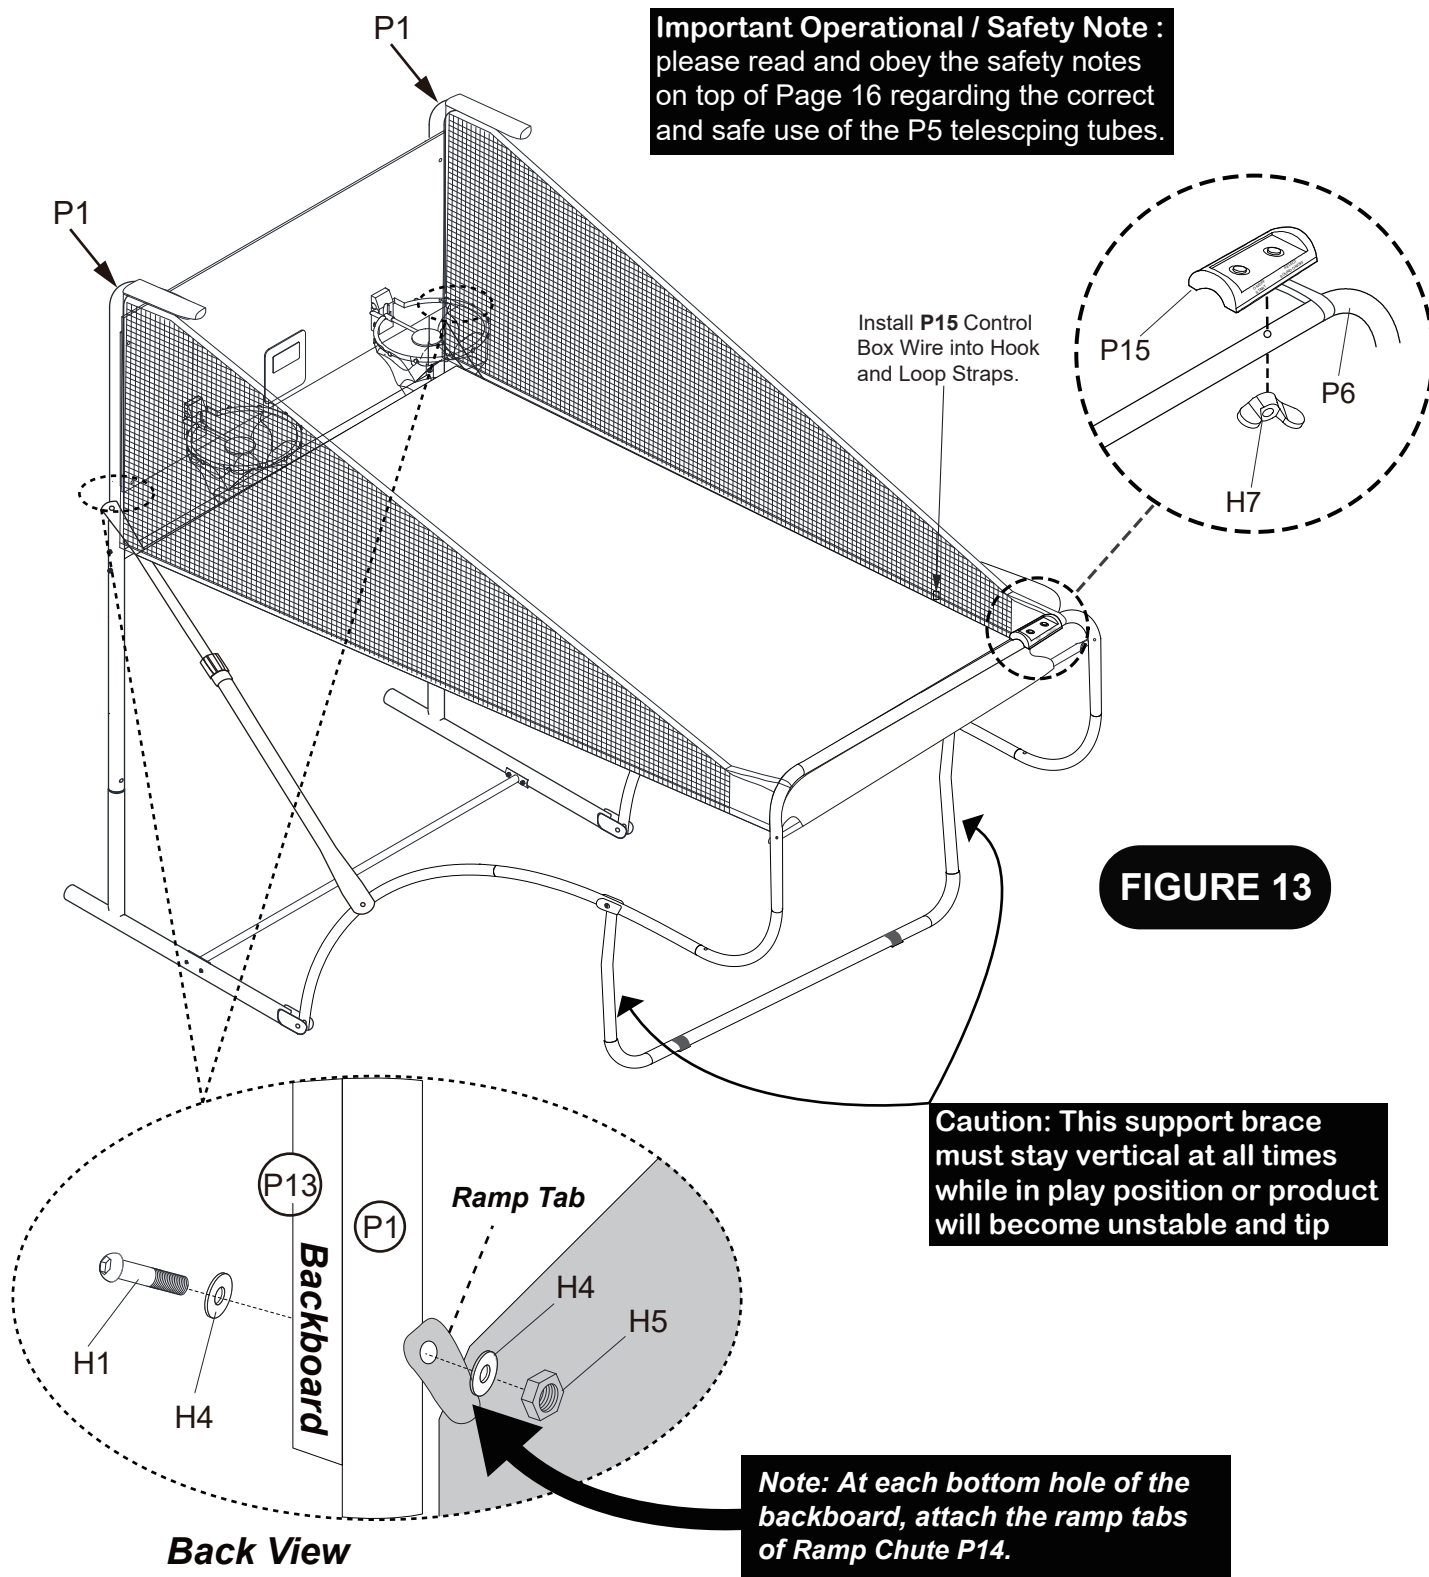

STEP 14

 Insert 3(three) pieces “AAA” batteries in correct polarities into the backside of Electronic Scorer as shown in **FIGURE 14**. See” **FIRST TIME BATTERY INSTALLATION AND NOTICE** “ , before installing batteries, located on **page 17**.

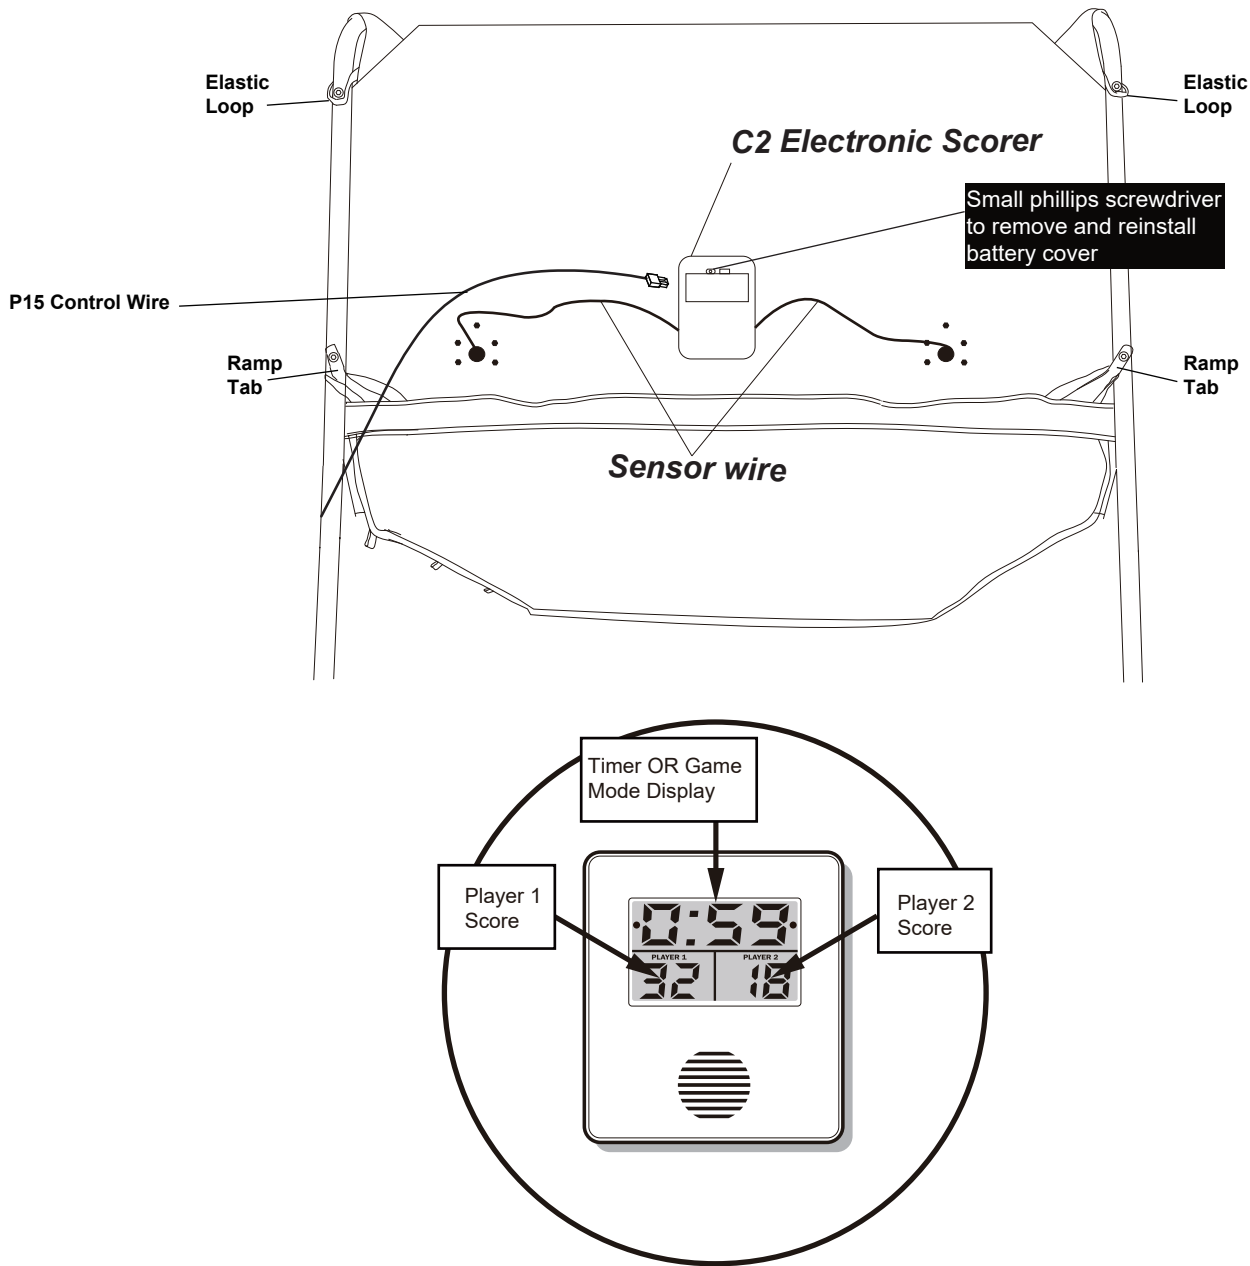

HOW TO PLAY

1. Press the ON/OFF button; the display will show G 1.
2. Press the SELECT/ SOUND ON/OFF button to change game modes, from G 1 to G 8.
3. To switch between game modes after the game is turned on, press the SELECT/SOUND ON OFF button.
4. Once the game mode is selected, for example G 1, press the ON/OFF/START button to begin play.
5. To turn the sound off, press and hold the SELECT/SOUND ON OFF button for approximately 3 seconds. To turn the sound back on, repeat.

GAME RULES

G1: Single Player, One Hoop

- . Player must score only on the AWAY hoop.
- . 2 points are counted for every shot made on the Home hoop only.
- . Unlimited time , Maximum score:100

G2: Single Player, Any Hoop

- . Player must score on HOME or AWAY hoop.
- . 2 points are counted for every shot made on either hoop.
- . Unlimited time , Maximum score:100

G3: Single Player, Alternating Hoop

- . Player must score on alternating hoops. For example: score on AWAY, score on HOME, score on AWAY, score on HOME, etc.
- . 2 points are counted for every shot made on the correct hoop.
- . Unlimited time , Maximum score:100

G4: Two Player, Count Up

- . Each player must score on their own hoop - HOME or AWAY.
- . 2 points are counted for every shot made.
- . Time is preset to one minute.
- . The winner is the player who scores the most points in one minute on their own hoop.

G5: Two Player, Count Down

- . Each player must score on their own hoop - HOME or AWAY.
- . Each player starts with 20 points and 2 points are deducted for every shot made in their own hoop.
- . There is no time limit.
- . The winner is the player who gets to zero, or scores 10 shots, first.

G6: Two Player, Match Play

- . There are 20 games in a match. Each game lasts for 5 seconds.
- . Each player must score on their own hoop - HOME or AWAY.
- . The player that scores first on their own hoop during each 5 second game receives 2 points.
- . Only one score is counted for each 5 second game.
- . The winner is the player with the most points at the end of the 20 game match.

G7: Two Player, Pro-Match Play

- . There are 12 games in a match. Each game lasts for 5 seconds.
- . Each player must score on their own hoop - HOME or AWAY.
- . In games 1-3 and 7-9, the player that scores first on their own hoop receives 2 points. Only one score is counted per game.
- . In games 4-6 and 10-12, the player that scores first on their own hoop receives 3 points. Only one score is counted per game.
- . The winner is the player with the most points at the end of the 12 game match.

G8 : Two Player, Any Hoop, 10 scores in 99 seconds.

- . Time limit is 99 seconds.
- . Maximum score is 10 points.
- . Each player scores 2 points on either the Home or AWAY hoops.
- . Player 1 plays until either 10 points have been scored or 99 seconds have elapsed, then Player 2 starts their game.
- . The player to have scored 10 points in the quickest time is the winner

Important Safety Notes: Please Read

1. To fold the basketball game into the storage position, loosen the Telescoping Tubes P5.
2. Carefully lift the Front Horizontal Ramp U Tube P6 and fold the Support Tube P10 and Support U Tube P11 until the game is in the storage position as shown in **FIGURE 15**.
3. Tighten the Telescoping Tubes P5 in order to safely hold the basketball system in the upright position.
4. Loosen telescoping tubes to fold down into playing position when you want to play the game .
5. Retighten the telescoping tubes while the basketball game is in the playing position in order to maintain correct rigidity of the frame structure during play.

WARNING:
Two Adults Needed


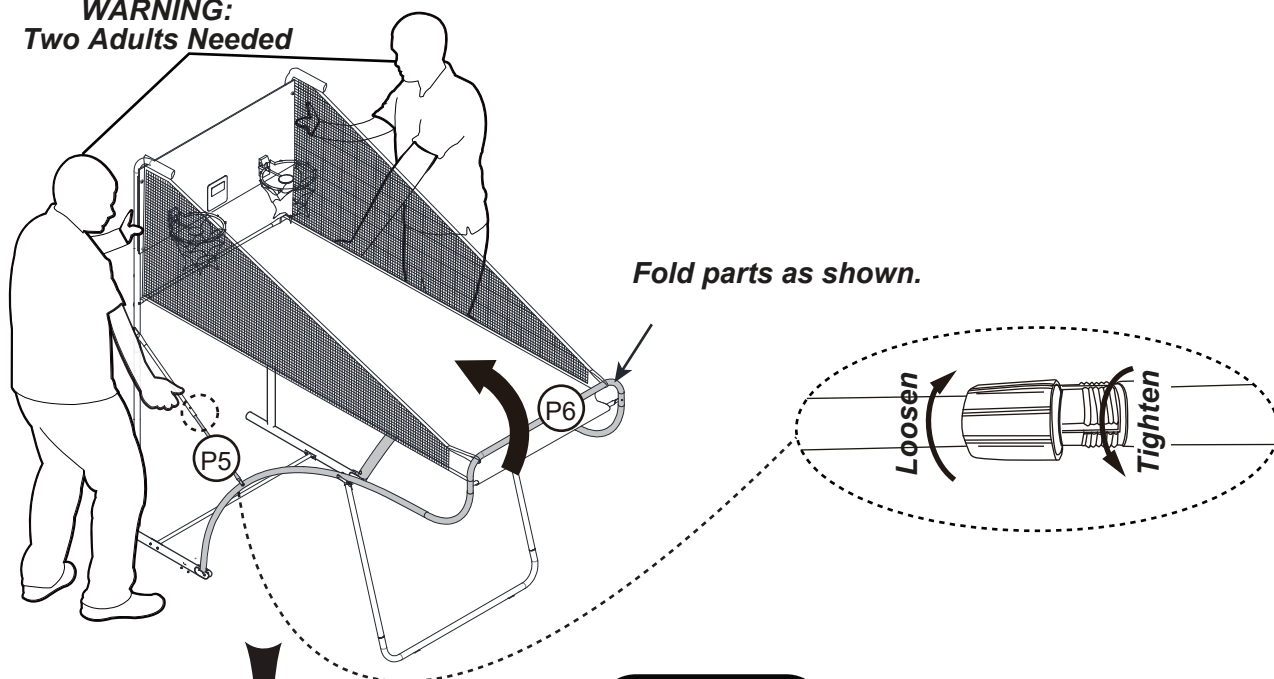 


FIGURE 15

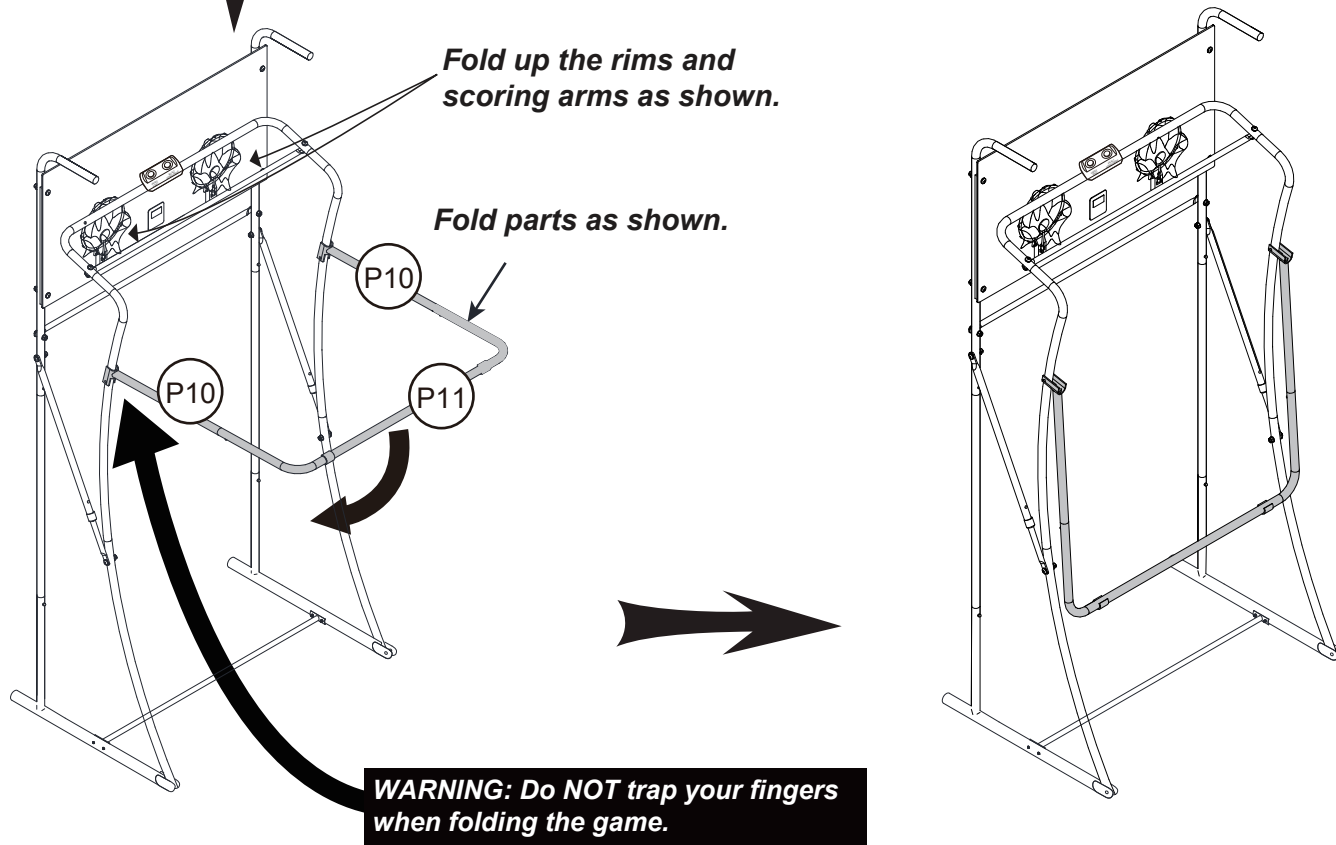 

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE” !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking , weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Congratulations! You have now assembled your Double Shootout.
Please note the Care and Use instructions below.

CARE AND USE OF YOUR SHOOTOUT

1. Product can be used in the dry **OUTDOORS** - but must be stored **INDOORS**.
2. **DO NOT** sit, climb or lean on the unit.
3. **DO NOT** drag the unit when moving it, This will damage the legs.
4. **DO NOT** place backside of this product against wall as during play, the backside of product could become damaged or your wall could become damaged.

PRODUCT PARTS LIST

45-6291

KEY	PARTS	DESCRIPTIONS	QTY
H1	45-6291JLH1	M6 x 34 mm Allen Head Bolt	4
H2	45-6291JLH2	M6 x 30 mm Allen Head Bolt	8
H3	45-6291JLH3	M6 x 28 mm Allen Head Bolt	10
H4	45-6291JLH4	M6 Flat Washer	44
H5	45-6291JLH5	M6 Nut	22
H6	45-6291JLH6	M6 Plastic Bushing	4
H7	45-6291JLH7	Wing Nut	1
T1	45-6291JLT1	Wrench	1
T2	45-6291JLT2	Allen Wrench	1
P1	45-6291JLP1	Board L Tube Top	2
P2	45-6291JLP2	Board Tube	2
P3	45-6291JLP3	Base Tube	2
P4	45-6291JLP4	Base Connect Tube	2
P5	45-6291JLP5	Telescoping Tube	2
P6	45-6291JLP6	Ramp U Tube	1
P7	45-6291JLP7	Lower Frame Curved Tube	2
P8	45-6291JLP8	Upper Frame Curved Tube	2
P9	45-6291JLP9	Ramp L Tube	2
P10	45-6291JLP10	Support Tube	2
P11	45-6291JLP11	Support U Tube	1
P12	45-6291JLP12	Ramp Tube	1
P13	45-6291JLP13	Backboard with Rims, Nets, Scoring Arms and Electronic Scorer attached	1
P14	45-6291JLP14	Ramp Chute	1
P15	45-6291JLP15	Control Box	1
A1	45-6291JLA1	Basketball	4
A2	45-6291JLA2	Air Pump with Needle	1
C1	45-6291JLC1	Plastic Rim with Mechanical Scoring Arm (Pre-Installed)	2
C2	45-6291JLC2	Electronic Scorer (Pre-Installed)	1
C3	45-6291JLC3	Net (Pre-Installed)	2
K1	45-6291JLK1	Hardware Kit	1
M1	45-6291JLM1	Owner's Manual	1

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.