



9' AZURE LED SHUFFLEBOARD TABLE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: **M01710W/F**

Date Code: **2 - M01710W/F-** - **HL**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least four capable adults are required to assemble this product.

NOTICE :

READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO CAPABLE ADULTS ARE REQUIRED TO ASSEMBLE THIS GAME TABLE.

⚠ CAUTION :

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION :

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

Pat. US 12691372

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Battery model: CR2032
- e) Battery quantity: 8 PCS
- f) Battery voltage: 3.0V
- g) Non- rechargeable batteries are not to be recharged.
- h) Do not force discharge, recharge, disassemble, heat above (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- i) Ensure the batteries are installed correctly according to polarity (+ and -).
- j) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- k) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- l) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

First Time Battery Installation:

Locate battery compartment for this product .

Use batteries for maximum performance .

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking , weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

 
Allen Wrench (Included)
Furniture Polish and Soft Cloth
Carpenters Level
Phillips Screw Driver

ASSEMBLY TIPS


Make sure you understand the following tips before you begin to assemble your game table.

1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

HARDWARE IDENTIFIER (To Scale)

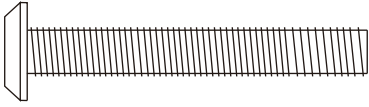

H1 - 6 mm x 45 mm
Allen Head Bolt
(12 pcs)

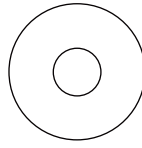

H2 - 6.5 mm x 18 mm
Flat Washer
(20 pcs)



 
H3 - M6 Lock Washer
(20 pcs)



H4 - 3.5 mm x 45 mm
Phillips Round
Head Screw
(8 pcs)




H5 - 6 mm x 30 mm
Allen Head Bolt
(8 pcs)



T1- M4 Allen Wrench
(1 pc)

(Not to Scale)


PARTS IDENTIFIER (Not to Scale)

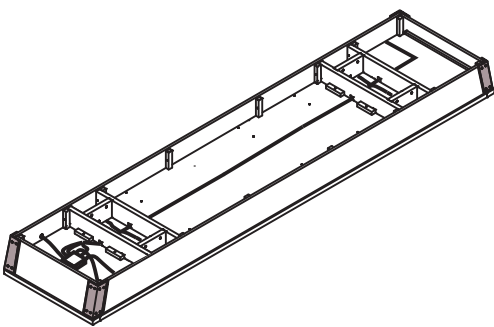


P1 - Main Cabinet
(1 pc)



 
P2 - Left Leg
(2 pcs)




P3 - Right Leg
(2 pcs)

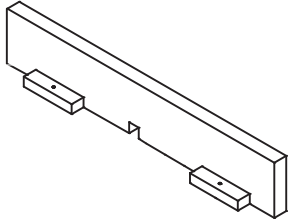

P4 - Under Cabinet
Support Brace
(2 pcs)

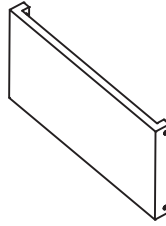


P5 - End Leg Panel
(2 pcs)

 


P6 - Leg Leveler
(4 pcs)


ACCESSORIES IDENTIFIER (Not to Scale)

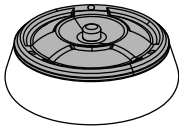


A1 - Red LED Puck
(4 pcs)

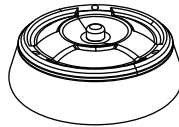

A2 - Blue LED Puck
(4 pcs)

 

A3 - A/C Adapter
(1 pc)

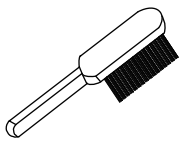

A4 - Playfield Brush
(1 pc)



A5 - Shuffleboard Wax
(1 pc)

PARTS REQUIRED
(For Step 1 & Step 2)


1 pc - **P1** Main Cabinet
2 pcs - **P4** Under Cabinet Support Brace

8 pcs - **H4** Phillips Round Head Screw

STEP 1

Attach the **P4** Under Cabinet Support Braces onto the **P1** Main Cabinet using the Pre-drilled holes with **H4** Phillips Round Head Screws as shown in **FIGURE 1**.

Do not strip out the screws.

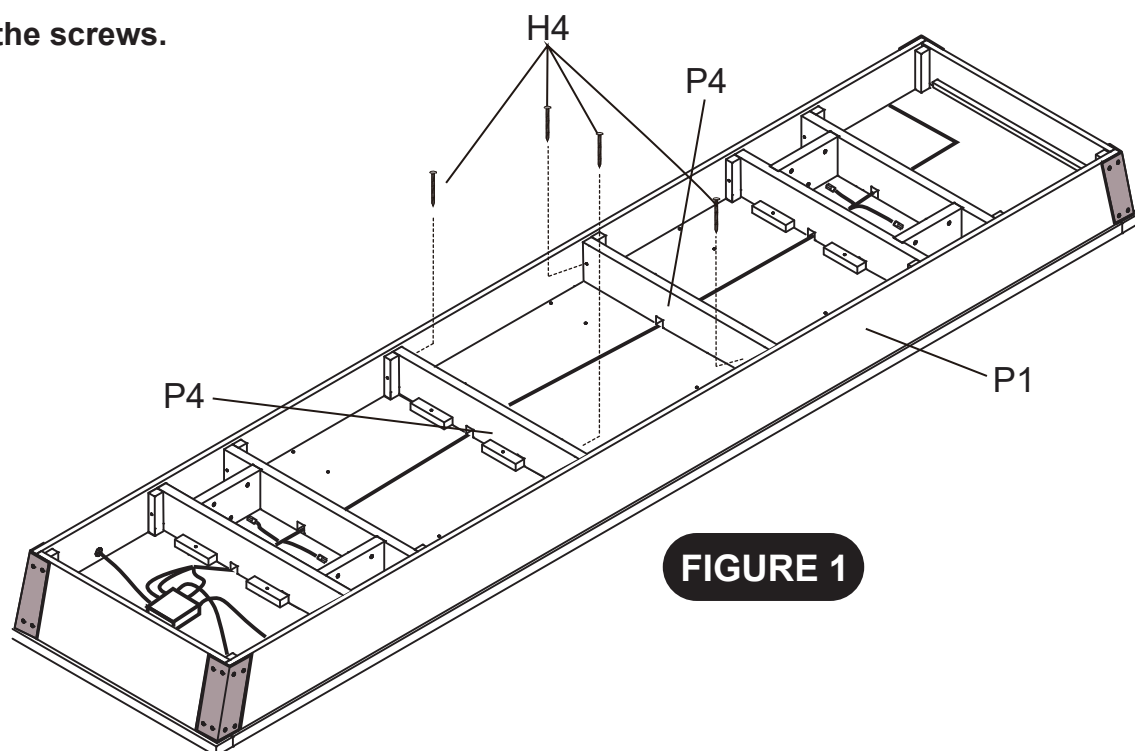


STEP 2

Reinforce the **P4** Under Cabinet Support Braces onto the **P1** Main Cabinet using the Pre-drilled holes with **H4** Phillips Round Head Screws as shown in **FIGURE 2**.

Do not strip out the screws.

NOTICE :

Please note that the wires must be inside the gap.

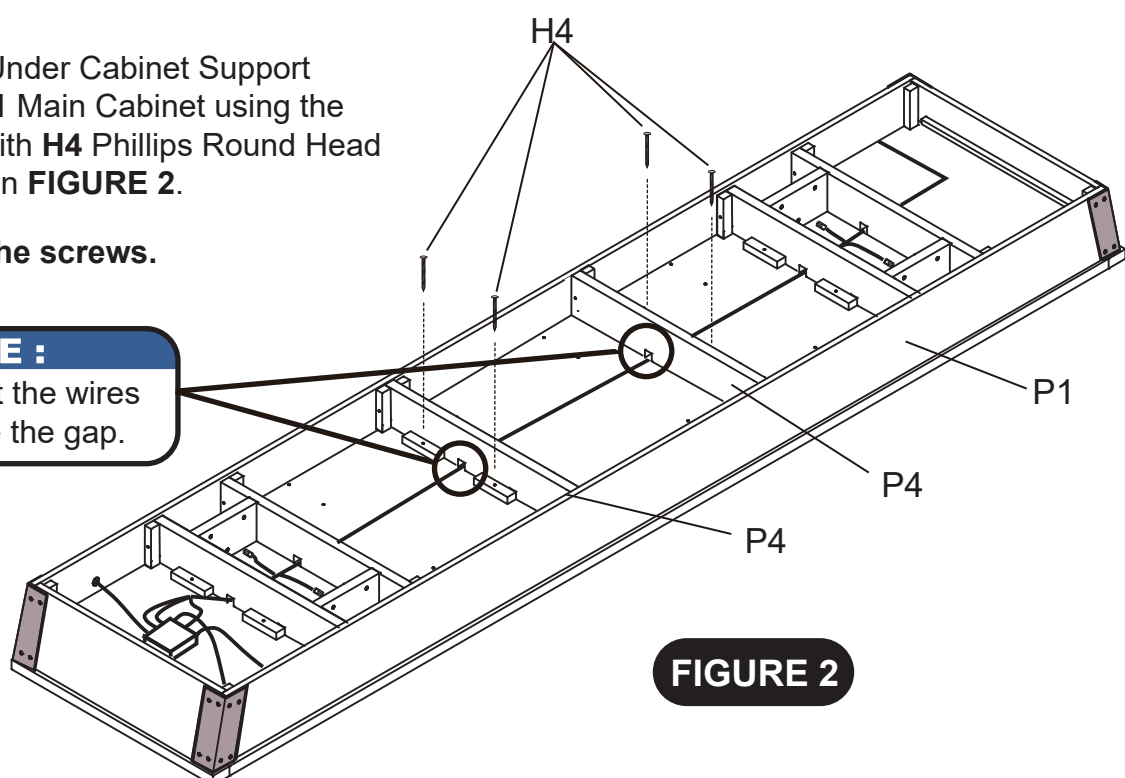

PARTS REQUIRED

2 pcs - **P2** Left Leg
2 pcs - **P3** Right Leg


12 pcs - **H1** Allen Head Bolt
12 pcs - **H2** Flat Washer
12 pcs - **H3** Lock Washer

STEP 3

Firstly, pull the leg wire through the wooden board and connect the Snap Lock & Tab for Snap Lock at this step as shown in **FIGURE 3 & DETAIL B**.


Attach the **P2** Left Leg & **P3** Right Leg onto the **P1** Main Cabinet using the **H1** Allen Head Bolt & **H2** Flat Washer & **H3** Lock Washer as shown in **FIGURE 3 & DETAIL C**.

Do not tighten H1 Bolts on this time.

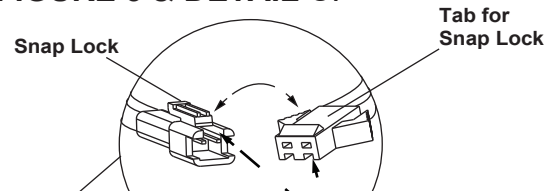

NOTICE :

Make sure slots on plugs are turned correctly for correct installation. **DO NOT FORCE THIS CONNECTION** and a flashlight will be very helpful to study both the male plug and female plug to ensure a correct connection.

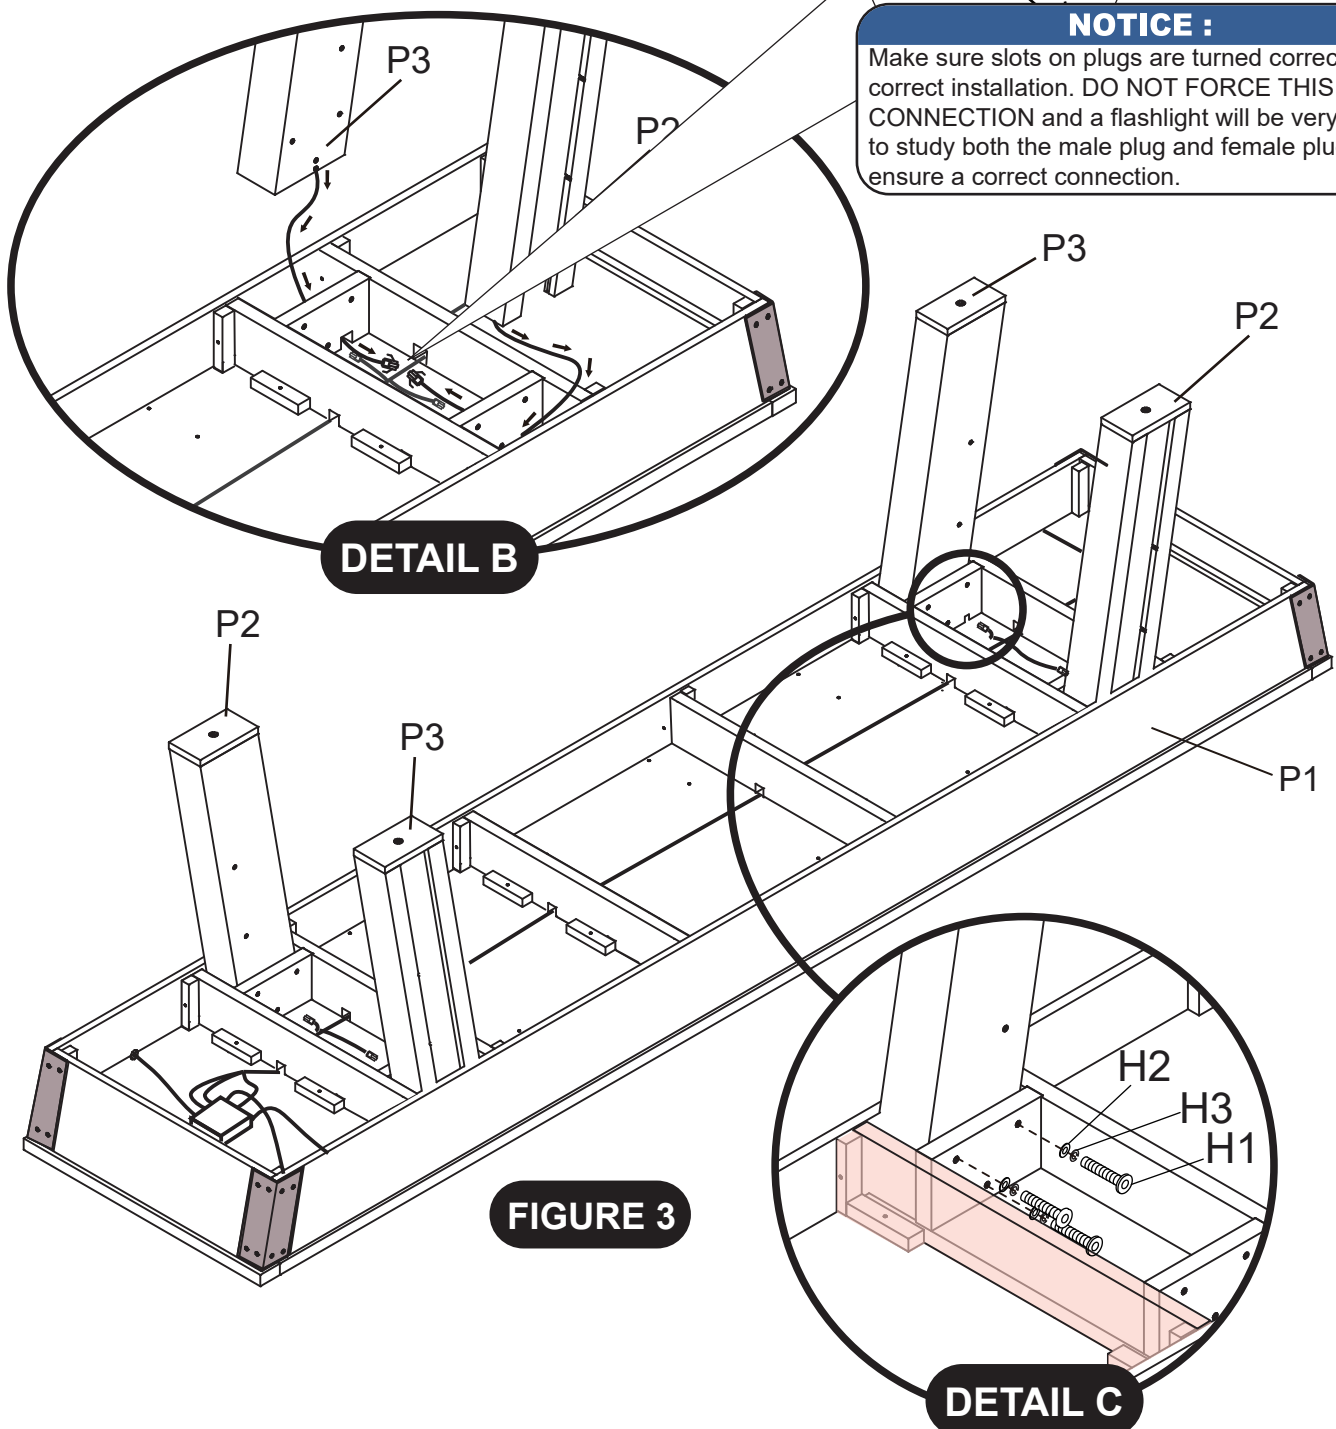

PARTS REQUIRED

2 pcs - **P5** End Leg Panel
4 pcs - **P6** Leg Leveler

8 pcs - **H2** Flat Washer
8 pcs - **H3** Lock Washer
8 pcs - **H5** Allen Head Bolt
1 pc - **T1** M6 Allen Wrench

STEP 4

Attach the **P5** End Leg Panels onto the **Legs** using the **H5** Allen Head Bolt & **H2** Flat Washer & **H3** Lock Washer as shown in **FIGURE 4 & DETAIL D**.

Tighten all H1 Bolts using the T1 Allen Wrench.

Lastly thread the **P6** Leg Levelers as shown in **FIGURE 4**.

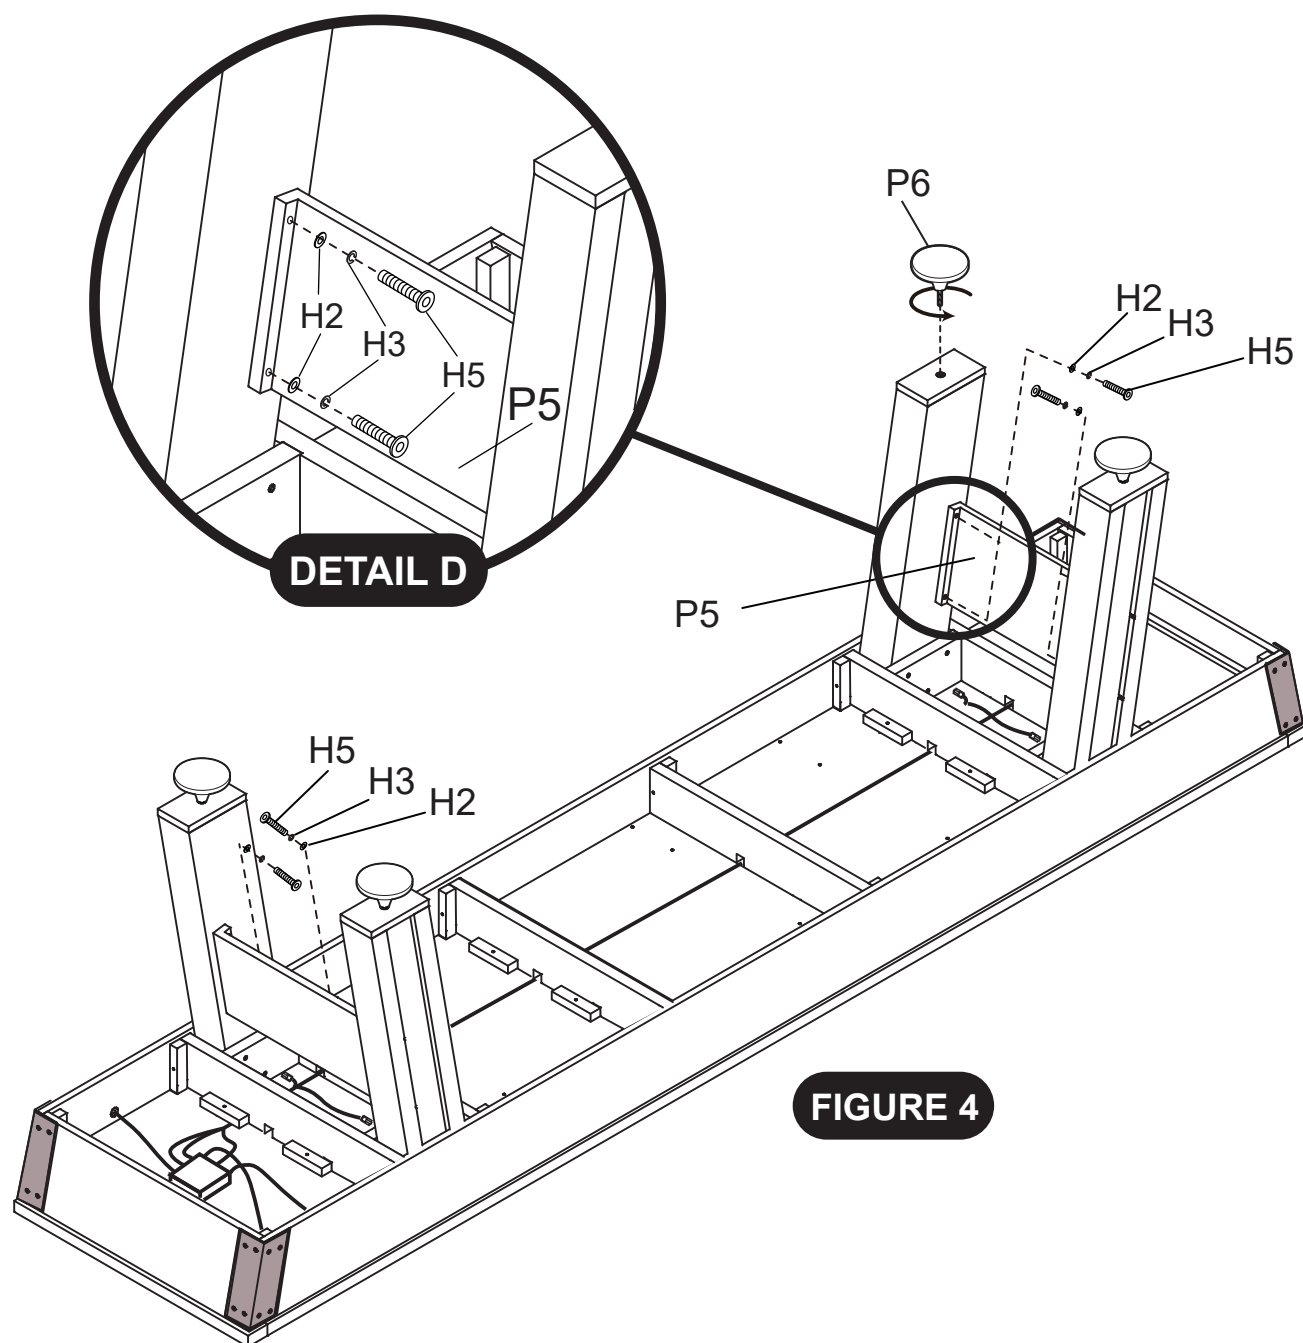


FIGURE 4

LIFT + ROTATE THE TABLE



Always use proper lifting techniques

⚠ CAUTION :

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION :

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

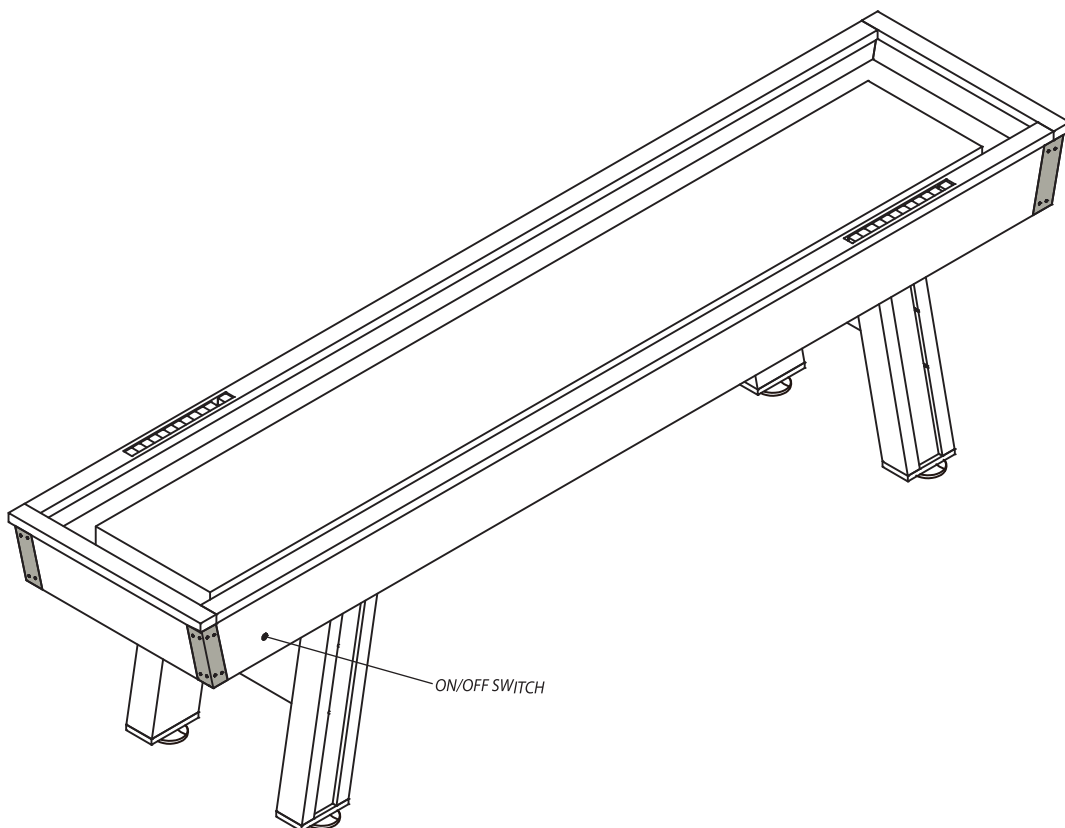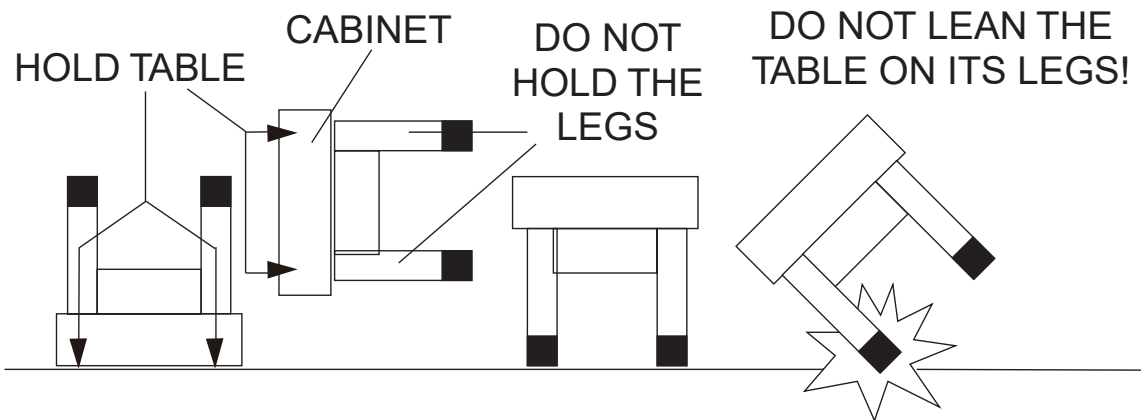


PLAYFIELD LEVELING

Tools Required: A short carpenter's level (approximately 12")
A long carpenter's level (approximately 42" to 48")


Place the table where it will be kept.

Use the levels to determine the lowest area(s) of the playfield.

Slowly screw the leg leveler(s) outward to raise the low part of the playfield until it is level.

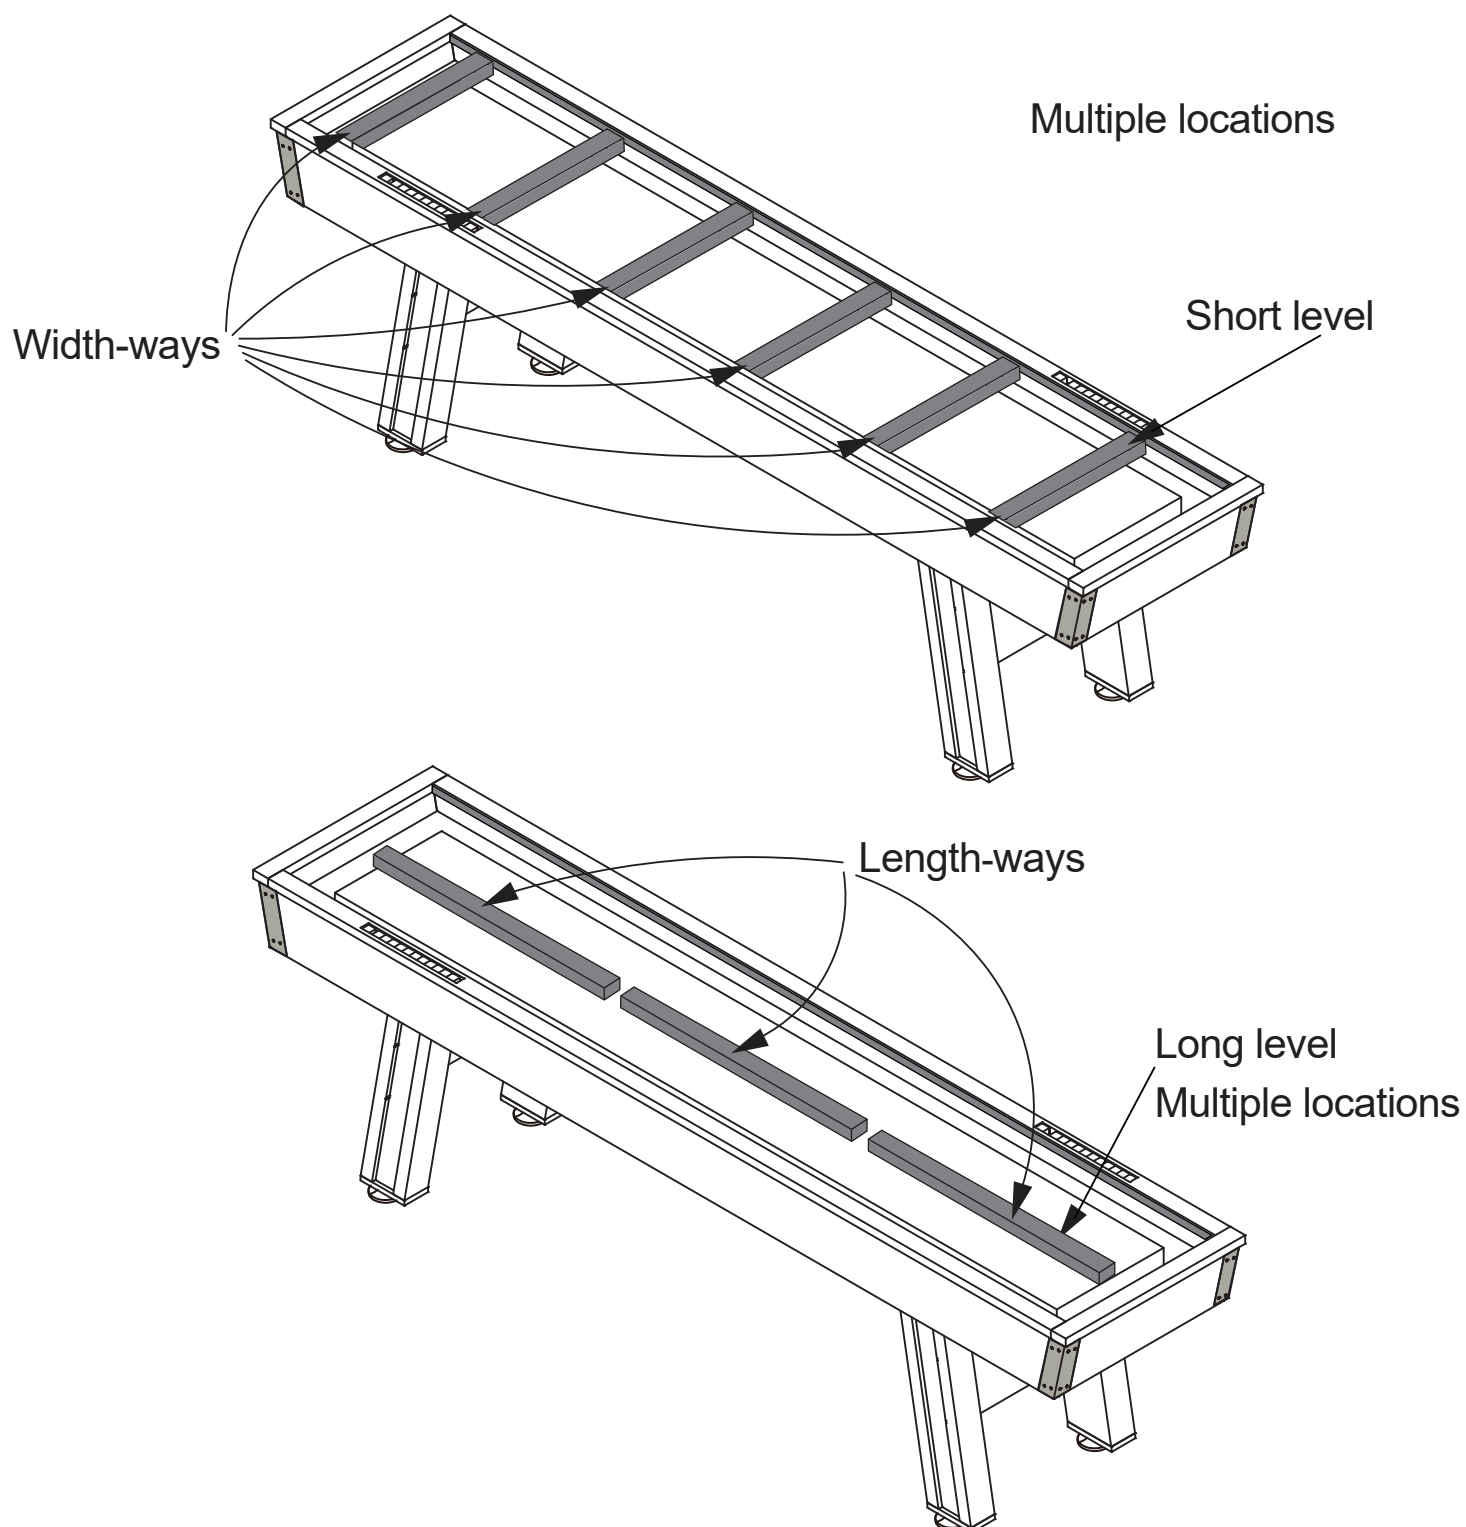

ELECTRONIC CONNECTIONS

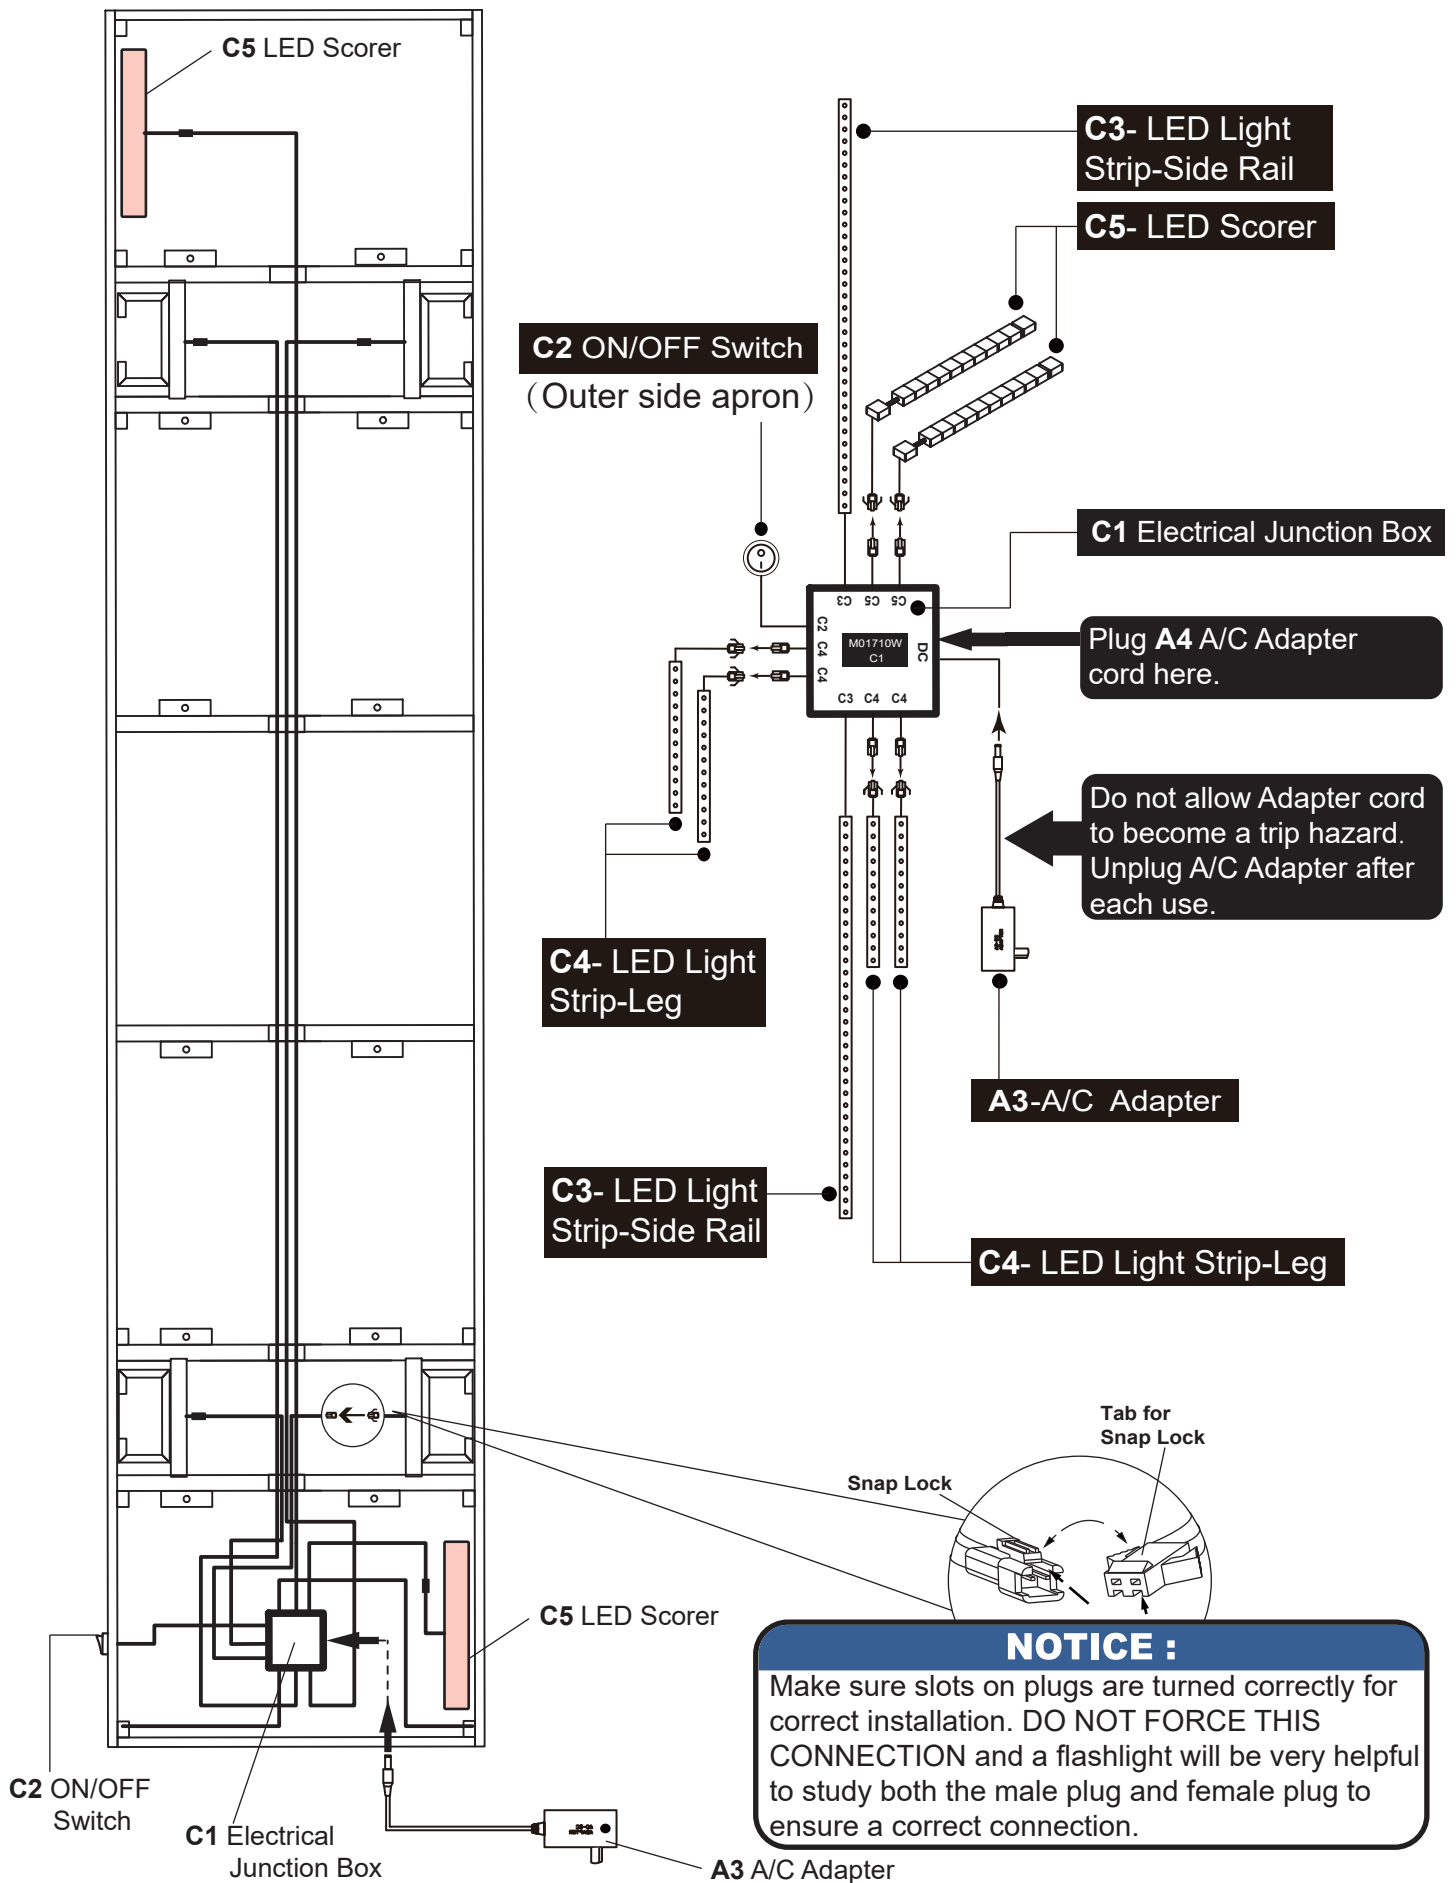

Congratulations! You have now assembled your table. Please note the Care and Use instructions below to insure many years of trouble free use of your game table.

CARE AND USE FOR YOUR TABLE

1. Before first use and frequently there after, **apply furniture polish to shuffleboard playfield** to insure long life of playfield and the most competitive level of play.
2. Always shake shuffleboard wax before applying to table.
3. Apply an adequate amount of shuffleboard wax over the entire length of shuffleboard playfield so puck will always "float" consistently over the entire length of the playfield.
4. Use spray furniture polish to clean all exterior surfaces of your game table.
5. This product is intended for **INDOOR** use only.
6. **DO NOT** sit, climb or lean on the table.
7. **DO NOT** drag the table when moving it. This will damage the legs.
8. **DO NOT** set drinks on the table.
9. **DO NOT** allow A/C Adapter cord to become a trip hazard. Unplug A/C Adapter after each use.

PRODUCT PARTS LIST FOR MODEL # M01710W/F

Key #	Part #	Description	Qty.
H1	M01710HLH1	6 mm x 45 mm Allen Head Bolt	12
H2	M01710HLH2	6.5 mm x 18 mm Flat Washer	20
H3	M01710HLH3	M6 Lock Washer	20
H4	M01710HLH4	3.5 mm x 45 mm Phillips Round Head Screw	8
H5	M01710HLH5	6 mm x 30 mm Allen Head Bolt	8
T1	M01710HLT1	Allen Wrench	1
P1	M01710HLP1	Main Cabinet	1
P2	M01710HLP2	Left Leg	2
P3	M01710HLP3	Right Leg	2
P4	M01710HLP4	Under Cabinet Support Brace	2
P5	M01710HLP5	End Leg Panel	2
P6	M01710HLP6	Leg Leveler	4
A1	M01710HLA1	Red LED Puck	4
A2	M01710HLA2	Blue LED Puck	4
A3	M01710HLA3	A/C Adapter	1
A4	M01710HLA4	Playfield Brush	1
A5	M01710HLA5	Shuffleboard Wax	1
C1	M01710HLC1	Electrical Junction Box	1
C2	M01710HLC2	ON/OFF Switch	1
C3	M01710HLC3	LED Light Strip-Side Rail	2
C4	M01710HLC4	LED Light Strip-Leg	4
C6	M01710HLC6	LED Light Strip-Side Rail Cover	2
C7	M01710HLC7	LED Light Strip-Leg Cover	4
C8	M01710HLC8	LED Beads	20
C9	M01710HLC9	LED Scorer Rail Host	2
K1	M01710HLK1	Hardware Kit	1
M1	M01710HLM1	Instruction Manual	1

SHUFFLEBOARD GAME RULES

Shuffleboards Game Rules - Information on how to play shuffleboard including rules and instructions on how to keep score in the most common shuffleboard games.

Common Shuffleboard Game Rules

Have you ever wondered how to play shuffleboard? Here are the most common shuffleboard rules that generally apply to most games. The rules usually require that you alternately take turns sliding, by hand, all 4 of your weights against the ones from your opponent. Try to make it to the highest scoring area on the shuffleboard without falling off the end of the board into the alley. In order to earn points your weights need to be the farthest down the board. Some of the strategy and fun really comes into play when you knock off your opponents' weights, outdistance them or use your weights to protect your other highest scoring weights.

Usually the most common games are played either to 15 or 21 points. The sections below cover the shuffleboard game rules for the most famous (and fun) shuffleboard games.

Shuffleboard Game Rules Scoring:

EXAMPLE: If a Red Weight is the most distant Weight from the playing end at the completion of a round, Red becomes the winner of the round, and only Red can score. To determine Red's score, total the value of each Red Weight that lies ahead of the leading Blue Weight. Red Weights which are either blocked or which lie behind the leading Blue Weight are not scored. If there are no Blue Weights remaining on the board, all remaining Red Weights are scored.

Knock Off Shuffleboard Rules:

Knock Off shuffleboard is one of the simplest and most common ways to play the game. However, just because the rules are simple to remember does not mean the game is easy to play. Any game of shuffleboard can be improved with patience and strategy, and this one is no different. Learn more about the Knock Off Game Rules.

Horse Collar Shuffleboard Rules:

Need a high scoring affair? Horse Collar shuffleboard is played one-on-one or with teams, and the winner must score 51 points. With a fun betting element for those who can't score and huge shots worth 26 points, Horse Collar is a game that everyone will be wanting to play. Learn more about the Horse Collar Game Rules.

Tap & Draw Shuffleboard Rules:

Unlike Knock Off participants, Tap & Draw players who get to shuffle the first puck have the best advantage. Tap & Draw is played and scored similarly to other versions of the game, but there is one major difference. In Tap & Draw, you can attempt to send your own puck farther up the board by tapping it with another one of your pucks. Learn more about the Tap & Draw Game Rules.

Crazy Eight Shuffleboard Rules:

As far as physically throwing the pucks and keeping score, Crazy Eight presents a version of shuffleboard that is pretty similar to many of the classic games people play. However, Crazy Eight is a fun and challenging version of shuffleboard due to the way that points are actually scored. Learn more about the Crazy Eight Game Rules.

Target Shuffleboard Rules:

Just like darts, archery and rifle, this shuffleboard game gives you the chance to aim and shoot at a target. With hopes of scoring one, two, three or four-points, use your skills to shoot for a target and bring home the winning game. Only the winner scores in each round, so choose your play wisely. Learn more about Target Game Rules.

Replacement of LED Light Strip(s)-Side Rail


STEP ONE :

Should the LED lights not be working in the side rail - Firstly , make sure the A/C Adapter is plugged in to a live A/C outlet properly. Secondly , make sure the A/C Adapter cord (**A3**) is tightly plugged in to its electronic control box under the table . Lastly, make sure all LED Strip light connections are snugly plugged into the Main Electronic Unit (**C1**) . At this point , should the LED Strip Lights still not be working , please disconnect the A/C power to the table before proceeding . **A call will be required to our Customer Service Department to acquire the necessary replacement part(s)** .

STEP TWO :

If the LED Light Strip needs to be replaced on the **P1** Cabinet inner side, **carefully pry the C6 LED Light Strip -Side Rail Cover out of the apron with the help of a flat blade screwdriver as shown in DETAIL A**, then remove the C3 LED Light Strip from the table.

The LED Light Wire Connection will need to be disconnected first, the connection is under the table, please see page 14 .

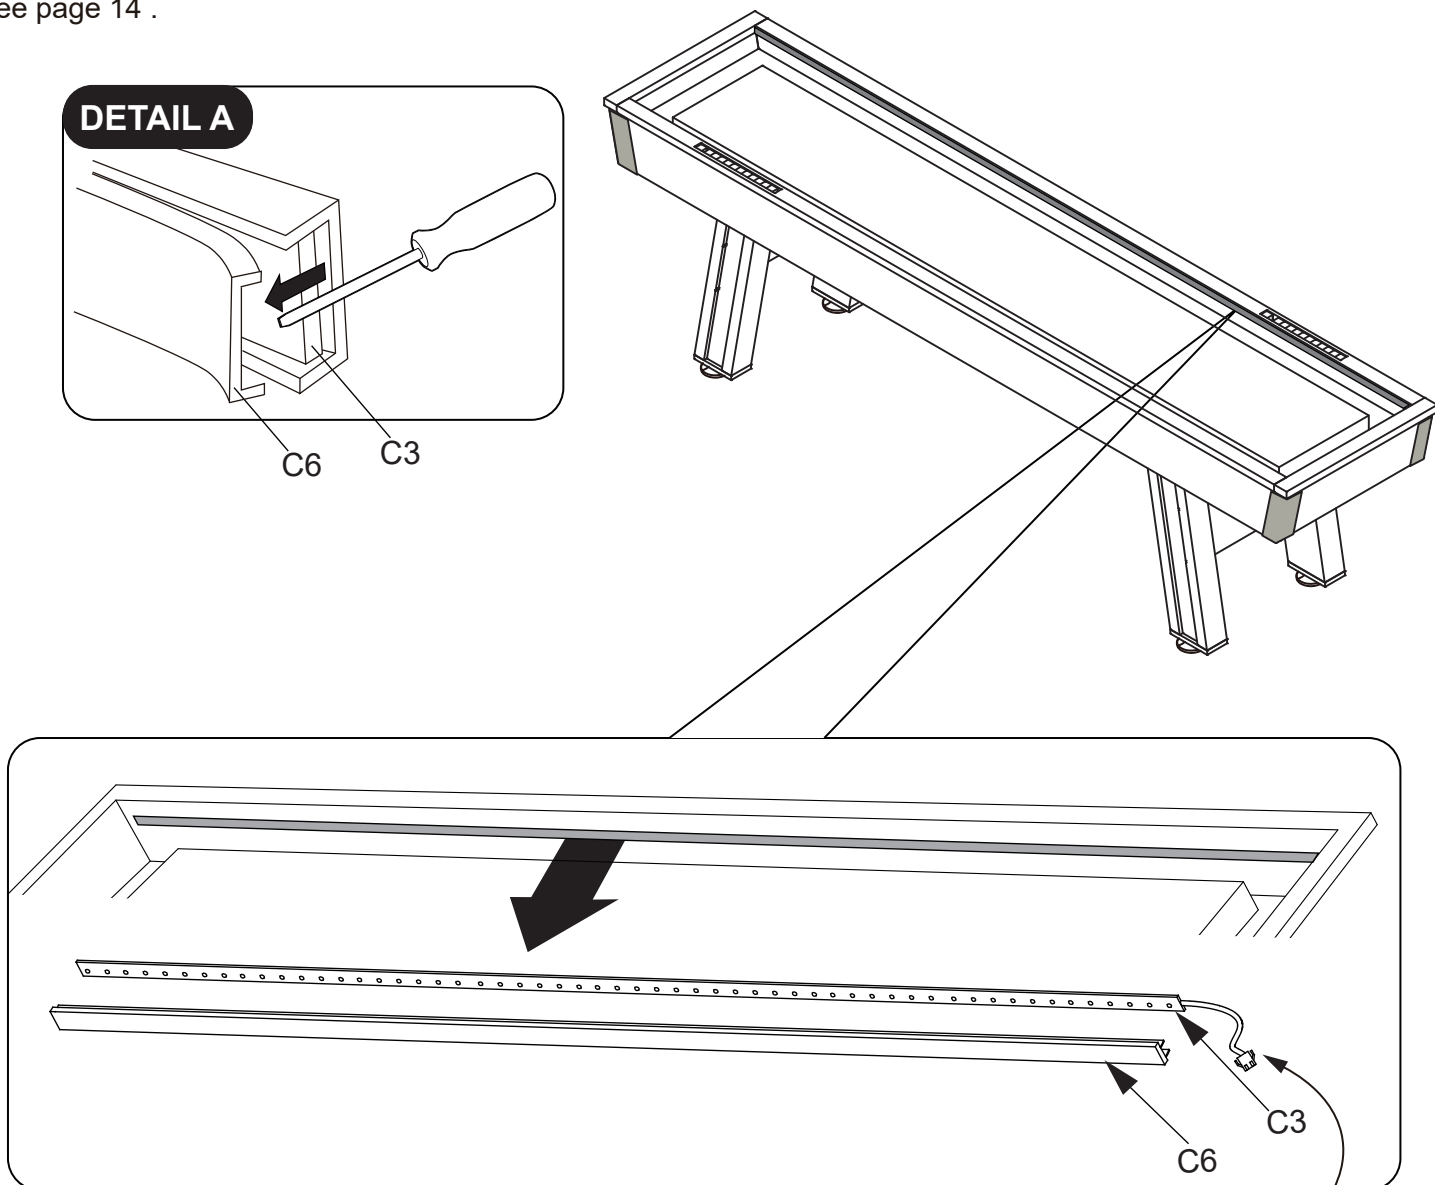

STEP THREE :

See page 14 for disconnect / connect instructions for this electrical connection.

Replacement of LED Light Strip(s)-Leg

STEP ONE :

Should the LED lights not be working in a Leg (s) - Firstly , make sure the wall outlet cord is plugged in to a live A/C outlet properly. Secondly , make sure the ON/Off Switch **(C2)** is in the "ON" position . Thirdly , make sure the A/C Adapter **(A3)** is tightly plugged in to its outlet under the table . Lastly, make sure all **(P2)** & **(P3)** connections are snugly plugged into the Junction Box **(C1)** . At this point , should the LED leg(s) lights still not be working, please disconnect the A/C power to the table before proceeding .

A call will be required to our Customer Service Department to acquire the necessary replacement part(s) .

STEP TWO :

Unplug the connecting wires of LED Light Strip-Side Leg **(C4)** from the Junction Box **(C1)**.

STEP THREE :

Need six strong ADULTS to turn the table over and place the table onto soft carpet or a non- abrasive surface. Gently remove the leg from the table cabinet using a **(T1)** M6 Allen Wrench.

STEP FOUR :

Unscrew the screw of the LED Light Strip-Leg Cover **(C7)** and slide out the Cover **(C7)** from the Leg slot.

STEP FIVE :

Unscrew the screws of the LED Light Strip-Leg **(C4)** and gently pull apart the LED Light Strip-Leg from the connection plug.


STEP SIX :

Install the replacement LED Light Strip-Leg **(C4)** and carefully reattach the LED Light Strip-Leg Cover **(C7)**.

STEP SEVEN :

Reinstall the leg into the table cabinet using a **(T1)** M6 Allen Wrench.

Need six strong ADULTS to turn the table back.

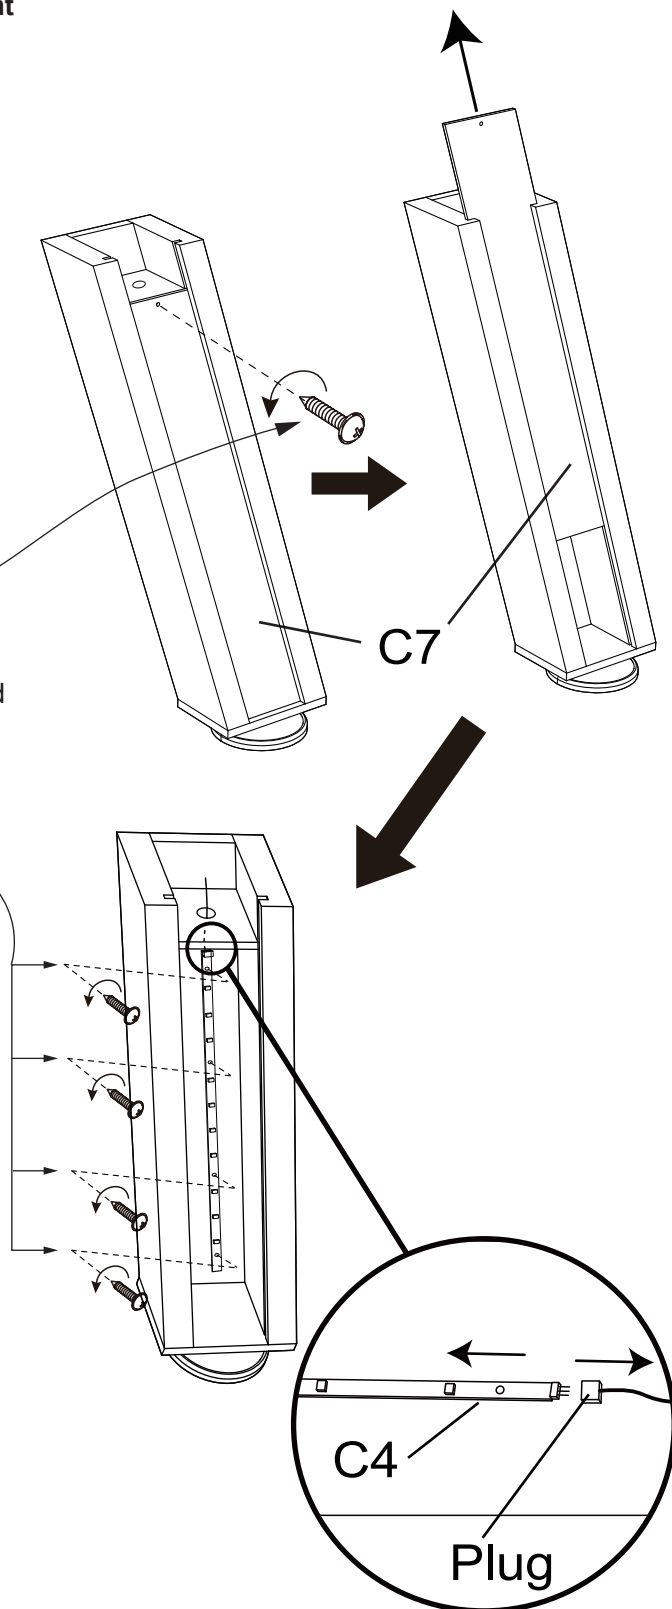

Replacement of LED Scorer(S)

STEP ONE :

Should the LED scorer(s) not be working - Firstly , make sure the wall outlet cord is plugged in to a live A/C outlet properly. Secondly , make sure the ON/Off Switch **(C2)** is in the "ON" position . Thirdly , make sure the A/C Adapter **(A3)** is tightly plugged in to its outlet under the table . Lastly, make sure two (C5) LED scorers connections are snugly plugged into the Junction Box **(C1)**. At this point , should the LED scorer(s) still not be working, please disconnect the A/C power to the table before proceeding.

A call will be required to our Customer Service Department to acquire the necessary replacement part(s).

STEP TWO :

Unscrew the screws from three positions. Sliding the **(C8)** LED Beads will expose the each screw as shown in **FIGURE 1**.

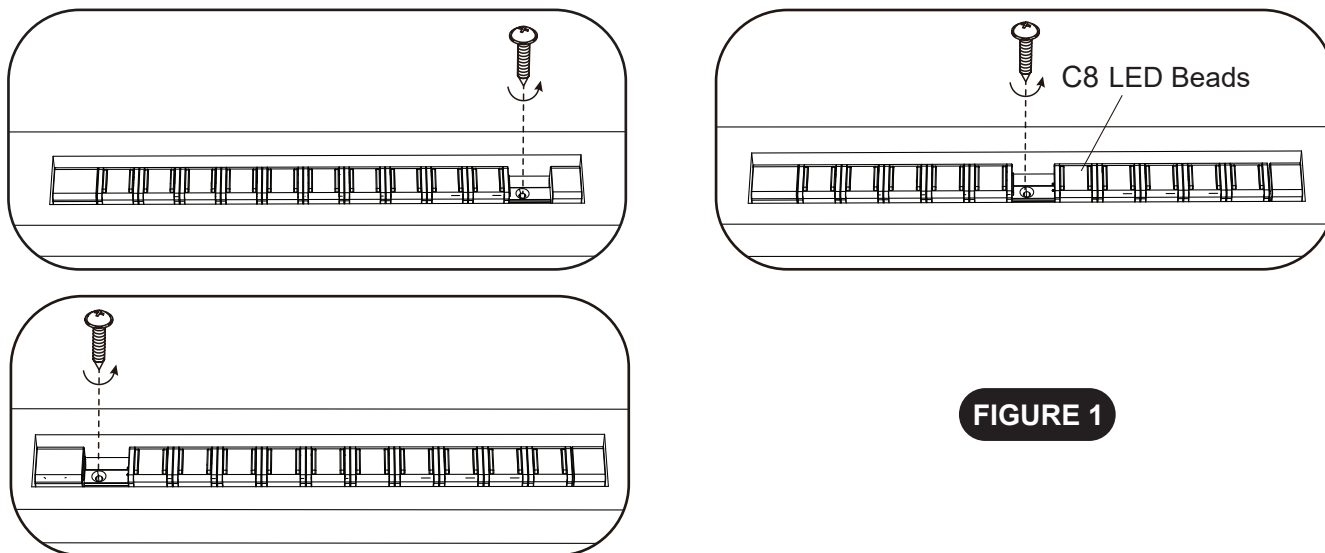


FIGURE 1

STEP THREE :

Make sure whether the **(C9)** LED scorer rail host is damaged or the **(C8)** LED Beads is damaged. Select the corresponding replacement steps below based on the damaged components.

Damage phenomenon

- If some **(C8)** LED Beads are on and some are not, it can be determined that some **(C8)** LED Beads are damaged and need to be replaced.
Please refer to the replacement instructions of **LED Slider damaged** in page 17.
- If all the **(C8)** LED Beans don't light up, it is necessary to consider whether the **(C9)** LED Scorer Rail Host is damaged, and also whether it is the first bead near the+electrode that is damaged as shown in **FIGURE 2**.
The detection method can be found on page 16.

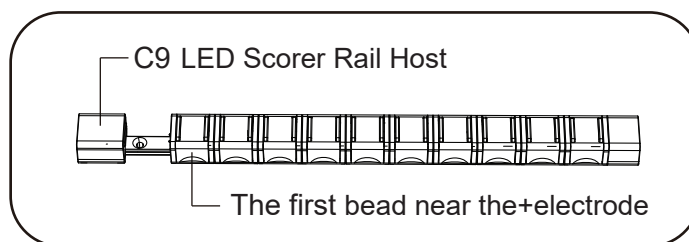


FIGURE 2

Detection method:

STEP One:

Unscrew the two screws that in the end of LED scorer and remove the Fixed Block.

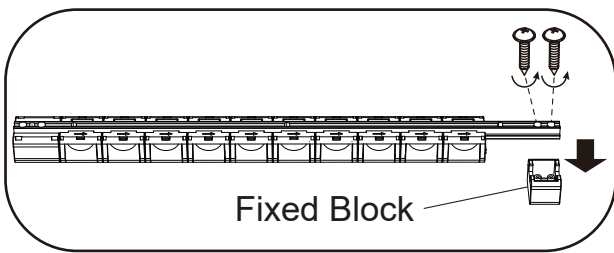


FIGURE 3

STEP Two:

Take out all the (C8) LED Beads from the track.

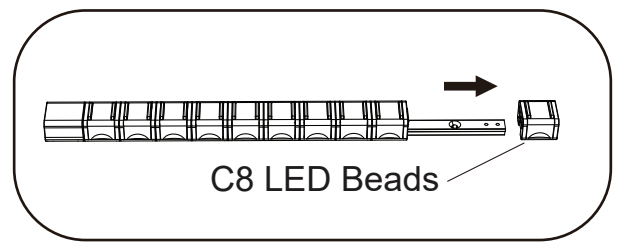


FIGURE 4

STEP Three:

Insert the other (C8) LED Bead (except the first bead near the+electrode) one by one from the gap to reach the LED Rail Host as shown in **FIGURE 5 & DETAIL A**.

If the LED Bead lights up during the testing process, it indicates that the LED is not damaged, it is only LED bead damaged. Please refer to the replacement instructions of **LED Slider damaged** in page 17.

If all LED beads do not light up when they come into contact with the LED rail host alone, it indicates that LED rail host is damaged. Please refer to the replacement instructions of **LED Scorer Rail Host damaged** in page 16.

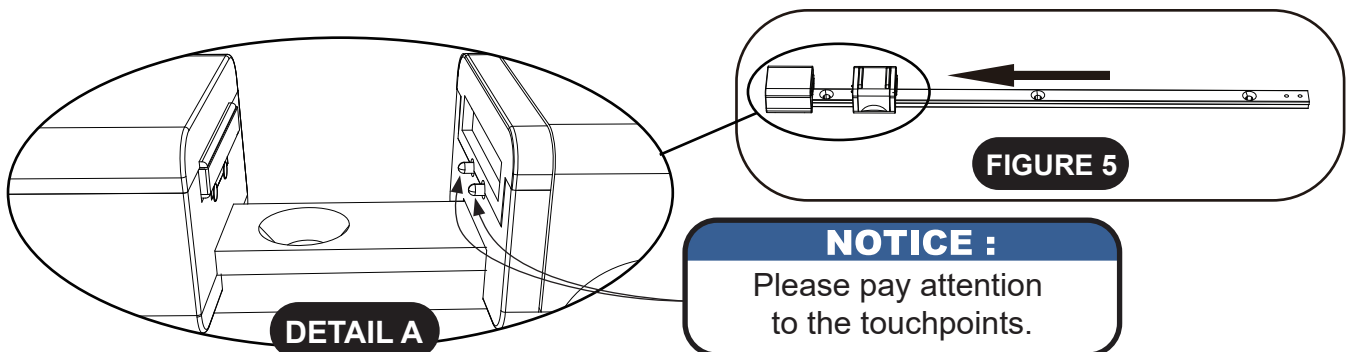


FIGURE 5

DETAIL A

NOTICE :

Please pay attention to the touchpoints.

☉ LED Scorer Rail Host Damaged:

STEP One:

Pull out (C9) LED scorer rail host and wire as shown in **FIGURE 5**. Make sure the connections are unplugged from the Junction Box (C1)

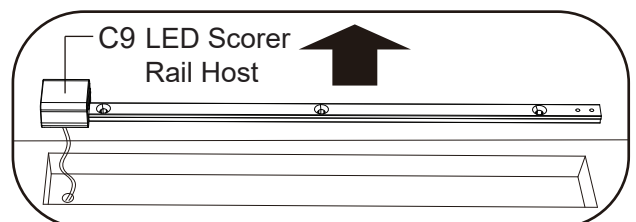


FIGURE 6

STEP Two:

Take out all the (C8) LED Beads from the gap.


STEP Three:

Install the replacement (C9) LED Rail Host and install back all LED beads. Then plug the scorer connection snugly plugged into the Junction Box (C1). At the last, screw the three screws to fix the scorer in top rail.

© LED Slider damaged:


STEP One:

Pull out LED scorer, do not pull out the wire.

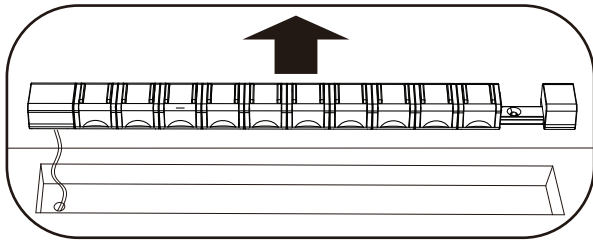


STEP Two:

Unscrew the two screws that in the end of LED scorer and remove the Fixed Block.

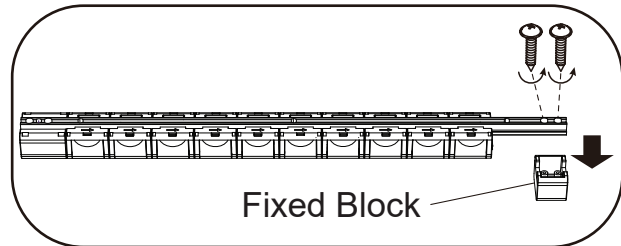

STEP Three:



Take out the damaged (C8) LED Beads from the track.

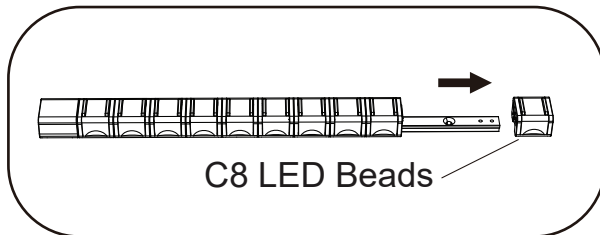

STEP Four:

Remove the damaged LED beads and then install the replacement LED beads.

Pay attention to the positive and negative poles as shown in DETAIL B & DETAIL C.

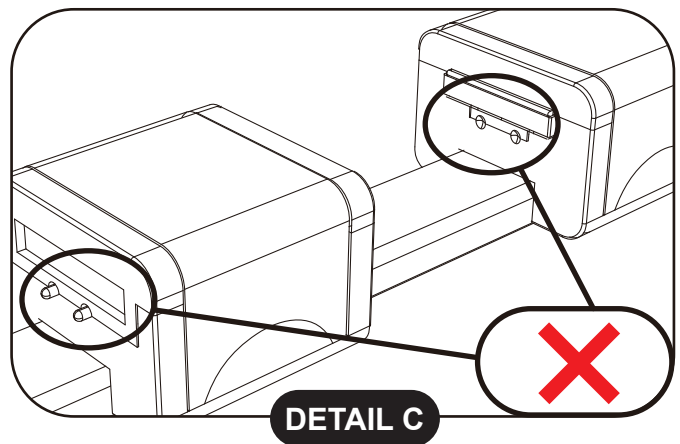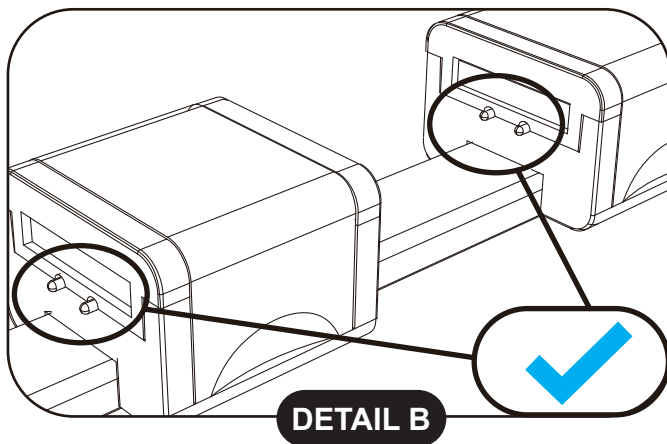

STEP Five:

Then install back the connection bracket using the two screws as shown in **STEP 2**.


At the last, screw the three screws to fix the scorer in top rail.

LED PUCK BUTTON BATTERY REPLACE INSTRUCTION

(Each Puck Include 1 pc Button Battery)


STEP ONE:

Unscrew the two screws and open the transparent cover.

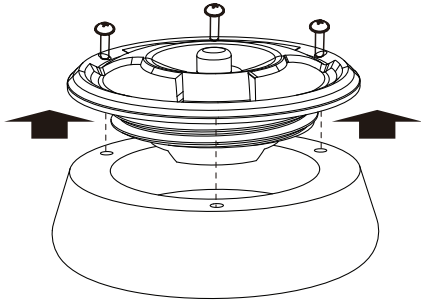


STEP TWO:

Move the sheeting backwards. Pop up the button cell battery.

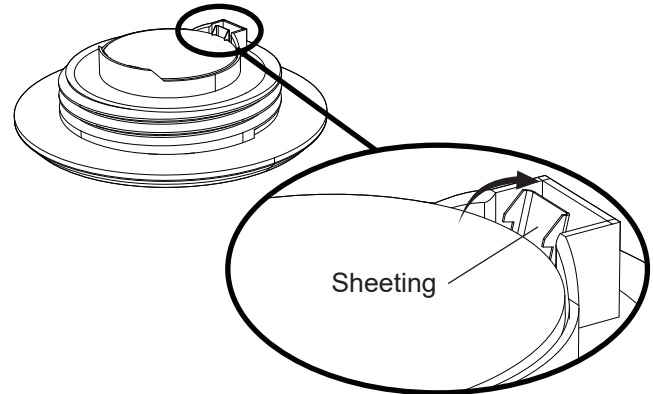


STEP THREE:

Remove the 3V CR2032 button cell battery from the LED puck.

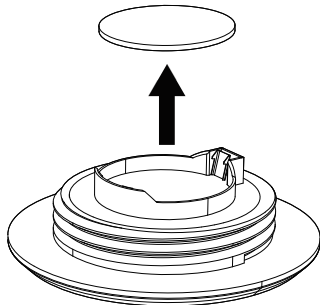


STEP FOUR:

Insert the new 3V CR2032 button cell battery into the LED puck.

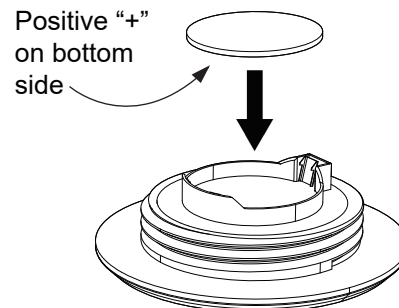

STEP ONE:

Close the transparent cover and install the two screws.

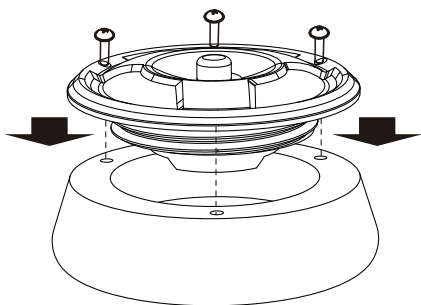

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.