

Item# MH-1027



27" Table Top Air Hockey



If you have any problems with your new product,
DO NOT RETURN IT TO THE STORE!

Please contact us at 1-866-815-4173,
or e-mail us at csr@triumphsportsusa.com



PLEASE KEEP YOUR INSTRUCTIONS!

Your Item number is necessary when you need to contact us. If you have any problems with your new product, **DO NOT RETURN IT TO THE STORE!** Please contact us at 1-866-815-4173, or e-mail us at csr@triumphsportsusa.com

Please read through this instruction book to familiarize yourself with any assembly steps and/or rules.

90-Day TSU Game Warranty

All TSU games have a 90-days from date of purchase warranty. This warrants the retail purchaser for any TSU games purchased to be free from any defects in materials and construction for 90 days from the date of purchase. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranty.

Triumph Sports USA
West Allis, WI 53227
www.triumphsportsusa.com
©2011 Triumph Sports USA. All Rights Reserved.

Be sure to check out all the exciting games  **has to offer.**
Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO

 
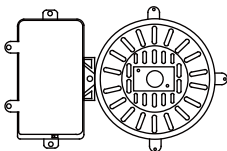 
 


OUTDOOR GAMES



DARTBOARDS

MH1027 PARTS LIST

#1  MAIN FRAME 1 Piece	#2  PUSHER 2 Pieces	#3  ROUND PUCK 2 Pieces	#4  GOAL 2 Pieces
#5 Pre-installed  MOTOR 1 Piece	#6  9mm SCREW 4 Pieces		

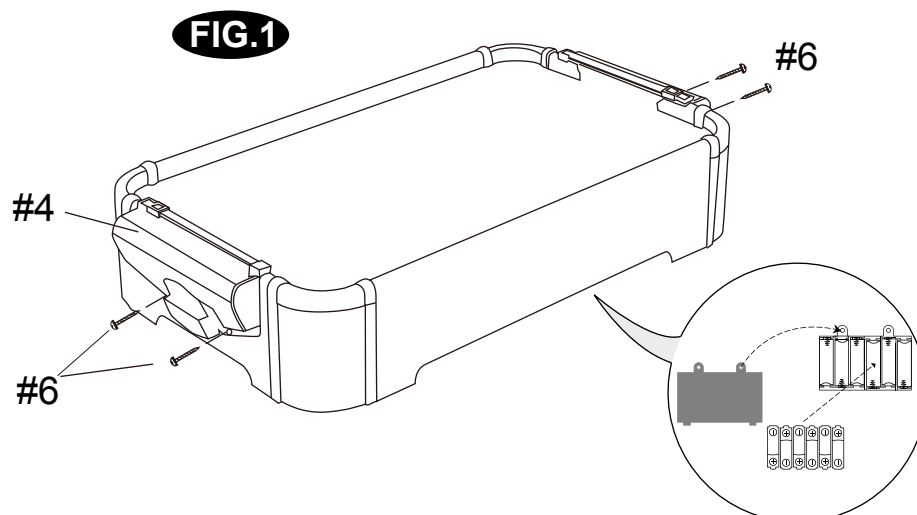 


WARNING:

- 1) Require 6pcs AA Batteries (Not included).
- 2) Do not mix old and new batteries.
- 3) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

Assembly Instructions

1. Open the carton of your new Table Top Hockey near where you will play. Remove all the contents from inside the carton and verify that you have all listed parts as shown on the Parts Identifier.
2. Place the Main Frame (#1) on a clean, flat surface.
3. Attach the Goals (#4) to each end of the table using the Screws (#6) as shown in FIG. 1.
4. Remove the battery cover (underneath the table) and insert 6 AA Batteries (not included) into battery box. Turn it on to start the game.





Article # MH-1027

Table De Hockey Sur Coussin D'air, 69cm



Si vous avez de la difficulté avec votre table de jeu,
NE RETOURNEZ PAS AU MAGASIN !
Veuillez nous contacter au (866) 815-4173
ou par courriel au csr@triumphsportsusa.com



VEUILLEZ CONSERVER CE GUIDE !

Vous aurez besoin du numéro de l'article si vous avez à nous contacter.

Si vous avez de la difficulté avec votre table de jeu, **NE RETOURNEZ PAS AU MAGASIN !**

Veillez nous contacter au (866) 815-4173 ou par courriel au csr@triumphsportsusa.com

Veillez lire ce manuel d'instruction afin de vous familiariser avec les étapes de montage ainsi que les règlements.

TSU garantie de 90 jours

Les jeux TSU sont garantis pour une période de 90 jours de la date originale d'achat. Ils sont garantis contre les défauts de pièces et/ou main d'œuvre pour une période de 90 jours de la date d'achat. Cette garantie ne couvre pas l'usure normale ainsi que les dommages causés par l'utilisation abusive.

Ceci aurait pour conséquence de rendre nulle la garantie TSU.

Triumph Sports USA

West Allis, WI 53227

www.triumphsportsusa.com

©2011 Triumph Sports USA. Tous droits réservés.

Visiter notre site Web au www.triumphsportsusa.com et jeter un coup d'œil sur les jeux qui sont disponibles chez



www.triumphsportsusa.com



BILLARDS



FLÉCHETTES



TABLES DE JEU



CASINO

 
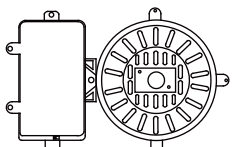 


JEUX POUR L'EXTÉRIEUR



CIBLES

MH1027 LISTE DE PIÈCES

#1  Châssis 1 Pièce	#2  Poussoir 2 Pièces	#3  Rondelle Ronde 2 Pièces	#4  But 2 Pièces
#5 Pré-assemblés  Moteur 1 Pièce	#6  Vis 9mm 4 Pièces	#7	



AVERTISSEMENT

- 1) Requiert 6 piles AA (non incluses).
- 2) Ne mélangez pas des piles neuves avec de vieilles piles.
- 3) Ne mélangez pas des piles alcalines, standard (carbone zinc) ou rechargeables (nickel-cadmium).

Instructions D'assemblage

1. Ouvrir le carton contenant la table de Hockey à air près du lieu d'utilisation. Vider entièrement le carton et vérifier qu'aucune des pièces figurant sur le tableau d'identification ne manque.
2. Placer le châssis (#1) sur une surface propre plane.
3. Fixer le but (#4) à chaque bout de la table à l'aide des vis (#6) comme l'indique le schéma.
4. Retirez le couvercle de piles (sous la table) et insérez 6 piles AA (non fournies) dans le boîtier. Tournez-le pour lancer le jeu.

