



FOOTGOLF

INSTRUCTION MANUAL



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



Not for use by children without adult supervision. This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully.

 
Be sure to check out all the exciting games Escalade Sports has to offer. Visit our web site at:

ESCALADE
SPORTS

ESCALADESPORTS.COM



Bag Toss

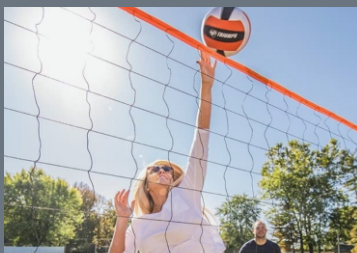

Net Games



Lawn Games

Escalade Sports

Physical Location:

817 Maxwell Ave.
Evansville, IN 47711

Mailing Address: (Correspondence Only)

PO Box 889
Evansville, IN 47706

Parts List

1

Target



Qty. 3

2


Soccer Ball



Qty. 1

3

 
Air Pump

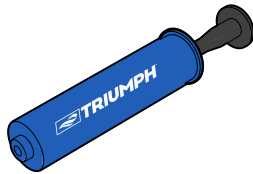

Qty. 1

4

 
Metal Ground Stake

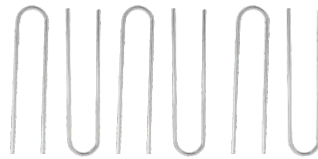

Qty. 6


How To Play- Footgolf

 1. Place the 3 targets in different areas of your yard and determine par for each hole
2. From the “tee box”, kick the ball towards the target.
3. Play the ball where it lies. You are not allowed to move the ball except to mark the spot when the ball may obstruct another player's kick.
4. Player who gets the lowest score wins the match.

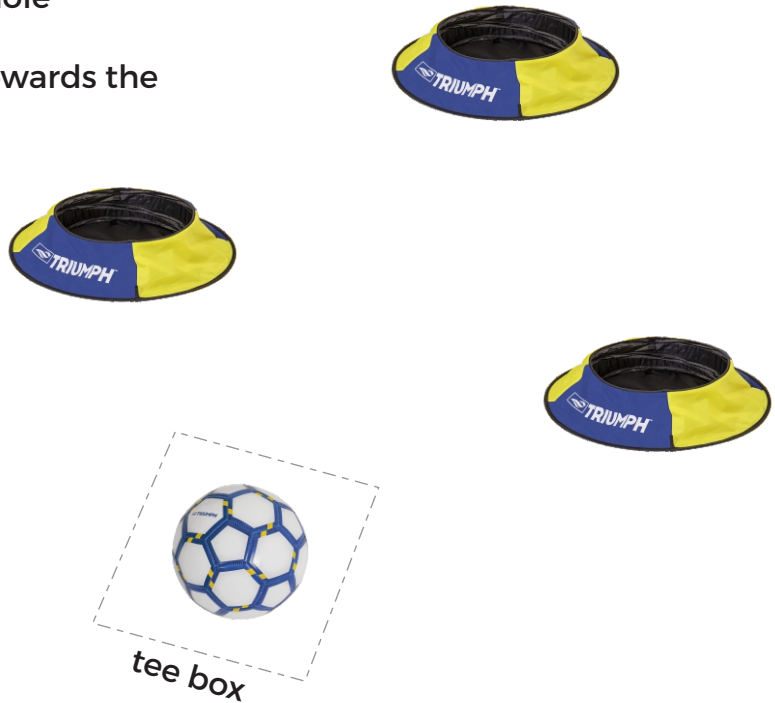


Storage

 NOTE: Targets can become thinner for storage by pushing down the target and velcroing the tabs together. See **Detail A**.

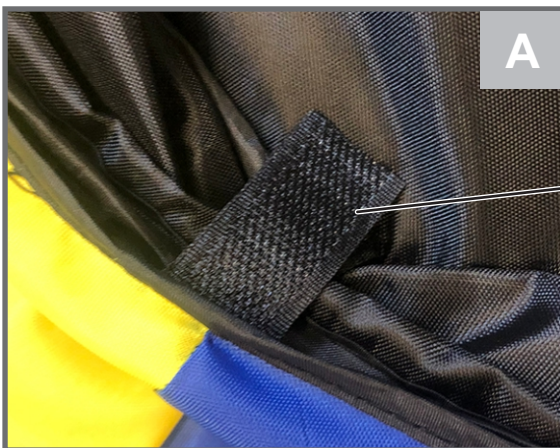

Inflating the Soccer Ball

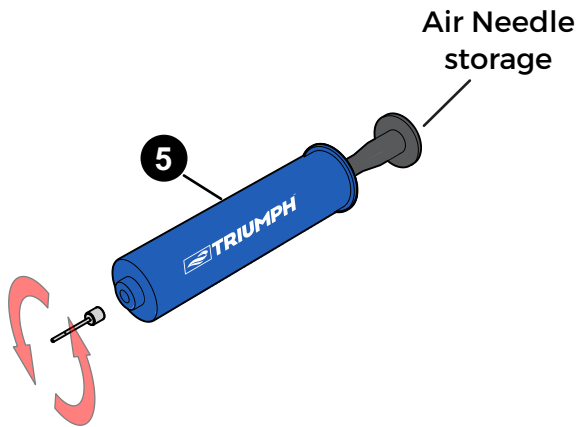 

NOTE: Air Needle is located in the pump handle, take it out and screw to the front of the air pump as shown.

1. Moisten Needle.
2. Insert needle straight into the air valve **on the soccer ball.**
3. Inflate the ball to 5-7psi. Remove needle quickly.
4. Do not OVER INFLATE ball past 9 psi.

