

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

***Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.***

- Always disconnect cord before rotating table.
- Never allow cord to become a trip hazard.
- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- The table is heavy. Two or more people are required for assembly, flipping the table right side up during assembly, and placing the table into it's final location.
- This table shall only be used for its intended purpose.
- This table is designed and intended for indoor use only in a climate controlled environment. Damage to the table can occur if it is exposed to water, dampness, high humidity, freezing temperatures, etc.
- Damaged or worn parts may be dangerous for players as well as the integrity of the table. Replace damaged and or worn parts immediately and do not use the product until these issues have been resolved. Please call the Customer Service number on the front page of the owner assembly manual for parts questions and for any assistance needed for this product.
- Unauthorized repairs or altering the tables design or functions may be dangerous and will void the warranty.
- Periodically, check all screws, bolts, etc. to insure the foosball table is in good working condition and nothing has worked loose over time.
- Please keep the soccer balls and any other small parts out of the reach of children and pets.
- This product is not a toy. Adult supervision is recommended when being used by children.
- Always use care when pushing or pulling the rods so people or objects do not get injured or damaged.

NOTICE

REFER TO [CONTAINER] FOR SAFETY INSTRUCTIONS WHEN USING CLEANING PRODUCTS.

⚠ CAUTION

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ WARNING AVERTISSEMENT	⚠ WARNING AVERTISSEMENT
	
STAY CLEAR! Keep pets, children, and objects clear from underneath the table. May cause personal injury or damage the table. GARDEZ VOS DISTANCES! Tenez les animaux de compagnie, enfants et objets éloignés du dessous de la table. Peut occasionner des blessures corporelles ou endommager la table.	PINCH HAZARD! Keep hands clear when swivel cabinet is in motion. RISQUE DE BLESSURE! Gardez les mains à distance lorsque le cabinet pivotant est en mouvement.

⚠ CAUTION MISE EN GARDE

This Is Not a Toy and Is Intended for Use By or Under the Supervision of Adults.

Il ne s'agit pas d'un jouet. Ce jeu est conçu pour une utilisation par des adultes ou sous la surveillance d'adultes

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

Allen Wrench (Included)
Furniture Polish and Cloth
A Carpenters Level
A Phillips Screw Driver

ASSEMBLY TIPS

Make sure you understand the following tips before you begin to assemble your game table.

 
1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

HARDWARE IDENTIFIER

(To Scale)



H1 = 12 pcs
4 mm x 40 mm
Phillips Flat
Head Screw

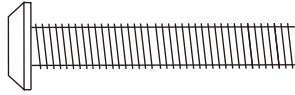

H2 = 8 pcs
6 mm x 35 mm
Allen Head Bolt



H3 = 6 pcs
3.5 mm x 28 mm
Phillips Round
Head Screw



H4 = 4 pcs
3.5 mm x 25 mm
Phillips Round
Head Screw



 
H5 = 8 pcs
3.5 mm x 14 mm
Phillips Flat
Head Screw




H6 = 12 pcs
3 mm x 14 mm
Phillips Round
Head Screw



H7 = 8 pcs
6 mm x 28 mm
Allen Head Bolt

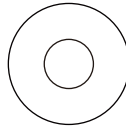

H8 = 16 pcs
6.5 mm x 16 mm
Flat Washer

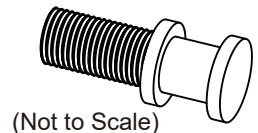 

(Not to Scale)

H9 = 2 pcs
Plastic Pivot Bolt



H10 = 4 pcs
3.5 mm x 12 mm
Phillips Flat
Head Screw



 
H11 = 8 pcs
3.5 mm x 12 mm
Phillips Round
Head Screw



H12 = 16 pcs
4 mm x 40 mm
Phillips Round
Head Screw



H13 = 8 pcs
M6 Lock Washer

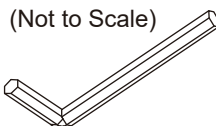


(Not to Scale)


T1 = 1 pc
Allen Wrench

PARTS IDENTIFIER

 (Not to Scale)

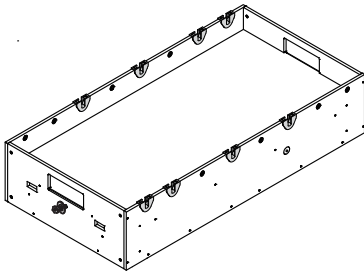


P1 - Main Cabinet
(1 pc)

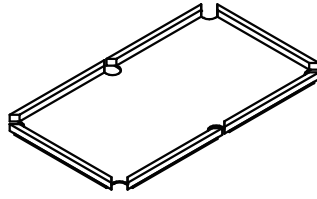 


P2 - Billiard Playfield
(1 pcs)



 
P3 -Right Leg
(2 pcs)




P4 - Left Leg
(2 pcs)

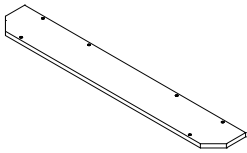 


P5 - Leg End Top Panel
(2 pcs)

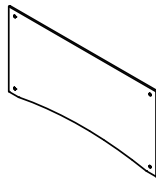 


P6 - End Leg Panel
(2 pcs)

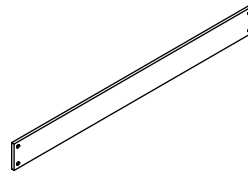 


P7 - Side Leg Panel
(2 pcs)

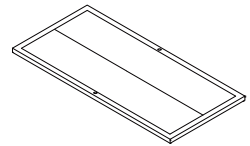 


P8 - Table Tennis Top
(1 pc)

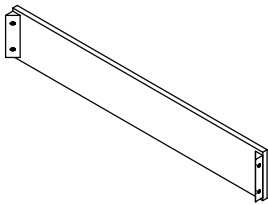 

 P9 - Center Frame Support
with Plastic Brackets attached
(2 pcs)

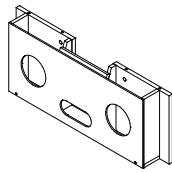

 P10 - Leg Top End Apron
With Latch/Locks installed
(2 pcs)

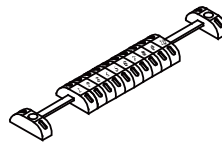

P11 - Manual Scorer
(2 pcs)



 
P12 - Corner Pocket
Shield
For Billiard Playfield
(4 pcs)




P13 - Side Pocket
Shield
For Billiard Playfield
(2 pcs)




P14 - Leg Leveler
(4 pcs)

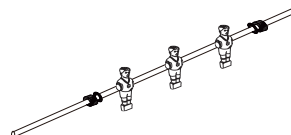

 
P15 - White 3-player
Rod Assembly
with plastic washers, rod end
caps and bumpers attached
(2 pcs)

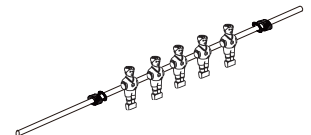

 
P16 - White 5-player
Rod Assembly
with plastic washers, rod end
caps and bumpers attached
(1 pc)

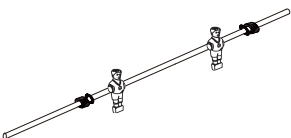

 
P17 - White 2-player
Rod Assembly
with plastic washers, rod end
caps and bumpers attached
(1 pc)

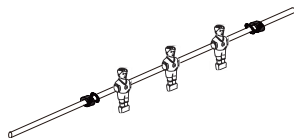

 
P18 - Blue 3-player
Rod Assembly
with plastic washers, rod end
caps and bumpers attached
(2 pcs)

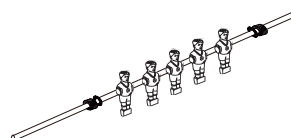

 P19 - Blue 5-player
Rod Assembly
with plastic washers, rod end
caps and bumpers attached
(1 pc)

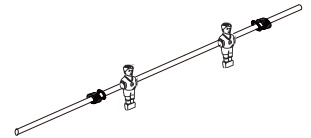

 P20 - Blue-2-player
Rod Assembly
with plastic washers, rod end
caps and bumpers attached
(1 pc)

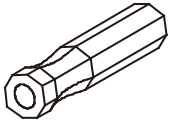

P21 - Rod Handle
(8 pcs)



 
P22 - Entry Cup
(2 pcs)




A1 - Soccer Ball
(2 pcs)



A2 - Hockey Puck
(2 pcs)

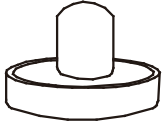

 
A3 - Hockey Pusher
(with A9 felt pad installed)
(2 pcs)

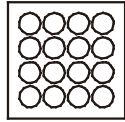


A4 - Billiard Balls
(1 set)



 A5 - Cue Stick
(2 pcs)

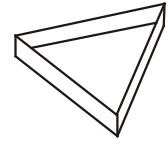


A6 - Triangle
(1 pc)

 


A7 - Cue Chalk
(1 pc)



 A8 - Billiards Playfield
Brush
(1 pc)

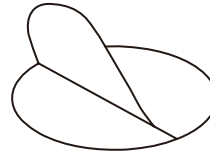

 A9 - Felt Pad
(Factory Installed)
(2 pcs)

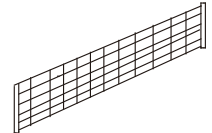


A10 - Table Tennis Net
(1 pc)



A11 - Table Tennis
Ball
(2 pcs)



 A12 - Table Tennis
Paddle
(2 pcs)




A13 - Table Tennis
Net Post
(2 pcs)




A14 - A/C Adapter
(1 pcs)



 A15 - Cue Holder
(2 pcs)

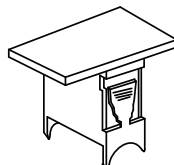

 A16 - Removable Bushing Cap
with Push Lock
(16 pcs)

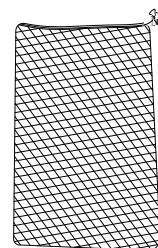

A17- Storage Bag
(1 pc)

PARTS REQUIRED:

1 pc - **P1** Main Cabinet

1 pc - **P2** Billiard Playfield

2 pcs - **H9** Plastic Pivot Bolt

Step 1

 
Please inspect the main cabinet and playing surfaces before putting the game together.

Remove all the contents from inside the carton and verify that you have all listed parts as shown on the part list.

NOTE: Parts are packed inside and under the table cabinet. Remove the billiards playfield **P2** from Main Cabinet. Inside the table cabinet you will find parts needed to assemble your table.

Attach the Plastic Pivot Bolts **H9** to the Plastic Pivot Nuts **C5** to each end of Main Cabinet.

Hand tighten the Plastic Pivot Bolts **H9**.

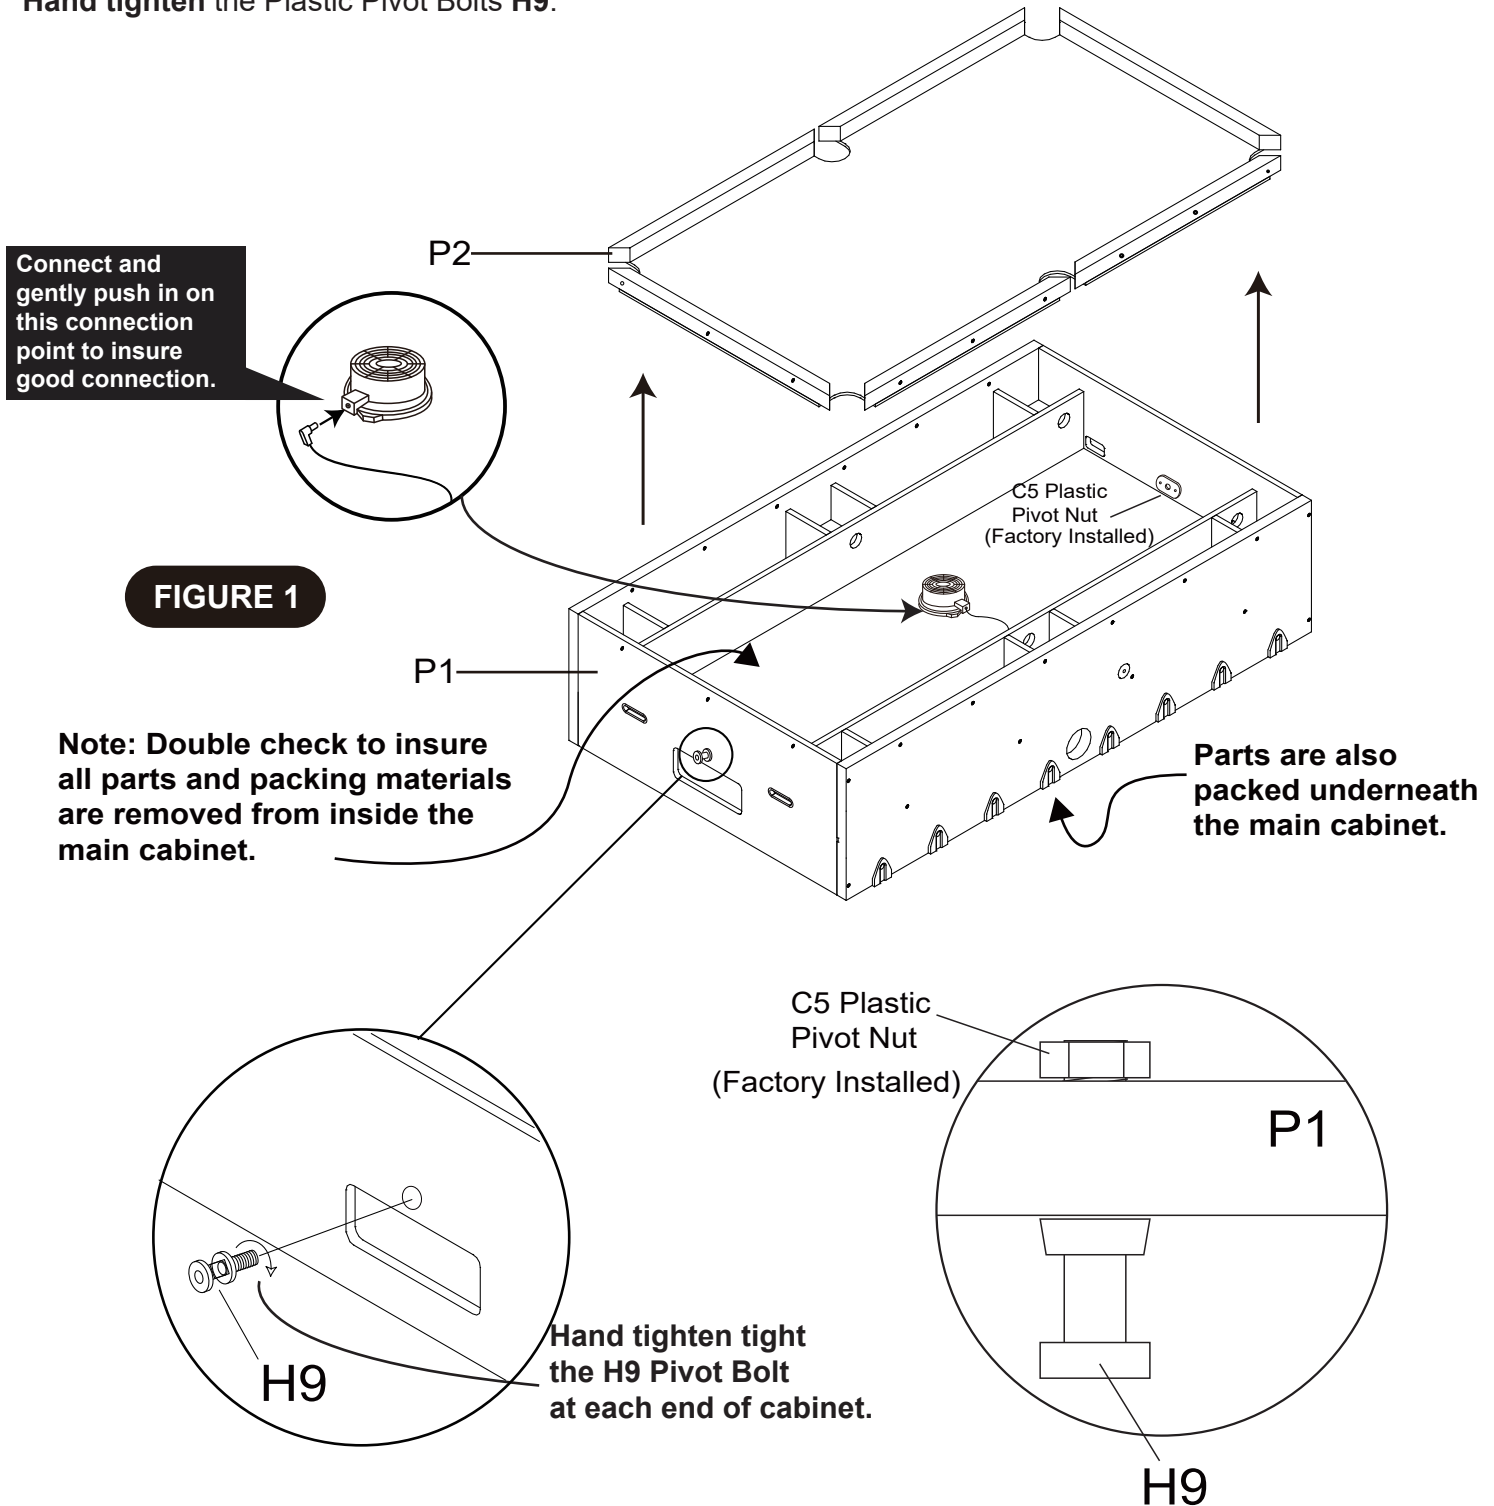


PARTS REQUIRED:

1 pc - **P1** Main Cabinet 1 pc - **P2** Billiard Playfield 2 pcs - **P13** Side Pocket Shield
4 pcs - **P12** Corner Pocket Shield 6 pcs - **H3** 3.5 x 28mm Phillips Round Head Screw
12 pcs - **H12** 4 x 40mm Phillips Round Head Screw
12 pcs - **H6** 3 x 14mm Phillips Round Head Screw

Step 2 Before Starting Step 2, Double Check That All Loose Table Components and Packing Material Are Removed From The Main Table Cabinet.

 When all the parts are out of the Main Table Cabinet **P1**, replace the Billiards Playfield .
Attach the Billiards Playfield **P2** by using screws **H3** and **H12**
Tighten, but do not strip out Screws.

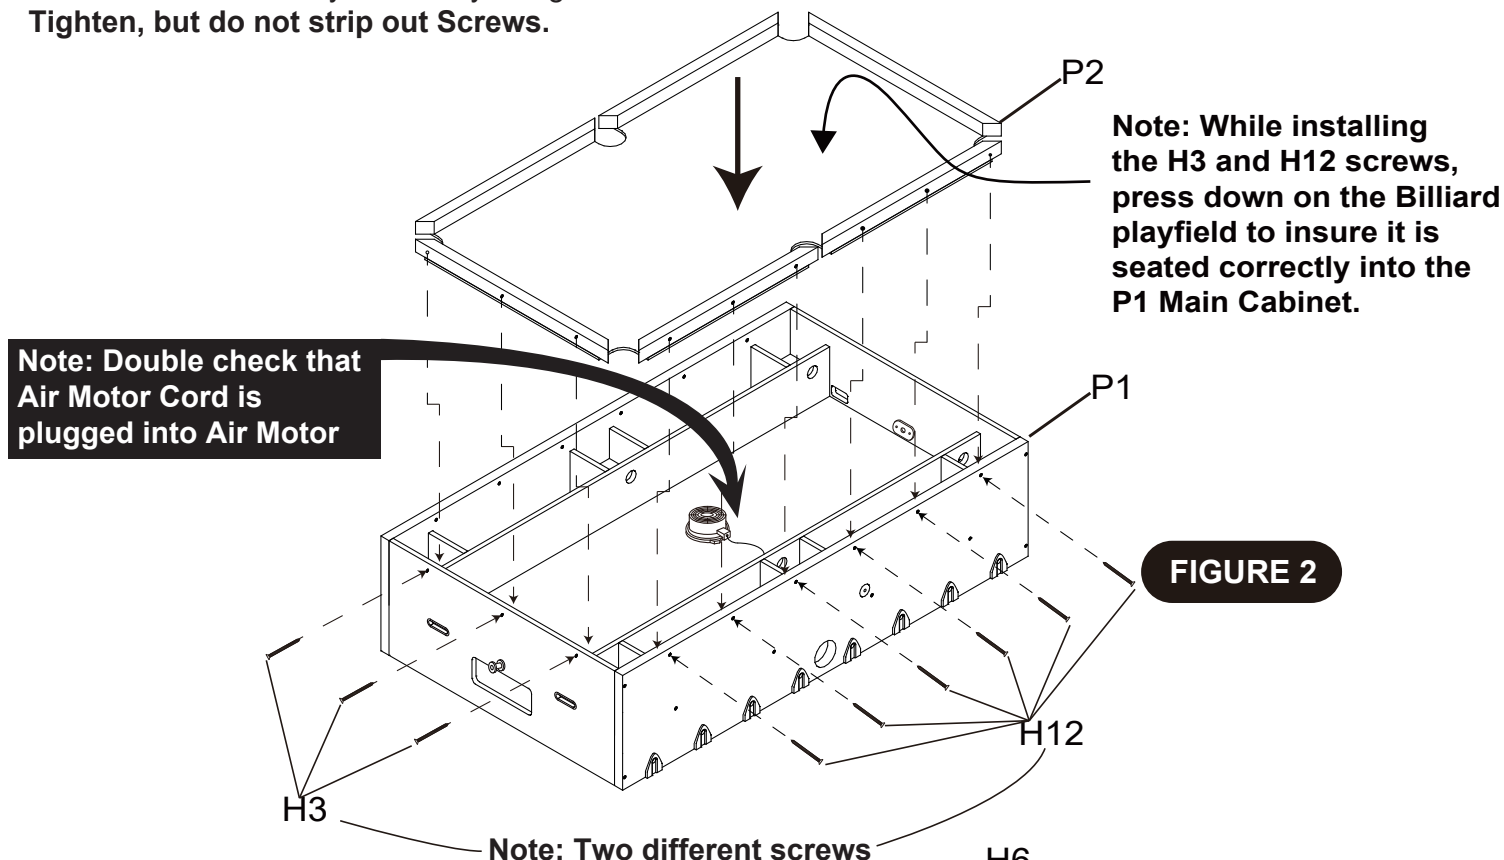


Step 3

Install Corner Pockets Shields **P12**
and Side Pocket Shields **P13** into
the the cabinet pockets using Screws **H6**.

Tighten, but do not strip out Screws H6

**NOTE: Carefully pull and hold each
Pocket Shield tight into the pocket
for correct screw installation.**

 FIGURE 3

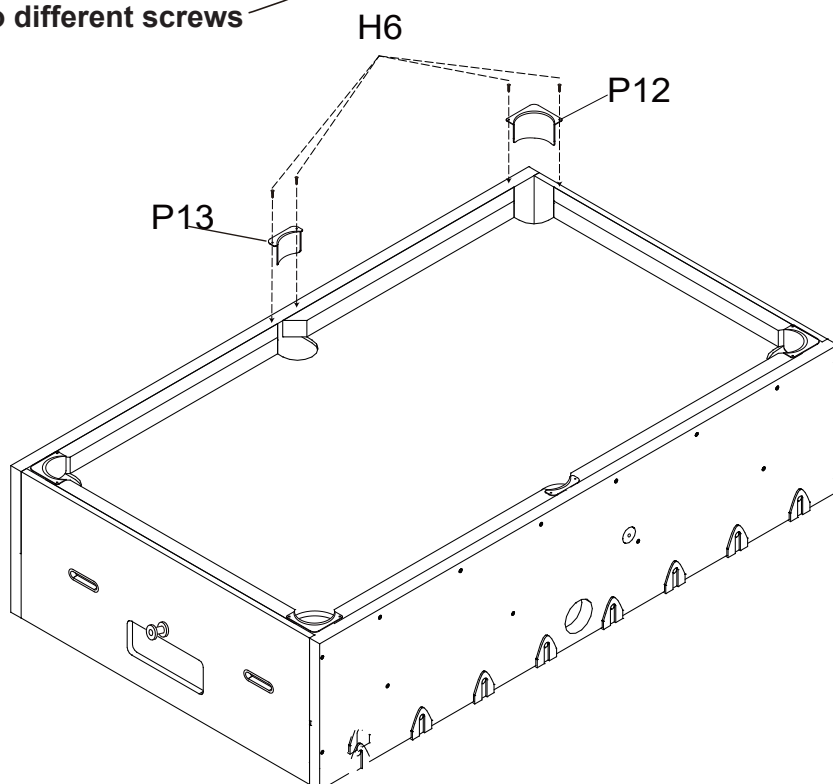

PARTS REQUIRED:


2 pcs - P10 Leg Top End Apron	2 pcs - P4 Left Leg	2 pcs - P3 Right Leg	4 pcs - P14 Leg Leveler
8 pcs - H2 6 x 35mm Allen Head Bolt		8 pcs - H8 6.5 x 16mm Flat Washer	
4 pcs - H12 4 x 40mm Phillips Round Head Screw			

Step 4 (Build 2 Identical Assemblies, One For Each End)

Attach the Right leg **P3** and Left Leg **P4** to the Leg Top End Apron **P10** by inserting Bolts **H2** with washers **H8** into the predrilled holes of the legs and into the Barrel Nuts. Tighten using the **T1** Allen Wrench. Screw the Legs **P3 & P4** to the Leg End Apron **P10** using the Screws **H12**.

Tighten, but do not strip out screws H12.

 Install leg levelers **P14** to the bottom of each Leg **P3 & P4**.

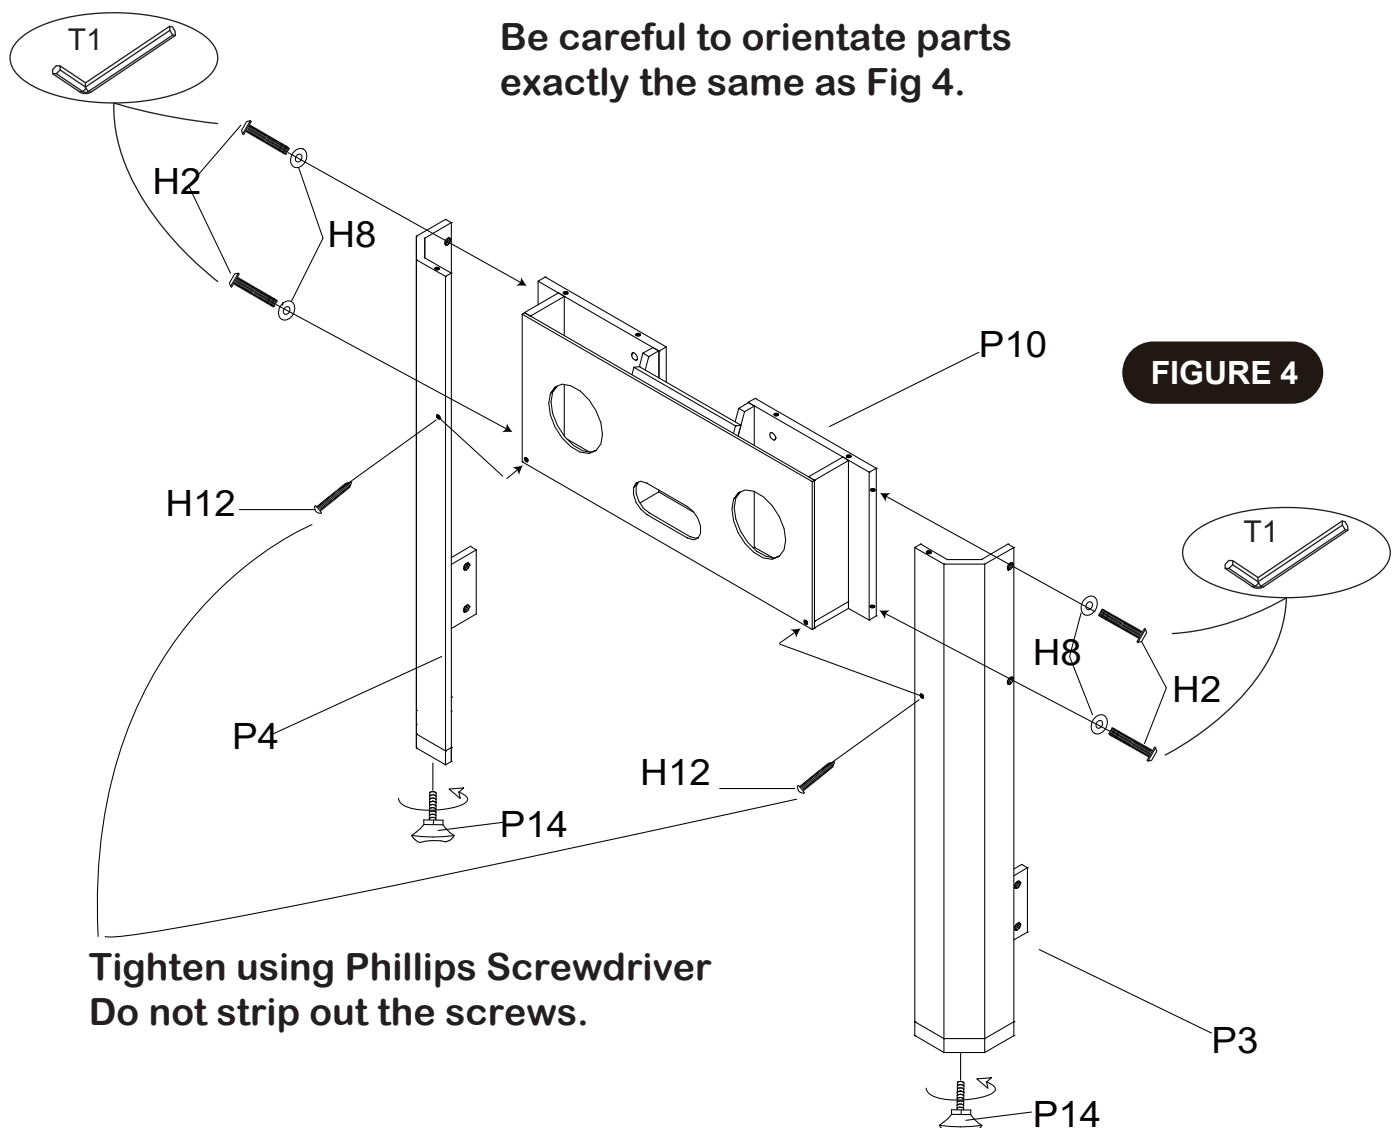

PARTS REQUIRED:


2 pcs - **P6** End Leg Panel 2 pcs - **P7** Side Leg Panel 8 pcs - **H8** Flat Washer
8 pcs - **H5** Phillips Flat Head Screw 8 pcs - **H7** Allen Head Bolt
8 pcs - **H13** Lock Washer

Step 5 (Build 2 Identical Assemblies)

Attach the End Leg Panel **P6** to the assembled leg pedestals using screws **H5** into pilot holes as shown in **FIGURE 5**.

Tighten, but do not strip out screws H5.

 FIGURE 5

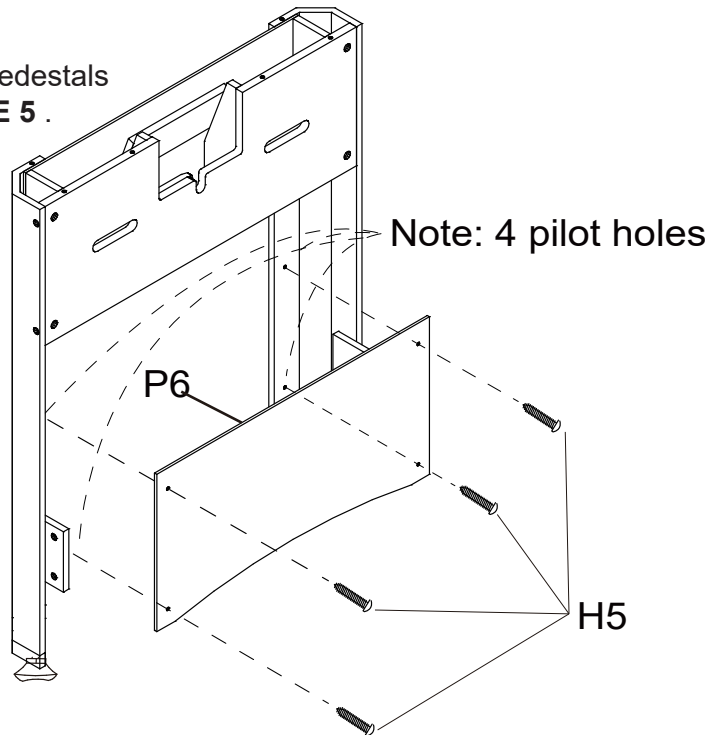


Step 6

With the help of another adult, attach the Side Leg Panels **P7** to the assembled leg pedestals by aligning the holes in the corner braces on the leg pedestal with the predrilled holes in the Side Leg Panel **P7** using bolts **H7**, flat washers **H8** and lock washers **H13** as shown in **FIGURE 6**.

Tighten H7 Bolts using T1 Allen Wrench.

Note: The Pilot Holes for Center Frame Supports installation in STEP 7 should be on the lower side of Side Leg Panels P7

 FIGURE 6

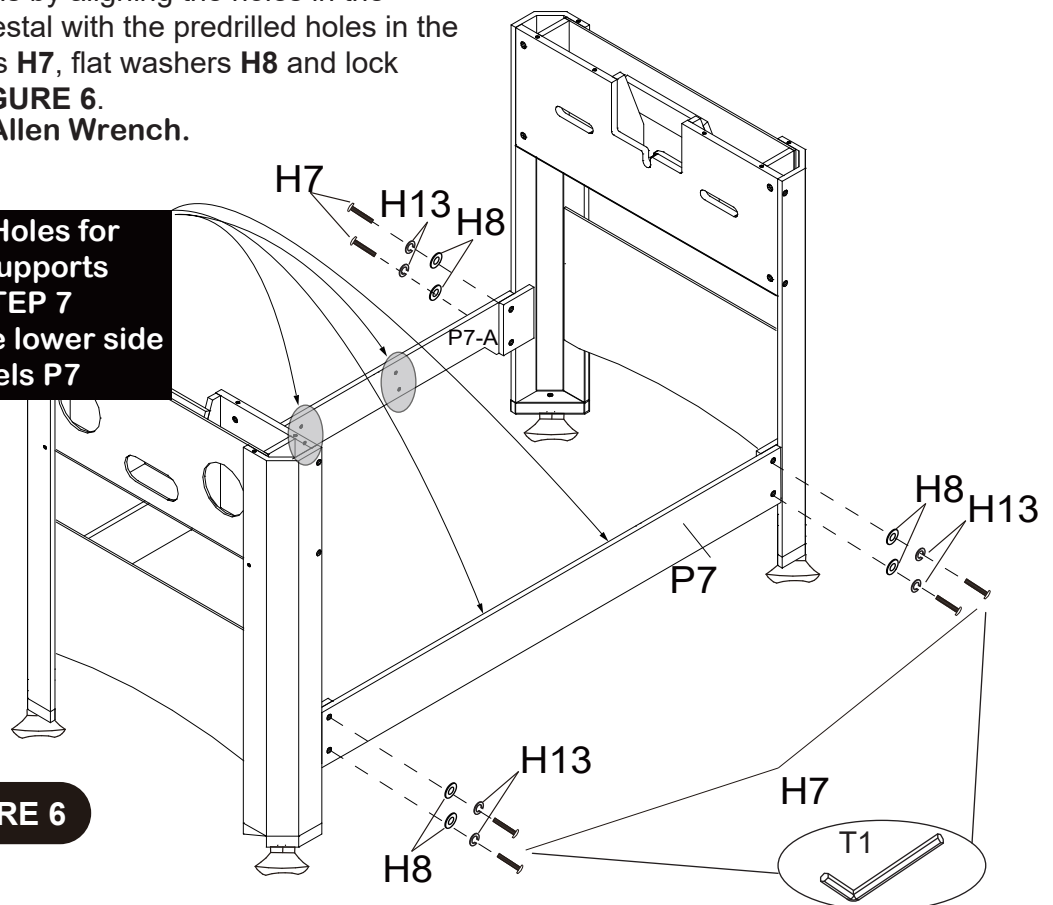

PARTS REQUIRED:

2 pcs - **P9** Center Frame Support


8 pcs - **H11** Phillips Flat Head Screw

Step 7

Attach the Center Frame Supports **P9** to the Side Leg Panels **P7** using Screws **H11** as shown in **FIGURE 7**.

Tighten, but do not strip out screws H11.

 
FIGURE 7

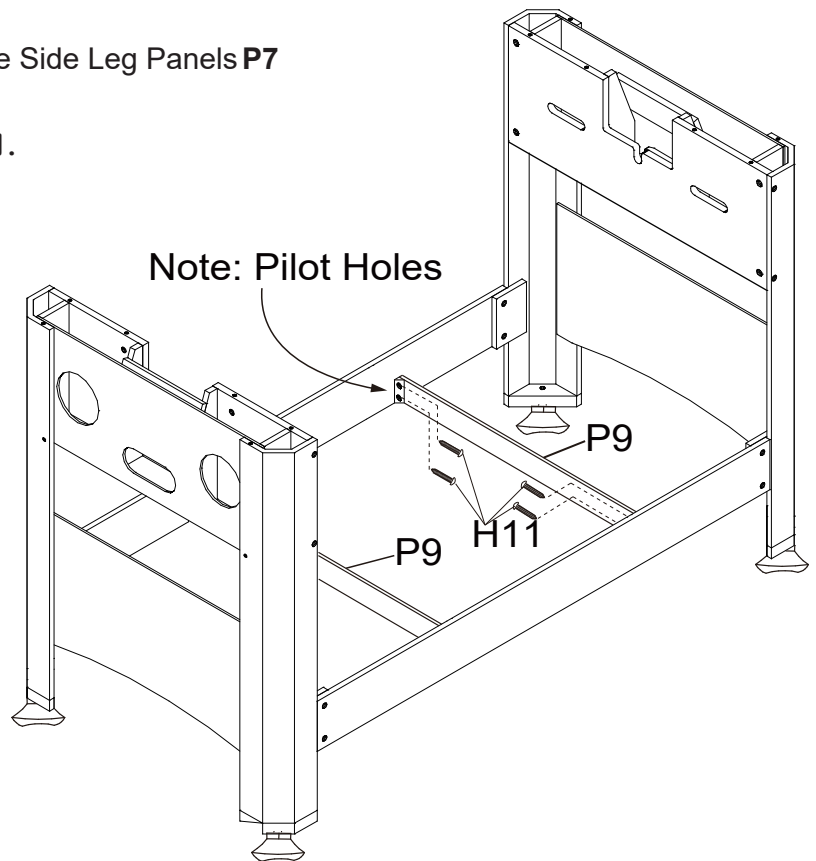

Step 8

Install the Main Cabinet **P1** by sliding the Plastic Pivot Bolts **H9**, already attached to the end's of the cabinet, into the 2 slots on each Leg End Apron **P10**. Make sure the plastic pivot bolts **H9** rests in the slots on each end of the Leg Top End Apron **P10**.

 IMPORTANT NOTE:
Make sure all 4 lock / latches are in "open" position before installing the main cabinet into the slots.

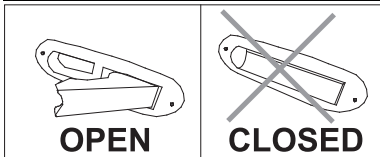

H9 Plastic
Pivot Bolt

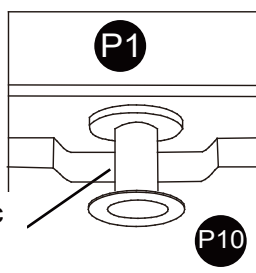 


FIGURE 8

⚠ WARNING

Avoid any pinch points during this main cabinet installation.

PARTS REQUIRED:

2 pcs - **P22** Entry Cup
 2 pcs - **P5** Leg EndTop Panel
 4 pcs - **H10** Phillips Flat Head Screw

12 pcs - **H1** Phillips Flat Head Screw
 2 pcs - **P11** Manual Scorer 1 pc - **A14** A/C Adapter
 4 pcs - **H4** Phillips Round Head Screw

Step 9

Attach the Leg End Top Panels **P5** to the assembled leg pedestals by aligning the holes in the Leg Top Panels **P5** with the predrilled holes in the top of the Leg Top End Apron **P10**, and attach with screws **H1** as shown in **FIGURE 9**.

Tighten, but do not strip out screws **H1**.

IMPORTANT NOTE:
 Close all 4 locks/latches before proceeding to Step 9.


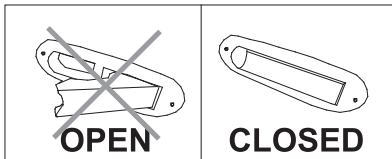 


FIGURE 9

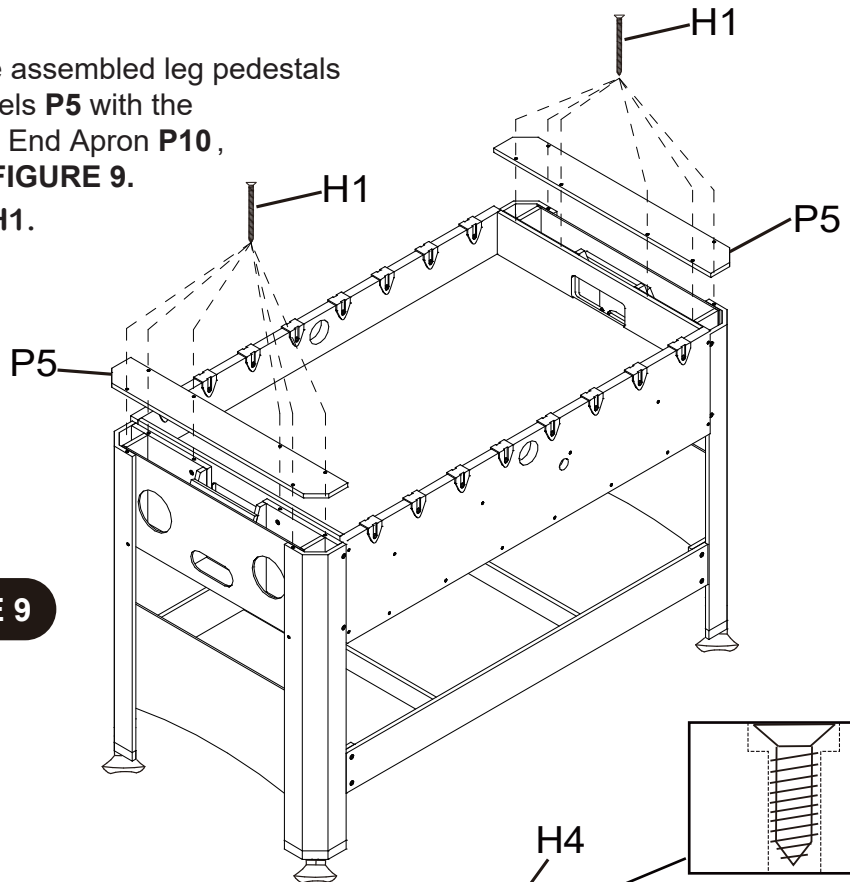 



Step 10

Attach Manual Scorers **P11** to the Leg Top Panels **P5** using screws **H4**.

Attach Entry Cups **P22** to the Main Cabinet **P1** using screws **H10**, as shown in **FIGURE 10**.

Tighten, but do not strip out screws **H4** and **H10**.

  
Note: Always disconnect the **A14** A/C Adapter from the wall outlet and main cabinet when play is completed or when not in use.

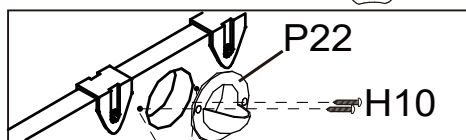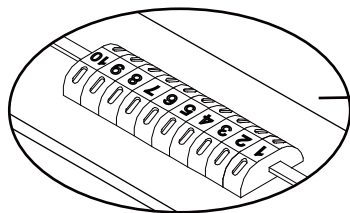

Note: Pilot Holes

FIGURE 10

 IMPORTANT NOTE:
 Always disconnect cord before rotating table.
 Never allow cord to become a TRIP HAZARD.

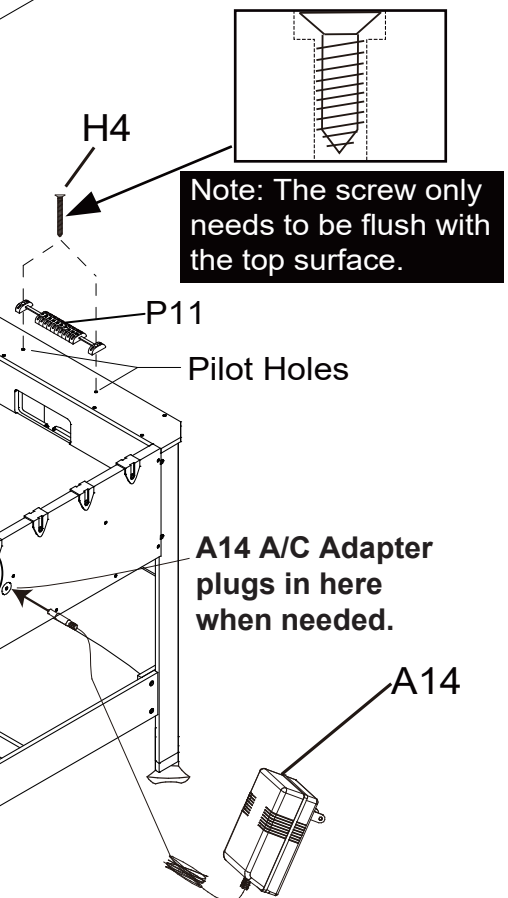

PARTS REQUIRED:

2 pcs - P15 White 3-player Rod Assembly	1 pc - P16 White 5-player Rod Assembly	1 pc - P17 White 2-player Rod Assembly
2 pcs - P18 Blue 3-player Rod Assembly	1 pc - P19 Blue 5-player Rod Assembly	1 pc - P20 Blue- 2-player Rod Assembly
8 pcs - P21 Rod Handle	16 pcs - A16 Removable Bushing Cap with Push Lock	

Step 11

FIRST: Insert the Rod Handles **P21** onto the rod ends with the hole as shown in **FIGURE 11A**.

Note: It may be necessary to vertically tap the Rod Handle, end down on the floor, to insure the Rod Handle is all the way on the player rod.

Second: Place the Player Rods into the cabinet bushings as per the player placement diagram below.

Third: Snap the Removable Bushing Cap **A16** into the female bushing as shown in **FIGURE 11B**.

When you finish playing the Soccer Game and want to play a different game, squeeze the Push Lock of the Removable Bushing Caps **A16** and remove the Bushings.

NOTE: There will be four rod handles on each side of the table. It is critical that you set the rods as shown below so the players will be correctly placed.

NOTE: Rod Handle should be placed on rod end WITH THE HOLE OR DIMPLE.

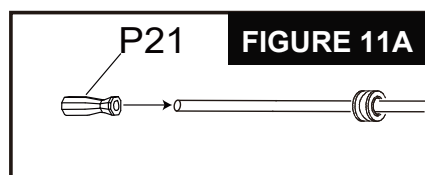 


FIGURE 11A


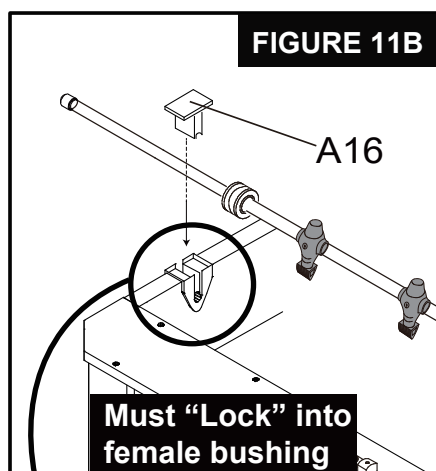 


FIGURE 11B

 Note: This side is facing playfield.

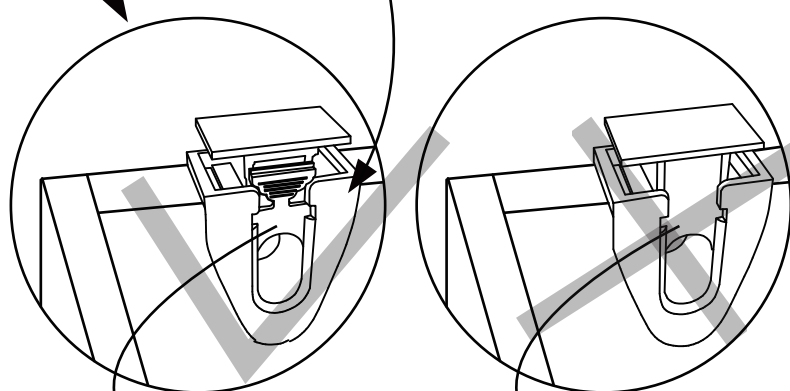

Squeeze Push Lock to release

Installed backwards and will not lock into place


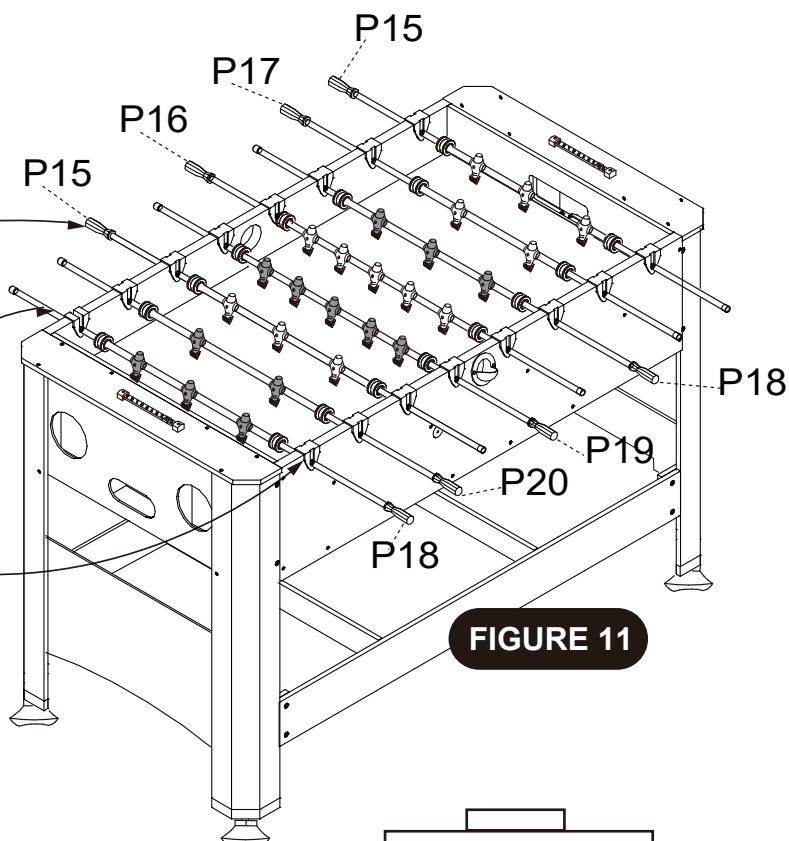 


FIGURE 11

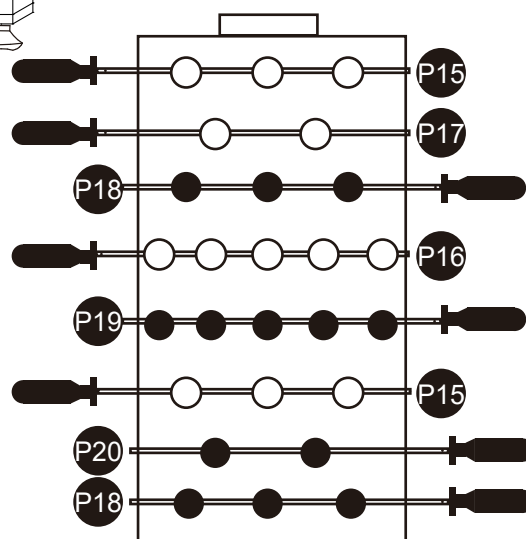 

Upright / Top View

PARTS REQUIRED:

1 pc - **A10** Table Tennis Net

2 pcs - **A13** Table Tennis Net Post

2 pcs - **A5** Cue Stick

2 pcs - **A15** Cue Holder

1 pc - **A17** Storage bag

1 pc - **P8** Table Tennis Board

Step 12 (Rotate Table To Play Billiards)

To swivel table, first - remove all 16 pcs Removable Bushing Caps **A16**.

Second - remove and stow all Player Rods as per Diagram below.

Third - replace all 16 pcs Removable Bushing Caps **A16**.

Open or unlock all 4 Lock /Latches. And very carefully swivel the main cabinet.

Close or lock all 4 Lock /Latches to play the Billiards Game.

NOTE: All Soccer Rods must be removed before rotating the table. Also make sure A/C adapter cord is disconnected from the table.

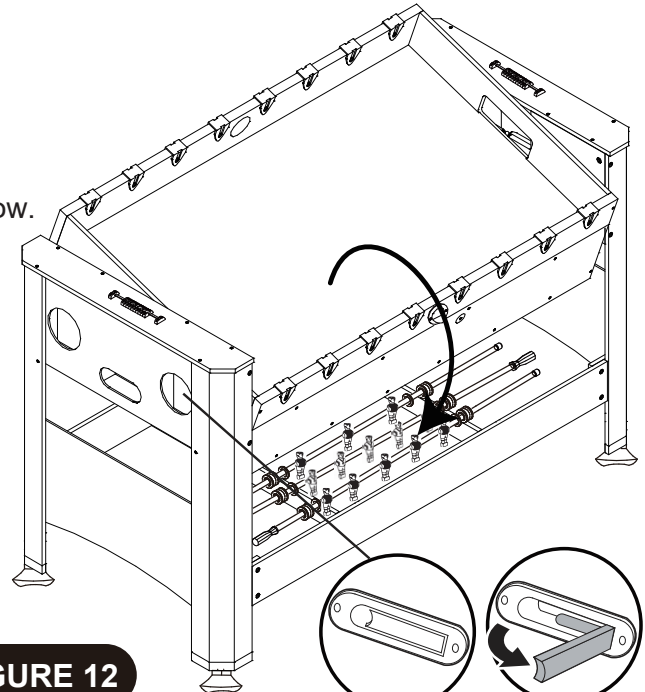 
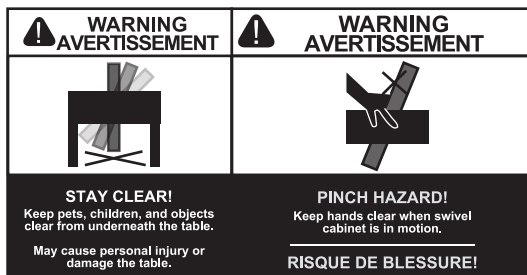 


FIGURE 12

LOCKED

UNLOCKED

 
Step 13 (Remove Player Rods, But Do Not Rotate Table To Play Air Hockey or Table Tennis)

Store the soccer player rods on the Center Frame Supports **P9** under the table to play the Air Hockey Game.

Place the Table Tennis Board **P8** onto the Soccer Top Aprons and insert the net posts **A13** and net **A10** to play the Table Tennis Game.

Place the Table Tennis Board **P8** onto the Soccer Top Aprons and insert the net posts **A13** and net **A10** to play the Table Tennis Game.

Store the accessories into the **A17** Storage bag when not in use.

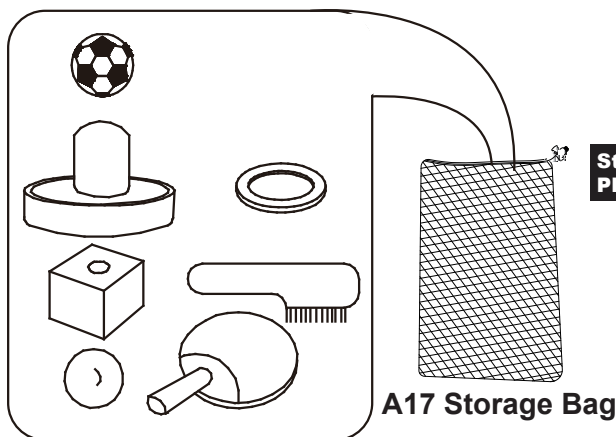

Store Table Tennis Playfield here also

Store the soccer player rods here

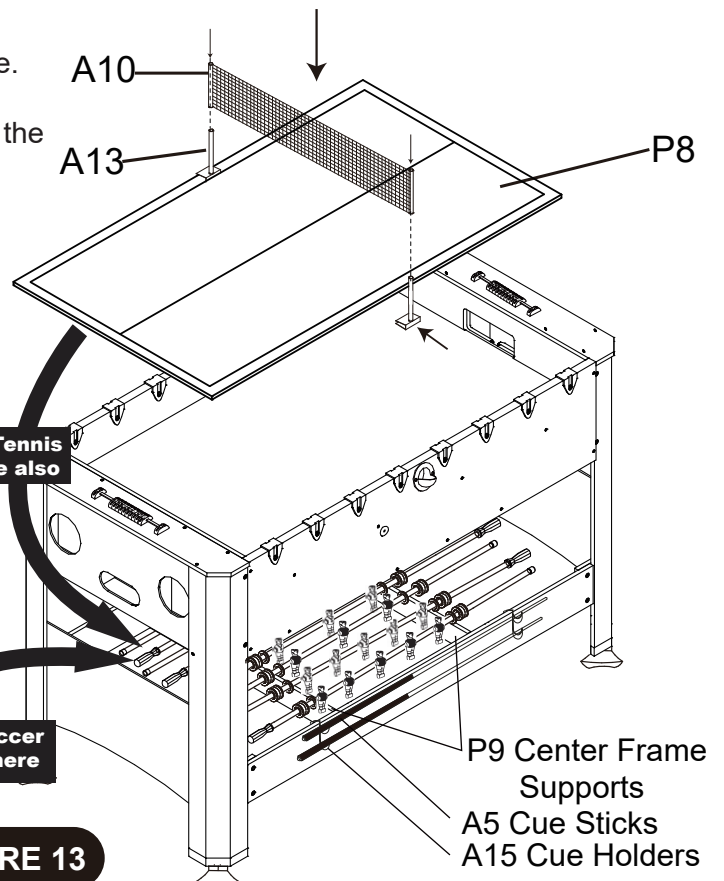 


FIGURE 13

Congratulations! You have now assembled your table. Please note the Care and Use instructions below to insure many years of trouble free use of your game table.

CARE AND USE FOR YOUR PRODUCT

1. Use spray furniture polish to clean all exterior surfaces of your table.
2. Use the table brush provided to clean the cloth on the table.
3. This product is intended for **INDOOR** use only.
4. The purchase of a table cover will both protect and help keep clean the entire top of the table.
5. Use a carpenters level to properly level the table using the enclosed A6 leveling shims.
6. **DO NOT** drag the table when moving it. This will damage the legs.
7. **DO NOT** set drinks on the table.
8. **DO NOT** sit, climb or lean on the table.

NOTICE

REFER TO [CONTAINER] FOR SAFETY
INSTRUCTIONS WHEN
USING CLEANING PRODUCTS.

PRODUCT PARTS LIST FOR MODEL # G07005W/F

Part #	Description	Qty.	Part #	Description	Qty.
G07005HLH1	4 x 40 mm Phillips Flat Head Screw	12	G07005HLP17	White 2-player Rod Assembly	1
G07005HLH2	6 x 35 mm Allen Head Bolt	8	G07005HLP18	Blue 3-player Rod Assembly	2
G07005HLH3	3.5 x 28 mm Phillips Round Head Screw	6	G07005HLP19	Blue 5-player Rod Assembly	1
G07005HLH4	3.5 x 25 mm Phillips Flat Head Screw	4	G07005HLP20	Blue 2-player Rod Assembly	1
G07005HLH5	3.5 x 14 mm Phillips Round Head Screw	8	G07005HLP21	Rod Handle	8
G07005HLH6	3 x 14 mm Phillips Round Head Screw	12	G07005HLP22	Entry Cup	2
G07005HLH7	6 x 28 mm Allen Head Bolt	8	G07005HLA1	Soccer Ball	2
G07005HLH8	6.5 x 16 mm Flat Washer	16	G07005HLA2	Hockey Puck	2
G07005HLH9	Plastic Pivot Bolt	2	G07005HLA3	Pusher	2
G07005HLH10	3.5 x 12 mm Phillips Flat Head Screw	4	G07005HLA4	Billiard Balls	1
G07005HLH11	3.5 x 12 mm Phillips Round Head Screw	8	G07005HLA5	Cue Stick	2
G07005HLH12	4 x 40 mm Phillips Round Head Screw	16	G07005HLA6	Triangle	1
G07005HLH13	M6 Lock Washer	8	G07005HLA7	Cue Chalk	1
G07005HLT1	Allen Wrench	1	G07005HLA8	Billiards Playfield Brush	1
G07005HLP1	Main Cabinet	1	G07005HLA9	Felt Pad	2
G07005HLP2	Billiard Playfield	1	G07005HLA10	Table Tennis Net	1
G07005HLP3	Right Leg	2	G07005HLA11	Table Tennis Ball	2
G07005HLP4	Left Leg	2	G07005HLA12	Table Tennis Paddle	2
G07005HLP5	Leg End Top Panel	2	G07005HLA13	Table Tennis Net Post	2
G07005HLP6	End Leg Panel	2	G07005HLA14	A/C Adapter	1
G07005HLP7	Side Leg Panel	2	G07005HLA15	Cue Holder	2
G07005HLP8	Table Tennis Top	1	G07005HLA16	Removable Bushing Cap with Push Lock	16
G07005HLP9	Center Frame Support	2	G07005HLA17	Storage Bag	1
G07005HLP10	Leg Top End Apron	2	G07005HLC1	Lock /Latch (factory installed)	4
G07005HLP11	Manual Scorer	2	G07005HLC2	Rod Washer (factory installed)	16
G07005HLP12	Corner Pocket Shield	4	G07005HLC3	Rod Bumper (factory installed)	16
G07005HLP13	Side Pocket Shield	2	G07005HLC4	Rod End Cap (factory installed)	8
G07005HLP14	Leg Leveler	4	G07005HLC5	Plastic Pivot Nut (factory installed)	2
G07005HLP15	White 3-player Rod Assembly	2	G07005HLC6	Removable Bushing -female part (factory installed)	16
G07005HLP16	White 5-player Rod Assembly	1	G07005HLK1	Hardware Kit	1
Note: The Soccer Player Rods all have the Players, Washers, Bumpers and Rod End Cap all pre-attached.			G07005HLM1	Instruction Manual	1

AIR POWERED HOCKEY:

1. This game is designed to be played with two (2) players, one at each end. Plug in A/C Adapter.
2. Play begins when the puck is placed on the playing surface. Players must hit the puck with the hand-held pushers and attempt to shoot into the opponent's goal.
3. One point is given when a puck is shot into the opponent's goal.
4. Winning: the winning goal is accomplished by being the first player to reach a predetermined score or by being the player to score the most points within a given period. Unplug A/C Adapter when not in use.

SOCCER:

1. This game is intended for 2-4 players. Competing teams will be on opposite sides of the table from one another.
2. Players must use the player rods to maneuver the ball into your opponent's goal to score one point.
3. Spinning the rods with uncontrollable force is not allowed.
4. If a ball comes to a complete stop, a timeout occurs and the ball is dropped into the middle to start play back up again.

Note: Use the ball entry cup for this if provided on your game table

BILLIARDS:

In the course of play, a player must call each shot in advance, by indicating the ball to be made and the pocket into which it will be made. It is not necessary to indicate details such as cushions, banks, caroms, etc. Failure to make the shot as called results in a loss of turn. If the shot is made as called, then any other balls pocketed remain pocketed. However, if the called shot is not made and any other balls are pocketed, then the shooter's ball(s) that were pocketed would be spotted and any of the opponent's balls would remain pocketed.


In order to execute a Legal Shot, the first ball hit must be one of the balls in the shooter's group (stripes or solids) and the object ball must be pocketed or the cue ball or any object ball must come into contact with a rail. (Note: It is legal for the shooter to bank the cue ball off a rail before hitting the object ball.) A player who legally pockets a ball continues play until missing or committing a Foul. Once a player's ball group (stripes or solids) is pocketed, the player may play the 8 ball. Again, the player must clearly indicate the intended pocket, even if it appears obvious. A player who legally pockets all of his ball group and the 8 ball is the winner.

FOULS

1. Failure to execute a legal shot as defined above.
2. A scratch shot (shooting the cue ball into a pocket or off the table)
3. Moving or touching any ball by means other than legal play.
4. Shooting an intentional jump shot over another ball by scooping the cue stick under the cue ball. (A jump shot executed by striking the cue ball above center is legal.)
5. Using the 8 ball first in a combination shot when the table is not open.

TABLE TENNIS:

 
In singles, the server first makes a good service and then the receiver makes a good return. Thereafter, server and receiver alternately each make a good return. In doubles, the server first makes a good service and the receiver returns the ball. Then the partner of the server makes a good return, followed by the partner of the receiver returning the ball. Thereafter, each player alternately in that sequence makes a good return

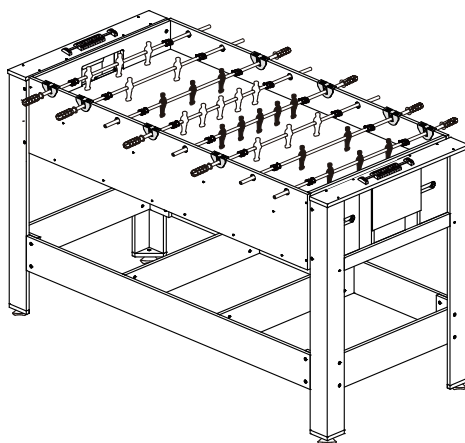

Female Bushing Replacement

In the remote chance that the female rod bushing may need to be replaced , please follow these replacement directions.

 1. Call our Customer Service Department at 1-888 on the front of your assembly manual and request the bushing replacement.
2. Locate and remove the Philips screw in the bushing , as per the diagram.
3. Pinch the bushing together and pull the bushing up and out of it's slot , per the diagram.
4. Install the new bushing , and replace the screw. Tighten , but do not strip out the screw.

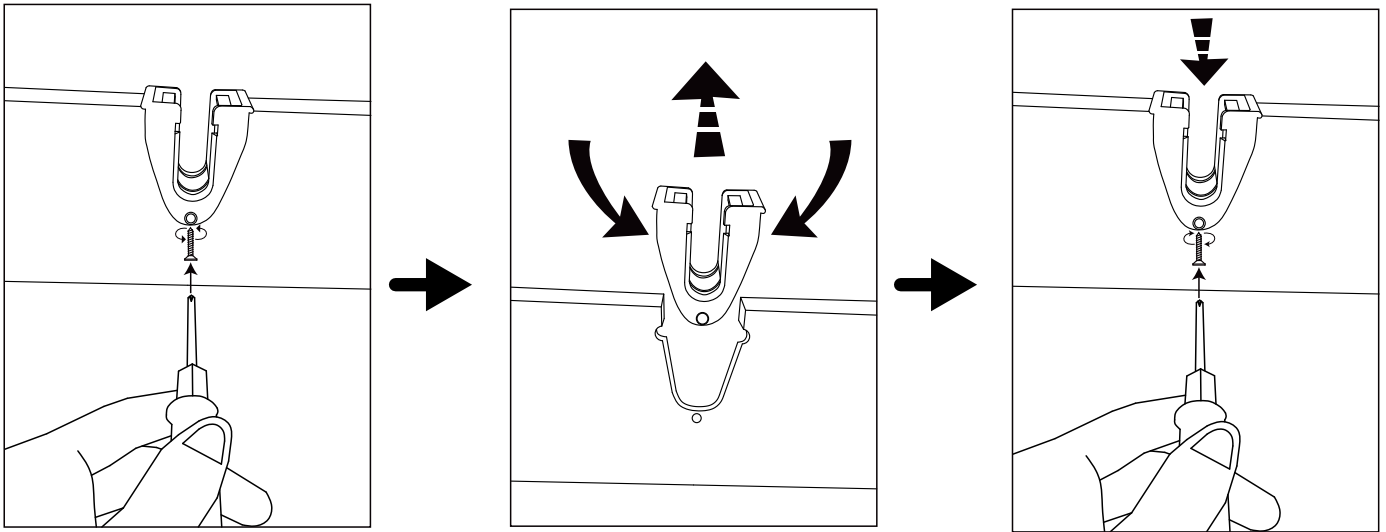

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.