



TRIUMPH

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your date code when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.


Your Model Number **45-6705F**

Date Code: **2 - 45-6705F - - JR**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

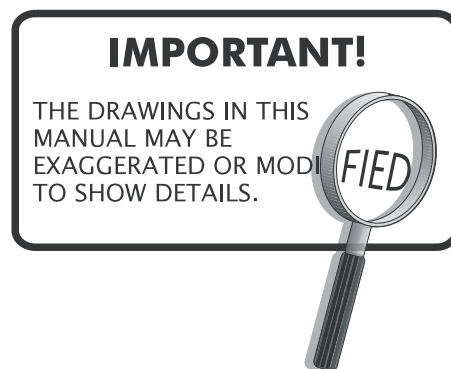

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS 32" CONVERTIBLE HOCKEY TABLE

Tools Required (not provided):

Phillips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.




ATTENTION:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO PUT THIS HOCKEY TABLE
TOGETHER.**

HARDWARE IDENTIFIER


(To Scale)

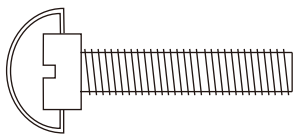

H1 - 6 mm x 25 mm
Wing Bolt
(12 pcs)

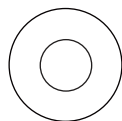

 
H2 - 6.5 mm x 15 mm
Flat Washer
(12 pcs)

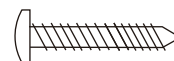

H3 3 x 20 mm
Phillips Round
Head Screw
(4 pcs)

ACCESSORIES IDENTIFIER

 (Not to Scale)

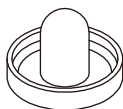

A1 - Striker (2 pcs)



A2 - Puck (2 pcs)




A3 - Felt Pad (2 pcs)

NOTE:
A3 Felt Pads may already
be attached to A1 Strikers.

PARTS IDENTIFIER

(Not to Scale)

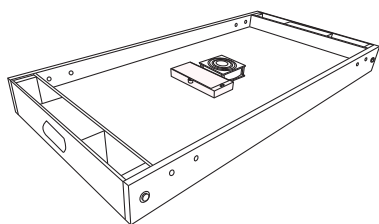


P1 - Air Hockey Cabinet
(1 pc)




P2 - Left Leg
(2 pcs)



 P3 - Right Leg
(2 pcs)

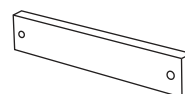

P4 - End Leg Panel
(2 pcs)

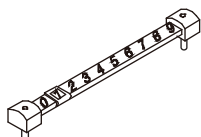

P5 - Manual Scorer
(2 pcs)

PARTS REQUIRED:


- 8 pcs - **H1** Wing Bolt
- 8 pcs - **H2** Flat Washer
- 1 pc - **P1** Air Hockey Cabinet
- 2 pcs - **P2** Left Leg
- 2 pcs - **P3** Right Leg

STEP 1:

Leave **P1** Air Hockey Table Cabinet face down in carton to assemble.

Install **P2** Left Legs and **P3** Right Legs onto **P1** Air Hockey Cabinet using **H1** Wing Bolts and **H2** Flat Washers as shown in **FIGURE 1**.

Do not tighten H1 Bolts during this step.

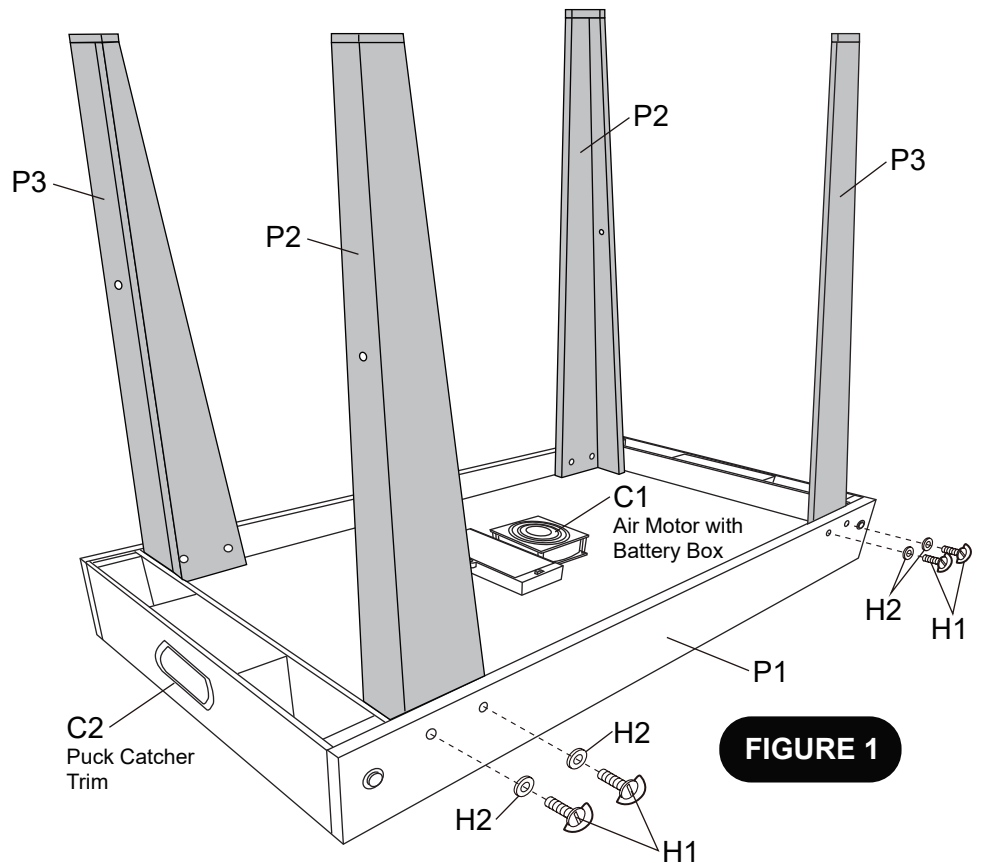

PARTS REQUIRED:

- 4 pcs - **H1** Wing Bolt
- 4 pcs - **H2** Flat Washer
- 2 pcs - **P4** End Leg Panel
- 6 pcs - **1.5V AA** Batteries (not provided)

STEP 2:


Install **P4** End Leg Panels using **H1** Wing Bolts and **H2** Flat Washers as shown in **FIGURE 2**.

Tighten all H1 Bolts at this time from STEP 1.

All H1 Wing Bolts should be tightened with a screwdriver (not provided).

Next, Open battery compartment cover on the underside of the table by turning the screw counter-clockwise using Phillips Screwdriver (not provided). Install 6 pieces 1.5V AA batteries (not provided) in the proper (-) (+) positions as indicated inside battery compartment. Replace the cover and turn the screw back clockwise to secure it into place.

See "FIRST TIME BATTERY INSTALLATION AND NOTICE", before installing batteries, located on page 7.

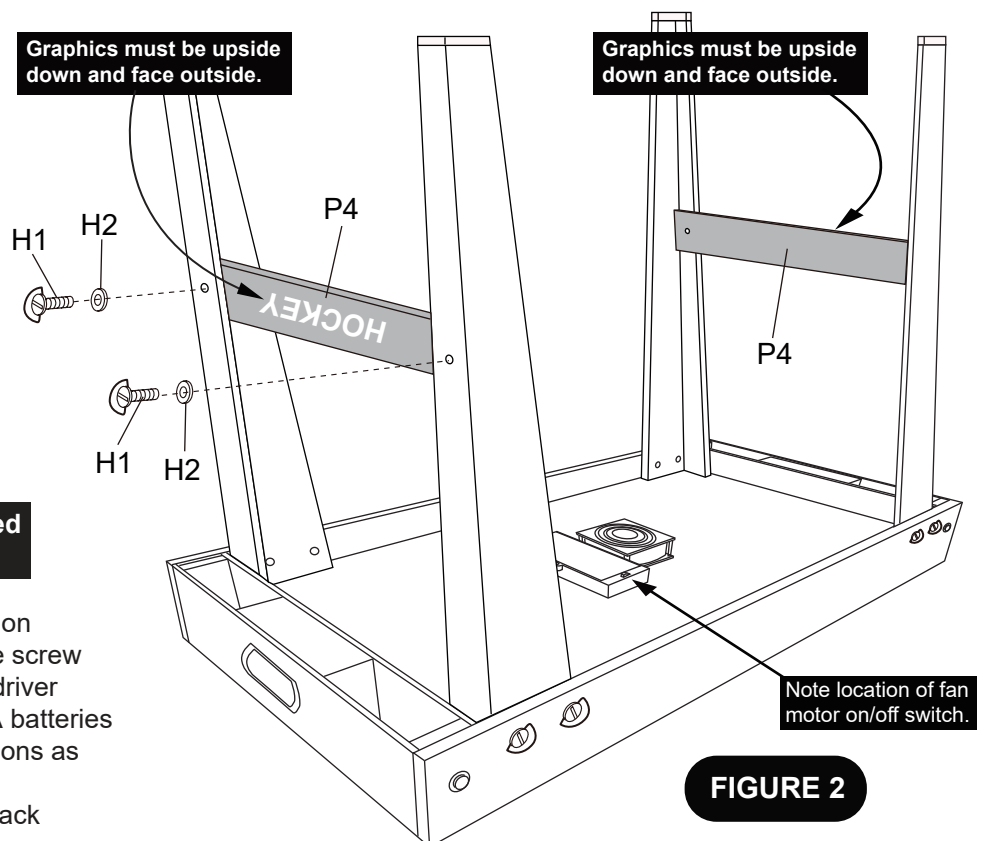

WARNING:

THIS STEP REQUIRES TWO ADULTS.
VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL, THE TABLE IS HEAVY.

PARTS REQUIRED:

- 2 pcs - **P5** Manual Scorer
- 4 pcs - **H3** Phillips Round Head Screw

STEP 3:

Install **P5** Manual Scorer onto **P1** Air Hockey Cabinet using pre-drilled holes and using the **H3** Phillips Round Head Screw as shown in **FIGURE 3**.

Lastly, Turn the power switch ON from battery compartment (underneath table) to play your hockey table.

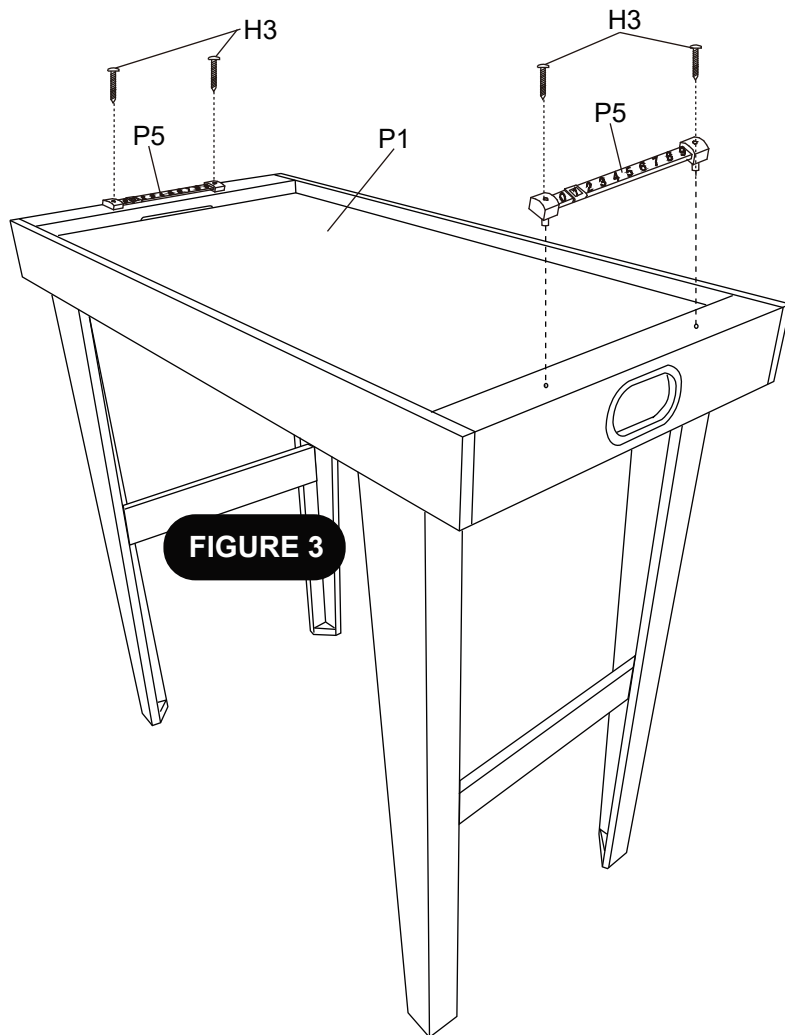


FIGURE 3

FOR TABLE TOP PLAY:

Carefully remove **H1** Wing Bolts and **H2** Flat Washers as shown in **FIGURE 4**.

NOTE: Do not remove this Allen Head Bolt.


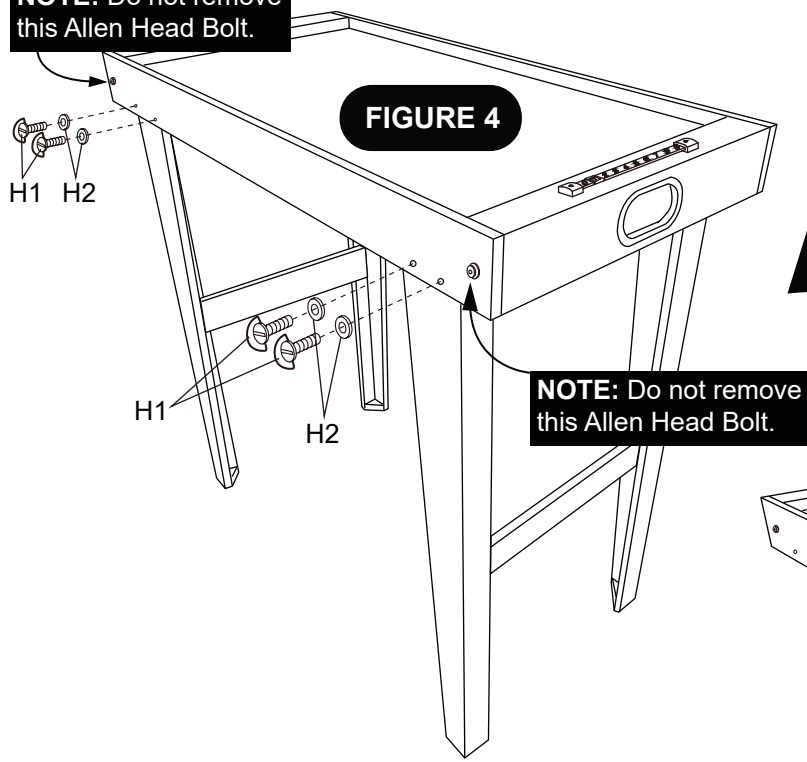


FIGURE 4

NOTE: Do not remove this Allen Head Bolt.

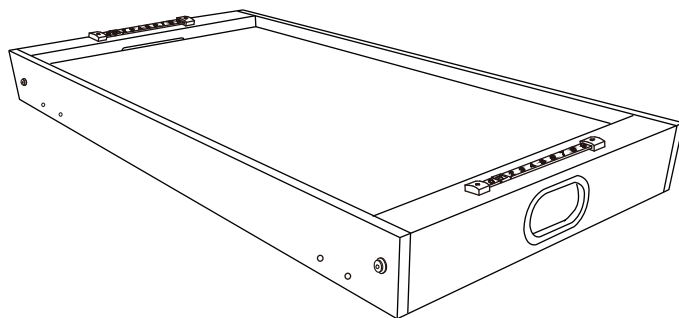

Congratulations! You have now assembled your hockey table. Please note the Care and Use instructions below to insure many years of trouble free use of your hockey table.

CARE AND USE OF YOUR HOCKEY TABLE

1. For long life and best play from your air hockey table, apply spray furniture polish to clean cloth and wipe down the playfield with air motor running to make the pucks slide faster before first play and frequently thereafter.
2. This product is intended for **INDOOR** use only.
3. **DO NOT** operate the motor if the battery compartment is damaged in any way.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the legs.
6. **DO NOT** set drinks on the table.

Product Parts List

45-6705

Key#	Part#	Description	Qty
H1	45-6705JRH1	6 mm x 25 mm Wing Bolt	12
H2	45-6705JRH2	6.5 mm x 15 mm Flat Washer	12
H3	45-6705JRH3	3 mm x 20 mm Phillips Round Head Screw	4
A1	45-6705JRA1	Striker	2
A2	45-6705JRA2	Puck	2
A3	45-6705JRA3	Felt Pad (Pre-installed)	2
P1	45-6705JRP1	Air Hockey Cabinet (no motor & battery box)	1
P2	45-6705JRP2	Left Leg	2
P3	45-6705JRP3	Right Leg	2
P4	45-6705JRP4	End Leg Panel	2
P5	45-6705JRP5	Manual Scorer	2
C1	45-6705JRC1	Air Motor with Battery Box (Pre-installed)	1
C2	45-6705JRC2	Puck Catcher Trim	2
K1	45-6705JRK1	Hardware Kit	1
M1	45-6705JRM1	Owner's Manual	1

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."



WARNING:

Adult assembly required. The toy contains sharp points in unassembled state.

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking, weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.