

Item# 45-6094



ICE STAR

7 Foot Air Powered Hockey



Please keep this instruction manual for future reference

If you have any problems with your new product,
please contact Triumph Sports USA at 1-866-815-4173,
or e-mail us at csr@triumphsportsusa.com
for any technical support or warranty issues.

90-Day Triumph Sports USA, Inc. (TSU) Game Warranty

All TSU games have a 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



WARNING: Choking Hazard--Toy contains small balls and/or small parts. Not for children under 3 years of age.



WARNING: Adult Assembly Required.

Be sure to check out all the exciting games  **has to offer.**

Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES



DARTBOARDS

Triumph Sports USA
Milwaukee, WI 53227
www.triumphsportsusa.com
©2013 Triumph Sports USA. All Rights Reserved.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions

 
 
 
 
 
 
 
1. Read all instructions-All the safety and operating instructions should be read carefully before this hockey game is played.
2. Caution-This is not a toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with children to avoid possible risk of electric shock or other injuries.
3. Power sources-This hockey game should be operated only from 110-120V A.C., 60 cycle current as indicated on the identification label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
4. Power cord protection-Power cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to cords at plugs, convenience receptacles, and the point of exit from the game.
5. Overloading-Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
6. Object and liquid entry-Never push objects of any kind into this game through openings as they may touch dangerous voltage points or short-out parts which could result in a fire or electric shock. Never spill liquid of any kind on the game.
7. Ventilation-Openings in the game are provided for the exhaust air to create a cushion effect. The openings on the air blower are for the intake air. Keep clear of the air blower when it is on. Do not put hand or other objects near the intake openings. To ensure reliable operation of the game and protect it from overheating these openings must not be blocked or covered.
8. Damage requiring service-Unplug the game from the wall outlet.
Do not attempt to service the blower yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer servicing to qualified service personnel under the following conditions.
 - A. When the power supply cord or plug is damaged.
 - B. If liquid has spilled, or objects have fallen into the blower.
 - C. When the air blower exhibits a distinct change in performance e.g. abnormal noise, this indicates a need for service.
9. Grounding or Polarization-This game is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
10. CAUTION-ELECTRICALLY OPERATED PRODUCT-Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.
11. We recommend that the game be periodically examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In the event such conditions exist, the game should not be used until properly repaired.
12. **RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS**
WARNING-When using electric appliances, basic precautions should always be followed, including the following:
 - A) Read all the instructions before using the appliances.
 - B) To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
 - C) Do not contact moving parts.
 - D) Only use attachment recommended or sold by the manufacturer.
 - E) Do not use outdoors.
 - F) For a cord-connected appliance, the following shall be included:
 - To disconnect, turn all controls to the off position, then remove plug from outlet.
 - Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
 - Unplug from outlet when not in use and before servicing or cleaning.
 - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
13. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

SAVE THESE INSTRUCTIONS

WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.


For Household use only.

45-6094 PARTS LIST

1  Main Cabinet 1 Piece	2  Leg 4 Pieces	3  Leg Base 4 Pieces	4  Leg Panel - A 2 Pieces	5  Leg Panel - B 2 Pieces
6  4 x 12mm Round Head screw 4 Pieces	7  3 x 15mm Washer Head Screw 24 Pieces	8  5/16" x 1-1/4" Bolt 12 Pieces	9  5/16" Washer 12 Pieces	10  3 x 25mm Washer Head Screw 24 Pieces
11  Leg Leveler 4 Pieces	12  Felt Pad 2 Pieces	13  Puck 2 Pieces	14  Pusher 2 Pieces	15  Goal Box 2 Pieces
16 Pre-installed  Puck Catcher with Long Sensor Wire 1 Piece	17 Pre-installed  Puck Catcher with Short Sensor Wire 1 Piece	18 Pre-installed  Blower 1 set	19 Pre-installed  Goal Cover 2 Pieces	20 Pre-installed  Control Box 1 Pieces
21 Pre-installed  Scorer Display 2 Pieces	22 Pre-installed  Time Display 1 Piece	23 Pre-installed  Scorer Wire 1 Piece	24 Pre-installed  Time Wire 1 Piece	25 Pre-installed  Battery Box 1 Piece
26 Pre-installed  Apron Corner 4 Pieces	27  Allen Key 1 Piece			


Step:1

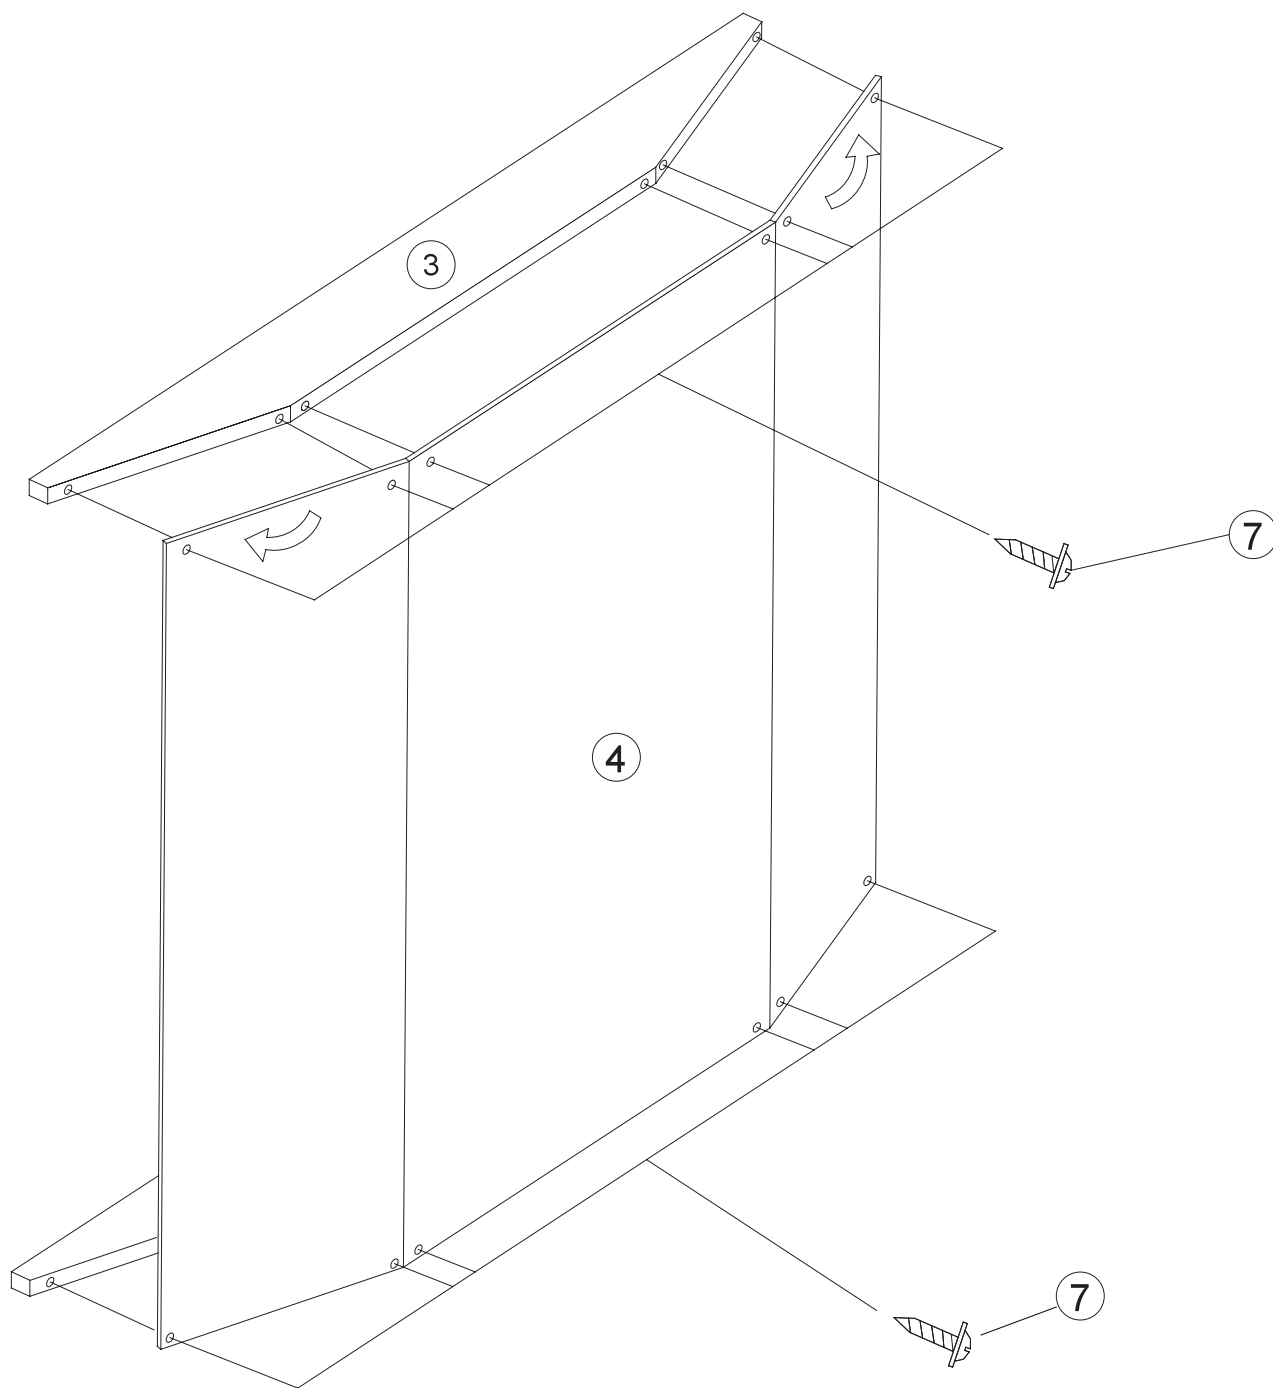- . Find a clean, level place to begin the assembly of your Air Hockey table. The table will be assembled upside down and then turned over on its legs once the assembly completed. This game table is heavy, and tuning it over will require at least two strong adults.
- . Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts list. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.
- . Attach the Leg Base (#3) to the Leg Panel - A (#4) using six Screws (#7) per Leg Base.




Step:2

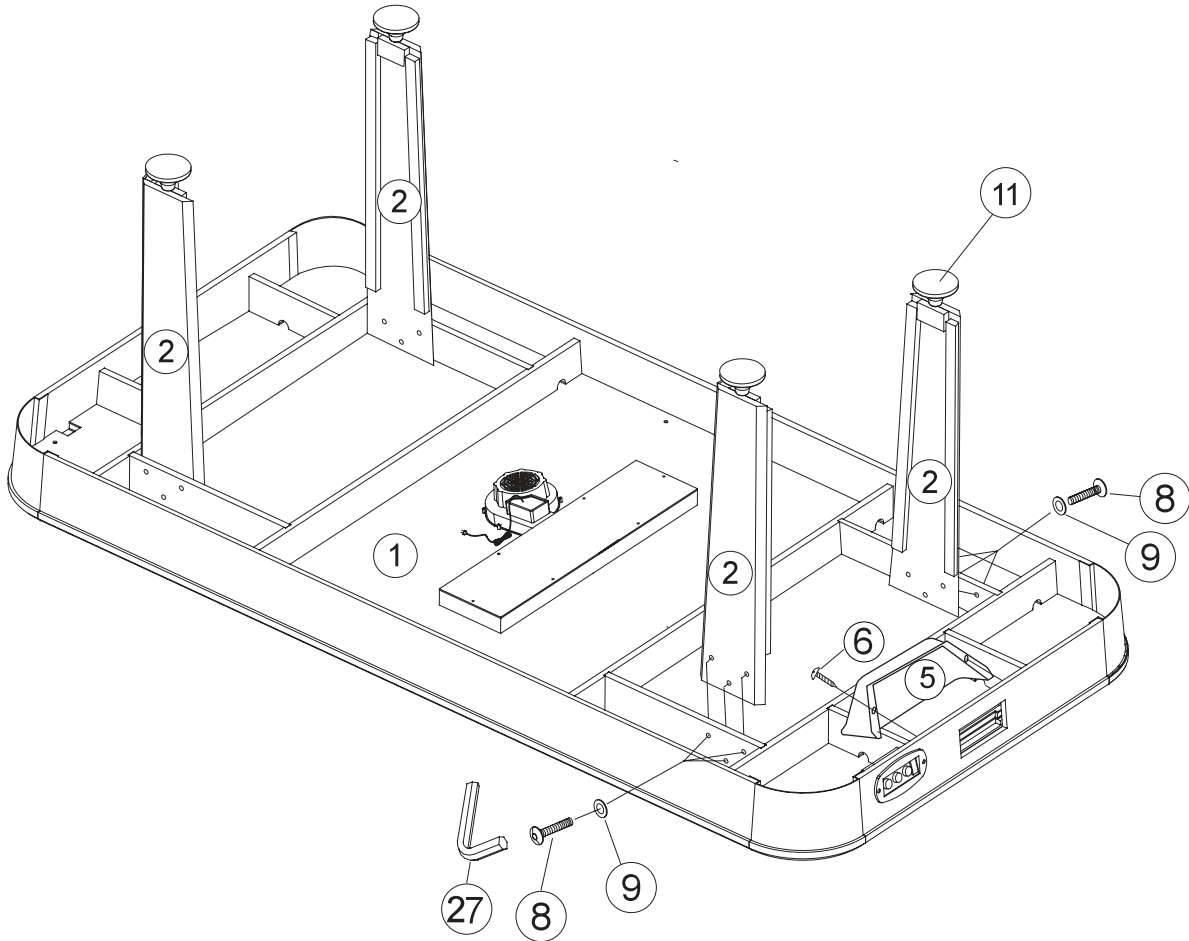- . Attach the Leg (#2) to the Main Cabinet (#1) using three Bolts (#8) and three Washers (#9) per Leg.
- . Screw the Leg Levelers (#11) into each Leg.
- . Attach the Goal Box (#15) to each end of the main Cabinet (#1) using screws (#6).




Electronic Connections Diagram

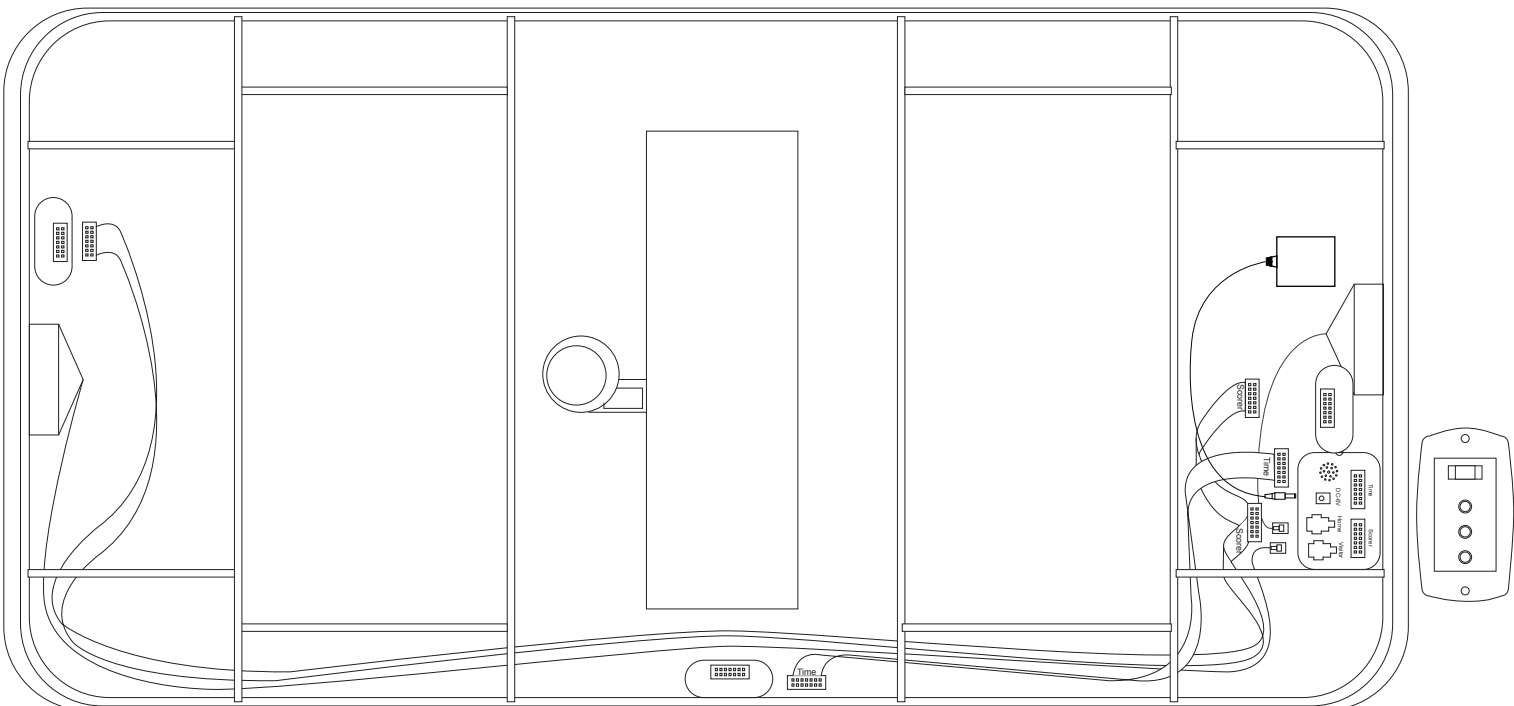

Step:3

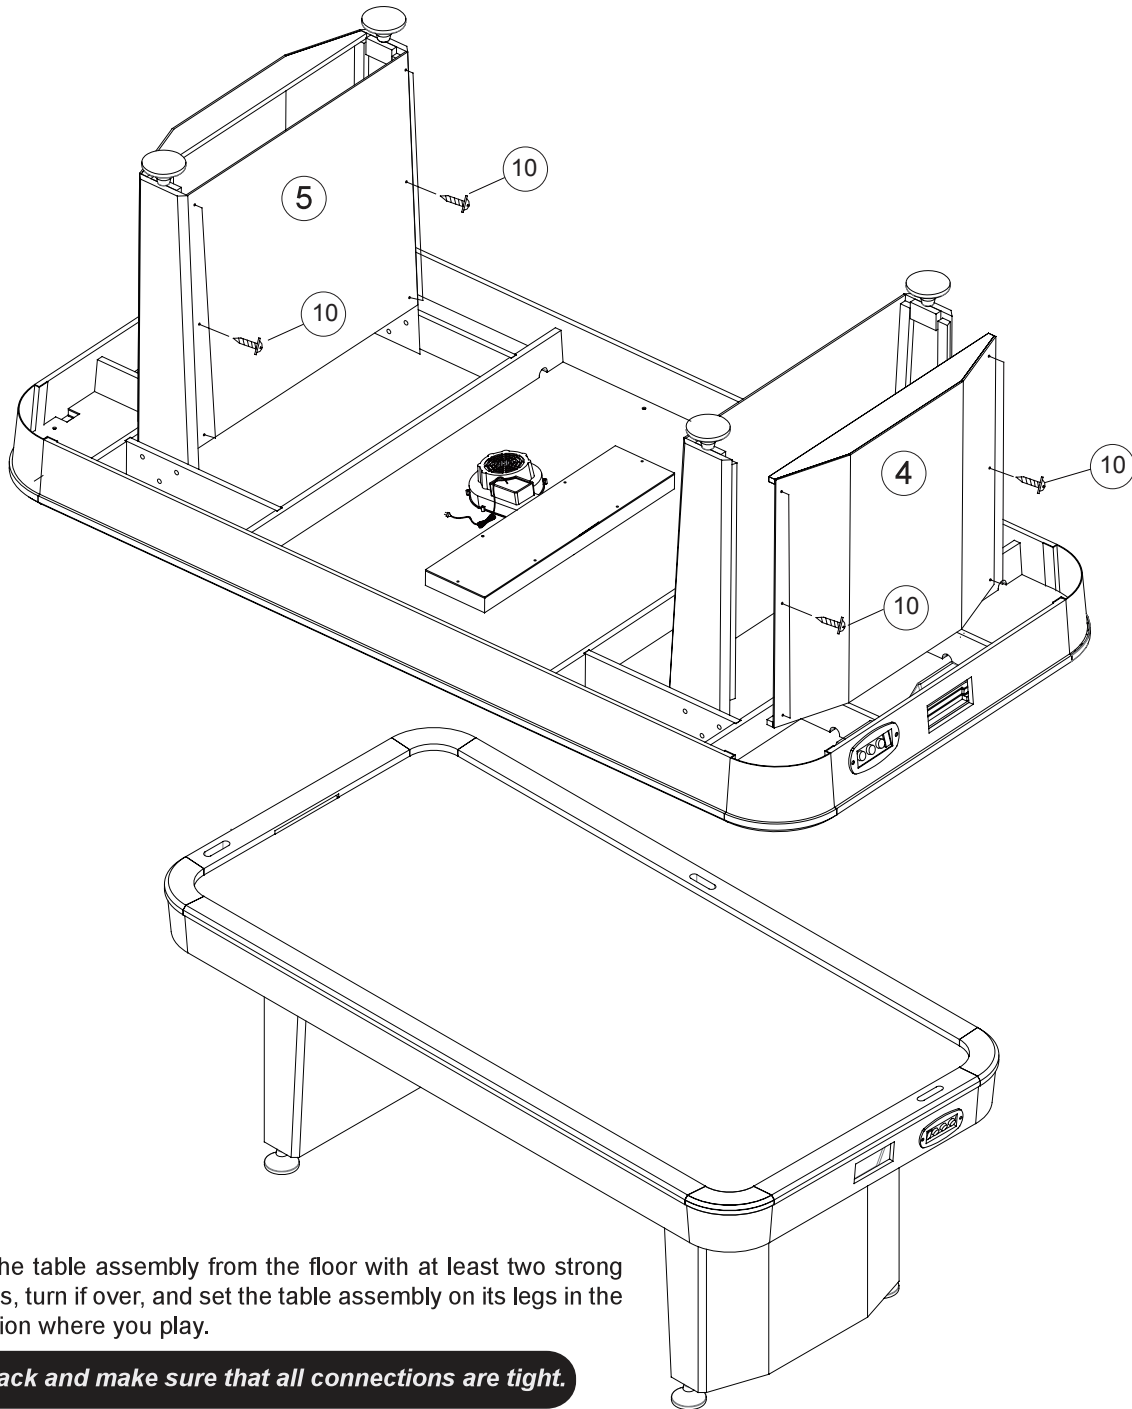- . Attach the Leg Panel - A (#4) (previous-assembled) to the Leg using six Screws (#10) per Leg Panel - A. **See FIG.3.**
- . Attach the Leg Panel - B (#5) to the Leg using six Screws (#10) per Leg Panel - B. **See FIG.3.**




- . Lift the table assembly from the floor with at least two strong adults, turn it over, and set the table assembly on its legs in the location where you play.

Go back and make sure that all connections are tight.


CAUTION: Two strong adults are recommended to turn the table over as shown.

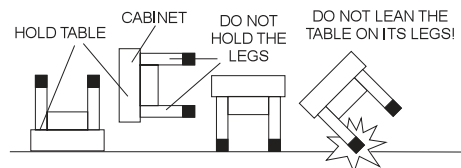1. Lift the table off the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.



Step:4

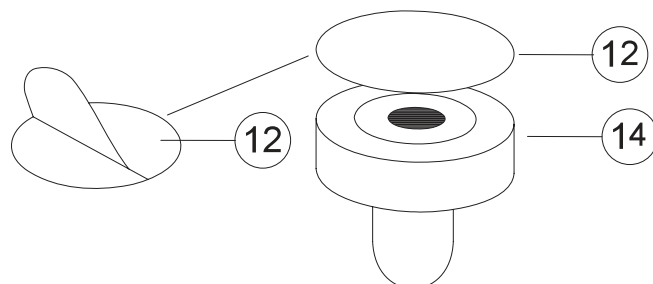. Tear off the backside paper of the Felt Pad (#12) and stick them at the bottom of the Pushers (#14).



ELECTRONIC SCORER OPERATION

1. Plug in the power cord and switch power to "ON". "Time" board will show "15:00" accompanying with sound "fifteen minutes" after music stops.
2. Press the button "MINUTES" to set up playing time.
3. Press "START/RESET" to begin game play and music is accompanied. "Time" start to countdown when music stops.
4. When the "HOME" player scores, "HOME" indicator will show 1 point.
5. When the "VISITOR" player scores, "VISITOR" indicator will show 1 point.
6. Score only counts when goal made after cheering sound is finished.
7. In game play, press "MINUTES" is invalid.
8. In game play, press "START/RESET" will set scorer to zero and timer back to the beginning status.
9. The scorer will turn off automatically when it is not used for 5 minutes.
10. Press "MINUTES" or "START/RESET" to turn on the scorer.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



WARNING:

- 1) Require 4 pcs AA Batteries (Not included).
- 2) Do not mix old and new batteries.
- 3) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

