



## 84" POKER CLUB 3-IN-1 LED CASINO TABLE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

**DO NOT RETURN IT TO THE STORE,**

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

**Mailing Address: (Correspondence Only)**

Escalade Sports  
PO Box 889  
Evansville, Indiana 47706-0889

**Physical Location:**

Escalade Sports  
817 Maxwell Ave.  
Evansville, Indiana 47711

Please visit our Web site at:

**www.escaladesports.com**

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: AL4550W/F

Date Code: 2 - AL4550W/F- - SY

Purchase Date: \_\_\_\_\_

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

# SAFETY INSTRUCTIONS

**FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.**

***Owner must ensure that all players know and follow these rules for safe operation of the system.***

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

***Most injuries are caused by misuse and/or not following instructions.  
Use caution when assembling and using this system.***

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least two capable adults are required to assemble this product.

## NOTICE

**REFER TO [CONTAINER] FOR SAFETY INSTRUCTIONS WHEN USING CLEANING PRODUCTS.**

## ⚠ CAUTION

**AT LEAST TWO OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.**



## ⚠ WARNING

**Crush and Shear Points  
Keep hands and fingers  
clear of all hinges and  
folding areas.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

**IMPORTANT! READ EACH STEP  
IN THIS MANUAL BEFORE YOU  
BEGIN THE ASSEMBLY.**

**IMPORTANT!**

THE DRAWINGS IN THIS  
MANUAL MAY BE  
EXAGGERATED OR MODIFIED  
TO SHOW DETAILS.



**Tools Required:**

 
A Carpenters Level

## ASSEMBLY TIPS

Make sure you understand the following tips before you begin to assemble your game table.


1. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
2. Some of this assembly can be made easier – by placing the parts and building the assembly on a sturdy table with a flat, clean surface. A table can be used also as long as the top is well protected from any scratches that could occur. The table would need to be structurally strong enough to support this weight.

## PARTS IDENTIFIER (Not to Scale)

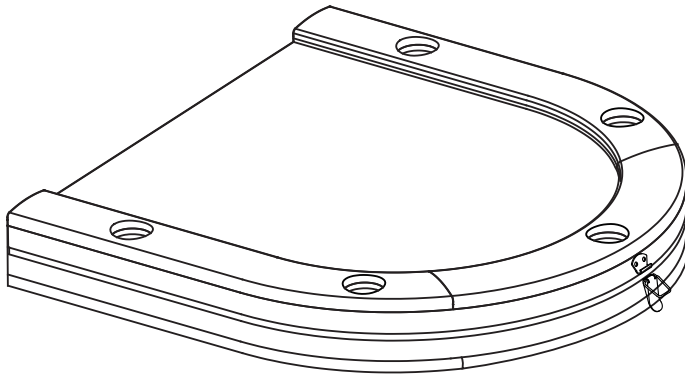


P1 - Main Cabinet  
(1 pc)

## PRE-INSTALLED PARTS (Not to Scale)

 

C1 - U-Bracket  
(4 pcs)

 


C2 - 4mm x13mm  
Phillips Round Head Screw  
(16 pcs)



C3 - Outer Leg Cap  
(4 pcs)



 C4 - Connect Wire  
(1pc)



C5 - Toggle Latch  
(1pc)

# ACCESSORIES IDENTIFIER

 
## (Not to Scale)




A1 - Roulette Carpet  
(1 pc)




A2 - Blind Button  
(4 pcs)

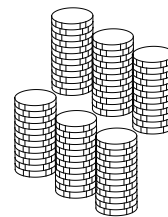


A3 - Poker Chip  
(300 pcs)

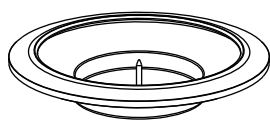 

A4 - Roulette Wheel  
(1 pc)

 


A5 - Dice  
(2 pcs)

 


A6 - Metal Ball  
(2 pcs)



 
A7 - Metal Ball Bottle  
(1 pc)

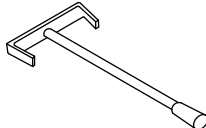

A8 - Chip Rake  
(1 pc)

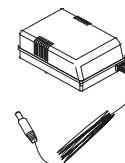 

A9 - Adapter  
(1 pc)

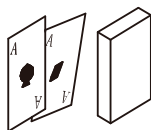 

A10 - Playing Cards  
(1 pc)



A11 - Storage Bag  
(1 pc)




A12 - Mesh Bag  
(1 pc)

## PARTS REQUIRED

1 pc - **P1** Main Cabinet

### STEP 1

Unfold the Folded Poker Table as shown in **FIGURE 1**.

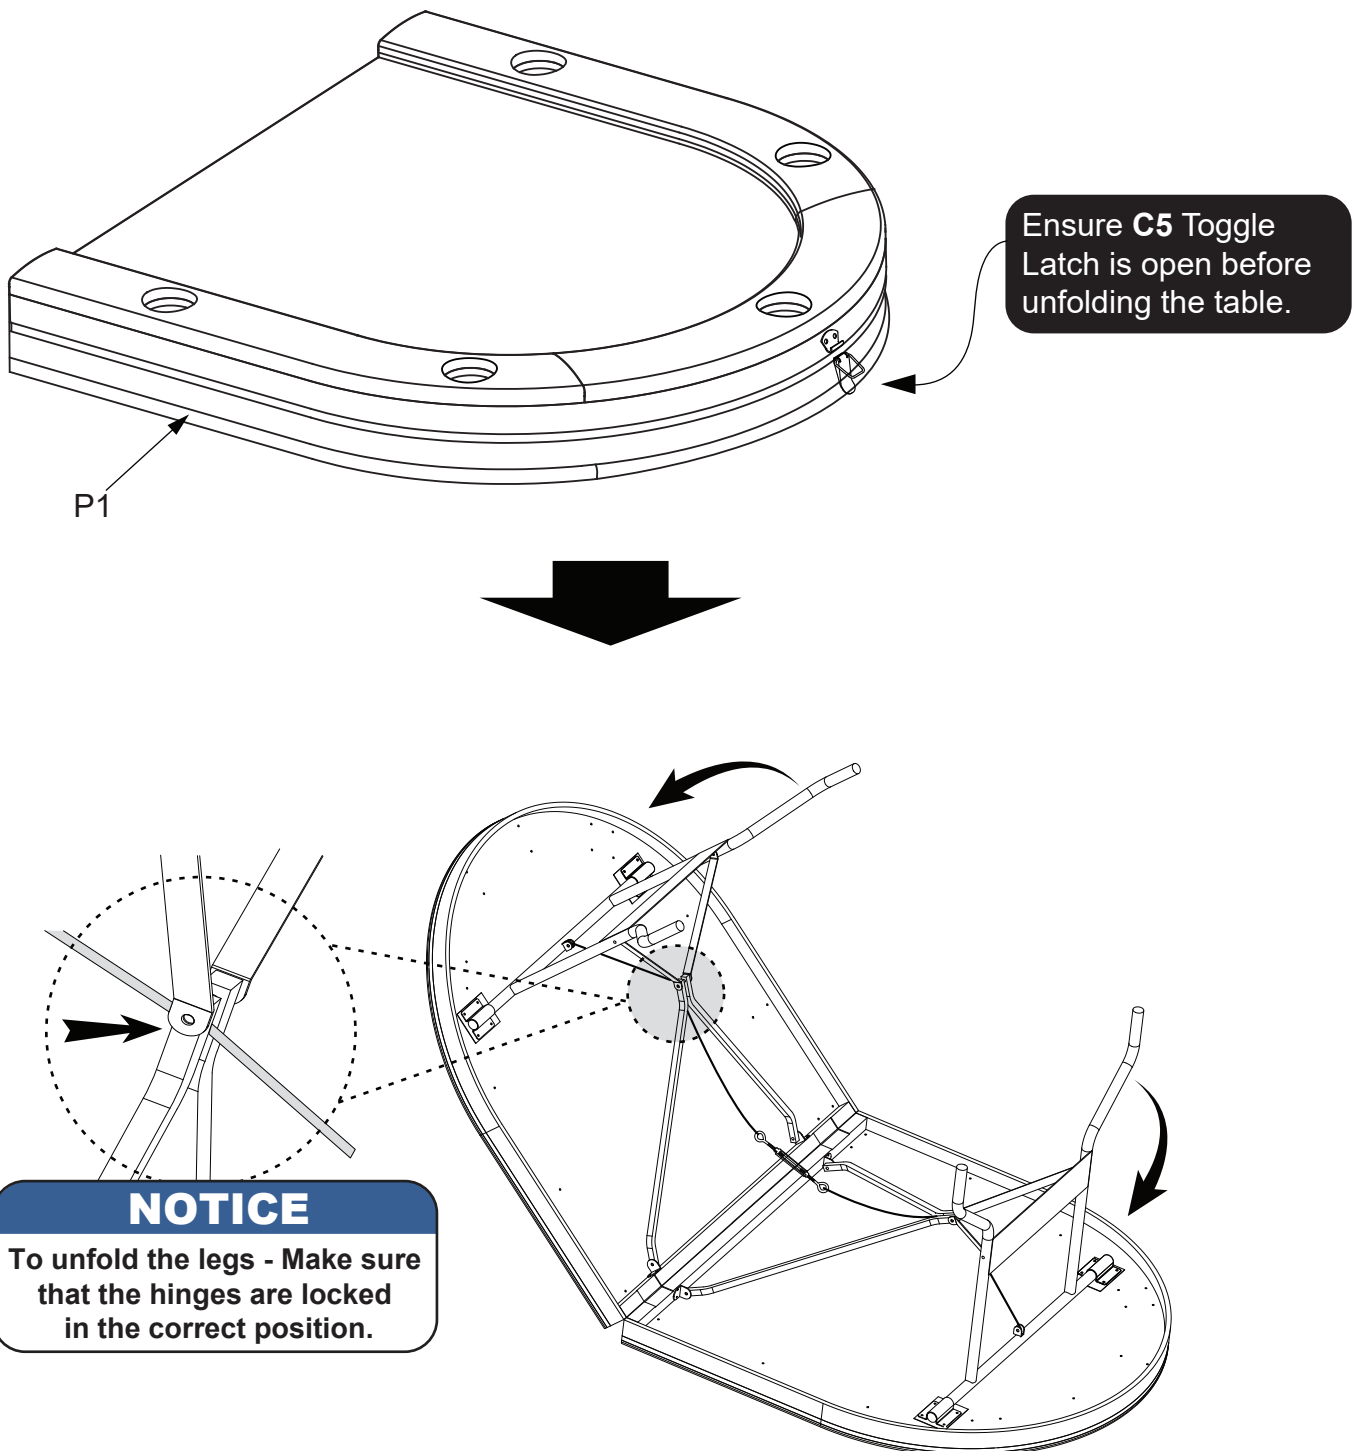 


**FIGURE 1**

| PARTS REQUIRED           |  |
|--------------------------|--|
| 1 pc - <b>A9</b> Adapter |  |

| PARTS REQUIRED           |  |
|--------------------------|--|
| 1 pc - <b>A9</b> Adapter |  |
 
## STEP 2

Connect the **A9** Adapter and **C4** Connect Wire as shown in **FIGURE 2**.


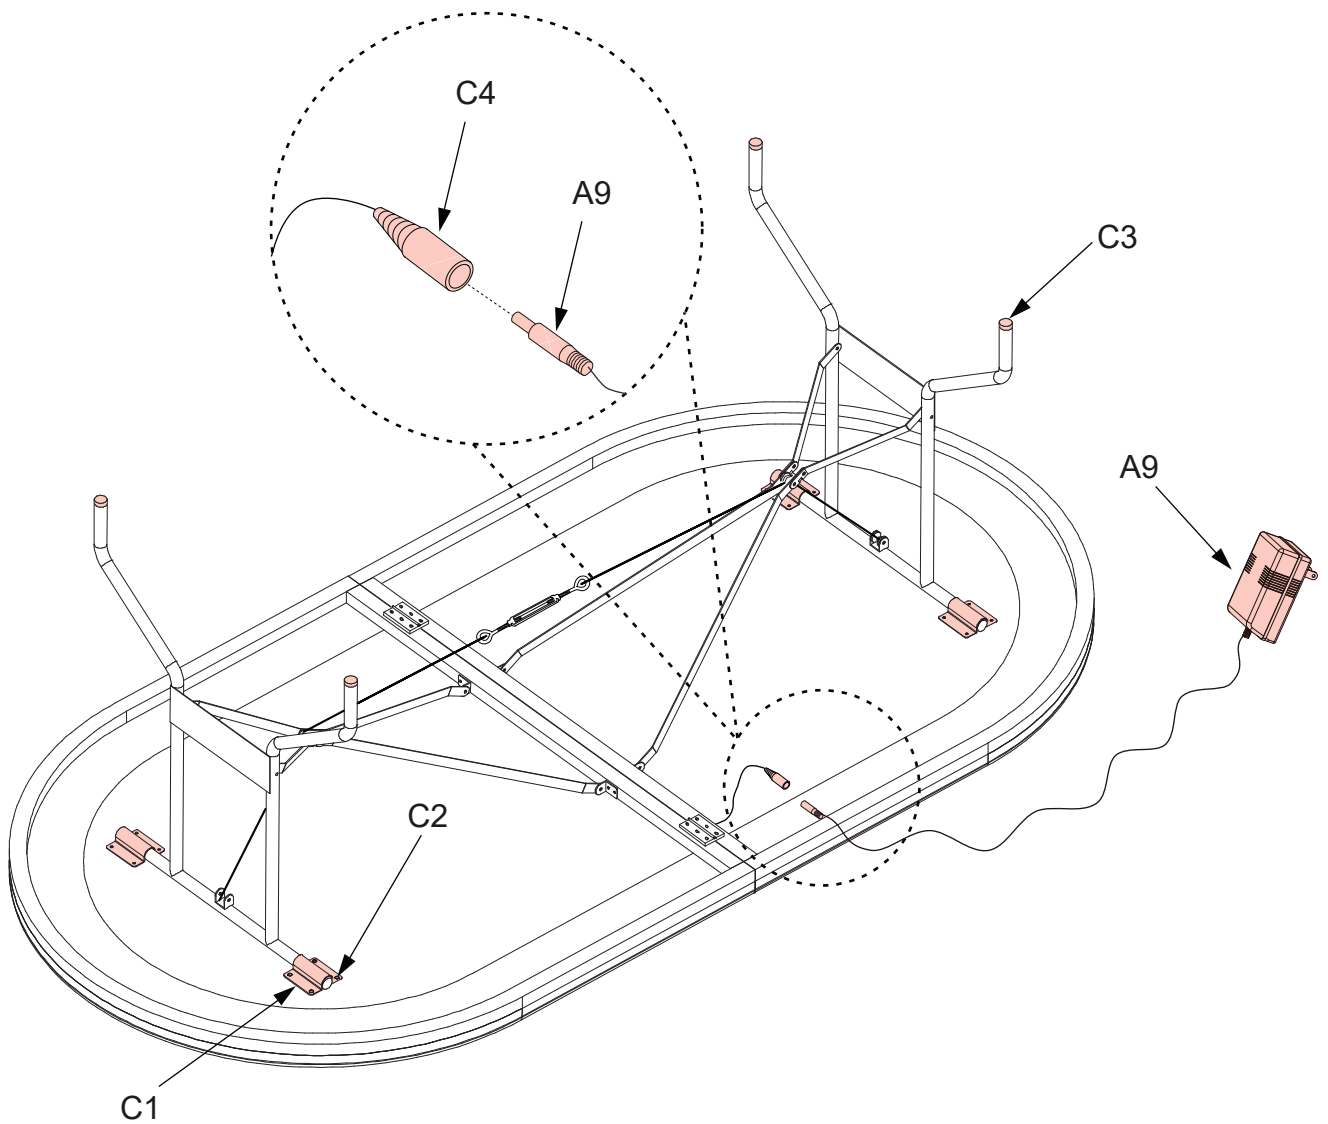 


**FIGURE 2**

## LIFT + ROTATE THE TABLE Always use proper lifting techniques

### ⚠ CAUTION

 
AT LEAST TWO OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

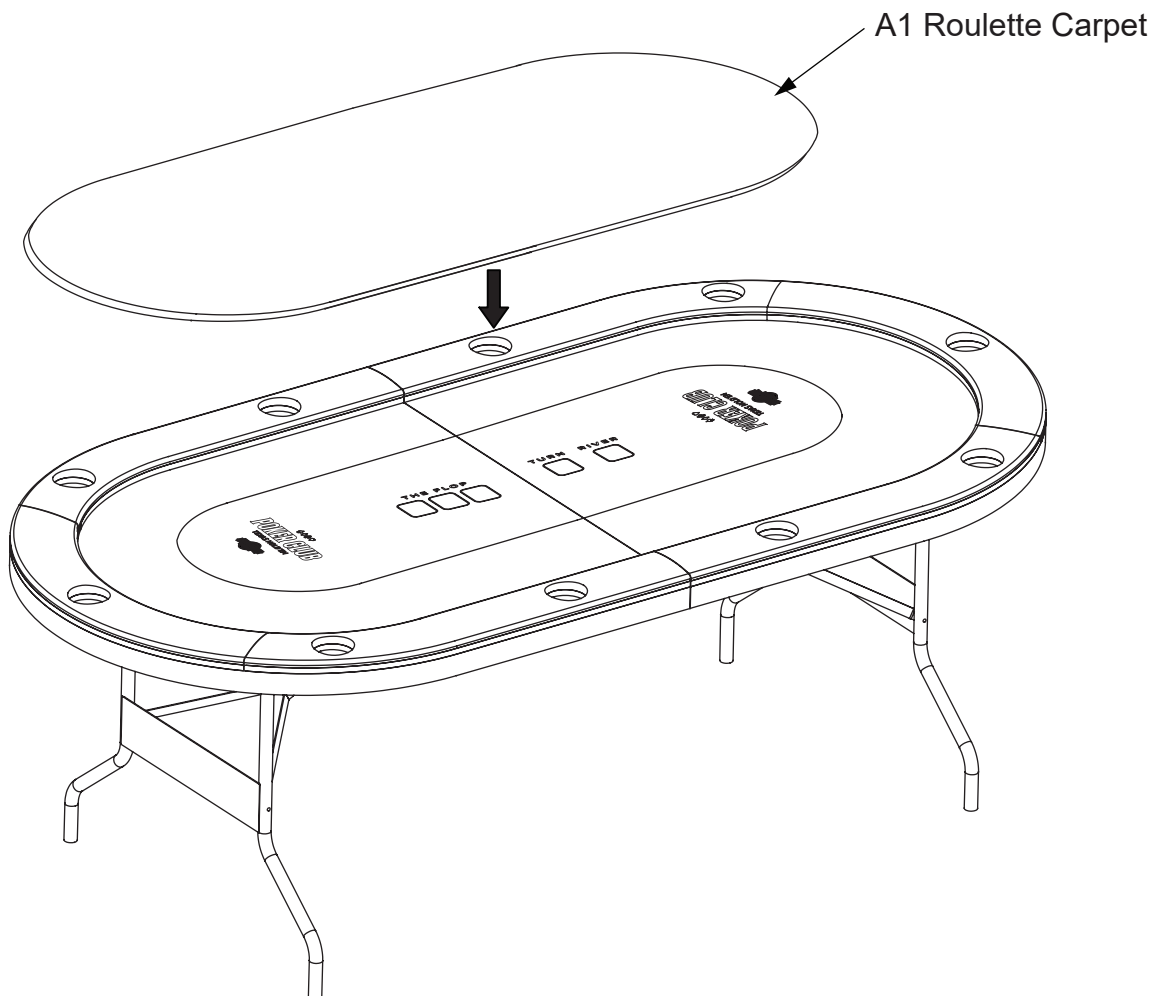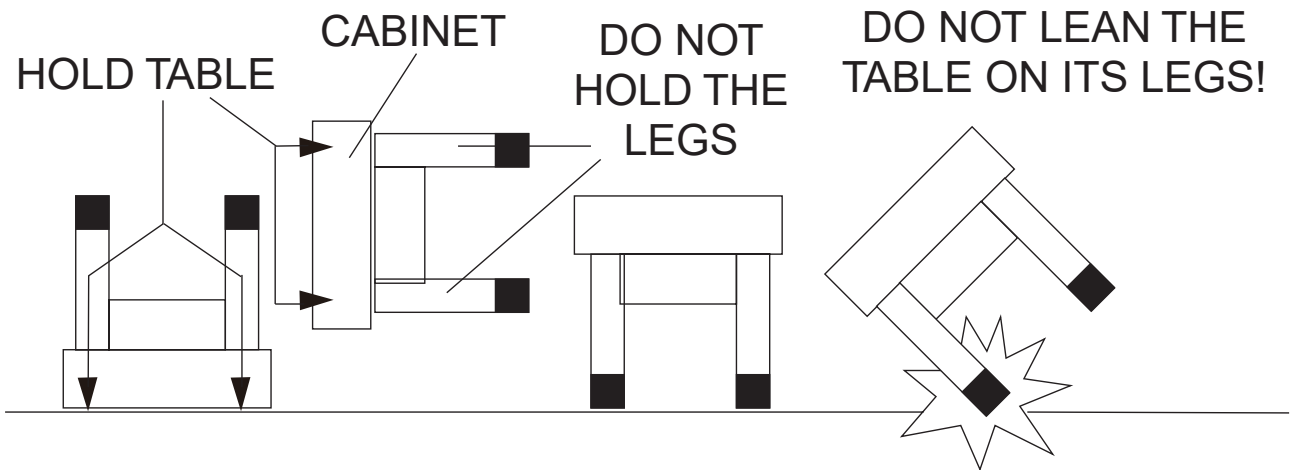




# INSTRUCTIONS FOR LEVELING YOUR TABLE

 - When the steel wire is too tight, place the side edge of the Table against the ground first (pay attention to protecting the product), then fold it inward and loosen the steel wire for adjustment.

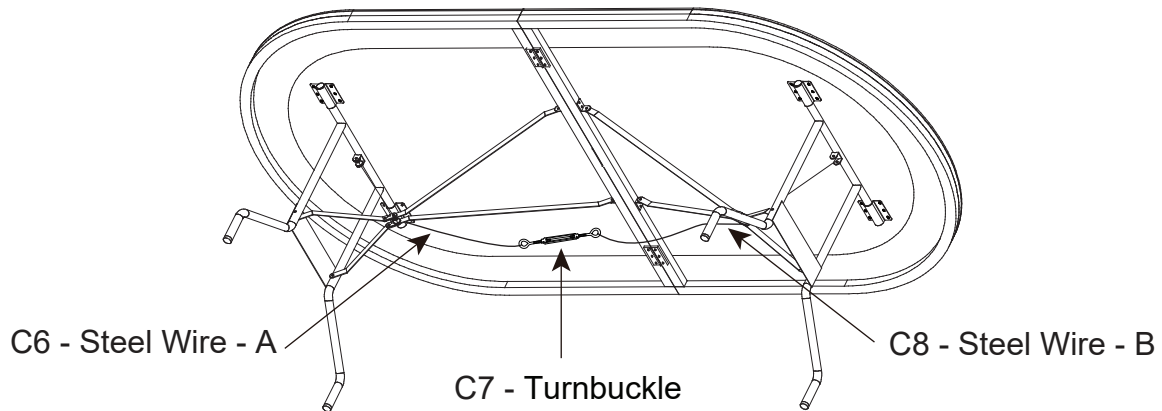


- ADJUST CONCAVE TABLE:**

 Push the turnbuckle inwards until the playfield is even.

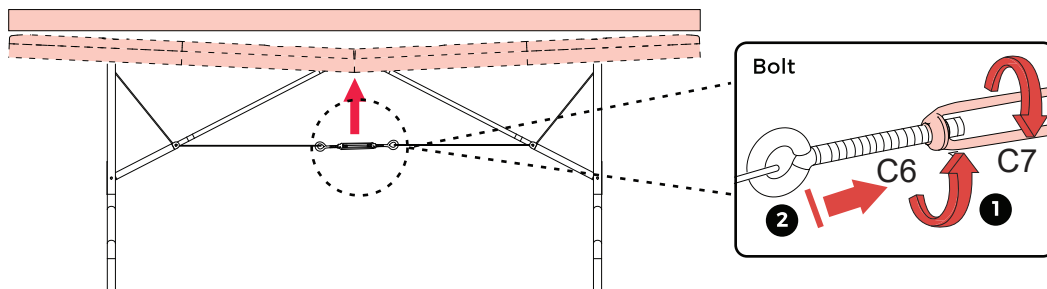

- ADJUST CONVEX TABLE:**

 Push the turnbuckle away from until the playfield is even.

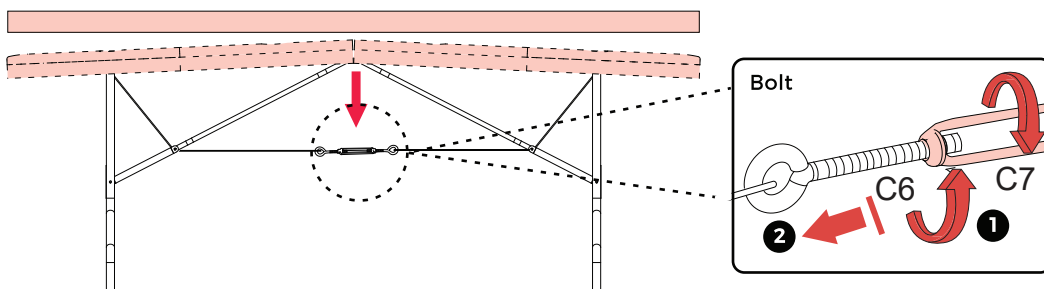

Congratulations! You have now assembled your table. Please note the Care and Use instructions below to ensure many years of trouble free use of your game table.

## CARE AND USE FOR YOUR PRODUCT

1. To clean the top rails, wipe the surface with a soft, damp cloth. Avoid abrasive cloths.
2. To clean the playing surface and carpet, use a lint roller.
3. This product is intended for **INDOOR** use only.
4. The purchase of a table cover will both protect and help keep clean the entire top of the table.
5. Use a carpenters level to properly level the table using the enclosed P10 leg leveler.
6. **DO NOT** drag the table when moving it. This will damage the legs.
7. **DO NOT** set drinks on the table.
8. **DO NOT** sit, climb or lean on the table.

## PRODUCT PARTS LIST FOR MODEL # AL4550W/F

| Key # | Part #      | Description               | Qty. |
|-------|-------------|---------------------------|------|
| P1    | AL4550SYP1  | Main Cabinet              | 1    |
| A1    | AL4550SYA1  | Roulette Carpet           | 1    |
| A2    | AL4550SYA2  | Blind Button              | 4    |
| A3    | AL4550SYA3  | Poker Chip                | 300  |
| A4    | AL4550SYA4  | Roulette Wheel            | 1    |
| A5    | AL4550SYA5  | Dice                      | 2    |
| A6    | AL4550SYA6  | Metal Ball                | 2    |
| A7    | AL4550SYA7  | Metal Ball Bottle         | 1    |
| A8    | AL4550SYA8  | Chip Rake                 | 1    |
| A9    | AL4550SYA9  | Adapter                   | 1    |
| A10   | AL4550SYA10 | Playing Cards             | 1    |
| A11   | AL4550SYA11 | Storage Bag               | 1    |
| A12   | AL4550SYA12 | Mesh Bag                  | 1    |
| C1    | AL4550SYC1  | U-Bracket                 | 4    |
| C2    | AL4550SYC2  | Phillips Round Head Screw | 16   |
| C3    | AL4550SYC3  | Outer Leg Cap             | 4    |
| C4    | AL4550SYC4  | Connect Wire              | 1    |
| C5    | AL4550SYC5  | Toggle latch              | 1    |
| K1    | AL4550SYK1  | Hardware Kit              | 1    |
| M1    | AL4550SYM1  | Owner's Manual            | 1    |

# 90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

## NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.