



Congratulations on the purchase of your new Prince Table Tennis table. Our products are designed and manufactured to give you years of game playing enjoyment.

☒ *KEEP BOX AND PACKING MATERIAL UNTIL TABLE HAS BEEN COMPLETELY ASSEMBLED.*

☒ *ALL DAMAGE MUST BE REPORTED TO DMI WITHIN TEN DAYS OF RECEIPT.*

☒ *If you have any problems with your new product,*

PLEASE DO NOT RETURN IT TO THE STORE.

Please contact us:

1.800.399.4402

FAX: 215.283.9573

Please have your model number when inquiring about parts.

Or write to:

DMI Sports

Customer Service

1300 Virginia Dr., Suite 401

Fort Washington PA, 19034

Please visit our web site at:

www.dmisports.com

When contacting DMI Sports, please provide your model number and item number (if applicable) if requesting a replacement part.

Item numbers can be found inside this owners manual.

Your Model Number **PT700**

Your model number is also located on the original carton. These instructions are also available online at: www.dmisports.com.

IMPORTANT!

Please Keep Your Instructions! (You will need your Model number should you need to contact us.)

Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this game. Please refer to the Parts Identifier on the following page and be sure that all parts have been included.

This product is manufactured according to the ITTF standards (International Table Tennis Federation), and includes national and international patents.

DMI Sports Inc. warrants this product for one year from the purchase date for any manufacturing or material defect. High-density chipboard is warranted for one year from date of purchase. Although we at DMI Sports are dedicated to giving our customers the highest quality products, occasionally a part may be missing. If you are missing a part, or if you have any questions, please call our customer service department at 1.800.399.4402 Mon-Fri between the hours of 9:00am and 5:00pm E.S.T; or you can reach us at: www.dmisports.com.

Do not return the game to the store. Please contact us first at: 1.800.399.4402 or on our website at: www.dmisports.com.

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS TENNIS TABLE






TOOLS REQUIRED FOR ASSEMBLY :

Screwdriver , Wrench Set : NOT INCLUDED

PARTS IDENTIFIER


ASSEMBLY PARTS

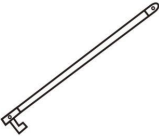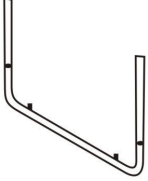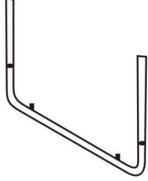P1	QYT. X 4	P2	QYT. X 2	P3	QYT. X 4	P4	QYT. X 6
	RPPT700-CASTER CASTER WITH LOCK		RPPT700-LOCK GRAVITY LOCK	(+ 4 Pre-installed) 	RPPT700-BRACKET METAL BRACKET		RPPT700-BUSHING BUSHING
P5	QYT. X 2	P6	QYT. X 2	P7	QYT. X 8	P8	QYT. X 8
	RPPT700-STOPTUB LINKAGE TUBE WITH STOP BRACKET		RPPT700-TUBE LINKAGE TUBE		RPPT700-60BOLT 6X60mm HEX HEAD BOLT		RPPT700-50BOLT 6X50mm HEX HEAD BOLT
P9	QYT. X 18	P10	QYT. X 24	P11	QYT. X 38	P12	QYT. X 2
	RPPT700-NUT 6mm LOCKING NUT	(+ 24 Pre-installed) 	RPPT700-SCREW 4X10mm HEX HEAD SCREW		RPPT700-WASHER 6mm WASHER		RPPT700-ULEG SHORT"U"STYLE LEG
P13	QYT. X 2	P14	QYT. X 2	P15	QYT. X 2	P16	QYT. X 1
Pre-installed With the caps and pin RPPT700-OLEG 	1" OUTER LEG	(With the caster insert and pin) RPPT700-ILEG 	1" INNER LEG		RPPT700-HALF TABLE HALF	Pre-installed 	RPPT700-STRAP SAFETY STRAP
P17	QYT. X 1						
	RPPT700-PADLPKT PADDLE POCKET						

ASSEMBLY INSTRUCTION



We recommend that at least two strong adults work together to assemble this table.

- * The table will be assembled upside down and then turned over onto its legs. This is a very heavy table and turning it over will require at least two strong adults.
- * We suggest that you use the bottom carton as a clean flat work area to protect the table.

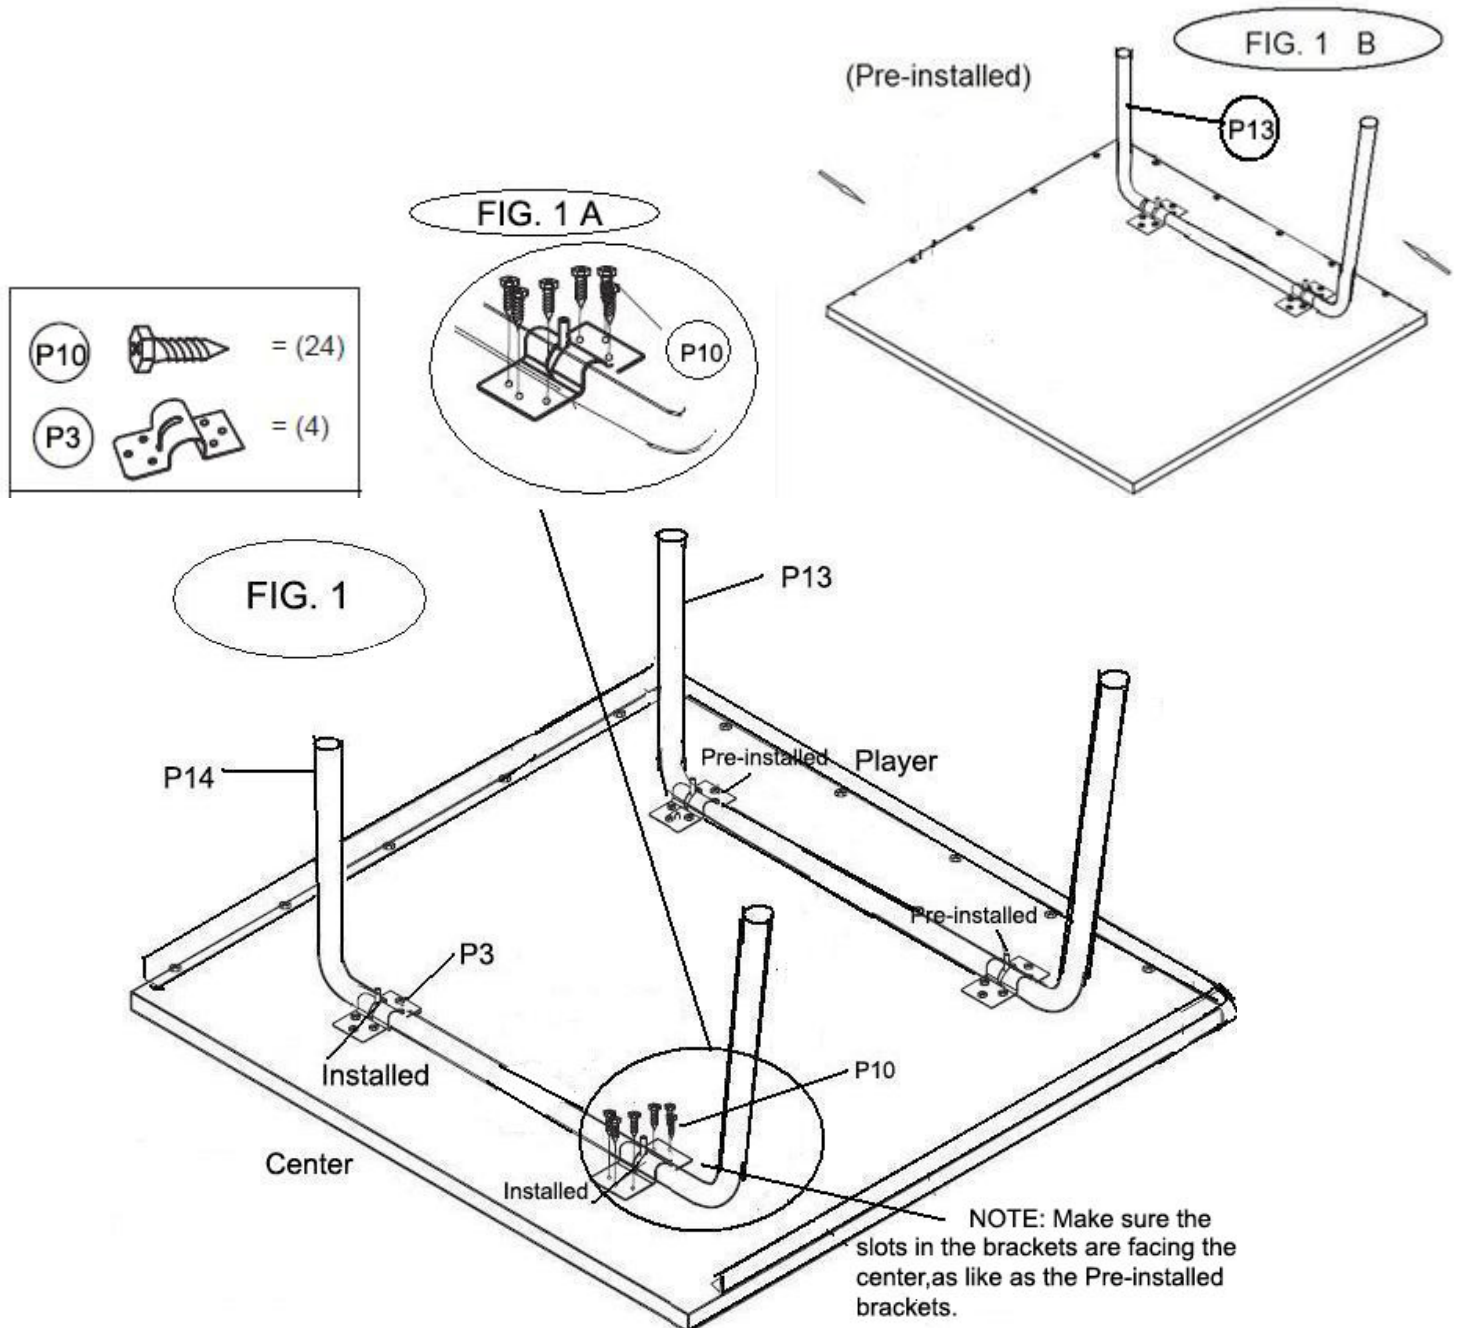


STEP 1 (FIG. 1)

- * Make sure the Pre-installed Metal Brackets (#P3) are attached over the Outer Leg (#13).
- * Attached the two Metal Brackets (#P3) over the ends of the Inner Leg (#P14) using six Screws (#P10) per bracket .See Fig. 1 and Fig.1 A. **NOTE:** Make sure the slots in the brackets are facing the center.
- * Repeat the above steps for the other table half.

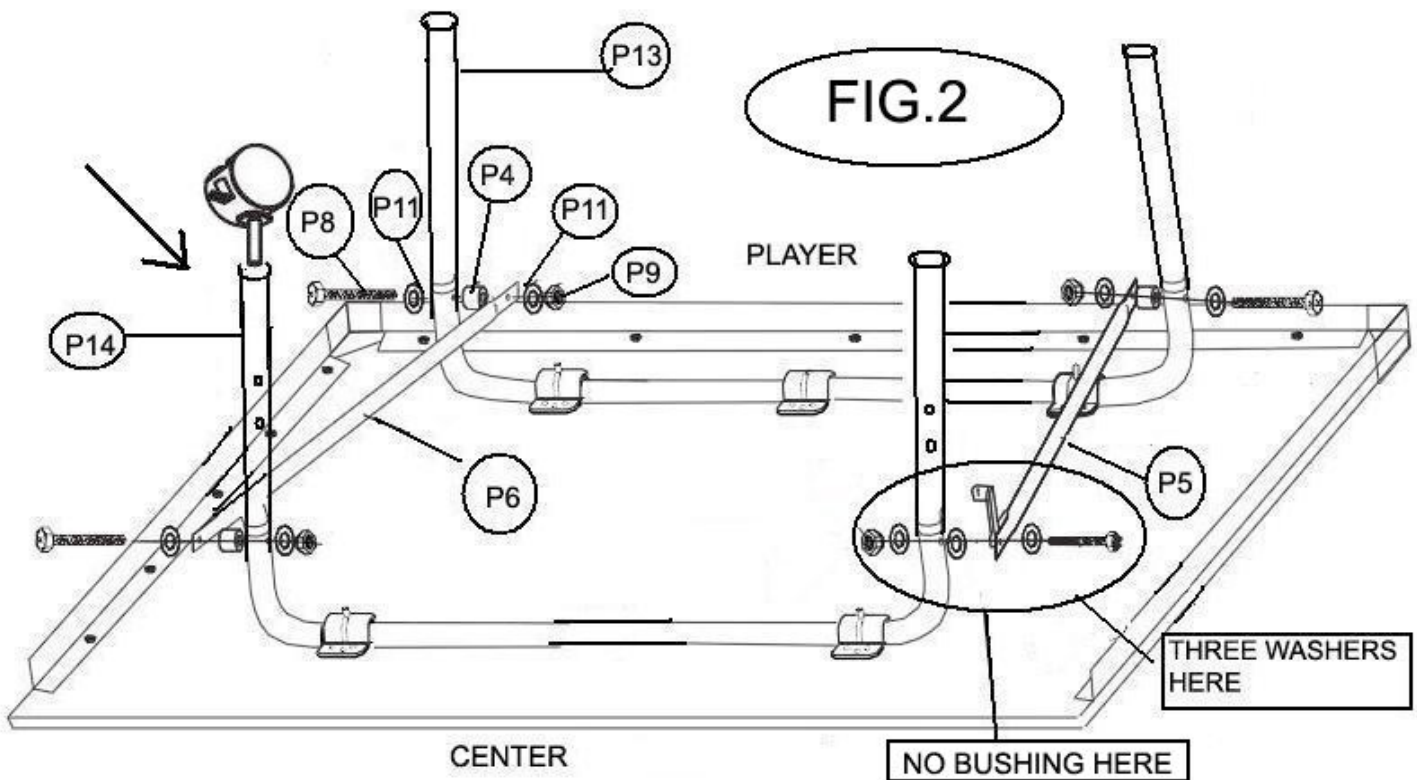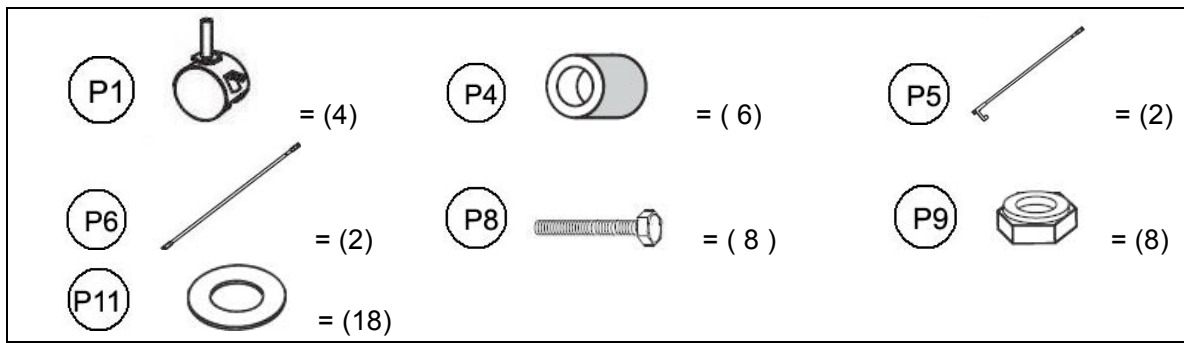


STEP 2 (FIG.2)

- * Attach one end of the Linkage Tube(#P6) on the inside of the Outer Leg (#P13) and the other end of the Linkage Tube to the outside of the Inner Leg (#P14) using one Bolt (#P8),two washers (#P11),one Bushing (#P4) and one Locking Nut (#P9) in the order shown in Fig.2.
- * Attach one of the Linkage Tube with stop bracket(#P5) to the inside of the Outer Leg(#P13) using one Bolt(#P8), three Washers(#P11) and one Nut (#P9). See Fig.2.
- Note:** Do not use a Bushing when attaching the Linkage Tube with Stop Bracket (#P5).See Fig. 2.
- * Place one Caster with Lock (#P1) into each Inner Leg (#P14).
- * Repeat the above steps for the other table half.

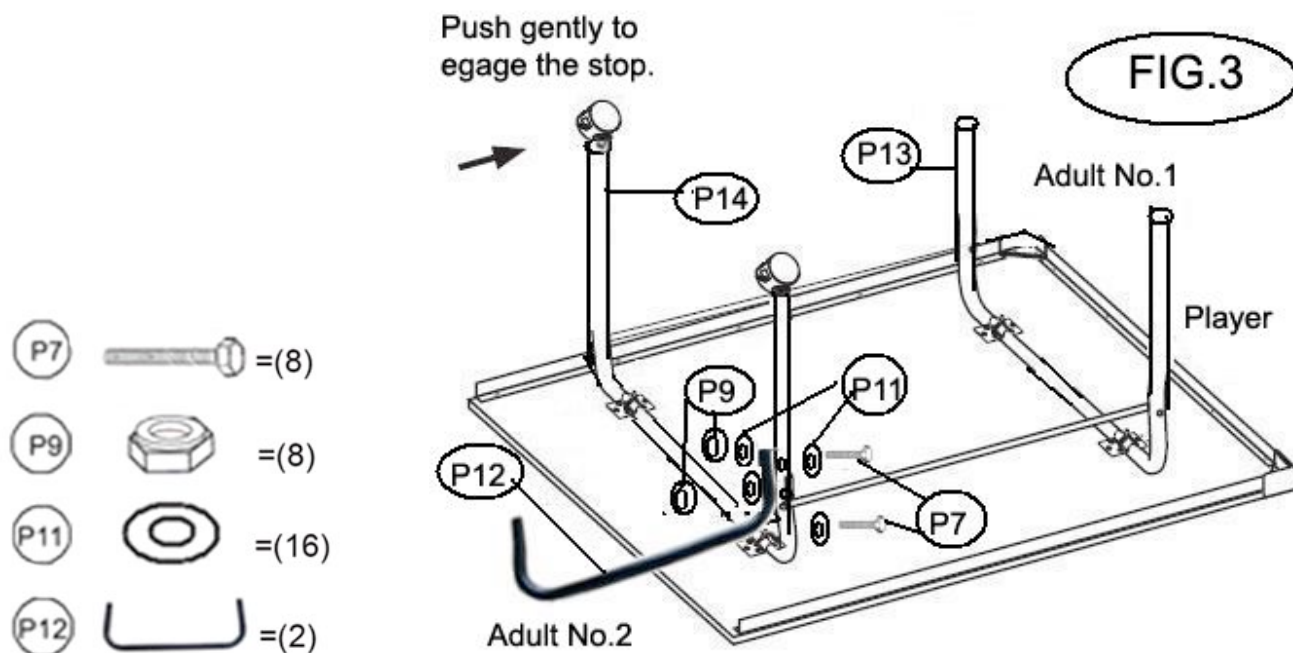


STEP 3 (FIG. 3)

- * Attach one Short "U"Style Leg (#P12) to the Inner Leg (#P14) with two Bolt(#P7),four Washers(#P11) and two Nut (#P9) per Short "U" Style Leg.See Fig. 3. Repeat the step for other side.
- * Before turning the table over, make sure to push the Inner Leg (#P14) towards the player end of the table in order to engage the table stop.
- * At least two strong adults are required to turn this table over.
- * Do not let the table rest on its side or its legs, or this may damage the table.
- * One person should stand at each end of the table and turn the table over completely so that it rests on its legs. See Fig. 3 and 4.
- * Repeat the above steps for the other table half.

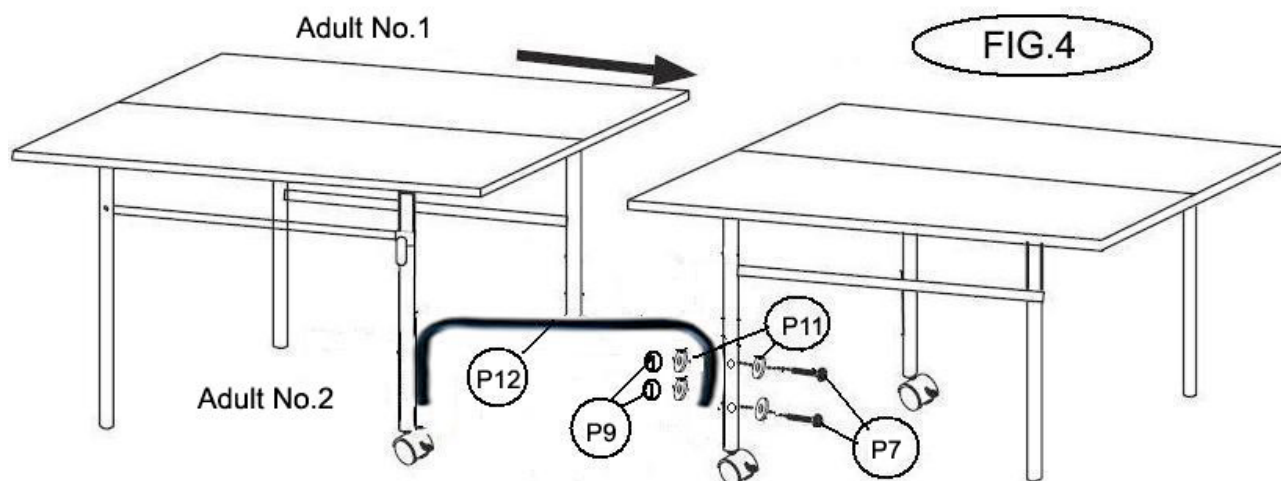


STEP 4(FIG. 4)

- * Standing at the sides of the table ,place the two table halves, so they are inches apart.
NOTE: Be careful that you do not push either half backwards as this may cause the legs to fold.
- * Attach the Short" U"style Leg (#P12)to Inner Leg (#P14) on the opposite table half using two Bolt (#P7), four Washers (#P11) and two Locking Nut (#P9) as shown in Fig.5 .Repeat the above steps for the other side.

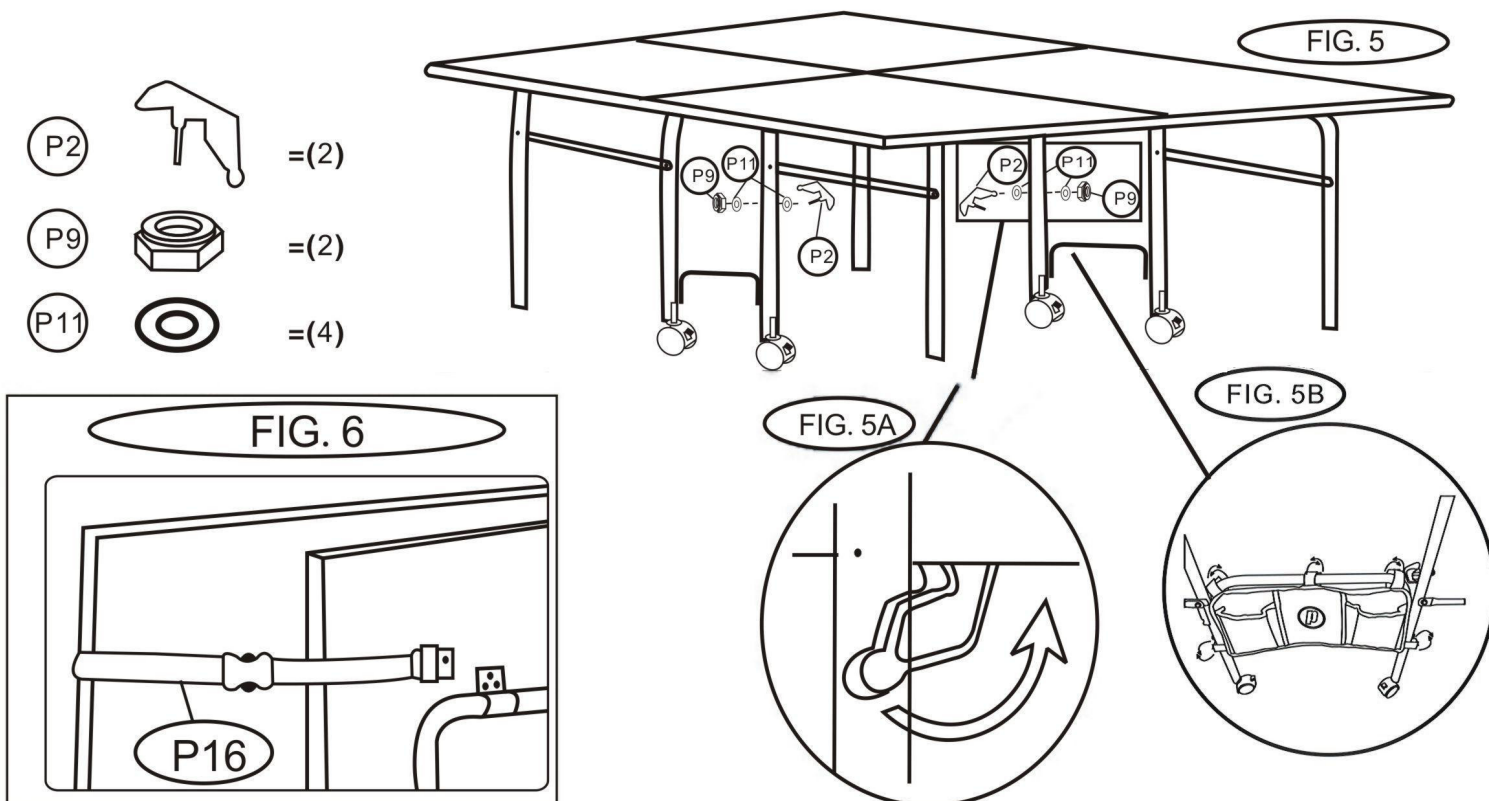

STEP 5 (FIG.5)

- * Attach the Gravity Lock (#P2) to the Inner Leg (#P14) with two Washers (#P11) and one Nut (#P9) per Gravity Lock. See Fig. 5. And Fig. 5A.
- * Repeat the above step for the other side.
- * Attach the Paddle Pocket (#P17) to the Short "U" Leg (#P12), see FIG. 5B

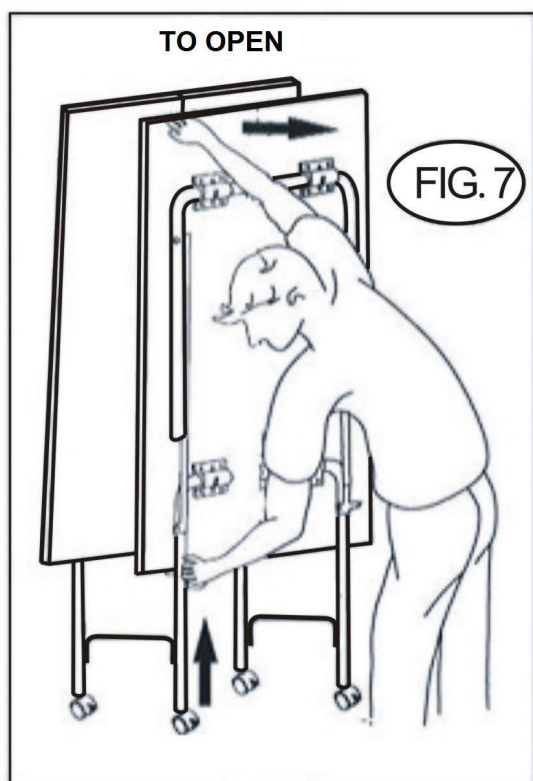

WARNING!

- This is a very heavy table, do please close the safety strap (#P16) while the table is closed. see Fig. 6.
 - To close the table: Raise the end of the table without the net post and close the legs until the Gravity Lock Latches onto the table.
 - To open the table: Release the safety strap and raise the Gravity Lock. See Fig. 7.
 - This is not a child's toy. Adult supervision is required for children playing.
- please read instructions carefully. proper use of this set can avoid damage or injury.
- FOR INDOOR USE ONLY.



RECOMMENDATION OF USE AND PRECAUTIONS

Anyone using or handling this table tennis table must always follow the illustrated and the operation instructions.

1. Handling the table, (Assembly, open, close, or to store) should always be done by two adults to prevent accident or injury.
2. Be sure that no persons or objects are in the way of the boards when opening the table.
3. Do not put heavy objects on the table.
4. Do not sit on the table.
5. Do not clean the table with solvents or any other aggressive product because it could damage the paint finish.
6. Do not use sharp objects on the board or painter surface.
7. If the table is used for purposes other than playing table tennis, cover the surface to prevent damage.
8. The functioning and storage of this product should always be supervised by an adult.
9. Do not store or handle the table on an unstable floor surface.
10. If safety device malfunction occurs, secure table top until the problem is solved.
11. To extend the life of this product, (outdoor table or indoor table) protect it from moisture or severe climate changes.

Care and Maintenance

Cleaning your table

Use a soft damp (not wet) cloth only. **DO NOT USE ANY CHEMICALS OR ABRASIVE OR CLEANING PRODUCTS** on the playing surface.

Maintenance of your table

All moving parts must be oiled including the pivot points. This will insure ease of use and safety of your table.

This table must be stored indoors to avoid damage to the surface. The dampness temperature changes can cause wood to warp, swell or blister.

PARTS RE-ORDER FORM

PT700 Table Tennis Table

Send this form along with your
check or money order payable to:

DMI SPORTS

1300 Virginia Dr., Suite 401
Fort Washington, PA 19034

www.dmisports.com

DATE: _____

NAME: _____

ADDRESS: _____ PHONE: _____

CITY: _____ STATE: _____ ZIP CODE: _____

[illegible]