



TRIUMPH SPORTS ADVENTURE BASKETBALL SHOOTOUT

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: 45-7003W/F

Date Code: 2 - 45-7003W/F- - JL

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

***Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.***

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least two capable adults are required to assemble this product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult.

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking , weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

T1 Allen Wrench (provided)

Phillips Screwdriver

Pliers

 
ASSEMBLY TIPS

Make sure you understand the following tips before you begin to assemble your basketball shootout.


1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

HARDWARE IDENTIFIRE


(To Scale)




H1 - M6 x 35mm
Allen Head Bolt
(1 pc)

 

H2 - M6 x 90mm
Allen Head Bolt
(2 pcs)

 

H3 - M6 x 25mm
Allen Head Bolt
(16 pcs)

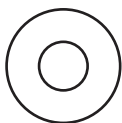 

H4 - M6 x 15mm
Flat Washer
(3 pcs)



 
H5 - M6
Wing Nut
(19 pcs)



H6 - Plastic
Bushing
(2 pcs)



H7 - M6
Lock Washer
(16 pcs)

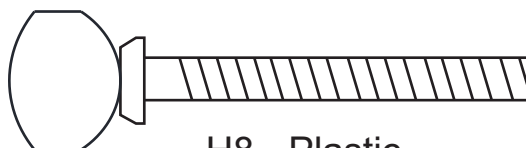


H8 - Plastic
Wing Bolt to
attach P17
Control Box
(1 pc)




T1 - Allen Wrench
(Not to Scale)
(1 pc)

 
PARTS IDENTIFIER (Not to Scale)

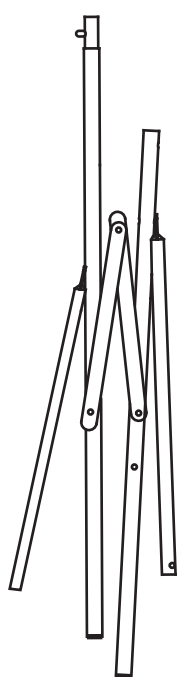


P1 - Left Lower
Tube Assembly
(1 pc)

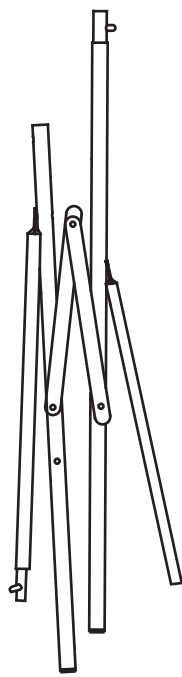 


P2 - Right Lower
Tube Assembly
(1 pc)

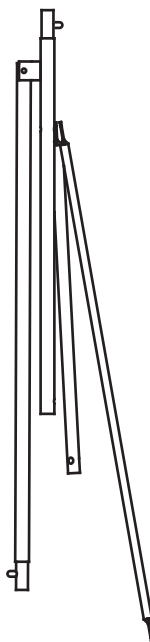 


P3 - Left Middle
Tube Assembly
(1 pc)

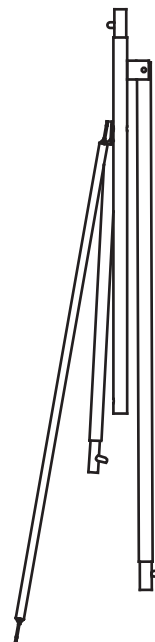 


P4 - Right Middle
Tube Assembly
(1 pc)

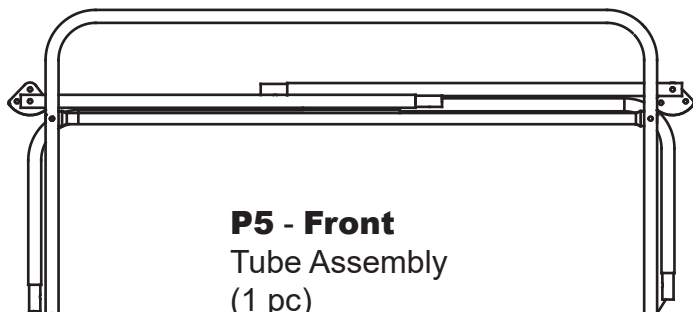 


P5 - Front
Tube Assembly
(1 pc)

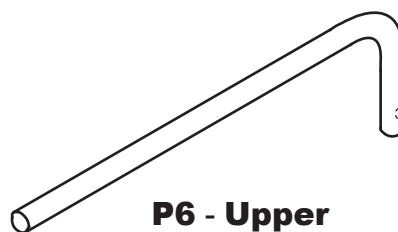 


P6 - Upper
Tube (2 pcs)

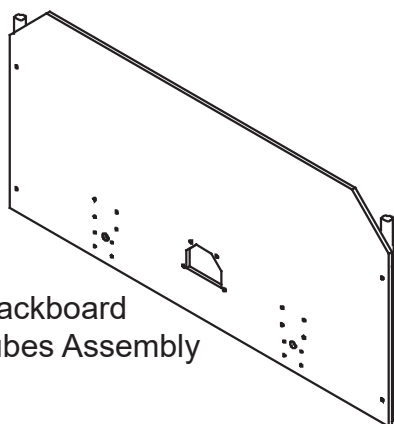 

 P7 - Backboard
with Tubes Assembly
(1 pc)

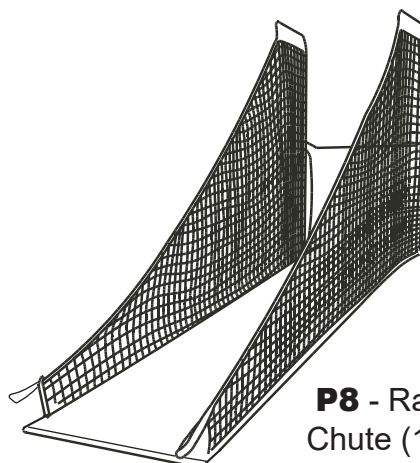


P8 - Ramp
Chute (1 pc)

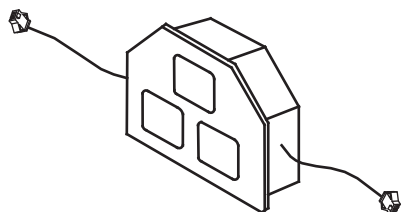 

P9 - Electronic Scorer (1 pc)

 
3 pcs AA Batteries Required ,
Not Supplied

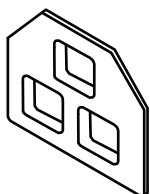


P10 - Electronic Scorer Face Plate (1 pc)



 
P11 - Mechanical Scoring Arm (2 pcs)

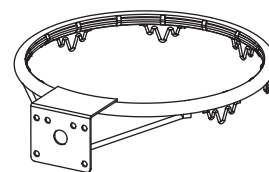


P12 - Rim (2 pcs)

 

P13 - Rim Net (2 pcs)

 


P14 - Rim Support Plate (2 pcs)

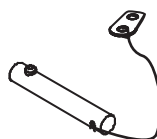 


P15 - Locking Pin (2 pcs)



 
P16 - Scoring Control Box Wire (1 pc)

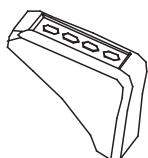

P17 - Control Box (1 pc)

 


 P18 - Mechanical Scoring Arm Support Plate (2 pcs)

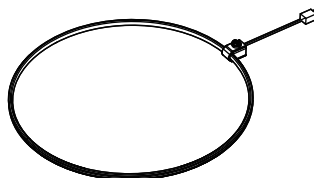


P19 - LED Light Strip (2 pcs)
(P-installed to P12 Rim)

 
ACCESORY IDENTIFIER (Not to Scale)

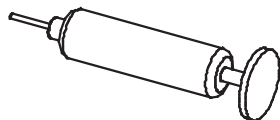

A1 - Air Pump with Needle (1 pc)

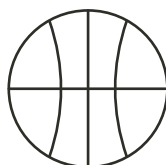 

A2 - Basketball (4 pcs)

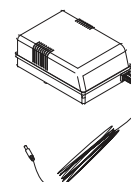 

A3 - A/C Adapter (1 pc)

Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts List.

NOTE: STEP 1, 2 AND 3 requires a second adult to help “hold” the assemblies as being assembled

NOTE: When unfolding assemblies, be careful not to bend any parts.

PARTS REQUIRED:

- 1 pc - **P1 Left Lower Tubes Assembly**
- 1 pc - **P2 Right Lower Tubes Assembly**

STEP 1


Connect **P2 - Right Lower Tubes Assembly** to **P1 - Left Lower Tubes Assembly** using Spring Lock as shown in **FIGURE 1**.

NOTE: STEP 1, 2 and 3 requires a second adult to help “hold” the assemblies as being assembled.

WARNING / PINCH HAZARD!

Keep hands and fingers away from hinge until STEP 3 is complete and the hinge is in a controlled position.

 FIGURE 1

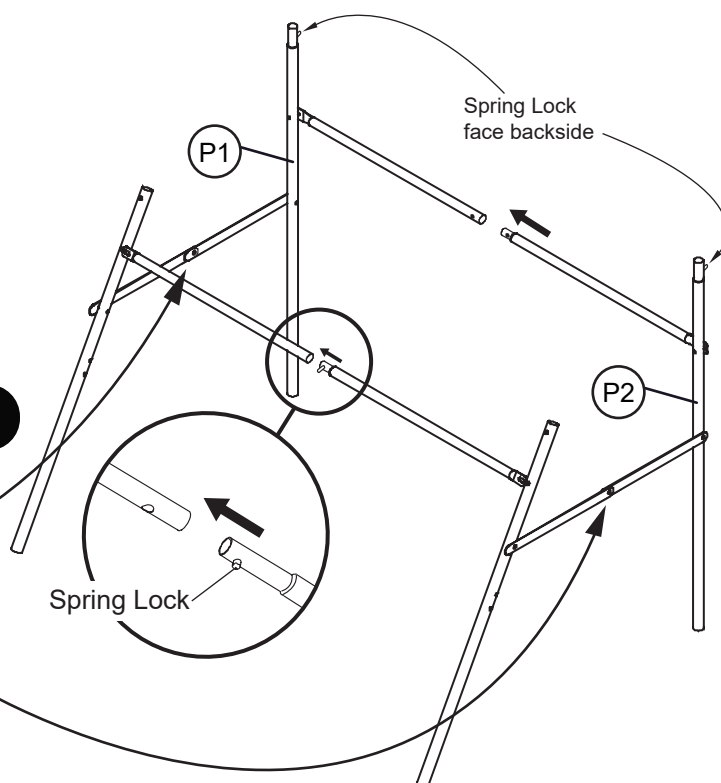

PARTS REQUIRED:


- 1 pc - **P3 Left Middle Tubes Assembly**
- 1 pc - **P4 Right Middle Tubes Assembly**

STEP 2

Connect **P4 - Right Middle Tubes Assembly** to **P3 - Left Middle Tubes Assembly** using Spring Lock as shown in **FIGURE 2**.

NOTE: The only assembly in this step is connecting this spring lock.

 FIGURE 2

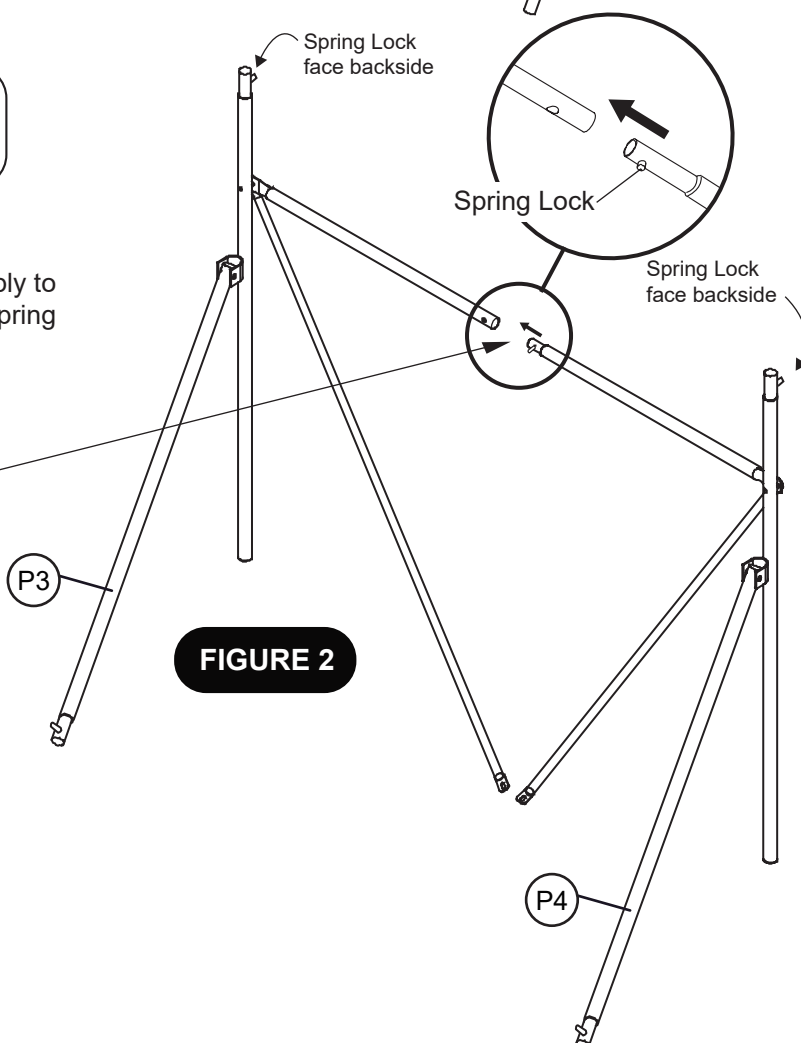

PARTS REQUIRED:


- 1 pc - **H1** M6 x 35 mm Allen Head Bolt
- 1 pc - **H4** Flat Washer
- 1 pc - **H5** Wing Nut

STEP 3

Connect Middle Tubes Assembly from **STEP 2** to Lower Tubes Assembly from **STEP 1** using Spring Locks. Next, using **H1** Bolt, **H4** Washer and **H5** Wing Nut connect frame braces as shown in **FIGURE 3** and **DETAIL A**.



NOTE: Lastly, these six points can now be tightened using a phillips screwdriver or Phillips Allen Wrench (T1) provided and pliers.

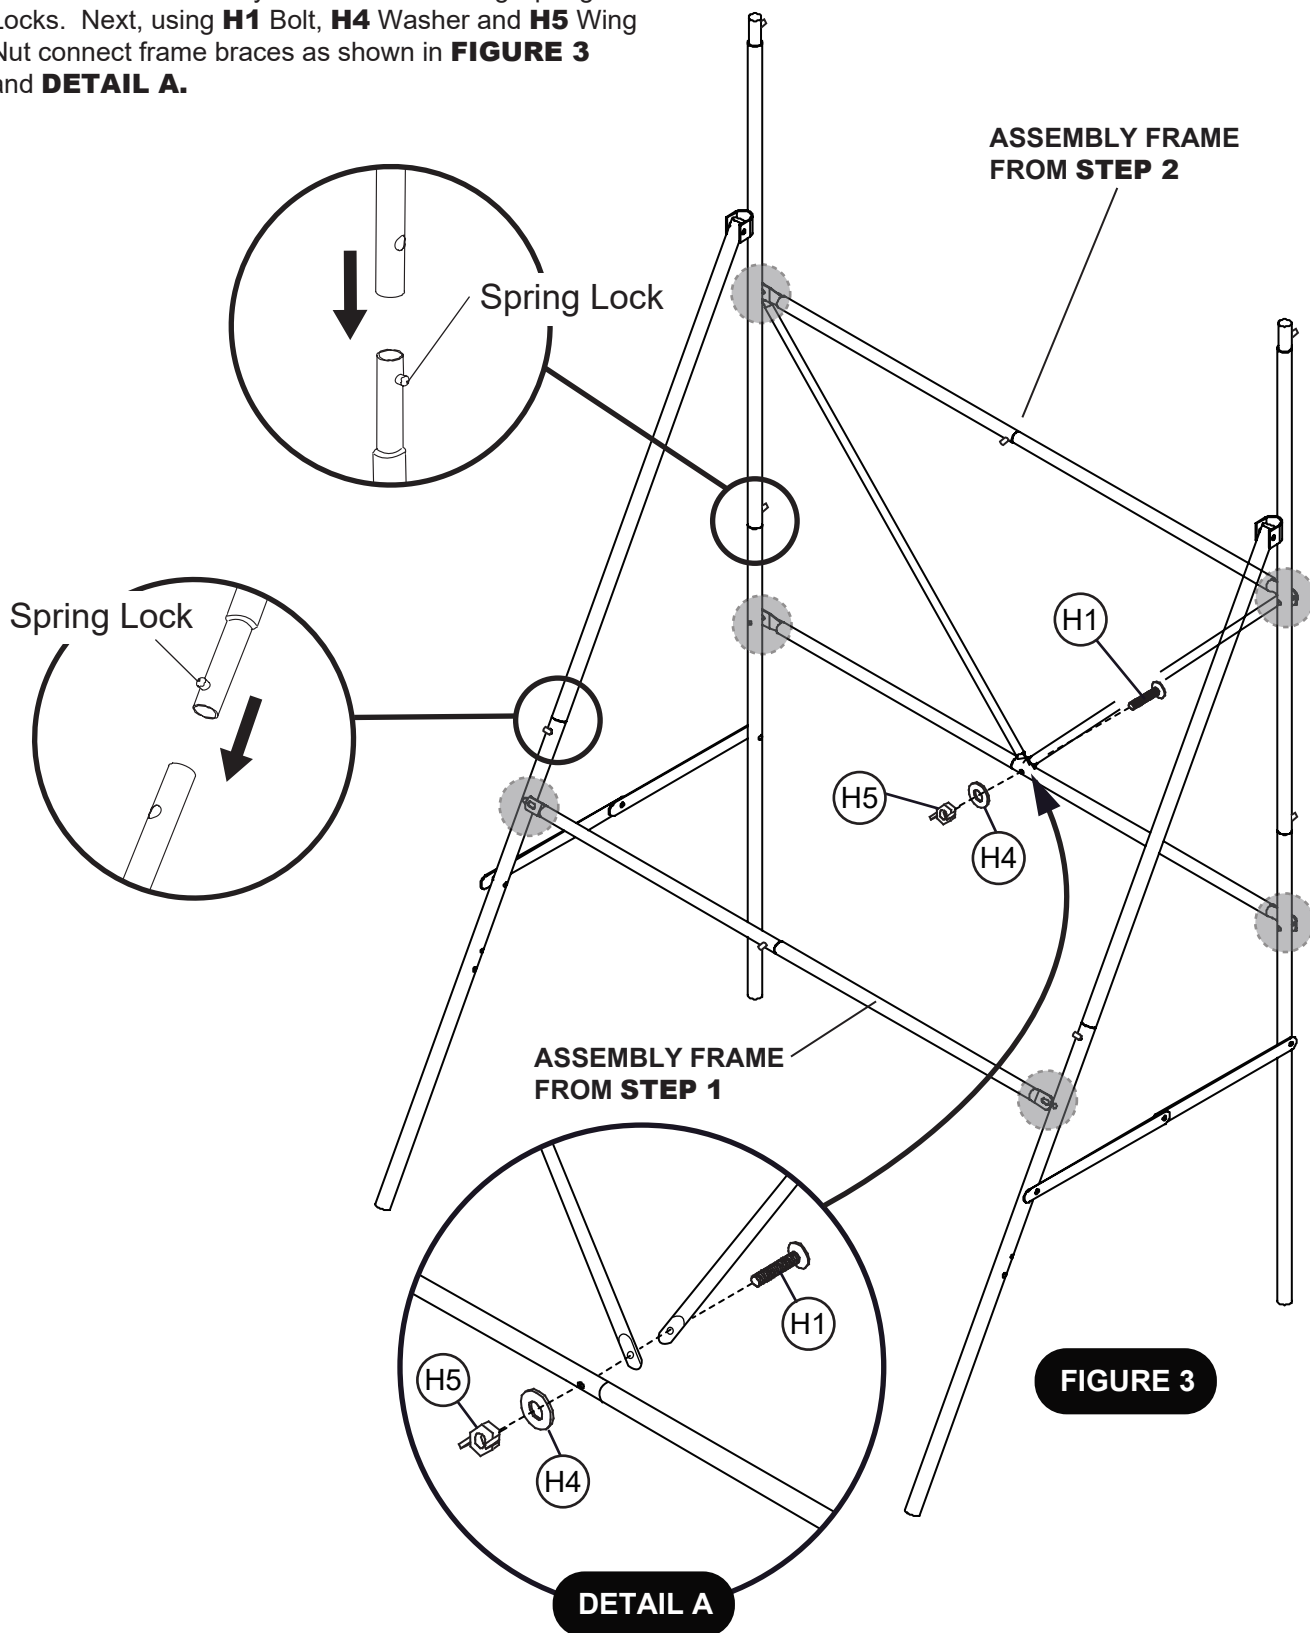 **FIGURE 3**

PARTS REQUIRED:

 
2 pcs - **H2** M6 x 90 mm Allen Head Bolt
2 pcs - **H4** Flat Washer
2 pcs - **H5** Wing Nut

2 pcs - **H6** Plastic Bushing
1 pc - **P5** Front Tube Assembly
2 pcs - **P15** Locking Pin

STEP 4


Connect **P5** Front Tube Assembly using Spring Lock as shown in **FIGURE 4**.

NOTE: Bungee Cord is an assembly aide and stays in place.

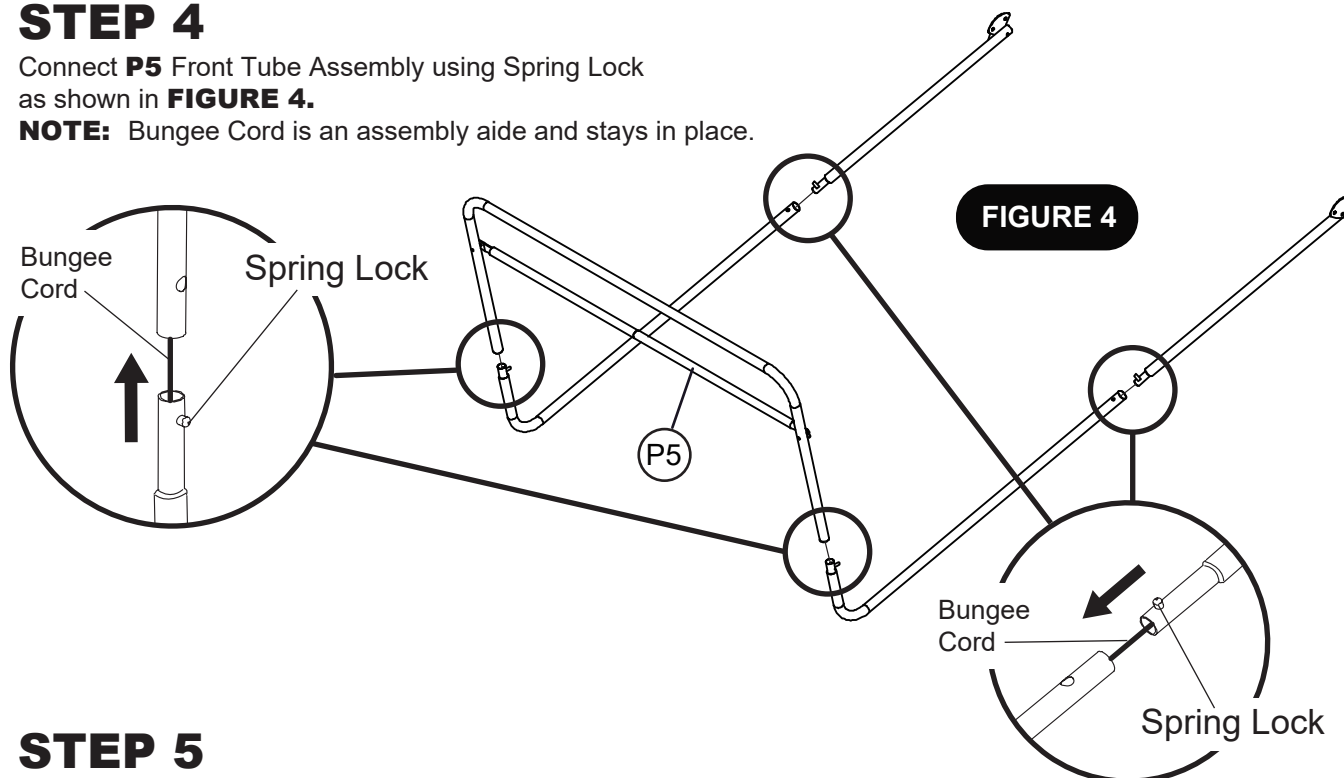

STEP 5

 Connect **P5** Front Tube Assembly to **P1** - **Left** Lower Tube Assembly and **P2** - **Right** Lower Tube Assembly using **H2** Bolts, **H4** Washers, **H6** Bushing and **H5** Wing Nuts as shown in **FIGURE 5** and **DETAIL B**.
Note: This is a pivot point. "Snug" tighten H5 Wing Nuts only. Make sure this assembly pivots freely.

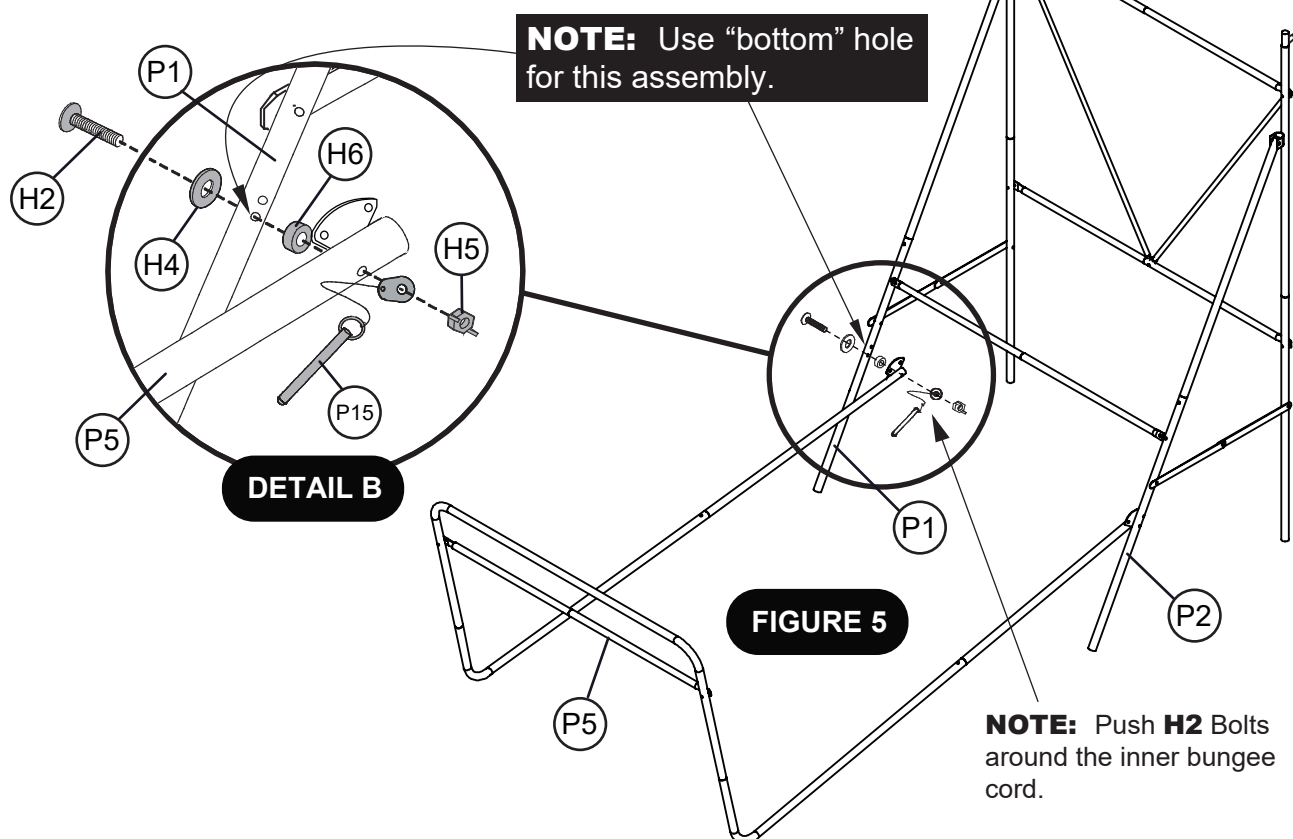

PARTS REQUIRED

1 pc - **P7** Backboard
 2 pcs - **P11** Mechanical Scoring Arm
 2 pcs - **P12** Rim
 2 pcs - **P14** Rim Support Plate
 2 pcs - **P18** Mechanical Scoring Arm Support Plate

16 pcs - **H3** Allen Head Bolt
 16 pcs - **H5** Wing Nut
 16 pcs - **H7** Lock Washer
 1 pc - **T1** Allen Wrench

STEP 6

Attach **P12** Rim & **P14** Rim Support Plate to the **P7** Backboard using **H3** Allen Head Bolt, **H7** Lock Washer and **H5** Wing Nut as shown in **FIGURE 6**.

Attach **P11** Mechanical Scoring Arms and **P18** Mechanical Scoring Arm Support Plate using **H3** Allen Head Bolt, **H7** Lock Washer and **H5** Wing Nut as shown in **FIGURE 6**.

Use **T1** Allen Wrench and Pliers (not provided) to tighten all Bolts.

NOTE:

P19 LED Light Strip plug must pass through **P7** Backboard and **P14** Rim Support Plate

NOTE:

P11 Mechanical Scoring sensor plug must pass through **P7** Backboard and **P18** Mechanical Scoring Arm Support Plate.

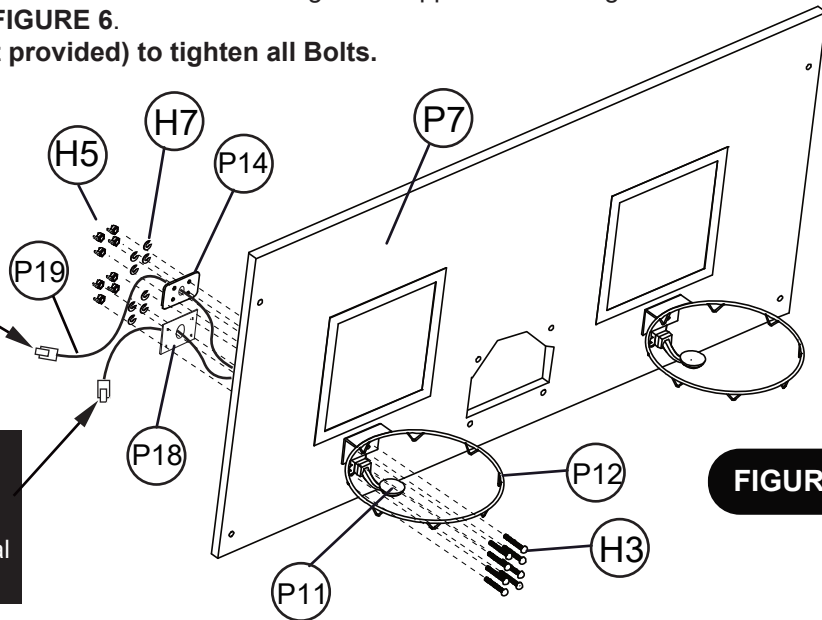 


FIGURE 6

PARTS REQUIRED:

1 pc - **P9** Electronic Scorer
 1 pc - **P10** Electronic Scorer Face Plate
 2 pcs - **P13** Rim Net

NOTE:

Remove Protective Coating before assembly.

STEP 7

Attach **P9** Electronic Scorer and **P10** Electronic Scorer Face Plate to **P7** Backboard as shown in **FIGURE 7**.

NOTE: Place **P10** Electronic Scorer Face Plate into **P7** Backboard first, then carefully “press” **P9** Electronic Scorer onto the four tabs on **P10**. You should hear the four tabs “snap” into place.

Loop the **P13** Rim Net through the ram horns on the **P12** Rims as shown in **FIGURE 7**.

Net does have a top and bottom, The long loops go to the top.

Note: This is a special rim net designed to avoid entanglement with the mechanical scoring arm.


 
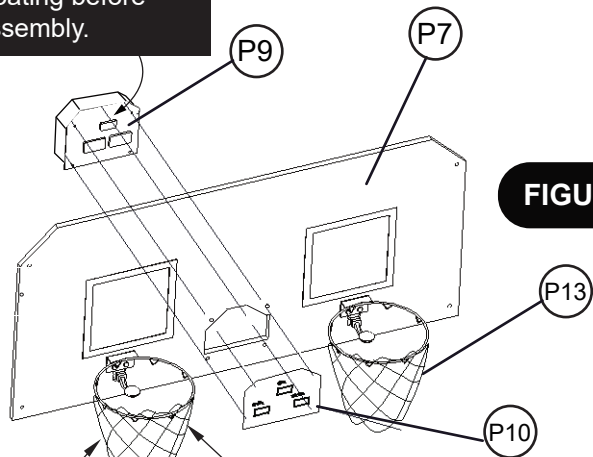 


FIGURE 7

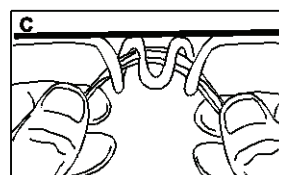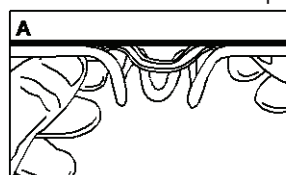 

PARTS REQUIRED:
2 pcs - **P6** Upper Tube

STEP 8

Attach Backboard assembly from **STEP 7** to Frame assembly from **STEP 5** as shown in **FIGURE 8**.

Attach **P6** Upper Tubes to **P7** Backboard assembly using Spring Lock as shown in **FIGURE 8**.

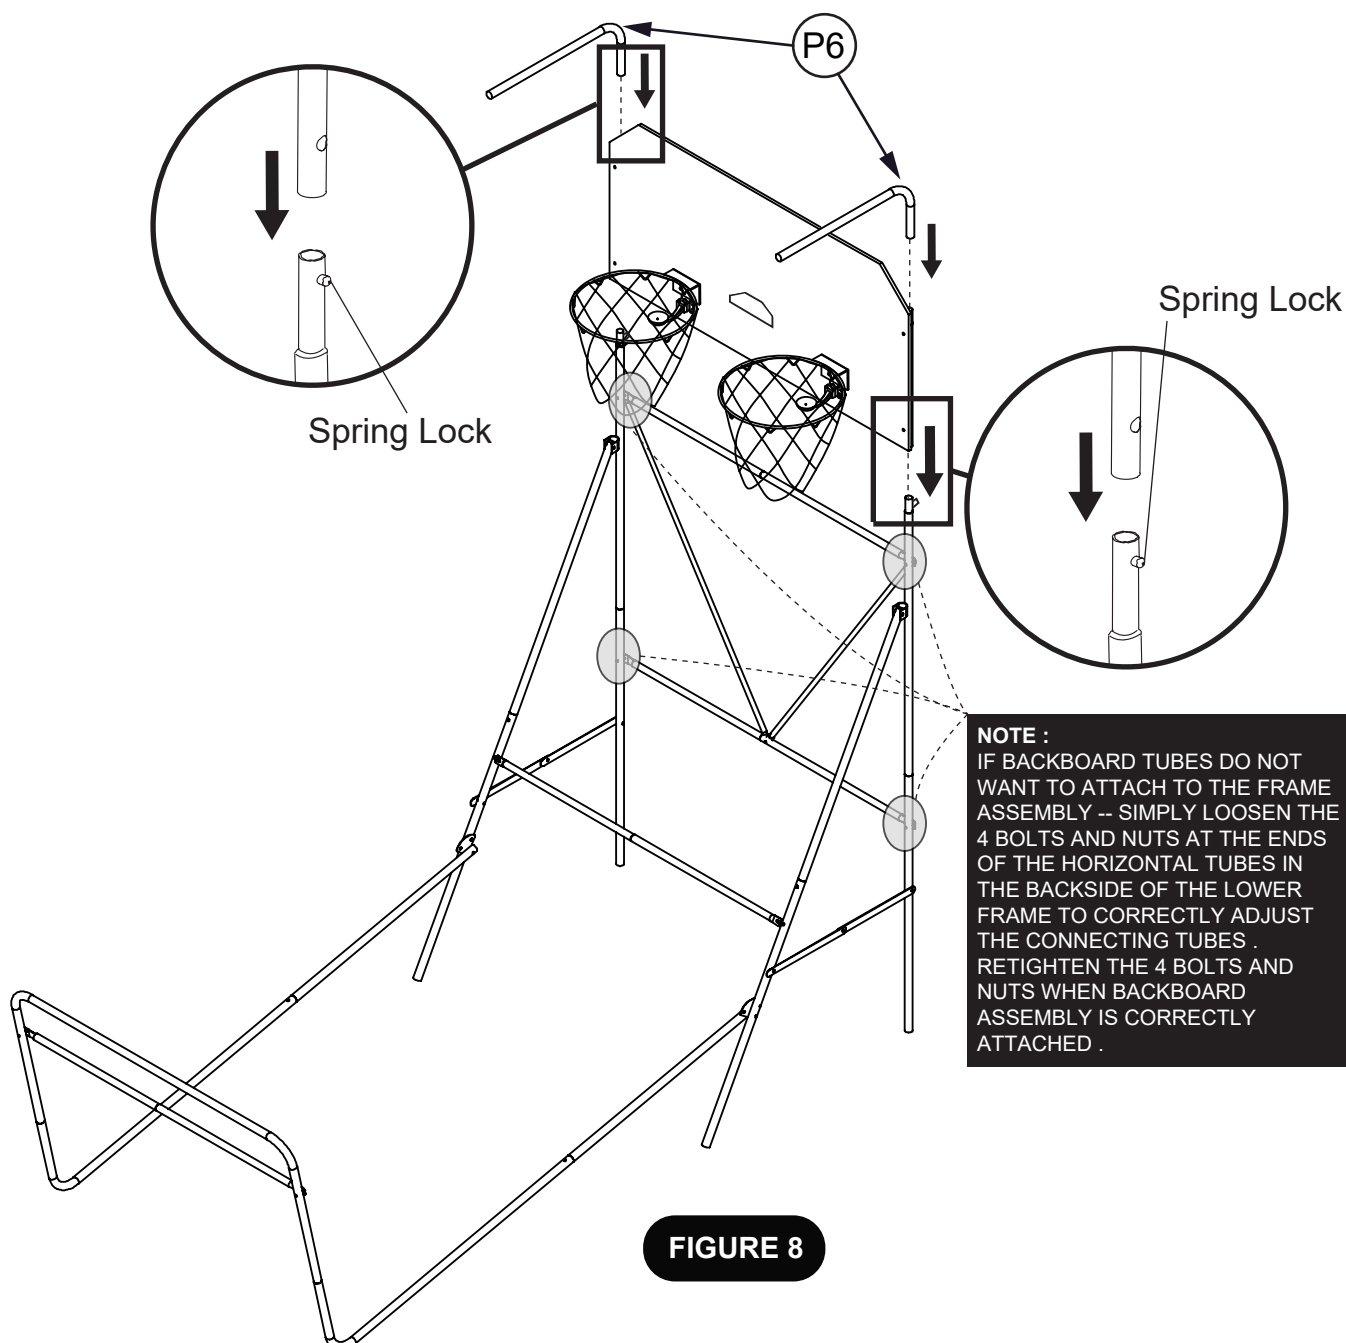 



FIGURE 8

PARTS REQUIRED:
1 pc - **P8** Ramp Chute

STEP 9

Slide elastic loops and the sleeve of **P8** Ramp Chute onto **P6** Upper Tubes as shown in **FIGURE 9** and **DETAIL C**.

 At the front of **P8** Ramp Chute, bring the ramp down and secure using Hook and Loop Straps as shown in **FIGURE 9**. Secure all Hook and Loop Straps on the shootout as shown in **FIGURE 9**.

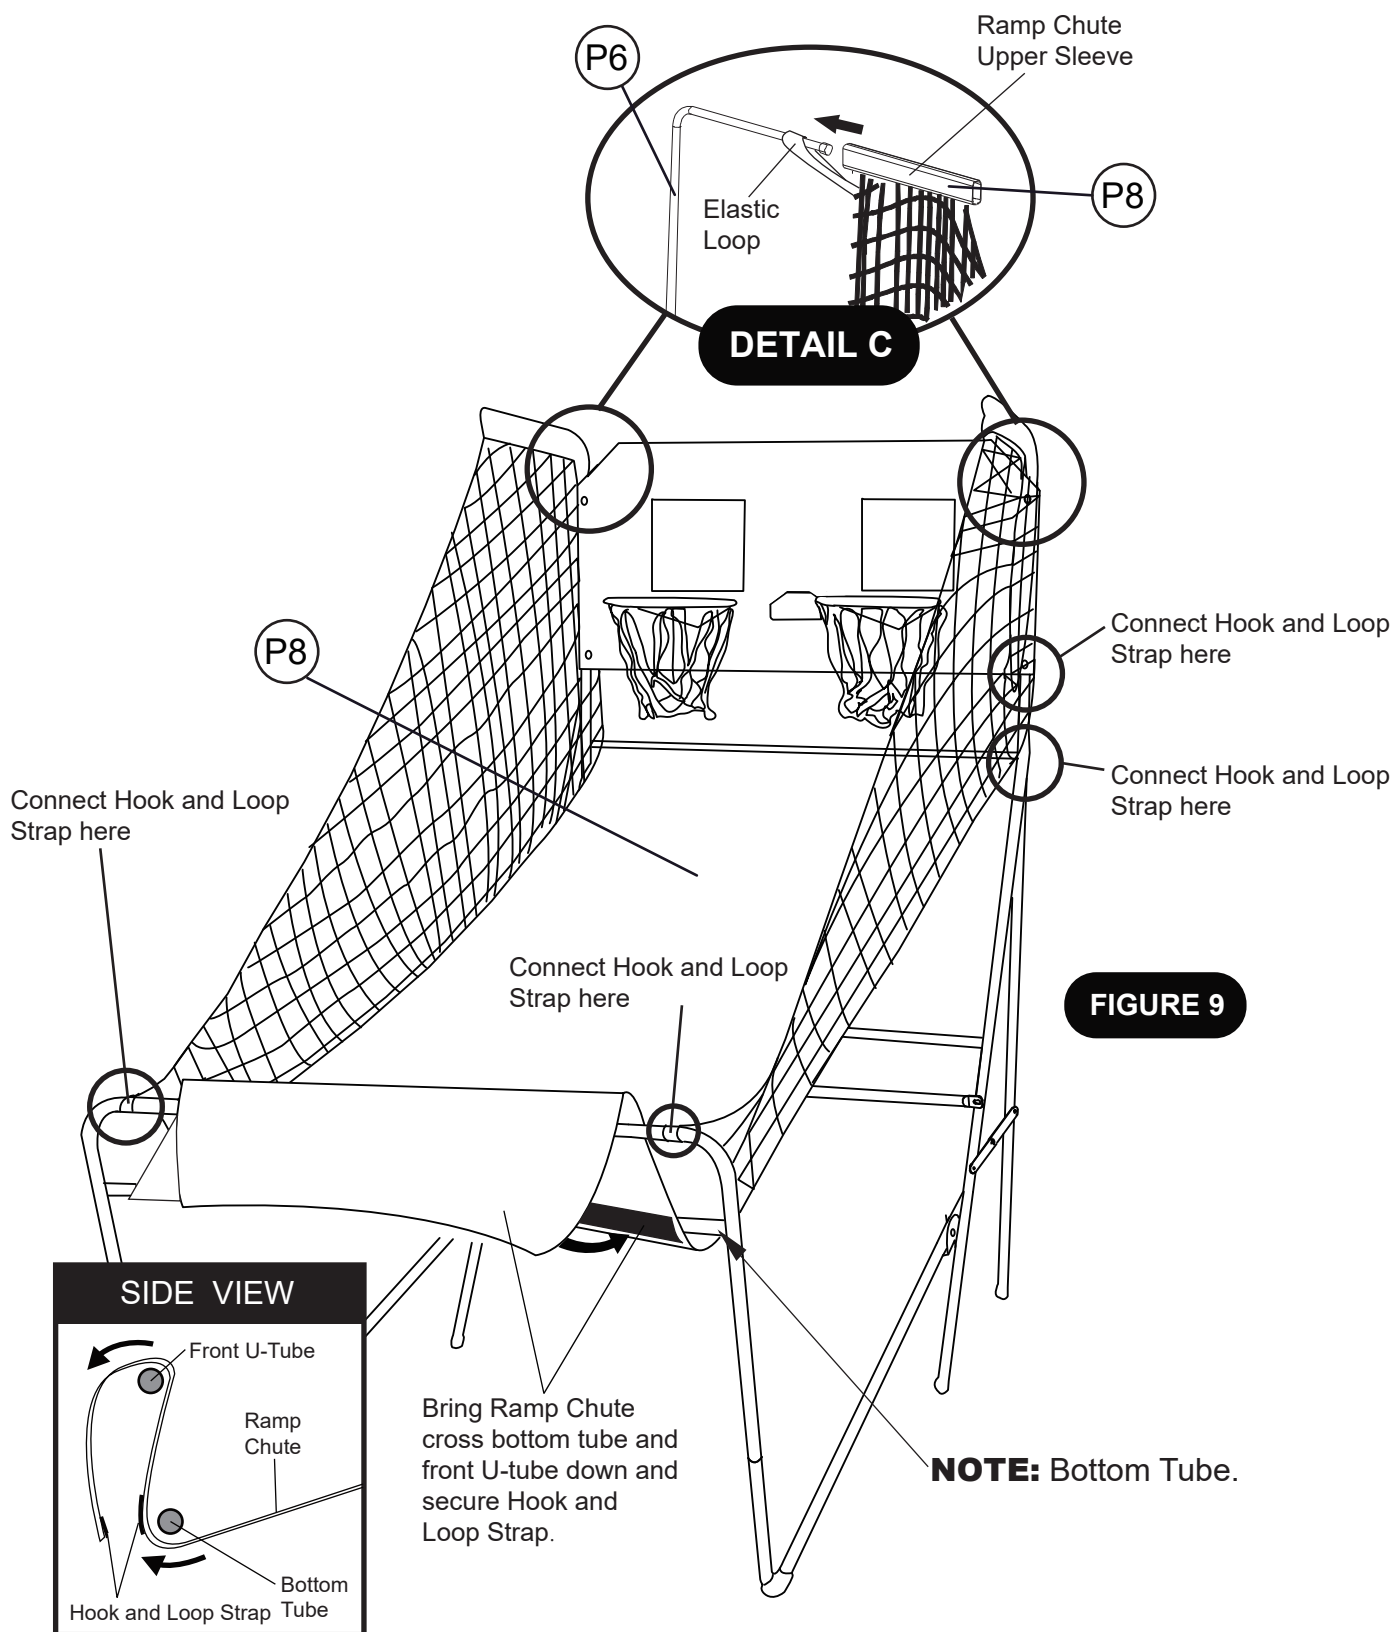

PARTS REQUIRED:

- 1 pc - **H8** Wing Bolt
- 1 pc - **P17** Control Box
- 1 pc - **P16** Scoring Control Box Wire
- 1 pc - **A3** A/C Adapter

STEP 10

Connect **P11** Mechanical Scoring Arm sensor wires to **P9** Electronic Scorer as shown in **FIGURE 10**.

Connect **P19** LED Light Strip wires and **P9** Electronic Scorer wires as shown in **FIGURE 10**.

Secure Elastic Loops from **P8** Ramp Chute to the back of **P7** Backboard attached Wing Nuts as shown in **FIGURE 10**.

Hook Elastic Loops over Wing Nuts in two locations as shown in **FIGURE 10**.

 
 
Loosen the Wing Nuts and attach the plastic sheet from **P8** Ramp Chute, make sure the plastic sheet is under the Wing Nuts. Then tighten the Wing Nuts as shown in **FIGURE 10**.

Connect **P16** Scoring Control Box Wire to **P9** Electronic Scorer as shown in **FIGURE 10** and **DETAIL G**.

Now attach **P17** Control Box to the right corner of the front U-Tube **P5** using **H8** Wing Bolt as shown in **FIGURE 11**. Run the rest of **P16** Control Wire through the loops on **P8** Ramp Chute.


This game has a Dual Power feature. You can insert 3 AA Batteries (not included) into the battery compartment on the back of the Electronic Scorer **P9**--- OR --- use the A/C Adapter **A3** (provided) when your shootout is close to a power source. Please remove the batteries when you are using the A/C Adapter.

See” **FIRST TIME BATTERY INSTALLATION AND NOTICE** “ , before installing batteries, located on **page 3**.

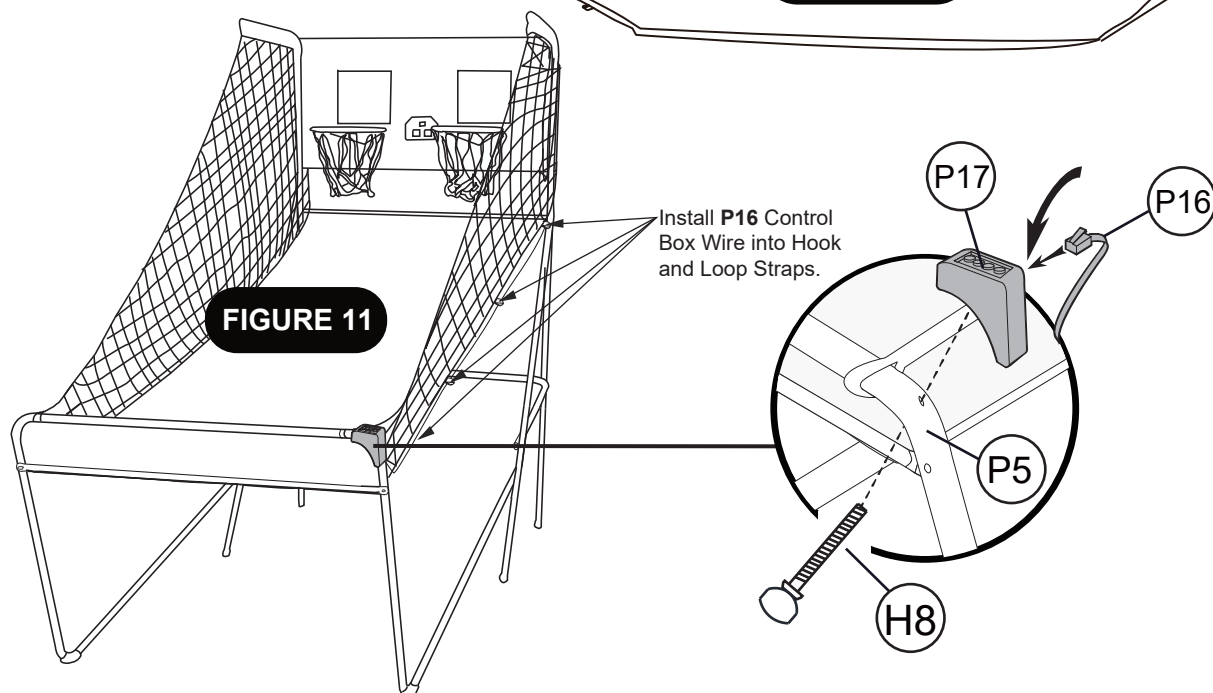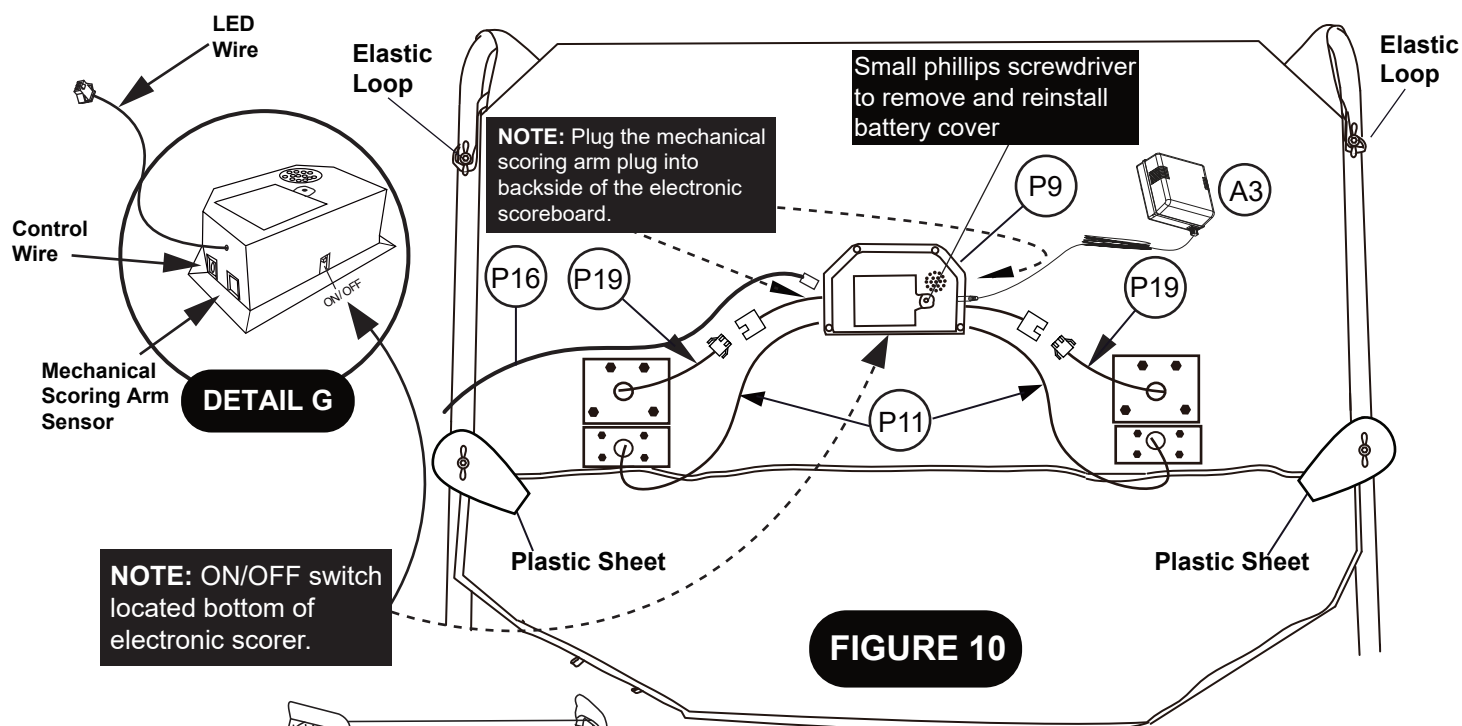

STORAGE POSITION

 To fold the basketball game into the storage position, remove **P15** Locking Pins from the playing position. Lift the front ramp chute until the game is in the storage position as shown in **FIGURE 12**. Then, insert the **P15** Locking Pins back into the lower tube to lock the basketball game into storage position.

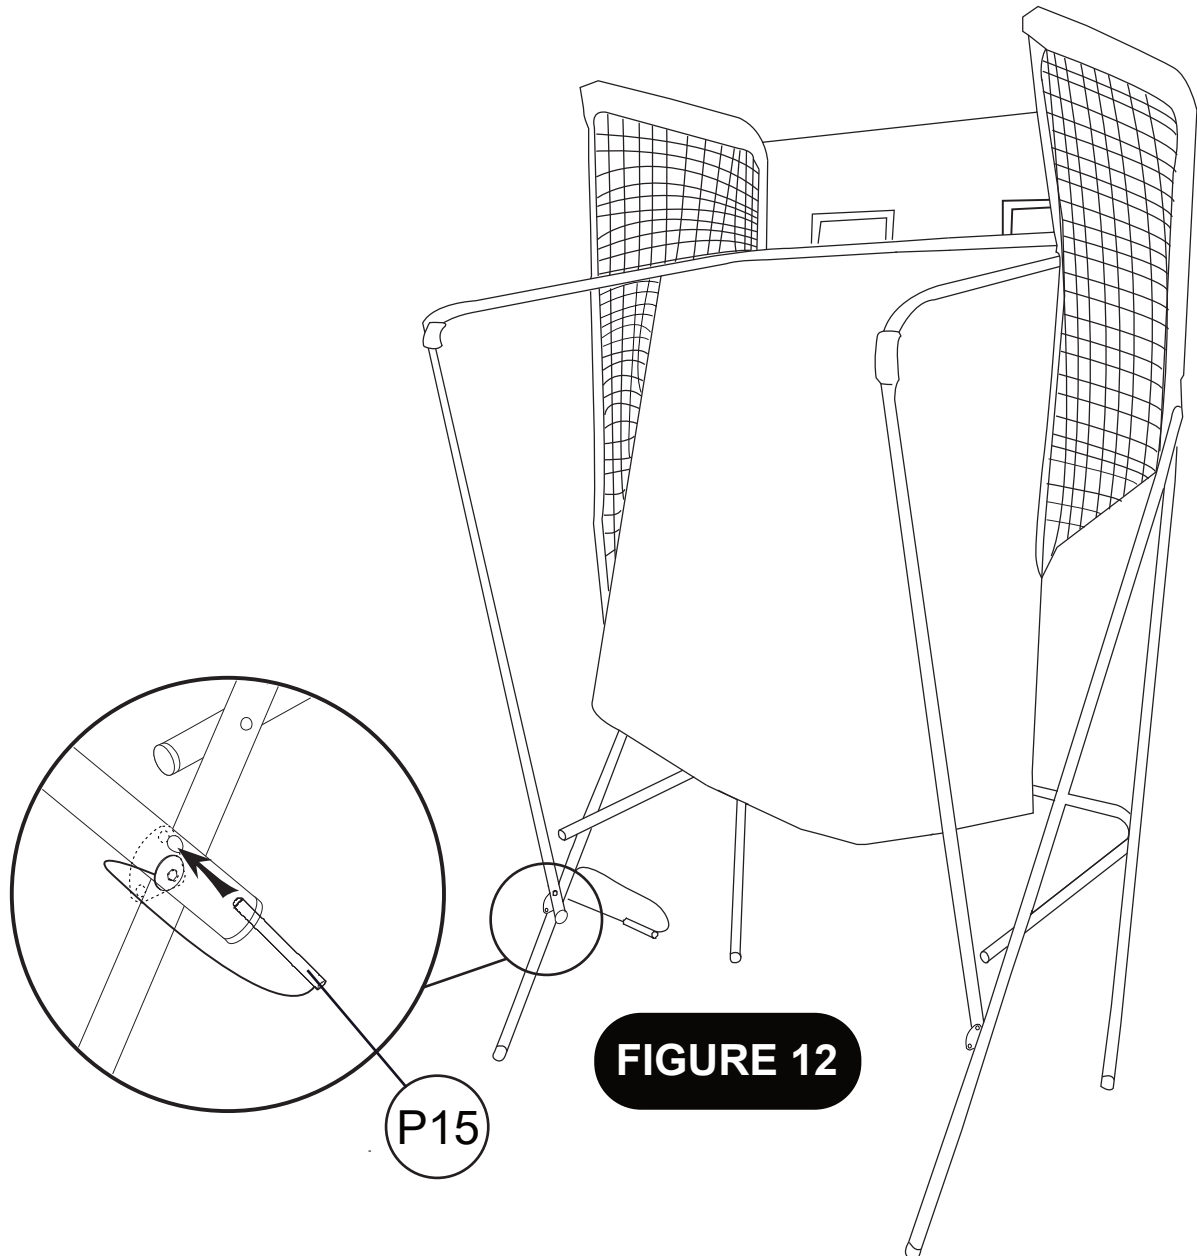

Congratulations! You have now assembled your basketball shootout. Please note the Care and Use instructions below to ensure many years of trouble free use of your Basketball Shootout.

CARE AND USE FOR YOUR PRODUCT

1. Product can be used in the dry **OUTDOORS**, but must be stored **INDOORS**.
2. **DO NOT** drag the shootout when moving it. This will damage the legs.
3. **DO NOT** place backside of this product against wall as during play, the backside of product could become damaged or your wall could become damaged.
4. **DO NOT** sit, climb or lean on the basketball shootout.
5. To prevent damage to the electronics or to your wall, do not place this unit any closer than six inches from the wall.

PRODUCT PARTS LIST FOR MODEL # 45-7003W/F

Key #	Part #	Description	Qty.
H1	45-7003JLH1	M6 x 35 mm Allen Head Bolt	1
H2	45-7003JLH2	M6 x 90 mm Allen Head Bolt	2
H3	45-7003JLH3	M6 x 25 mm Allen Head Bolt	16
H4	45-7003JLH4	M6 x 15 mm Flat Washer	3
H5	45-7003JLH5	M6 Wing Nut	19
H6	45-7003JLH6	Plastic Bushing	2
H7	45-7003JLH7	Lock Washer	16
H8	45-7003JLH8	Plastic Wing Bolt	1
T1	45-7003JLT1	Allen Wrench	1
P1	45-7003JLP1	Left Lower Tube Assembly	1
P2	45-7003JLP2	Right Lower Tube Assembly	1
P3	45-7003JLP3	Left Middle Tube Assembly	1
P4	45-7003JLP4	Right Middle Tube Assembly	1
P5	45-7003JLP5	Front Tube Assembly	1
P6	45-7003JLP6	Upper Tube	2
P7	45-7003JLP7	Backboard with Tubes Assembly	1
P8	45-7003JLP8	Ramp Chute	1
P9	45-7003JLP9	Electronic Scorer	1
P10	45-7003JLP10	Electronic Scorer Face Plate	1
P11	45-7003JLP11	Mechanical Scoring Arm	2
P12	45-7003JLP12	Rim	2
P13	45-7003JLP13	Rim Net	2
P14	45-7003JLP14	Rim Support Plate	2
P15	45-7003JLP15	Locking Pin	2
P16	45-7003JLP16	Scoring Control Box Wire	1
P17	45-7003JLP17	Control Box	1
P18	45-7003JLP18	Mechanical Scoring Arm Support Plate	2
P19	45-7003JLP19	LED Light Strip	2
A1	45-7003JLA1	Air Pump with Needle	1
A2	45-7003JLA2	Basketball	4
A3	45-7003JLA3	A/C Adapter	1
K1	45-7003JLK1	Hardware Kit	1
M1	45-7003JLM1	Owner's Manual	1

General Control Box Operation

To be used any time the game has been off and is turned back on.

Please make sure switch is in the "ON" position located at the bottom of the electronic scorer on the back of the backboard.

Also, make sure batteries are good, located inside of the Electronic Scorer.

1. Press the ON/OFF button for 2 seconds to turn on.
2. Scoreboard will show "01" on the HOME side -- This is pre-set game #1 called "Beat The Time Clock".
3. Press the "Select Up" or "Select Down" buttons to select games 1 thru 8.
4. **Next -- Flow directly into the directions for games 1 thru 8 (Game Options) and follow those directions step by step for correct electronic scoring and gaming operation.**

Additional Electronic Scoring and Gaming Information:

- A. Press "Sound" to switch sound ON/OFF during a game while the clock is running.
- B. Press "Pause" to pause and then pause again to continue during a game while clock is running.
- C. Press and hold the "ON/OFF" button for 3 seconds to turn off the Electronic Scorer.
- D. Press and hold the "RESET" button for 3 seconds to return to Game Options.
- E. NOTE: If no shot is made or no button is pressed in 15 minutes, scorer will turn off automatically.

CONTROL BOX DIAGRAM



Game Options

1. Beat the time Clock

Press "PLAY" to enter game 1.

Press "UP or Down" to select single/multiple players (P1/P2/P3/P4).

Press "PLAY" after the number of player is selected.

Press "UP/Down" to select playing time, 30/45/60 seconds.

Press "PLAY" to begin the game.

Scoreboard "HOME" shows Player 1, 3; Scoreboard "VISITOR" shows Player 2, 4.

All shots worth 2 points until last 10 seconds, each score counts 3 points.

Countdown 5 seconds to next player's turn when one player finishes game.

Player with more points scored wins (LED will flash on player with higher score).

Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

2. 3 Point Beat the Time Clock

Press "PLAY" to enter game 2.

Press "UP or Down" to select single/multiple players (P1/P2/P3/P4).

Press "PLAY" after the number of player is selected.

Press "UP/Down" to select playing time, 30/45/60 seconds.

Press "PLAY" to begin the game.

Scoreboard "HOME" shows Player 1, 3; Scoreboard "VISITOR" shows Player 2, 4.

All shots made count 3 points.

Countdown 5 seconds to next player's turn when one player finishes game.

Player with more points scored wins (LED will flash on player with higher score).

Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

3. Battle Back

Press "PLAY" to enter game 3.

Press "UP or Down" to select 2 players / 4 players.

Press "PLAY" after the number of player is selected.

Shot made in "HOME" frame, +2 points scored display on "HOME" board and -2 points for "VISITOR".

Shot made in "VISITOR" frame, +2 points scored display on "VISITOR" board and -2 points for "HOME".

Once a player scores 10 points who wins and game is finished.

Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

4. Horse

Press "PLAY" to enter game 4.

Press "UP or Down" to select multiple players (P2/P3/P4).

Press "PLAY" after the number of player is selected.

Player has to make a shot in 2 seconds.

First player is allowed to shoot at any hoop (Home or VISITOR). If first player scores in 2 seconds, no letter is given. Game continues for next player. Scoreboard will display "next player(P2P3/P4)" and LED will flash twice in a second. After flash, next player has to duplicate the shot in the same hoop selected by first player.

If player can't score in 2 seconds, player receives the first letter "H" which will display on scoreboard. Game remains for the same player until the player scores. If player keeps missing, player receives "O" followed by "R", "S", "E". The letter "E" is given, the player is out.

The first player to spell "horse" loses. Players stay in repeat step d.e.f. till game is finished.

The last player to spell "horse" wins. Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

5. Check Point

Press "PLAY" to enter game 5.

Press "UP or Down" to select single/multiple players (P1/P2/P3/P4).

Press "PLAY" to begin the game.

"HOME" displays "player", "VISITOR" displays "24" points, pre-set 40 seconds playing time.

Points scored will display on scoreboard "HOME"

Before time is out, once 24/52/68/86 points is scored, playing time increases 10/20/10/20 seconds respectively.

Countdown 5 seconds to next player's turn when one player finishes game.

Player with more points scored wins (LED will flash on player with higher score).

Game is finished when a player scores 99 points. Press "PLAY" to restart this game

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

6. Around the World

Use tape to mark the shooting lines. Press "PLAY" to enter game 6.

Press "UP or Down" to select single/multiple players (P1/P2/P3/P4).

Press "PLAY" after the number of player is selected.

Scoreboard "HOME" displays Player 1/2/3/4, "VISITOR" displays scored points.

Once score comes to 10 points or time comes to 99 seconds countdown 5 seconds to next player's turn when one player finishes game.

Player who finishes the game first wins (LED will flash on winner). Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

7. Left and Right Shoot

Press "PLAY" to enter game 7.

Press "UP or Down" to select single/multiple players (P1/P2/P3/P4).

Press "PLAY" after the number of player is selected.

Press "UP or Down" to select playing time, 30/45/60 seconds.

Press "PLAY" to begin the game.

Scoreboard "HOME" displays Player, "VISITOR" displays points.

Make a shot in "HOME" frame when LED is flashing on "HOME", 2 points scored display on "HOME".

Make a shot in "VISITOR" frame when LED is flashing on "VISITOR", 2 points scored display on "VISITOR".

Countdown 5 seconds to next player's turn when one player finishes game.

Player with more points scored wins (LED will flash on player with higher score). Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

8. One on One

Press "PLAY" to enter game 8.

Press "UP or Down" to select single/multiple players (P1/P2/P3/P4).

Press "PLAY" after the number of player is selected.

Shot made in "HOME" frame, 2 points scored for "HOME", all shots count 3 points in last 10 seconds.

Shot made in "VISITOR" frame, 2 points scored for "VISITOR", all shots count 3 points in last 10 seconds.

Player with more points scored wins when time is out.

Press "PLAY" to restart this game.

To go to another game, turn game off and back on, follow steps 1 thru 4 in General Control Box Operation.

Trouble Shooting:

Game won't turn on

1. Make sure switch on scorer is in the on position (located on back of backboard).
2. Make sure switch mechanical scoring arm wires are in the home and visitor slots on the scorer.
3. Make sure the control box wire is in the control slot on the scorer.
4. Press/hold down the on/off bottom on the scorer for 2 seconds to turn game on.

Game shuts off during play

1. Check the batteries. Make sure they are new batteries.
2. The batteries might be loose causing the game to shut off. Take off the battery cover on the scorer. Take a piece of paper, fold it so it fits over the batteries. Put the battery cover back on. This should better secure the batteries and prevent them from moving in any way.

Game is turning on but LED Lights are not working

1. Make sure all connections are correct and secure between the A/C Adapter, Electronic Scorer and LED Light Strips (see page 13 for details).
2. If the LED Lights are still not working, please contact our Customer Service Department to acquire the necessary replacement part(s).

 
Replacement of LED Light Strip(s)

STEP ONE :

If the LED Light Strip needs to be replaced on the **P12** Rim inner side, uninstall the rim needing the Light Strip replacement. Please refer to the instructions for installing Rim on **page 11** for details.

Uninstall the bolt of LED Light Strip as shown in **FIGURE 1 & DETAIL A**.

Pull out the whole LED Strip as shown in **FIGURE 1**.

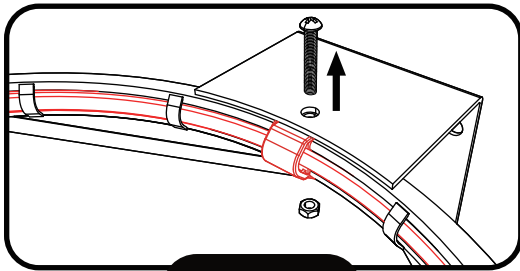

DETAIL A

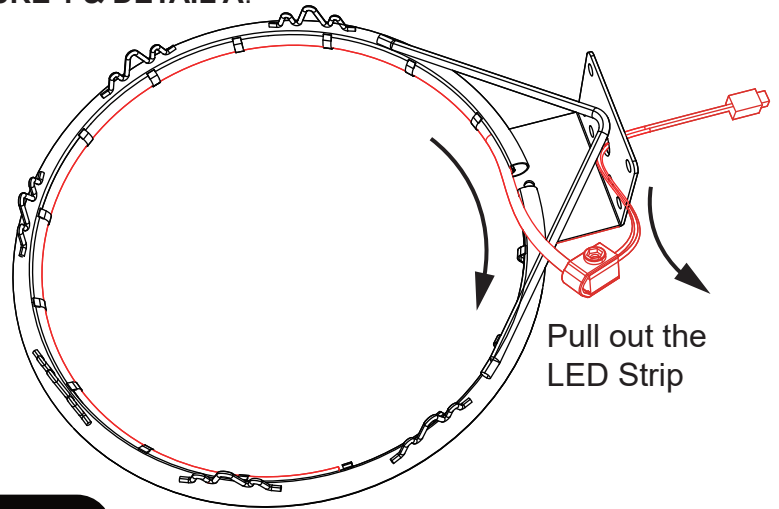 


FIGURE 1

STEP TWO :

Push the LED Light Strip from the position with the notch on the inside of the Rim and make sure the LED Light Strip is on the inside of each hooks as shown in **FIGURE 2 & DETAIL B**.

Reinstall bolt of LED Light Strip.

Install the Rim to the backboard. Please refer to the instructions for installing Rim on **page 11** for details.

Connecter the LED Light Strip to the Control Box. Please refer to the instructions on **page 14** for details.

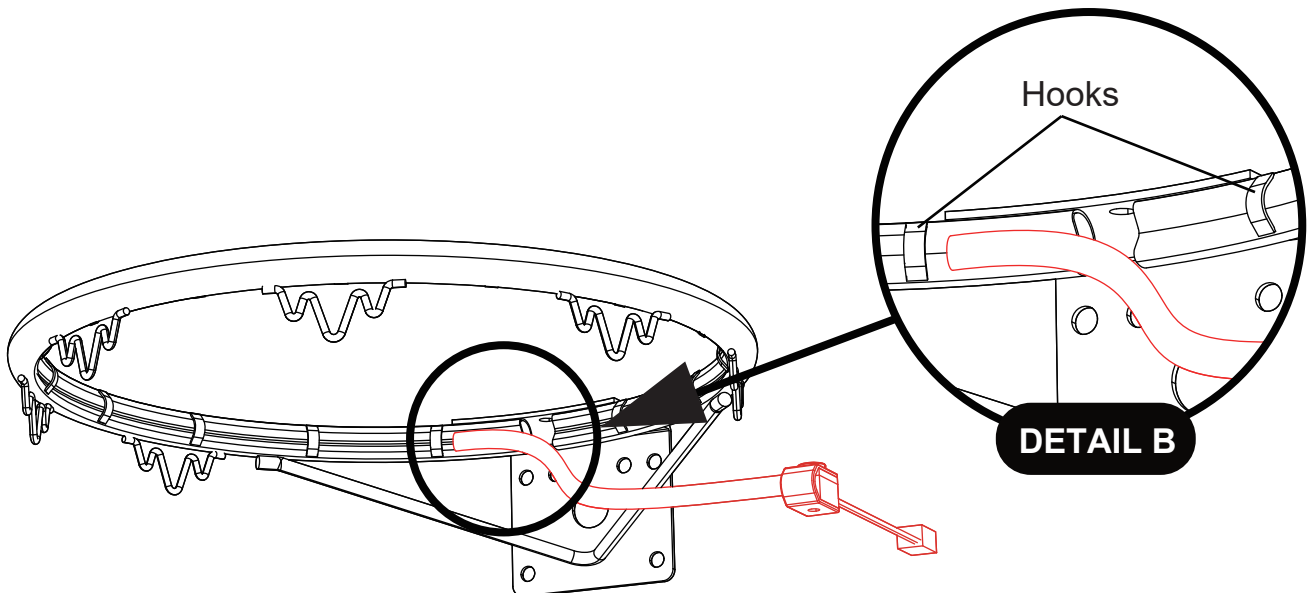 


FIGURE 2

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.