

Breville®

Live more effortless™



Cobolt Collection Jug Kettle

VKT264, VKT265, VKT266, VKT267, VKT268, VKT289

IMPORTANT SAFEGUARDS

This appliance can be used by children aged from 8 years and above or by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid. Avoid spilling water on the connector.
5. Unplug from outlet when either the appliance or display clock (if provided) is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an Authorized Service Center for examination, repair or adjustment. Do not attempt to replace or splice a damaged cord.
7. The use of an accessory not recommended by the appliance manufacturer for use with this appliance may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Ensure that the kettle is properly located on the power base before switching ON. Always attach plug to appliance first, then plug cord into the wall outlet (for appliances with detachable cords). To disconnect, turn any control to the off position, then remove plug from wall outlet.
12. Do not use appliance for other than intended use. Misuse can cause injuries. Always use appliance on a dry, stable, level surface. Keep the kettle away from the edge of the countertop.
13. Scalding may occur if the lid is removed during or immediately after the heating cycle. Contents may be hot. Allow to cool before opening the lid. Keep spout away from persons, as scalding can result from steam.
14. Do not exceed the MAX water level mark when filling. Overfilling could cause hot water to boil out of the spout, which can cause burns and property damage.
15. The heating base and heating element is subject to residual heat following a heating cycle. Do not touch heating base or heating element immediately after a heating cycle. Allow to cool before handling.
16. Remove the kettle from power base before filling or pouring. Do not remove the kettle from the power base until it is switched OFF, manually or automatically.
17. Use the kettle only with the power base provided.
18. Use extreme caution when handling, moving or pouring from the kettle containing boiling water.
19. Do not place the appliance in a cabinet when in use.
20. **WARNING:** The plug must be fully inserted into kettle (models with detachable cord only). To ensure full insertion, verify the marking on the plug is not visible. A loose contact may cause overheating.
21. If liquids spill on the power base, unplug and clean the power base before the next use.

For appliances filled through a lid aperture situated below the handle:

22. **WARNING:** Do not remove the lid while the water is boiling. All lids should be closed during use.
23. **CAUTION:** Position the lid so that steam is directed away from the handle.

For appliances with glass containers:

24. Avoid sudden temperature changes, such as rinsing, washing, filling, or immersing a hot container with cold liquids.
25. Do not use a cracked or chipped container or a container having a loose or weakened handle.
26. Do not clean container with cleansers, steel wool pads, or other abrasive material.

SAVE THESE INSTRUCTIONS

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments

POWER CORD INSTRUCTIONS:

Do not pull, twist or otherwise abuse the power cord.
Do not wrap the power cord around the main body of the appliance during or after use.

CONNECTION TO THE MAINS SUPPLY (UK AND IRELAND ONLY)

If the plug is not suitable for the socket outlets in your home, it can be removed and replaced by a plug of the correct type.

If the fuse in a moulded plug needs to be changed, the fuse cover must be refitted. The appliance must not be used without the fuse cover fitted. If the fuse requires replacement, a fuse of the same rating as that originally fitted in the appliance must be used. In order to prevent a hazard do not fit a fuse of a lower or higher rating.


If the plug is unsuitable, it should be dismantled and removed from the supply cord and an appropriate plug fitted as detailed below.


CAUTION: If you remove the plug it must not be connected to a live socket and the plug must be disposed of immediately.

If the terminals in the plug are not marked or if you are unsure about the installation of the plug, please contact a qualified electrician.

Plug should be approved to BS 1363

Fuse should be approved to BS 1362

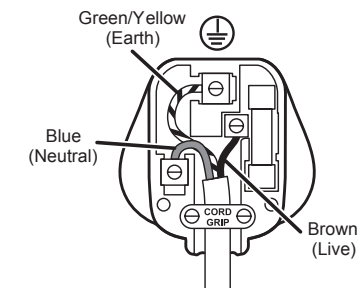

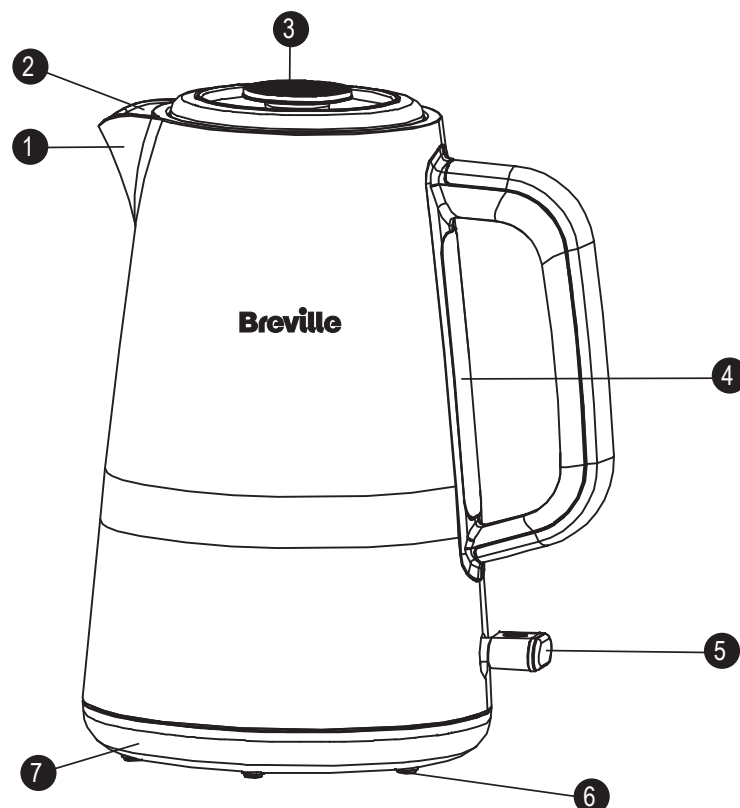

1. Spout
2. Filter
3. Pull off lid
4. Water level window
5. On/off switch
6. Cord storage
7. 360° rotational power base

Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in these instructions.

BEFORE FIRST USE

Remove any packaging and promotional material from your kettle and position it on a stable, secure, dry and level work surface away from the edge.

Before connecting to a power source, make sure your mains supply voltage is the same as the one indicated on the appliance. Connect the plug to a suitable power outlet and make sure that the power cord does not overhang the work surface. Excess power cord can be stored in the power base.

Remove the kettle from the power base and open the lid. Fill your kettle to the maximum mark and close the lid.

Place your kettle back onto the power base. Switch your kettle on, allow it to boil then discard the water. Repeat twice. This will remove any residue left over from the manufacturing process.

USING YOUR KETTLE

▲ If this kettle is filled above the maximum level mark, hot water may be ejected from the spout during boiling. Beware of steam coming from the spout or lid especially during refilling. Never open the lid when the kettle is boiling.

1. With your kettle switched off, plug the power base into a suitable power outlet.
2. Remove your kettle from the power base before filling it with water.
3. Fill your kettle with water. You can fill it through the spout or by opening the lid. Don't overfill your kettle and always ensure that there is sufficient water in your kettle for it to operate correctly. This is approximately 250ml or 1 teacup full. Always check the water level when your kettle is positioned on its power base.
4. If opened previously, close the lid and then switch your kettle on. Make sure that the lid is correctly closed to ensure safe operation.
5. When the water reaches boiling point, your kettle will switch off automatically.
6. You may also switch your kettle off manually at any time by moving the switch to the off position. Always use caution when lifting or carrying your kettle when it is full of boiling water and when pouring it.

ENERGY SAVING HINTS AND TIPS

A Breville® kettle, if used correctly, is a very energy efficient device. Why not try some of these energy saving tips:

- Only boil the water you need. Overfilling your kettle by one cup is the equivalent to using an energy saving light bulb for one hour!
- It is not always necessary to re-boil your kettle. For example, one litre of water will still be at 90°C after five minutes - the perfect temperature for a cup of coffee.

IF THE KETTLE BOILS DRY

If the kettle is operated with insufficient water a built in fail-safe device will automatically switch it off.

- Unplug your kettle and allow it to cool. When it has cooled down sufficiently the safety device will reset itself.
- Once the safety device has reset, refill your kettle with cold water and use it as normal.

To ensure your kettle continues to work effectively we recommend descaling regularly.

CLEANING

⚠ Always unplug the kettle from the mains supply socket and allow it to completely cool down before cleaning or descaling it. Do not immerse the kettle, power base or power cord and plug in water or any other liquid.

1. Clean the exterior surface of the kettle with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or harsh/abrasive cleaners.
2. Descale your kettle regularly to keep it working efficiently. Use a proprietary descaling product following the manufacturer's instructions carefully.

CLEANING THE FILTER

⚠ Before removing or refitting the filter, switch off the kettle and empty it. Allow it to cool completely, then unplug the power base from the mains supply socket. Never operate the kettle without the filter fitted.

- Open the lid and remove the filter from behind the spout.
- Rinse the filter under a tap whilst brushing it with a soft brush.
- In hard water areas it may be necessary to descale the filter using a descaling product. Use a proprietary descaling product following the manufacturer's instructions carefully.
- The filter may be washed safely in the cutlery rack of a dishwasher.
- Refit the filter back into your kettle.

AFTER SALES SERVICE & REPLACEMENT PARTS

In the case the appliance does not operate but is under warranty, return the product to the place it was purchased for a replacement. Please be aware that a valid form of proof of purchase will be required. For additional support, please contact our Consumer Service Department at **0800 028 7154** or email: **BrevilleEurope@newellco.com**

Waste Disposal

This device is marked in accordance with European Directive 2012/19/EU with the symbol of a crossed-out waste container. Such marking informs that this equipment cannot be disposed of with other household waste at the end of its operation. The user of the equipment is obliged to hand it over to waste electrical and electronic equipment collectors. Collection points are run, among others: by wholesalers and retailers of this equipment and by municipal organizational units conducting waste collection activities. Proper handling of waste electrical and electronic equipment helps to avoid consequences harmful to human health and the natural environment resulting from the presence of hazardous components and improper storage and processing of such equipment.



ENERGY CONSUMPTION AND POWER MANAGEMENT INFORMATION:

Power Management: The appliance does not feature an automatic power management function and will switch to Off mode after 0 minutes when unplugged from power source.

Power Consumption in Off Mode: When the appliance is not performing its primary function, it consumes maximum 0 W of power.



Newell Brands UK Limited,
Halifax Avenue, Fradley Park, Lichfield, Staffs, WS13 8SS, UK
Newell Poland Services Sp. z o.o.,
Plac Andersa 7, Poznan, 61-894, Poland.
e-mail: BrevilleEurope@newellco.com
Telephone:
+44 (0)800 028 7154



For Customer Service details, please see the website.
www.breville.co.uk
www.breville.eu

©2026 Newell Brands UK Limited.
Printed in China