



Competition Bean Bag Toss



Please keep this instruction manual for future reference

If you have any problems with your new product,
please contact Triumph Sports USA at 1-866-815-4173,
or e-mail us at csr@triumphsportsusa.com
for any technical support or warranty issues.

Limited 90-Day Triumph Sports USA, Inc. Warranty

All Triumph Sports USA, Inc. (TSU) games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Be sure to check out all the exciting games  **has to offer. Visit our web site at:**

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES




DARTBOARDS

Triumph Sports USA
11327 W Lincoln Ave.
West Allis, WI 53227

www.triumphsportsusa.com


©2015 Triumph Sports USA. All Rights Reserved.

Parts List

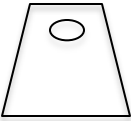1  Game Platform 2 pcs	3  Red Bag 4 pcs	4  Blue Bag 4 pcs
--	--	---

Set Up Instructions

Locate a nice flat surface area (backyard, beach, parking lot, etc). Fold out legs and set up your boards directly facing each other with 27 feet between the front edge of each board. For youths, beginners or any casual play this distance between boards can be adjusted to a shorter, more comfortable distance.

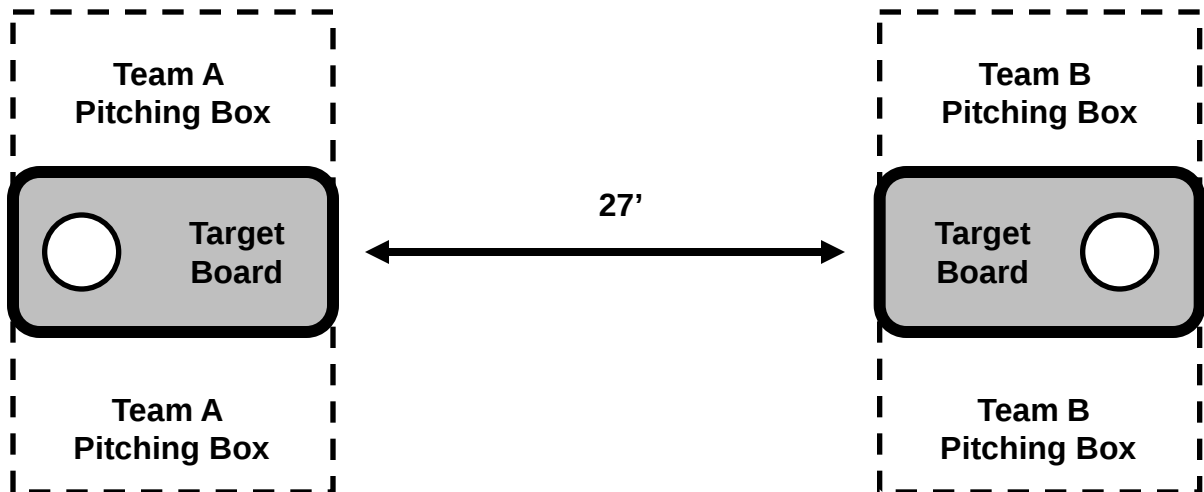

Game Rules

Bean Bag Toss or Cornhole can be played with 2 or 4 players.

Each game is composed of a series of frames or rounds (a frame or round is a single turn in which all 8 bean bags are tossed.)

Before the first frame begins the two competing players or teams must determine the order of play (who will toss first). This can be done by a coin flip or a pre-game toss whereby whoever tosses his single bean bag closest to the cornhole gets to choose who tosses first.

Once the order of play has been decided, pick which side of the board you'll throw from. In a 4-player game, your partner's pitching box will be directly across from you. In a 2-player game, if you start throwing from the left side of the board, you'll walk directly across to the other board, and throw back from the right side.

With each toss turns are alternated between players or teams until all 8 bean bags have been tossed to complete the frame. During the toss your feet should not go past the front edge of the board. Crossing over this "foul line" during a toss disqualifies the toss.

A tossed bean bag may not touch the ground. If it hits the ground and bounces up on the board the bag should be removed before the next bag is thrown.

At the end of the frame, after all 8 bean bags have been tossed at the opposing cornhole target it's time for each player or team to together total the scores. The player or team that scores the most points in that frame will start the next round or frame.

Frame Game Scoring:

Players try to accumulate as many points as possible over 13 complete frames. A bag thrown through the hole earns 3 points. A bag that lands on the board earns 1 point. A perfect score, or maximum amount of points available is 156 points (13 frames x 4 bags x 3 points). The player with the highest cumulative score at the end of 13 frames is declared the winner.