

Item# 45-6832GR



84" Air Powered Hockey with Table Tennis Top



Please keep this instruction manual for future reference

If you have any problems with your new product, please visit our website www.triumphsportsusa.com for the fastest expedited service possible for your replacement part ordering needs. Please have a copy of your receipt of purchase. For any technical support or warranty issues, please contact Triumph Sports USA at 1-866-815-4173 or email us at csr@triumphsportsusa.com

Limited 90-Day Triumph Sports USA, Inc. Warranty

All Triumph Sports USA, Inc. (TSU) games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

Warnings



WARNING: Choking Hazard--Toy contains small balls and/or small parts. Not for children under 3 years of age.



WARNING: Adult Assembly Required.



WARNING: This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully. Proper use of this set can prevent damage or injury.

Be sure to check out all the exciting games  **has to offer.**

Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES



DARTBOARDS

Triumph Sports USA
11327 W Lincoln Ave.
West Allis, WI 53227
www.triumphsportsusa.com
©2015 Triumph Sports USA. All Rights Reserved.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
1. Read all instructions-All the safety and operating instructions should be read carefully before the hockey game is played.
2. **Caution**-This is not a toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with children to avoid possible risk of electric shock or other injuries.
3. **Power sources**-This hockey game should be operated only from 110-120V A.C., 60 cycle current as indicated on the identification label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
4. **Power cord protection**-Power cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to cords at plugs, convenience receptacles, and the point of exit from the game.
5. **Overloading**-Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
6. **Object and liquid entry**-Never push objects of any kind into this game through openings as they may touch dangerous voltage points or short-out parts which could result in a fire or electric shock. Never spill liquid of any kind on the game.
7. **Ventilation**-Openings in the game are provided for the exhaust air to create a cushion effect. The openings on the air blower are for the intake air. Keep clear of the air blower when it is on. Do not put hand or other objects near the intake openings. To ensure reliable operation of the game and protect it from overheating these openings must not be blocked or covered.
8. **Damage requiring service**-Unplug the game from the wall outlet.
Do not attempt to service the blower yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer servicing to qualified service personnel under the following conditions.
 - A. When the power supply cord or plug is damaged.
 - B. If liquid has spilled, or objects have fallen into the blower.
 - C. When the air blower exhibits a distinct change in performance e.g. abnormal noise, this indicates a need for service.
9. **CAUTION-ELECTRICALLY OPERATED PRODUCT**-Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.
10. We recommend that the game be periodically examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In the event such conditions exist, the game should not be used until properly repaired.
11. **RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS**
WARNING-When using electric appliances, basic precautions should always be followed, including the following:
 - A) Read all the instructions before using the appliances.
 - B) To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
 - C) Do not contact moving parts.
 - D) Only use attachment recommended or sold by the manufacturer.
 - E) Do not use outdoors.
 - F) For a cord-connected appliance, the following shall be included:
 - To disconnect, turn all controls to the off position, then remove plug from outlet.
 - Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
 - Unplug from outlet when not in use and before servicing or cleaning.
 - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

SAVE THESE INSTRUCTIONS

WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

For Household use only.

Parts List

1  MAIN CABINET 1 PIECE	2  LEFT LEG 2 PIECES	3  RIGHT LEG 2 PIECES	4  LEG PANEL 2 PIECES	5  TABLE TENNIS SURFACE-A 2 PIECES
6  TABLE TENNIS SURFACE-B 1 PIECE	7  25x25x30mm PAD 12 PIECES	8  25x25x5mm PAD 12 PIECES	9  POST 2 PIECES	10  TABLE TENNIS NET 1 PIECE
11  TABLE TENNIS PADDLE 2 PIECES	12  TABLE TENNIS BALL 2 PIECES	13  PUSHER 2 PIECES	14  PUCK 2 PIECES	15  FELT PAD 2 PIECES
16  LEG LEVELER 4 PIECES	17  ALLEN KEY 1 PIECE	18  3 x 20MM WASHER HEAD SCREW 12 PIECES	19  5/16" x 1-1/4" BOLT 12 PIECES	20  5/16" WASHER 12 PIECES
21 PRE-INSTALLED  BLOWER 1 PIECE	22 PRE-INSTALLED  SIDE APRON 2 PIECES	23 PRE-INSTALLED  END APRON-A 1 PIECE	24 PRE-INSTALLED  END APRON-B 1 PIECE	25 PRE-INSTALLED  CONTROL BOX 1 PIECE
26 PRE-INSTALLED  CATCHER COVER 2 PIECES	27 PRE-INSTALLED  APRON CORNER 4 PIECES	28 PRE-INSTALLED  SCORER DISPLAY 2 PIECES	29 PRE-INSTALLED  TIME DISPLAY 1PIECE	30 PRE-INSTALLED  BATTERY BOX 1 PIECE
31 PRE-INSTALLED  SCORER DISPLAY WIRE 1 PIECE	32 PRE-INSTALLED  TIME DISPLAY WIRE 1 PIECE	33 PRE-INSTALLED  PUCK CATCHER with LONG WIRE 1 PIECE	34 PRE-INSTALLED  PUCK CATCHER with SHORT WIRE 1 PIECE	35 PRE-INSTALLED  GOAL BOX 2 PIECES

36	PRE-INSTALLED	37	PRE-INSTALLED	38	PRE-INSTALLED
					
TOP CORNER 4 PIECES		SQUARE NUT AND SCREW 4 SETS		T - NUT 12 PIECES	

Assembly Tips:


Attention: If you are using an electric screwdriver in the assembly, please set at low torque and do not over tighten the hardware. When assembling individual parts, loosely tighten screws until all screws are inserted, then tighten completely

Assembly Instructions

1. Find a clean, level place to begin the assembly of your Air Hockey table. The table will be assembled upside down and then turned over on its legs once the assembly completed. This game table is heavy, and turning it over will require at least two strong adults.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts identifier below. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.

FIG.1 LEG, LEG PANEL AND LEG LEVELER ASSEMBLY

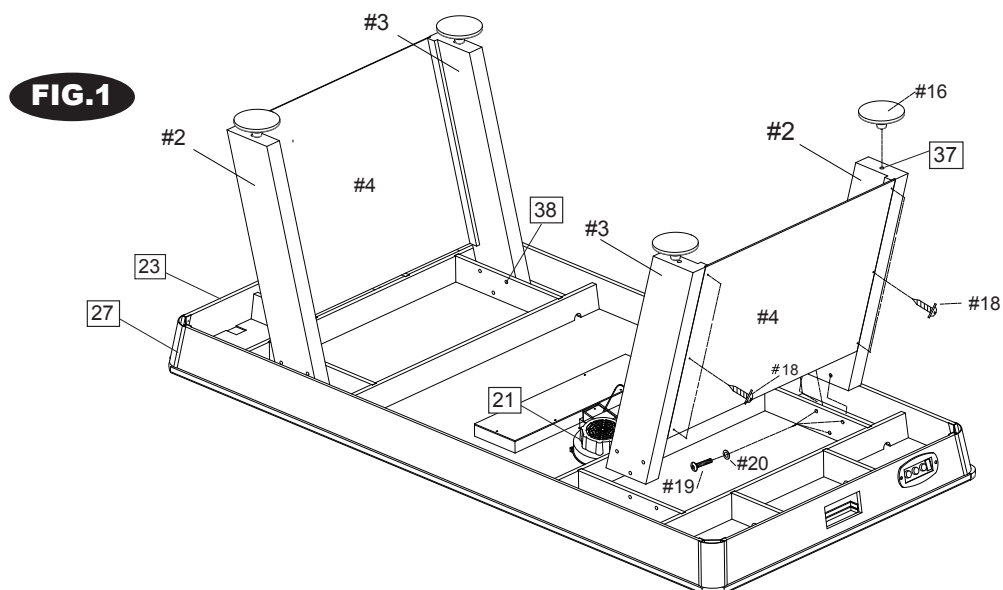3. Attach the Left Leg (#2) and Right Leg (#3) to the Main Cabinet (#1) using three Bolts (#19) and three Washers (#20) per Leg. **See FIG.1.**
4. Attach the Leg Panel (#4) to the Leg using six Screws (#18) per Leg Panel. **See FIG.1.**
5. Screw the Leg Leveler (#16) into the Leg. **See FIG.1.**



6. Lift the table assembly from the floor with at least two strong adults, turn it over, and set the table assembly on its legs in the location where you play.

CAUTION: Two strong adults are recommended to turn the table over as shown.

1. Lift the table off the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.

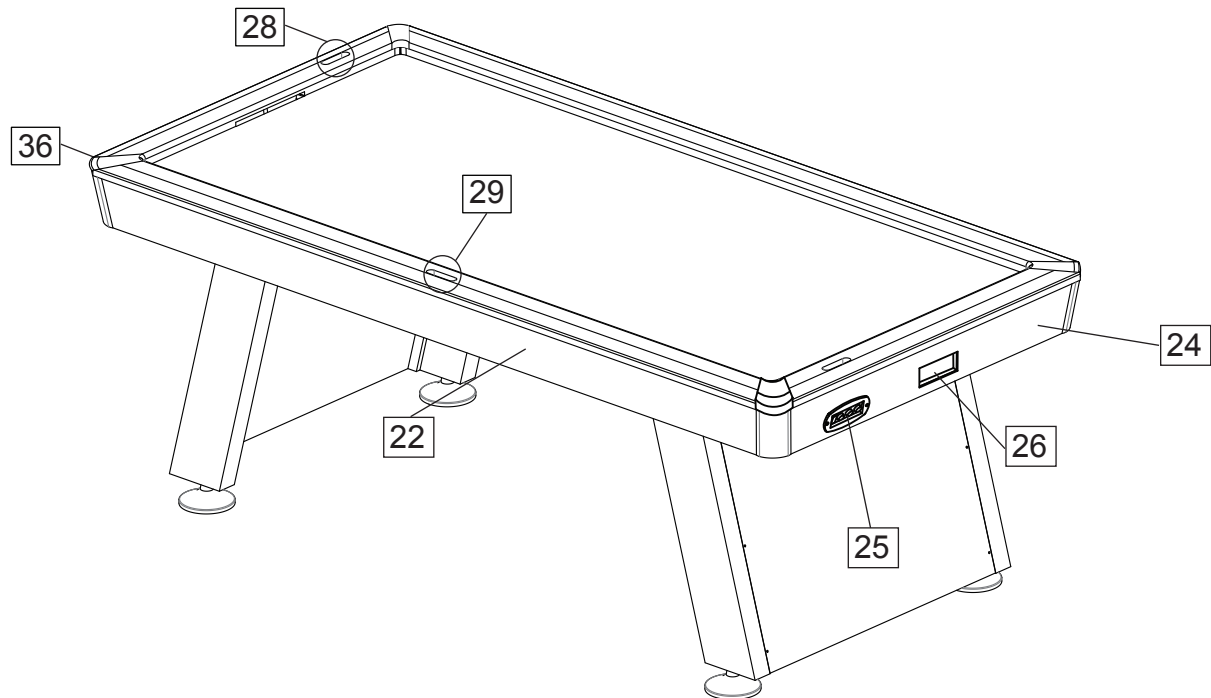
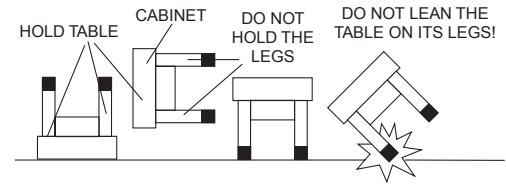


FIG.2 TABLE TENNIS TABLE TOP ASSEMBLY

7. Tear off the backside paper of the Pad (#7 & #8) and stick them at the bottom of the TableTennis Surface (#5 & #6).
8. Put together the Table Tennis Surface - A (#5) and Table Tennis Surface - B (#6).

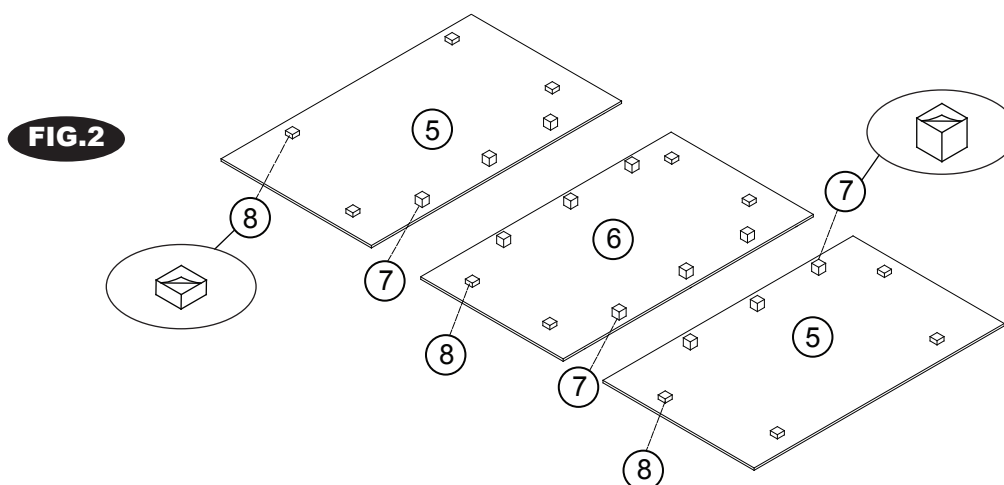


FIG.3 TABLE TENNIS PLAY:

9. Place the Table Tennis Surface (#5 & #6) onto the hockey surface and insert the Posts (#9) and Net (#10). See **FIG.3A**.

FIG.3

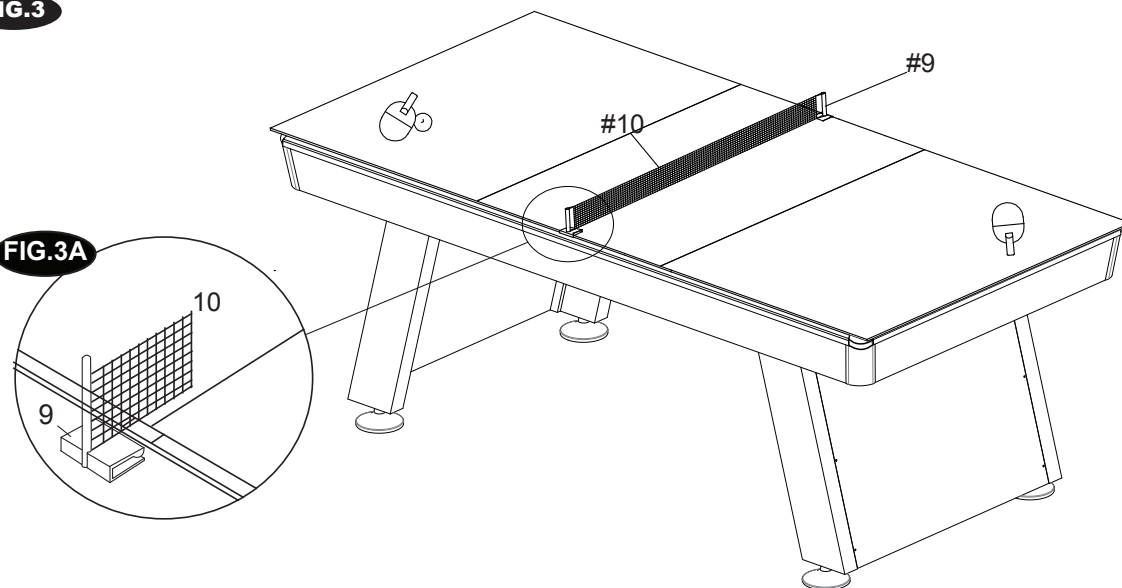


FIG.4 PUSHER ASSEMBLY

10. Tear off the backside paper of the Felt Pad (#15) and stick them at the bottom of the Pushers (#13).

FIG.4


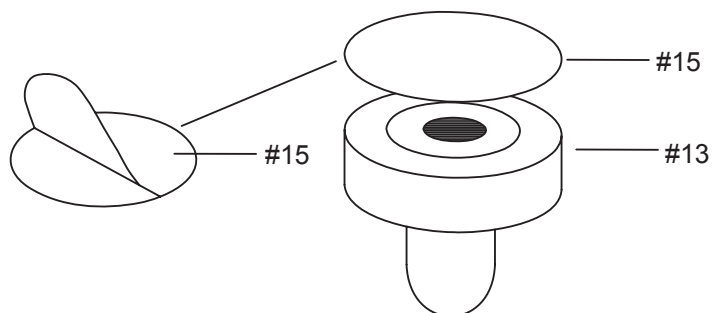



FIG.5 INSTALL BATTERY

11. Under the table, Unscrew Bolt using a screwdriver and open the battery box, Insert 4 AA batteries (not included) in the order of polarity as shown on the inside of battery box, Then close using a screwdriver, Turn on the power by turn the on/off switch of battery box. (If the game will not be used for a long period of the time, we recommend that the batteries be removed.)

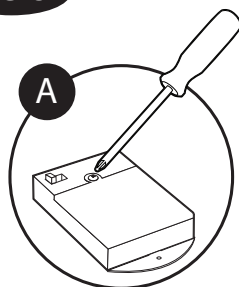
FIG.5



- Unscrew and remove cover.

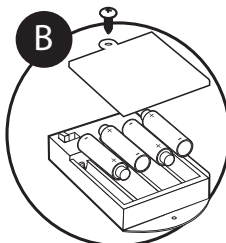

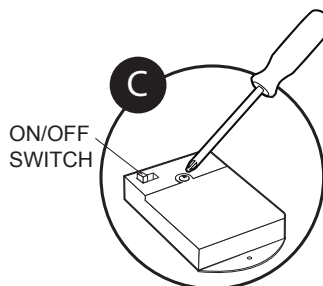- Insert 4 AA Batteries
(Batteries not included).




- Return cover and insert Screw.



WARNING:

- 1) Do not mix old and new batteries.
- 2) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- 3) Do not dispose of batteries in fire, batteries may explode or leak.

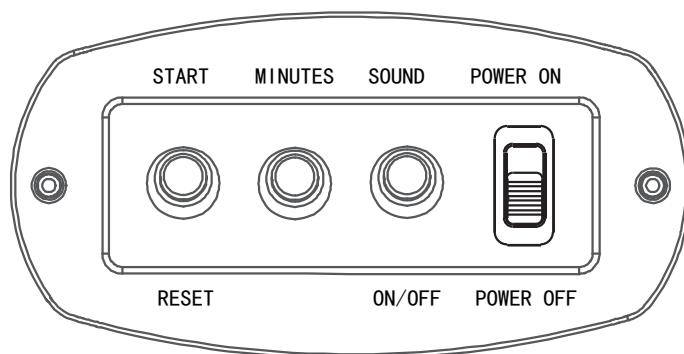SCOREBOARD OPERATION




POWER ON/OFF - Slide the POWER ON/OFF Switch to turn the scoreboard ON or OFF

SOUND ON/OFF - Press the SOUND button at any time to turn the sound ON or OFF.

MINUTES - Press the MINUTES button to scroll through the playing time options

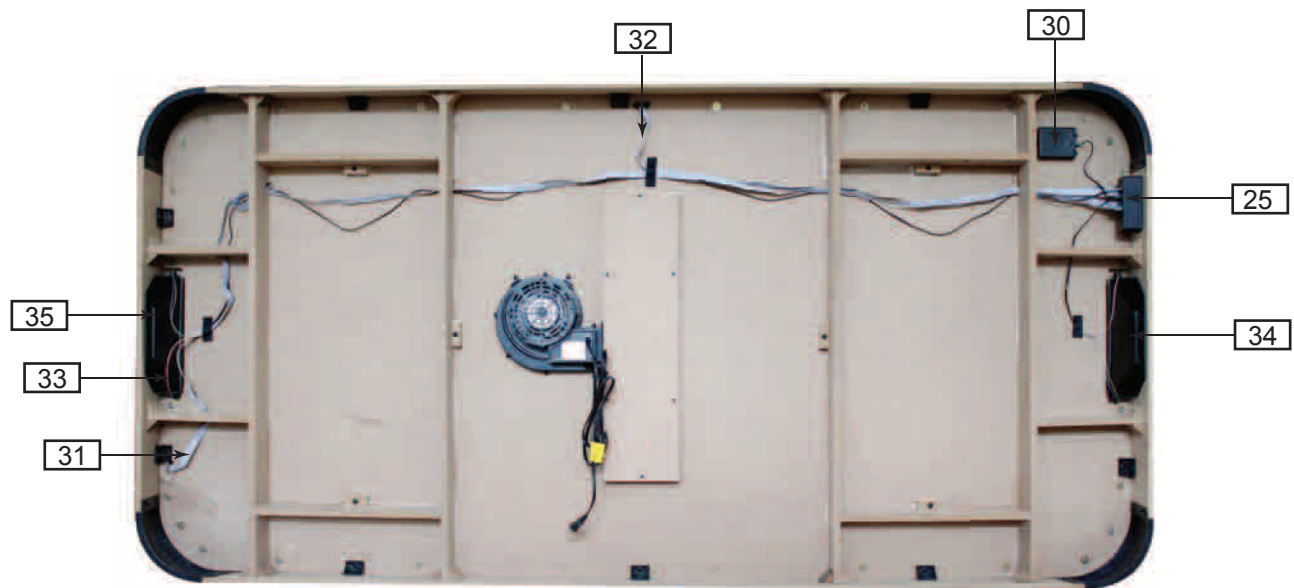START/RESET - Press the START button to select the current time and begin playing the game. After the game is over, press the RESET button to RESET the scoreboard. Press and hold the RESET button for 3 seconds to RESET the scorer at any time



FCC IDENTIFIER

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help."