



48" MLS 10 in 1 Combo table



Please keep this instruction manual for future reference

If you have any problems with your new product, please visit our website www.triumphsportsusa.com for the fastest expedited service possible for your replacement part ordering needs. Please have a copy of your receipt of purchase. For any technical support or warranty issues, please contact Triumph Sports USA at 1-866-815-4173 or email us at csr@triumphsportsusa.com

Limited 90-Day Triumph Sports USA, Inc. Warranty

All Triumph Sports USA, Inc. (TSU) games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

Warnings



WARNING: Choking Hazard--Product contains small balls and/or small parts. Not for children under 3 years of age.



WARNING: Adult Assembly Required.



WARNING: This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully. Proper use of this set can prevent damage or injury.

Be sure to check out all the exciting games  has to offer.

Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO

 
 
 
 
 
 
 
 
 
 
 
 
 
 


OUTDOOR GAMES




DARTBOARDS

Triumph Sports USA
11327 W Lincoln Ave.
West Allis, WI 53227
www.triumphsportsusa.com
©2015 Triumph Sports USA. All Rights Reserved.

1  Side Apron 2pcs	2  End Apron 2pcs	3  Support Brace 2pcs	4  Playfield 1pc
5  Soccer Table Cabinet 1pc	6  End Leg Panel 2pcs	7  Left Leg 2pcs	8  Right Leg 2pcs
9  Baseball With Football Board 1pc	10  Archery With Table Tennis 1pc	11  Bean Bag With Tic-Tac-Toe 1pc	12  Plastic Bracket 2pcs
13  Black Player 13pcs	14  Ivory Player 13pcs	15  Goal Box 2pcs	16  Rod Washer 16pcs
17  Foam Bumper 16pcs	18  Handle 8pcs	19  Rod End Cap 8pcs	20  Goal 2pcs
21  Pusher 2pcs	22  Felt Pad 2pcs	23  Net 1pc	24  Small Table Soccer Ball 2pcs
25  Large Kick Soccer Ball 1pc	26  Goal Box 2pcs	27  Air Pump 1pc	28  Leg Leveler 4pcs
29  2-Hole Rod 2pcs	30  3-Hole Rod 4pcs	31  5-Hole Rod 2pcs	32  Table Tennis Net 1pc
33  Table Tennis Ball 2pcs	34  Table Tennis Bat 2pcs	35  Table tennis Post 2pcs	36  Hockey Puck 2pcs

 Parts List

37  Baseball 1pc	38  Bean Bag – Red 4pcs	39  Bean Bag – Blue 4pcs	40  Launcher 1pc
41  Football 1pc	42  hook 2pcs	43  Metal Bracket 2pcs	44  bow 1pc
45  Bean bag cup-large 1pc	46  Bean bag cup-medium 1pc	47  Bean bag cup-small 1pc	48  3pcs
49  Arrow holder 1pc	A1  Allen Key 1pc	A2  1/4" X 1-1/8" Bolt 12pcs	A3  1/4" Washer 12pcs
A4  4 x 35 mm Round Head Screw 12pcs	A5  4 x 12 mm Round Head Screw 26pcs	A6  3 x18 mm Screw 26pcs	A7  M4x1/2" Bolt 4pcs
A8  M4 Nut 4pcs	A9  4 x 20 mm Round Head Screw 4pcs	A10  4 x 6 mm Round Head Screw 6pcs	P1  Plastic Rod Bushing 16pcs (Pre-installed)
P2  Plastic Ball Entry Rim 2pcs (Pre-installed)			

Assembly Tips

Attention: If you are using an electric screwdriver in the assembly, please set at low torque and do not over tighten the hardware. When assembling individual parts, loosely tighten screws until all screws are inserted, then tighten completely.

Assembly Instructions

NOTE: We recommend that two adults work together to assemble this game.

Step 1


Find a clean, level place to begin the assembly of your Soccer Table. The table will be assembled upside down and then turned over on its legs once the assembly is completed.

Step 2

Remove all the parts from the box and verify that you have all of the parts as shown on the parts list above. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.


Step 3

Attach the Side Apron (#1) to the End Aprons (#2) using two Screws (#A4) per End Apron.

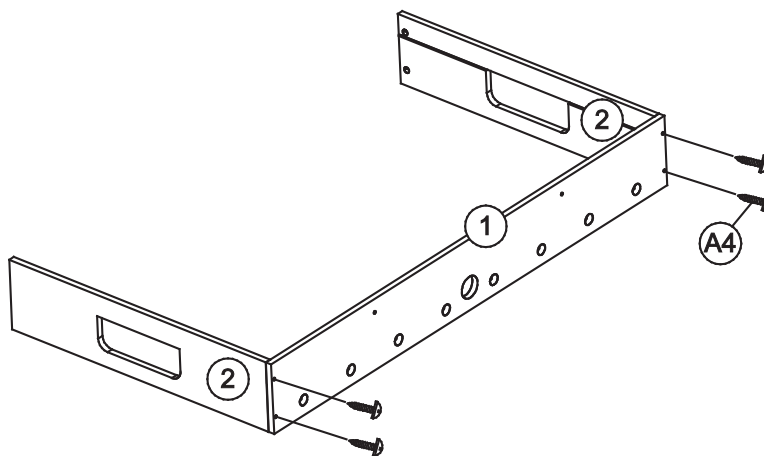

Step 4


Slide the Playfield (#4), with the graphic facing down, into the grooves of the End Aprons (#2).

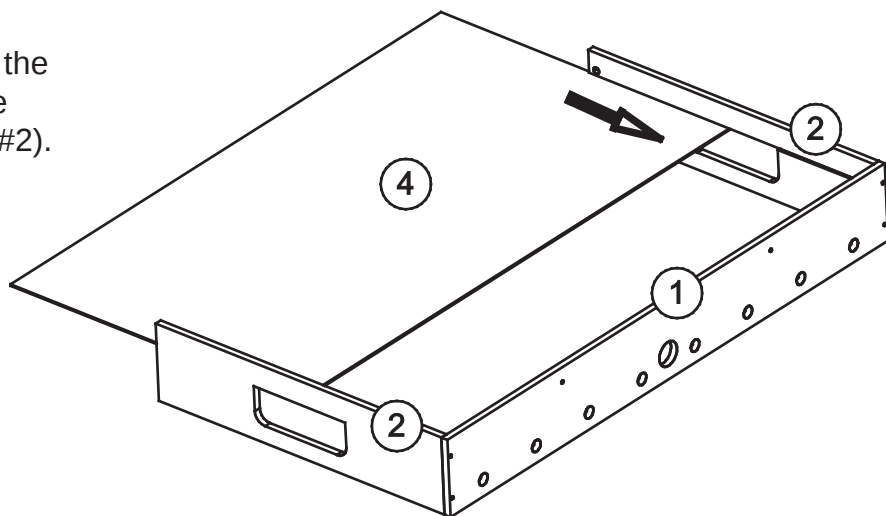

Step 5

Now attach the other Side Apron (#1) to the End Aprons (#2) using two Screws (#A4) per End Apron. Place the Support Braces (#3) on the Playfield (#4) and attach them to the Side Aprons (#1) using two Screws (#A4) per Brace.

Turn the Cabinet over.

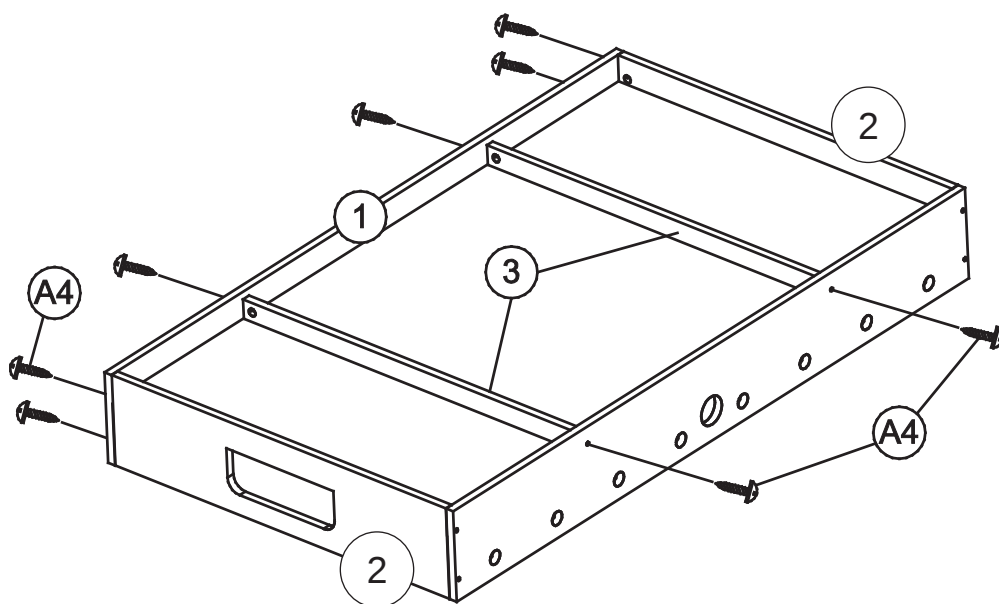

Step 6

Slide the empty Rods (#29, 30, 31) through the Rod Bushings (#P1), which are the plastic sleeves in the Side Apron (#1). Be sure to insert the empty Rods (#29, 30, 31) on only one side of the Side Apron (#1) in the order shown in 4A, as this will determine how many players will attach to each rod.


Note: The player Rods have a hole at their end where the Handles (#18) will go.

Insert the players onto the empty Rods (#29, 30, 31) by pulling the empty rod back toward the Rod Bushing (#P1) and inserting a Rod Bumper (#17), Rod Washer (#16) and the appropriate number of Players (#13 or #14) followed by Rod Washer (#16) and Rod Bumper (#17) as shown in 4B.

Now insert the end of the rod through the Rod Bushing (#P1) on the other side of the Side Apron (#1).

Secure the Players (#13 and #14) which you have attached to the Rods (#29, 30, 31) using one screw (#A6) as shown in image 4C.


Note: The goalie should be at the left side of each player.

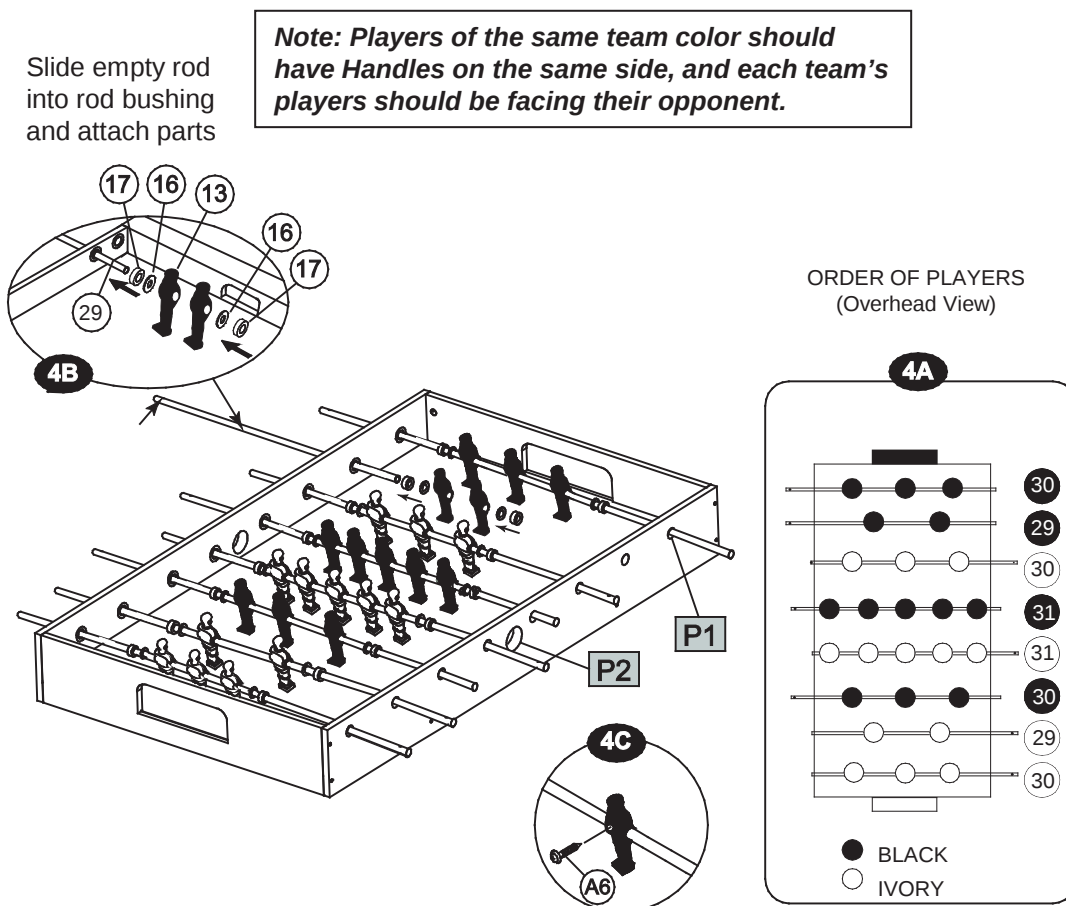



Step 7

Attach the Goal Boxes (#15) to the End Aprons (#2) using four Screws (#A5) per Goal Box.

Place the Handles (#18) onto the Player Rods with a hole at their end. Then place the End Caps (#19) onto the other side of the Player Rods.

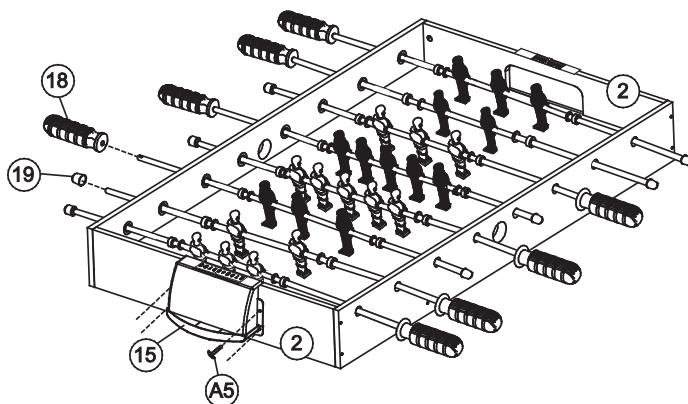

Step 8

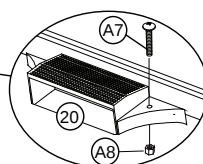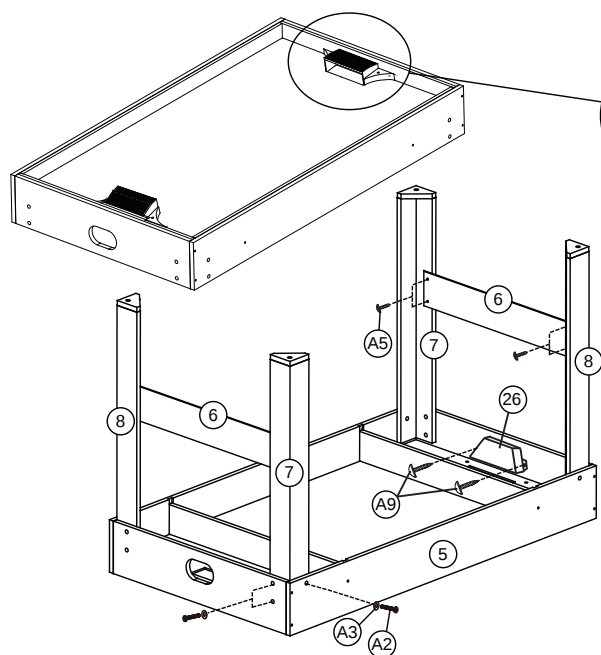

Attach the Goals (#20) to the end of playfield using two Bolts (#A7) and Nut (#A8) per Goal.


Attach the Left and Right Legs (#7 and #8) to the Foosball Main (#5) using three Bolts (#A2) and three Washers (#A3) per leg.

Attach the End Leg Braces (#6) to the Legs using four Screws (#A5) per End Leg Brace.

Attach goal boxes (#26) to the end apron, using two screws (#A9) per goal box.



Step 9

Attach the Net (#23) to the Legs (#7 and #8) using one Screw (#A5) per Leg, and attach the Net to the bottom of the Legs using the Leg Levelers (#28).

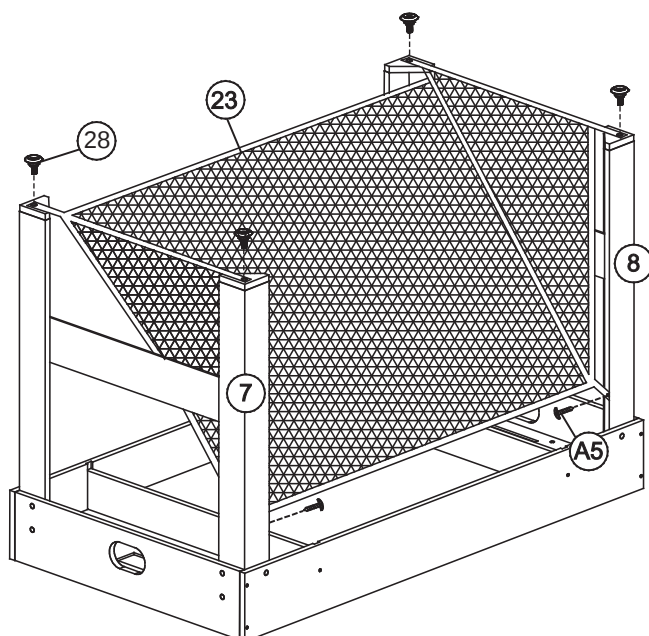


Step 10

Lift the assembled table from the floor with at least two strong adults, turn it over, and set the table on its legs in the location where you want to play.

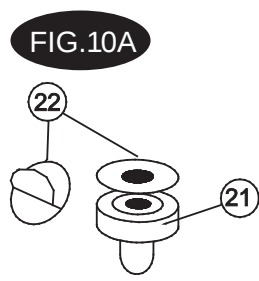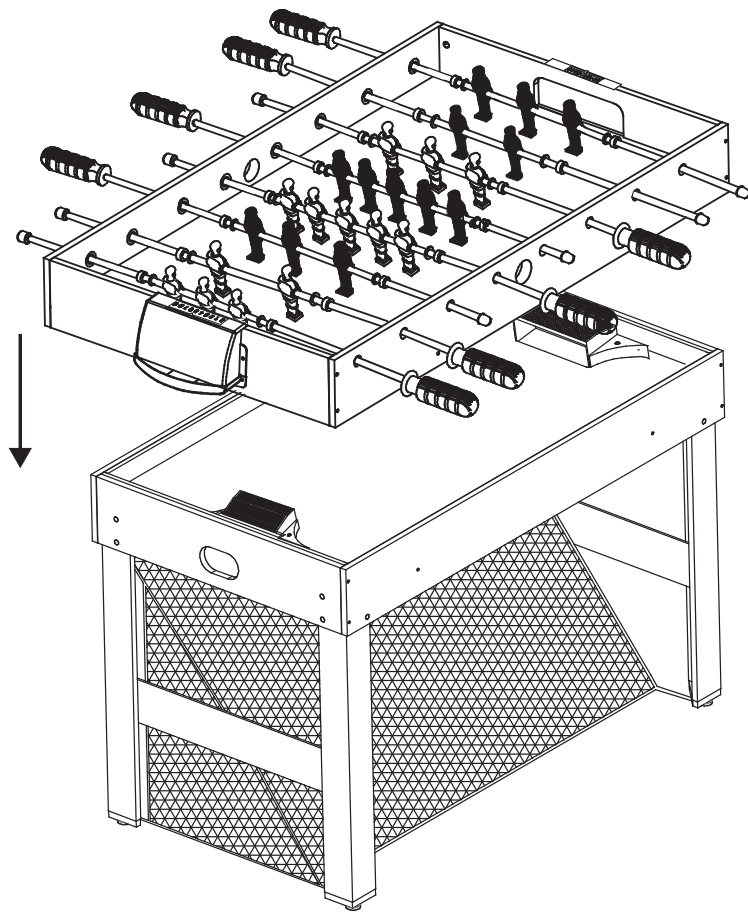


Tear the paper backing off the Felt Pads (#22) and stick them to the bottom of the Pushers (#21).

- CAUTION:** Two adults are recommended to flip the table as shown.
- 1.Lift the table off the ground.
 - 2.Turn the table over, using caution to clear the legs as you turn.
 - 3.Place the table on all four legs at the same time.

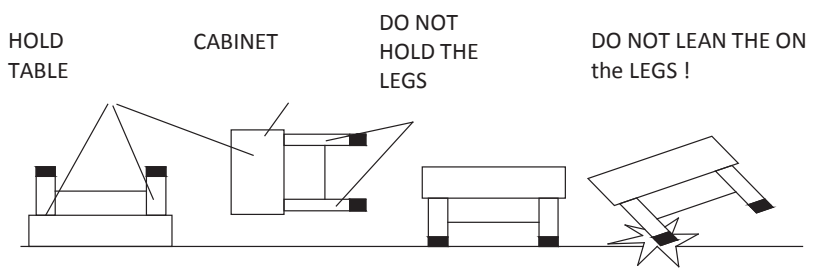


Step 11

To play table tennis, remove the rod soccer portion off of the lower main cabinet.

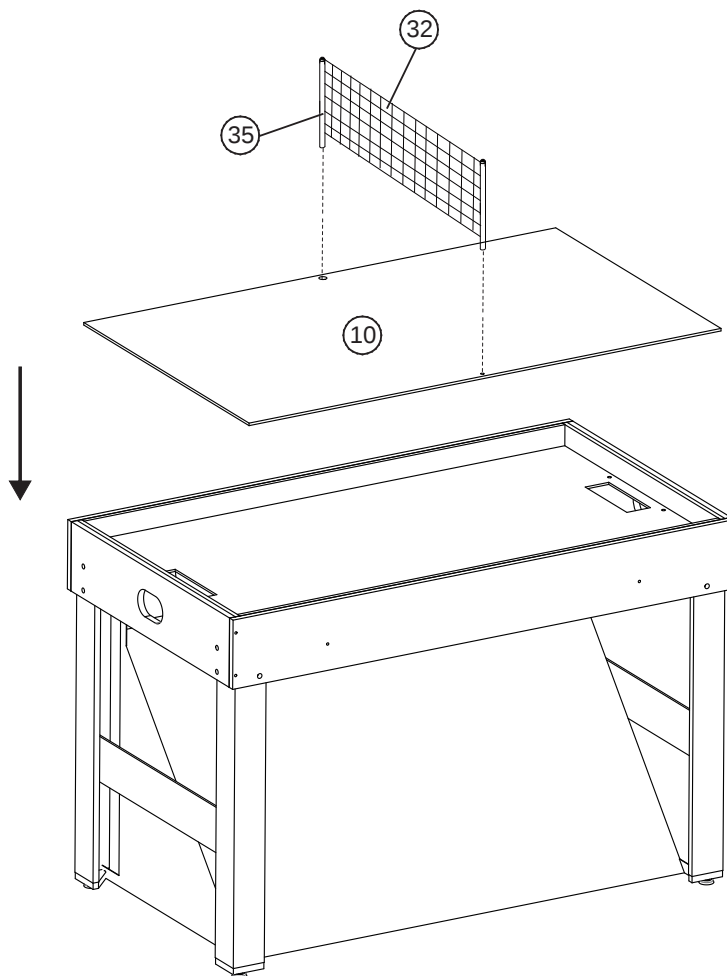


Place the table tennis top (#10) on top of the lower cabinet as shown in the diagram. Insert the net posts (#35) and net (#32) to play the game.

Step 12

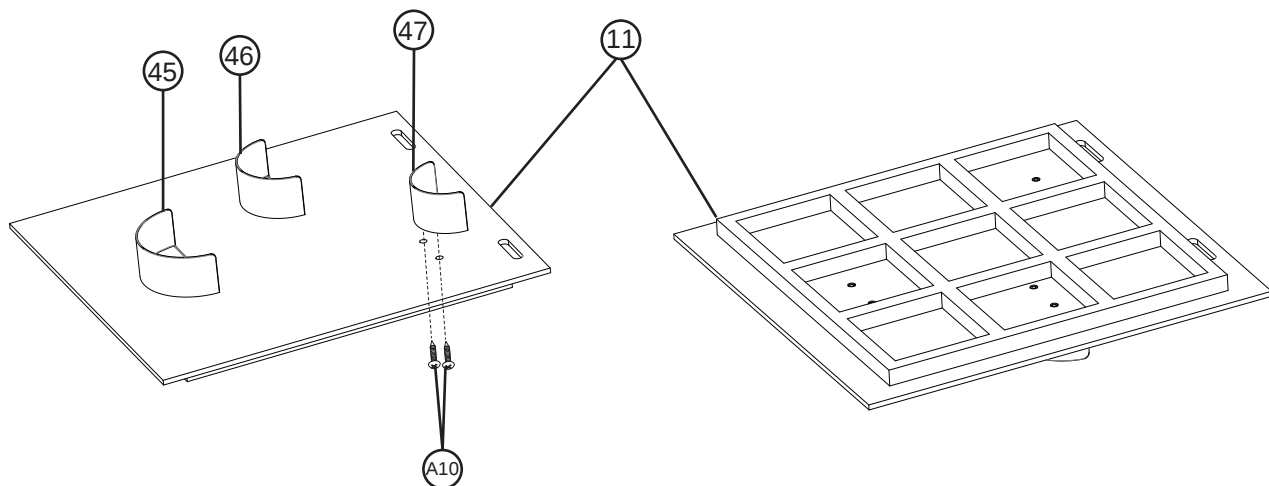


Attach the Bean Bag Cups (#45,#46,#47)to the Bean Bag Board(#11)using two screws (#A10) per cup. To play TIC TAC TOSS game, the board must be laid down flat on the floor to play. Players will take turns tossing bags trying to get three of their bags in a row to win.

Step 13

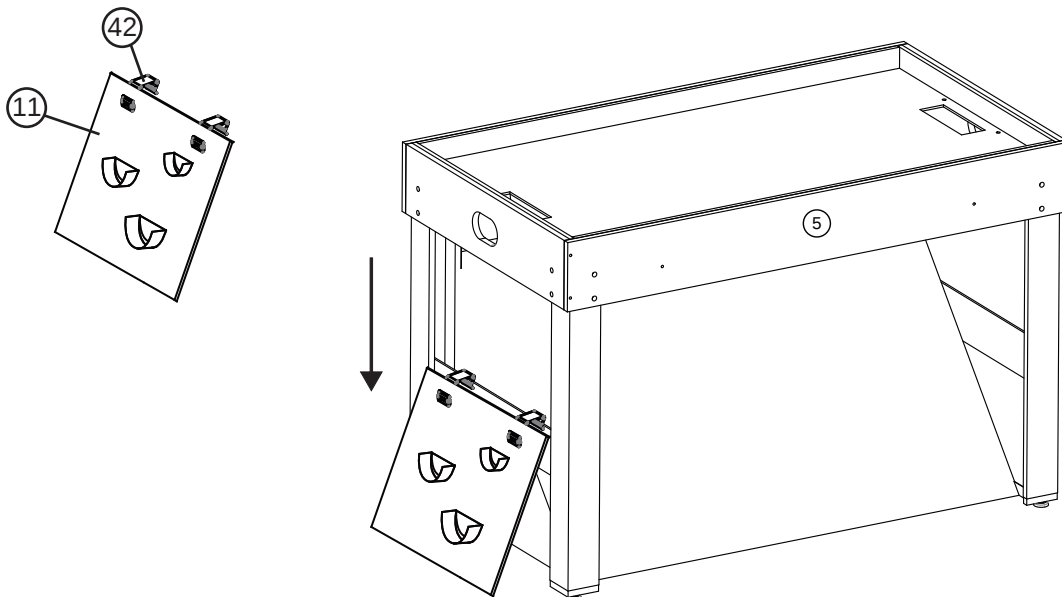


To play skee bag toss game, insert the hook (#42) into the game board (#11). Hang the game board (#11) onto the bottom leg brace as shown to play.

Step 14

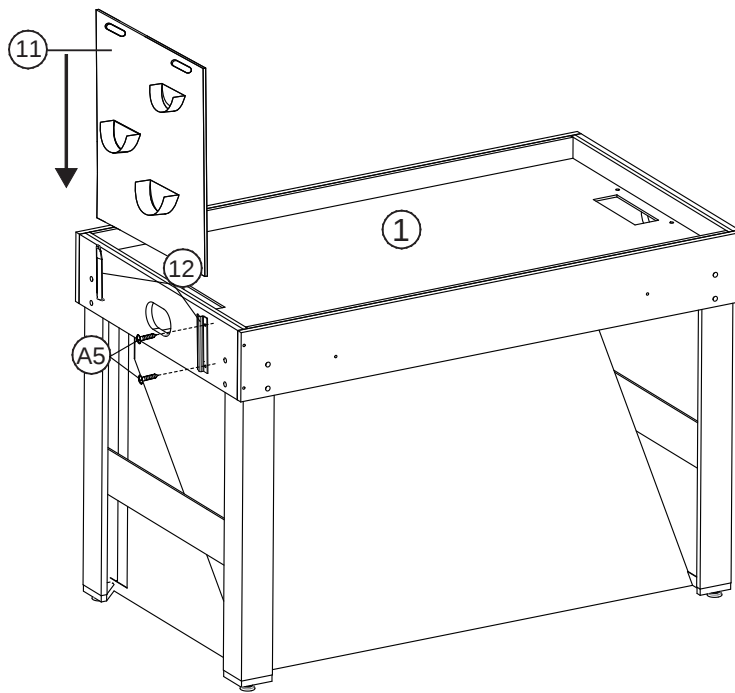

To setup play for launch football and baseball, attach the plastic bracket (#12) to the end panel using two screws(#5) per bracket, and slide the bean bag board (#11) into the bracket.

Step 15

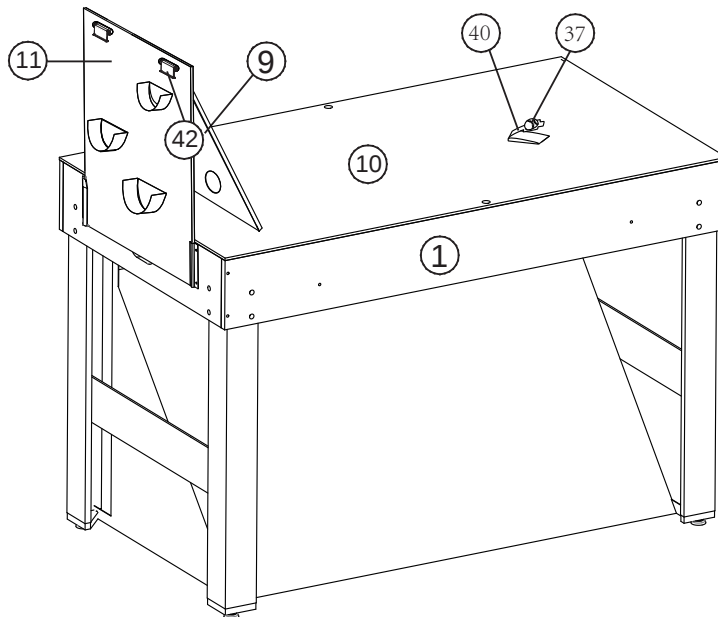



To play the launch football and baseball games, lean the game board #9 against the bean bag board that you just inserted into the brackets. Use hook (#42) to secure the game board (#9) to the bean bag board (#11) on an angle as shown.

Step 16

Secure the Metal brackets (#43) to the long side of the Main cabinet (#5) with two screws (# A5) per metal bracket , Slide the Archery board (#10) into the metal guide brackets (#43).

To play archery, players will take turns shooting 3 arrows at the targets per turn. The player with the most points after 3 rounds is the winner.

Attach the Arrow holder (#49) to the Bow (#44) by snapping them together as shown.

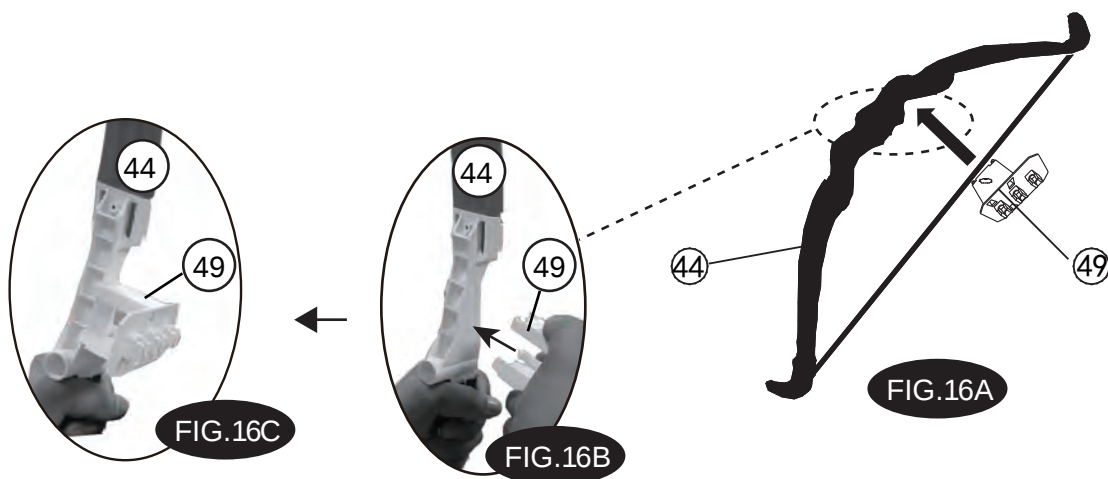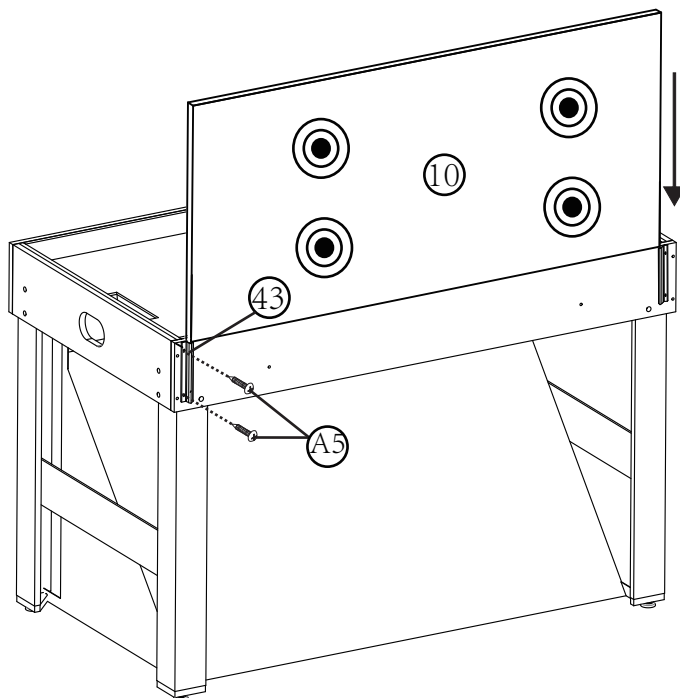

WARNING: Always make sure there are no other people or pets in the path or near surroundings when playing this game because the arrows could cause physical harm or injury. Shooting arrows should only be at the target. Adult supervision is highly recommended.