



## 3 IN 1 HOCKEY, TABLE TENNIS, DINING TABLE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

**DO NOT RETURN IT TO THE STORE,**

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

**Mailing Address: (Correspondence Only)**

Escalade Sports  
PO Box 889  
Evansville, Indiana 47706-0889

**Physical Location:**

Escalade Sports  
817 Maxwell Ave.  
Evansville, Indiana 47711

Please visit our Web site at:

**www.escaladesports.com**

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: G05305W/F

Date Code: 2 - G05305W/F - FS

Purchase Date: \_\_\_\_\_

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

# SAFETY INSTRUCTIONS

**FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.**

*Owner must ensure that all players know and follow these rules for safe operation of the system.*

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.  
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least four capable adults are required to assemble this product.

1. Read all instructions-All the safety and operating instructions should be read carefully before the hockey game is played.
2. **Caution**-This is not a toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with children to avoid possible risk of electric shock or other injuries.
3. **Power sources**-This hockey game should be operated only from 110-120V A.C., 60 cycle current as indicated on the identification label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
4. **Power cord protection**-Power cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to cords at plugs, convenience receptacles, and the point of exit from the game.
5. **Overloading**-Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
6. **Object and liquid entry**-Never push objects of any kind into this game through openings as they may touch dangerous voltage points or short-out parts which could result in a fire or electric shock. Never spill liquid of any kind on the game.
7. **Ventilation**-Openings in the game are provided for the exhaust air to create a cushion effect. The openings on the air blower are for the intake air. Keep clear of the air blower when it is on. Do not put hand or other objects near the intake openings. To ensure reliable operation of the game and protect it from overheating these openings must not be blocked or covered.
8. **Damage requiring service**-Unplug the game from the wall outlet.  
Do not attempt to service the blower yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer servicing to qualified service personnel under the following conditions.  
A. When the power supply cord or plug is damaged.  
B. If liquid has spilled, or objects have fallen into the blower.  
C. When the air blower exhibits a distinct change in performance e.g. abnormal noise, this indicates a need for service.
9. **CAUTION-ELECTRICALLY OPERATED PRODUCT**-Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.
10. We recommend that the game be periodically examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In the event such conditions exist, the game should not be used until properly repaired.

11. **RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS**

**WARNING**-When using electric appliances, basic precautions should always be followed, including the following:

- A) Read all the instructions before using the appliances.
- B) To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- C) Do not contact moving parts.
- D) Only use attachment recommended or sold by the manufacturer.
- E) Do not use outdoors.
- F) For a cord-connected appliance, the following shall be included:
  - To disconnect, turn all controls to the off position, then remove plug from outlet.
  - Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
  - Unplug from outlet when not in use and before servicing or cleaning.
  - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

**NOTICE**

REFER TO [CONTAINER] FOR SAFETY  
INSTRUCTIONS WHEN USING  
CLEANING PRODUCTS.

**⚠ CAUTION**

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE  
REQUIRED TO LIFT AND ROTATE THIS GAME TABLE  
INTO PLAYING POSITION. DO NOT LEAN THE TABLE  
ON ITS LEGS AS THIS COULD DAMAGE THEM.

**⚠ CAUTION**

USE CARE TO AVOID PINCH POINTS WHEN INSTALLING  
OR REMOVING THE BUFFET CONVERSION TOPS.



**⚠ WARNING**

**Crush and Shear Points**

**Keep hands and fingers  
clear of the hinge area  
and the bench lid area  
when closing the bench lid**

**⚠ WARNING**

**MAX. LOAD CAPACITY:  
550 LBS.**

**IMPORTANT! READ EACH STEP  
IN THIS MANUAL BEFORE YOU  
BEGIN THE ASSEMBLY.**

**IMPORTANT!**

THE DRAWINGS IN THIS  
MANUAL MAY BE  
EXAGGERATED OR MODIFIED  
TO SHOW DETAILS.



**Tools Required:**

Allen Wrench (Included)  
Furniture Polish and Soft Cloth  
Carpenters Level

## ASSEMBLY TIPS

 
Make sure you understand the following tips before you begin to assemble your game table.

1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.


# HARDWARE IDENTIFIER

(To Scale)


**HARDWARE KIT IS PACKED INSIDE OF CARTON A**



 **H1** = 16 pcs  
5/16" x 1-1/4"  
Allen Head Bolt




**H2** = 48 pcs  
5/16" x 1-3/8"  
Allen Head Bolt

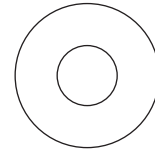

**H3** = 64 pcs  
5/16" x 3/4"  
Flat Washer



 **H4** = 64 pcs  
5/16" x 1/2"  
Lock Washer




(Not to Scale)

**T1** = 1 pc  
Allen Wrench


## PARTS IDENTIFIER

(Not To Scale)

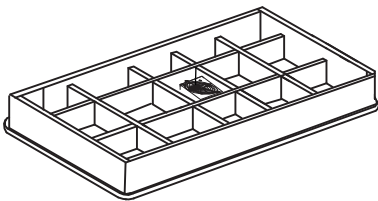

**P1** = 1 pc  
Main Table Cabinet


**PACKED INSIDE OF CARTON A**

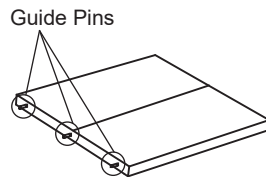

**P2** = 1 pc  
A Table Tennis Top  
With Guide Pins

Reverse Side is The Dinning Top


**PACKED INSIDE OF CARTON A**

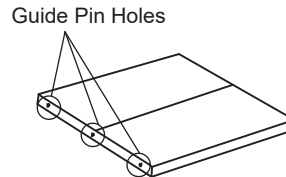

**P3** = 1 pc  
B Table Tennis Top  
With Guide Pin Holes


Reverse Side is The Dinning Top

**PACKED INSIDE OF CARTON A**

 


**P4** = 4 pcs  
Table Leg

**PACKED INSIDE OF CARTON B**

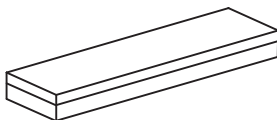


**P5** = 2 pcs  
Bench Seat

**PACKED INSIDE OF CARTON B**

 

**P6** = 4 pcs  
Bench Leg

**PACKED INSIDE OF CARTON A**

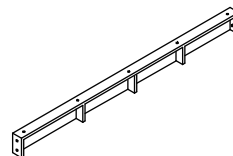


**P7** = 4 pcs  
Bench Support  
(Packed inside P5 Bench Seats)

**PACKED INSIDE OF CARTON B**


# ACCESSORIES IDENTIFIER

(Not To Scale)

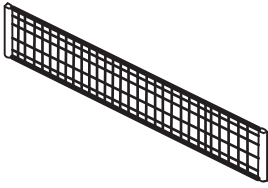


**A1= 1 pc**  
Table Tennis Net

**PACKED INSIDE OF CARTON A**

 

**A2= 2 pcs**  
Table Tennis Net Post

**PACKED INSIDE OF CARTON A**

 


**A3= 2 pcs**  
Table Tennis Paddle

**PACKED INSIDE OF CARTON A**



**A4= 2 pcs**  
Table Tennis Ball

**PACKED INSIDE OF CARTON A**

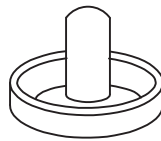


**A5= 4 pcs**  
Striker

**PACKED INSIDE OF CARTON A**



**A6= 4 pcs**  
Puck

**PACKED INSIDE OF CARTON A**

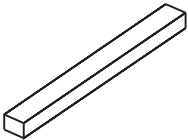

**A7 = 2 pcs**  
Table Tennis Playfield Support  
(Packed underneath the playfield)

**PACKED INSIDE OF CARTON A**



**A8 = 2 pcs**  
Bench Carpet  
(Packed inside P5 Bench Seats)


**PACKED INSIDE OF CARTON B**

# 3 IN 1 HOCKEY, TABLE TENNIS, DINING TABLE

## Parts List

(Not To Scale)

All items are packaged in larger Carton A, except, P4, P5, P7, and A8 are packaged in smaller Carton B.

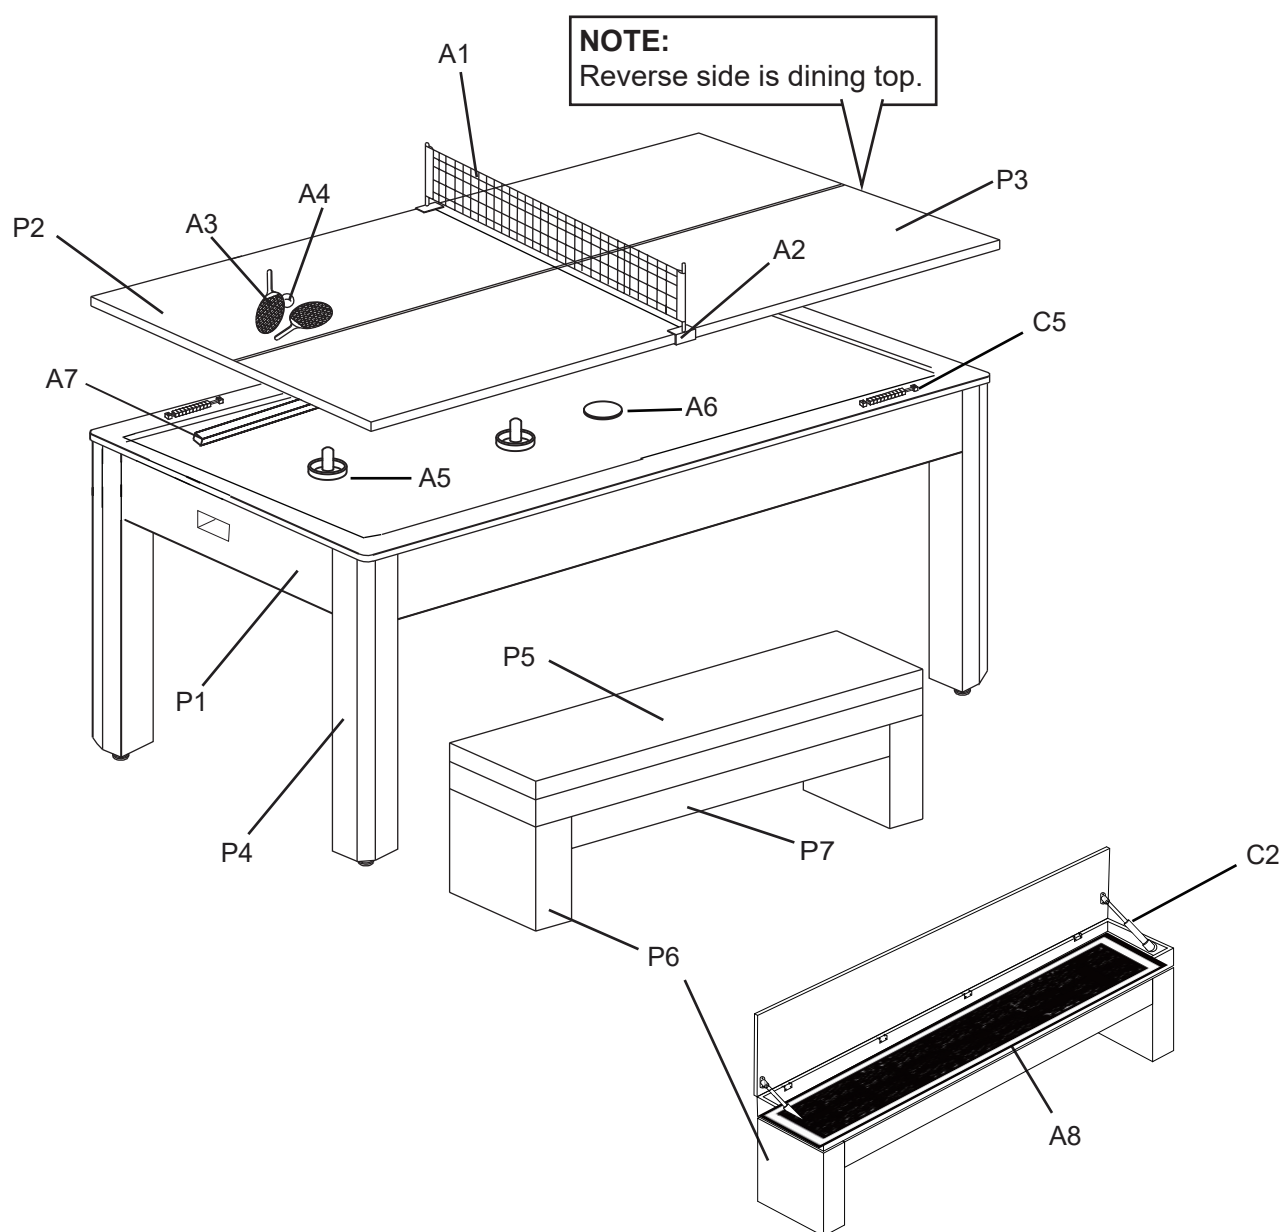

## PARTS REQUIRED

16pcs - **H1** Allen Head Bolt

16pcs - **H3** Flat Washer

16pcs - **H4** Lock Washer

1pc - **P1** Main Table Cabinet

4pcs - **P4** Table Leg



1pc - **T1** Allen Wrench

## STEP 1:

Attach **P4** Legs onto the Side Aprons and the End Aprons using **H1** Bolts, **H4** Lock Washers and **H3** Flat Washers as shown in **FIGURE 1**.

Use T1 Allen Wrench to tighten all **H1** bolts.

**FIGURE 1**

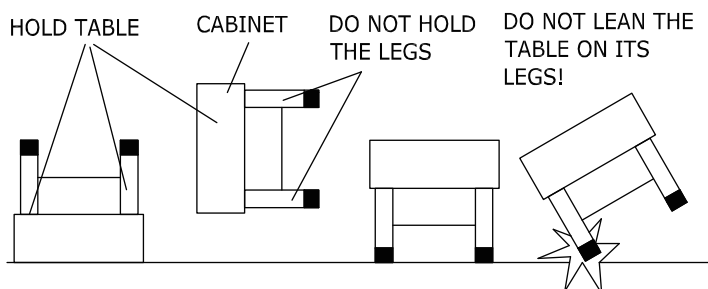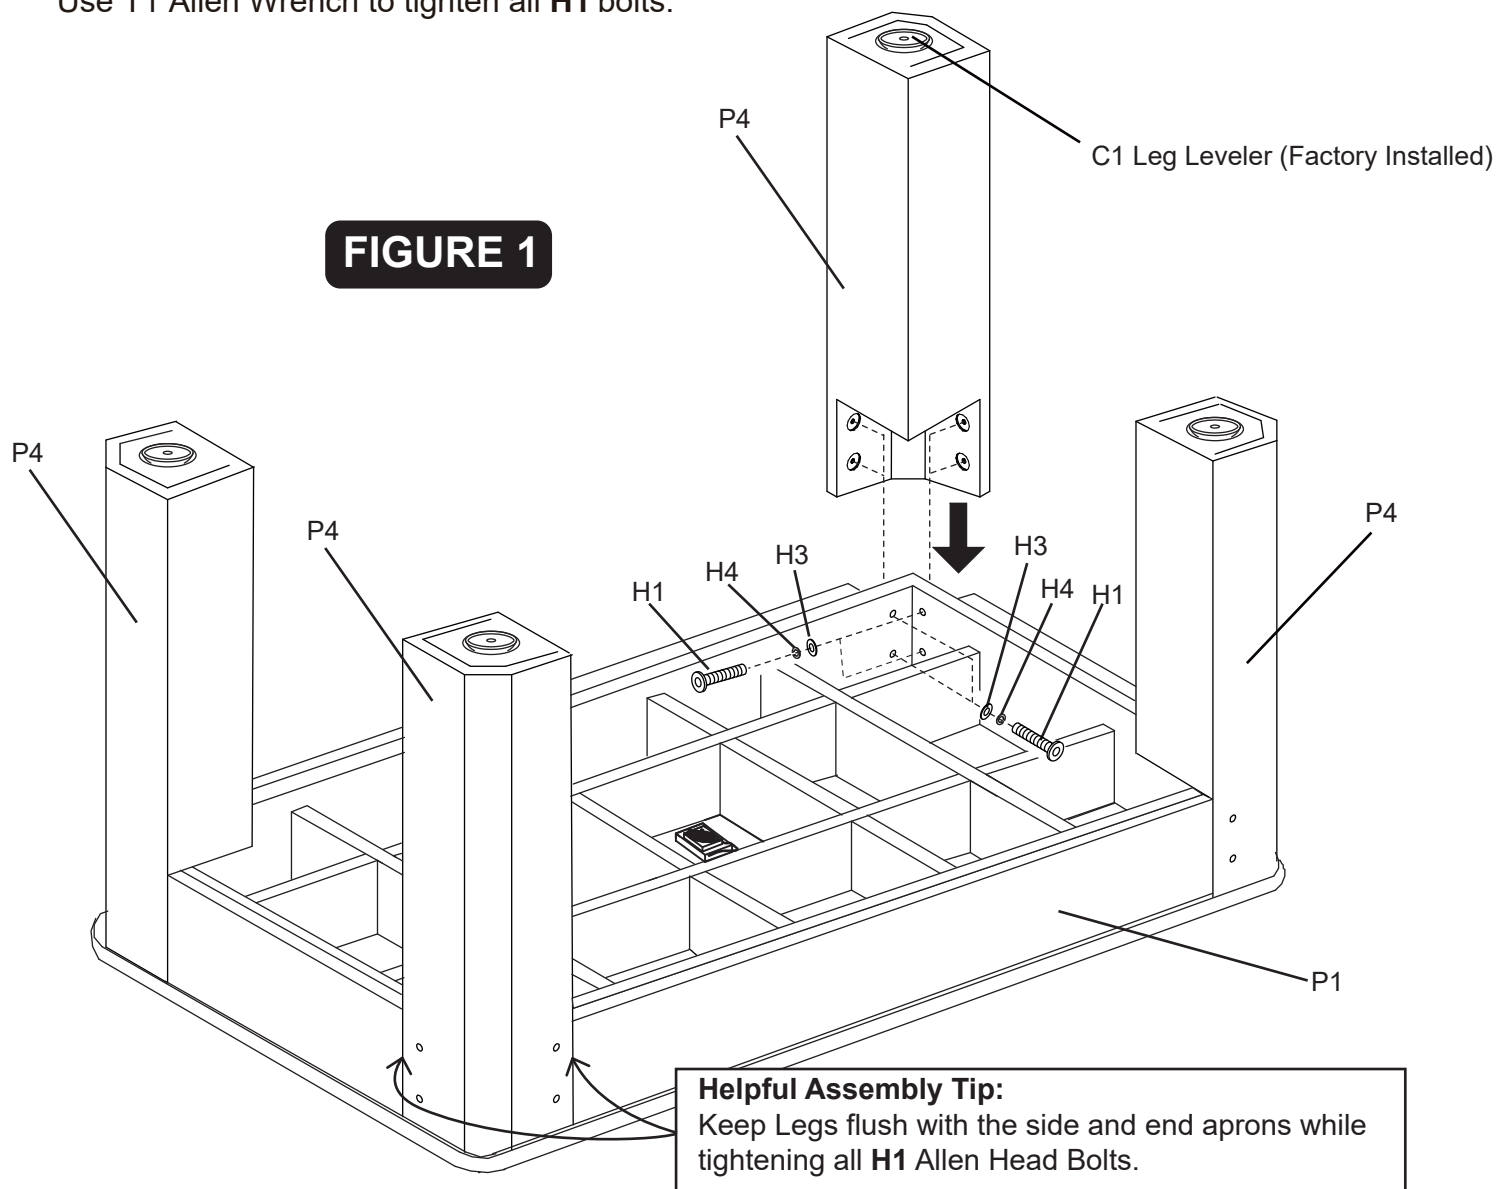


## CAUTION:

**Six strong adults are recommended to flip the table as shown.**

1. Grab the table on the ground.
2. Turn the table over.
3. Place it on all four legs at the same time onto the floor.

## ELECTRONIC CONNECTIONS

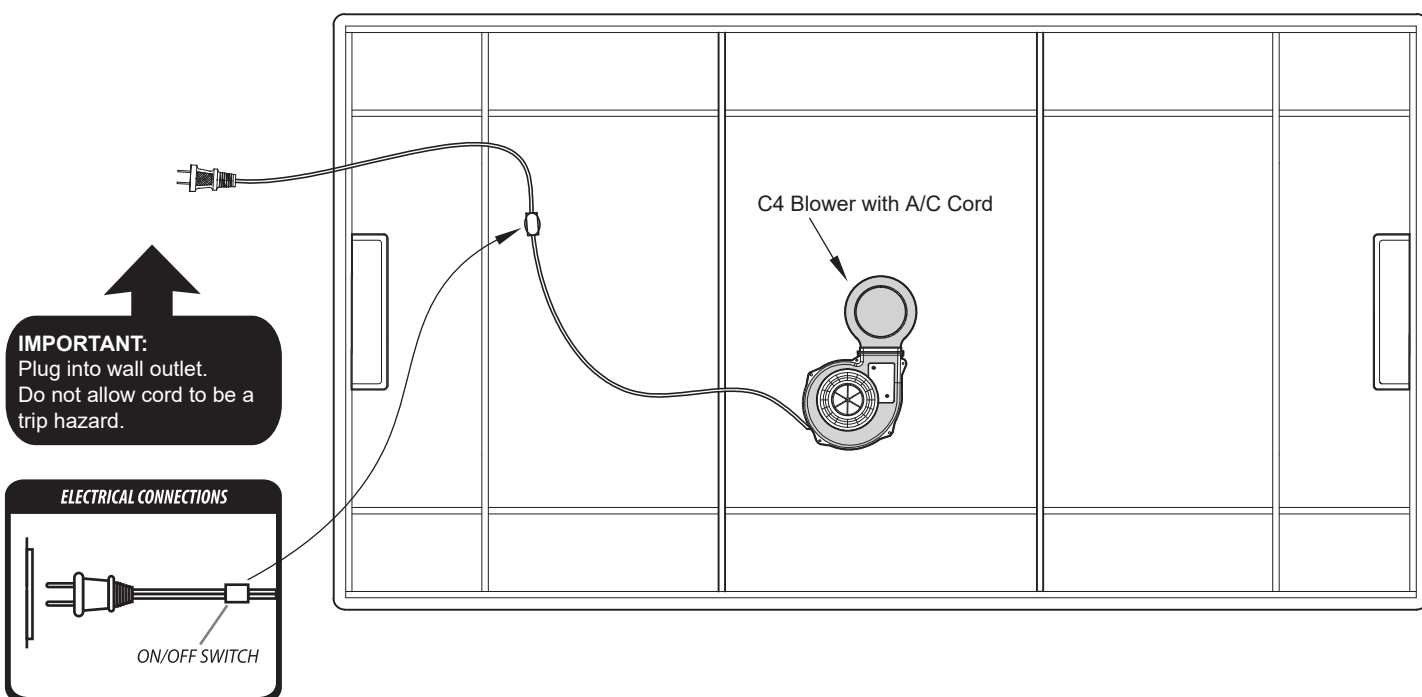

### NOTE:


ON/OFF switch is attached to the air fan motor cord. Be sure to always turn fan motor off when play is completed.

### PARTS REQUIRED

- 1pc - **P2** A Table Tennis Top With Guide Pins
- 1pc - **P3** B Table Tennis Top With Guide Pin Holes
- 1pc - **A1** Table Tennis Net
- 2pcs - **A2** Net Post
- 2pcs - **A7** Table Tennis Playfield Support

### STEP 2:

Using the guide pins carefully connect the **P2** A Table Tennis Top With Guide Pins to **P3** B Table Tennis Top With Guide Pin Holes as shown in **DETAIL A**. Place **A7** Table Tennis Playfield Supports between Table Tennis Top and Air Hockey table. Install **A1** Table Tennis Net by adjusting **A2** Net Post as shown in **DETAIL B** & **FIGURE 2**.

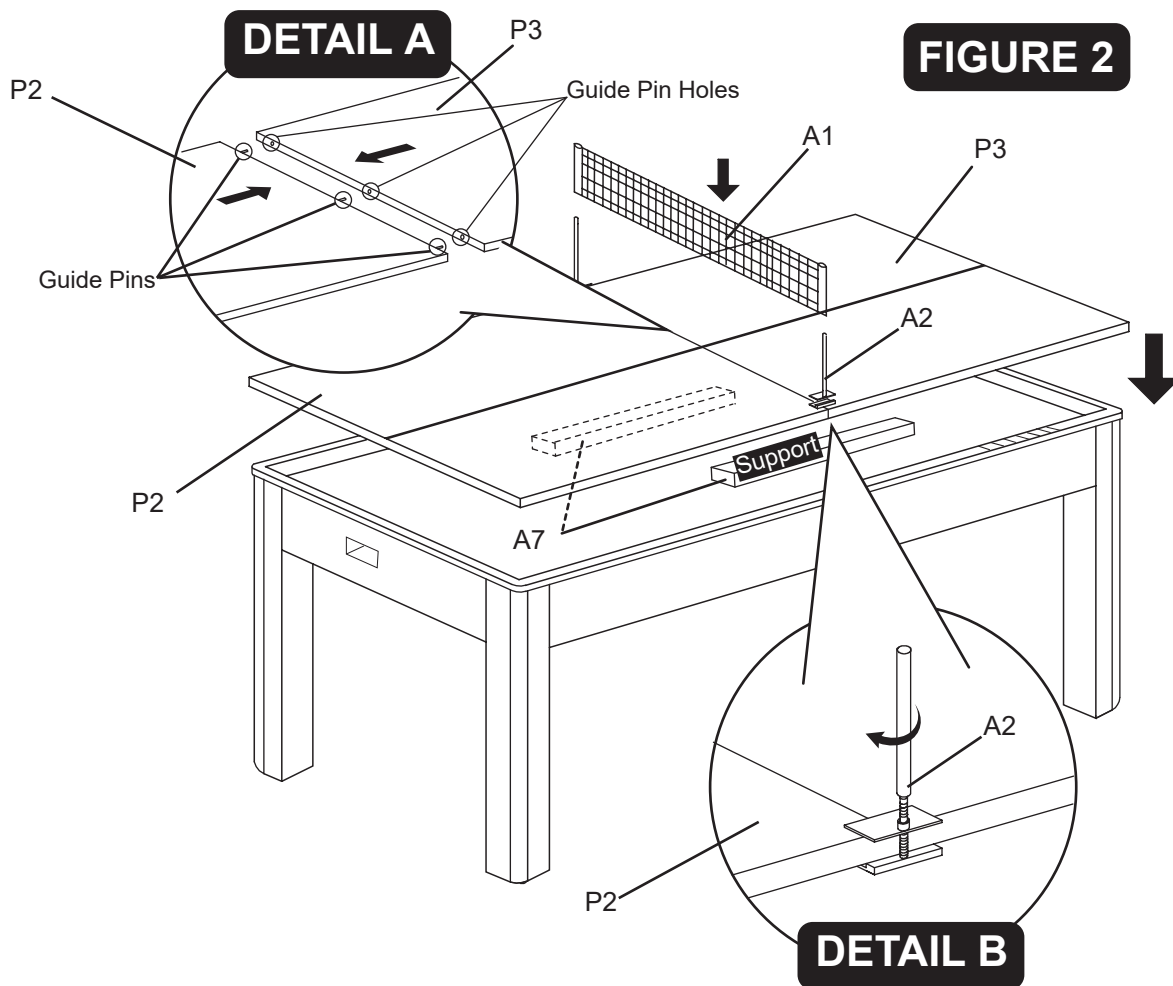

### NOTE:

#### Using Dining Top:


Remove Table Tennis Net and Net posts. Carefully separate the two playfield halves, flip the halves and push halves together using the guide pins and guide pin holes in each half top.

### PARTS REQUIRED

48pcs - **H2** Allen Head Bolt  
48pcs - **H3** Flat Washer  
48pcs - **H4** Lock Washer  
4pcs - **P6** Bench Leg  
4pcs - **P7** Bench Support  
2pcs - **P5** Bench Seat  
2pcs - **A8** Bench Carpet

### STEP 3:

Attach **P6** Bench Legs to **P7** Bench Supports using **H2** Allen Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 3**. Tighten all **H2** Allen Head Bolts.

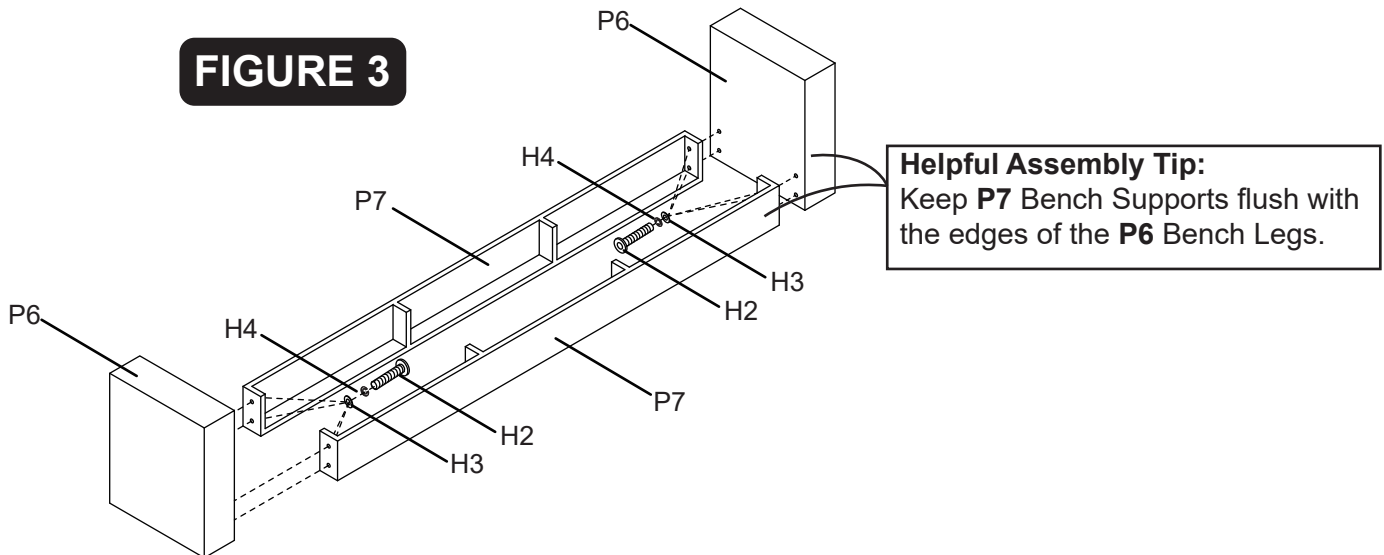


### STEP 4:

Firstly, take the **A8** Bench Carpets out from the **P5** Bench Seats.

Attach **P5** Bench Seat to the Leg assembly using **H2** Allen Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 4**.

Tighten all **H2** Allen Head Bolts.

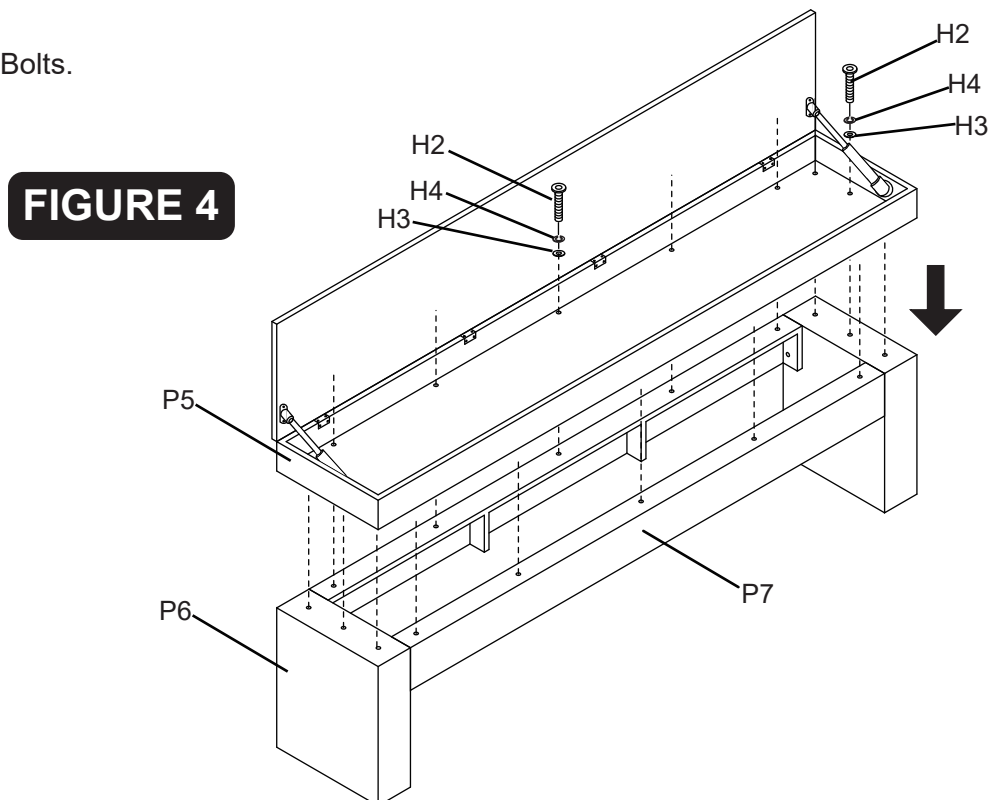


**PARTS REQUIRED**  
2pcs - A8 Bench Carpet

**STEP 6:**

Install the **A8** Bench Carpet into each bench as shown in **FIGURE 6**.

**FIGURE 6**

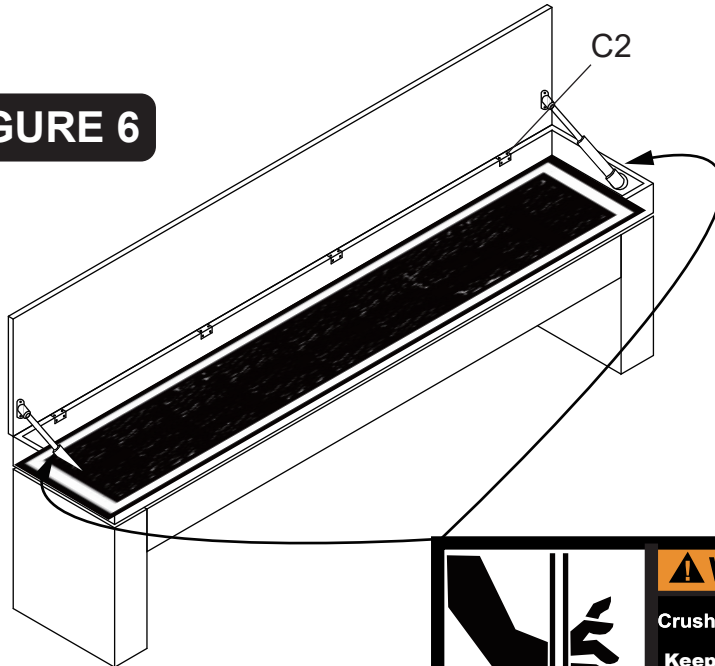

**⚠ WARNING**

**Crush and Shear Points**

**Keep hands and fingers  
clear of the hinge area  
and the bench lid area  
when closing the bench lid**

**WARNING:**

To prevent injury, exercise caution when opening and closing the bench lid.

**DO NOT** let bench lid drop shut.

**DO NOT** let children operate bench lid.

Be cautious when moving bench on floor, Lift bench ends to move.

**DO NOT STAND ON BENCH SEAT.**



**⚠ WARNING**

**MAX. LOAD CAPACITY:**

**550 LBS.**

Congratulations! You have now assembled your 3 in1 hockey table. Please note the Care and Use instructions below to insure many years of trouble free use of your 3 in1 hockey table.

## CARE AND USE FOR YOUR TABLE

1. Use spray furniture polish to clean all exterior surfaces of your hockey table and the playfield with the air motor fan running.
2. Use only a slightly damp soft cloth to clean the table tennis top (do not use Furniture Polish)
3. This product is intended for **INDOOR** use only .
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the legs.
6. **DO NOT** set drinks on the table.
7. The purchase of a table cover will both protect and help keep clean the entire top of the table.
8. Lastly, using a carpenters level and the leg levelers, level table for best play.

## PRODUCT PARTS LIST FOR MODEL # G05302W/F-TAN

| Part # | Description                               | Qty. | Part # | Description                                        | Qty. |
|--------|-------------------------------------------|------|--------|----------------------------------------------------|------|
| H1     | 5/16" x 1-1/4" Allen Head Bolt            | 16   | A1     | Table Tennis Net                                   | 1    |
| H2     | 5/16" x 1-3/8" Allen Head Bolt            | 48   | A2     | Net Post                                           | 2    |
| H3     | 5/16" x 3/4" Flat Washer                  | 64   | A3     | Table Tennis Paddle                                | 2    |
| H4     | 5/16" x 1/2" Lock Washer                  | 64   | A4     | Table Tennis Ball                                  | 2    |
| T1     | Allen Wrench                              | 1    | A5     | Striker                                            | 4    |
| P1     | Main Table Cabinet                        | 1    | A6     | Puck                                               | 4    |
| P2     | "A" Table Tennis Top With Guide Pins      | 1    | A7     | Table Tennis Playfield Support                     | 1    |
| P3     | "B" Table Tennis Top With Guide Pin Holes | 1    | A8     | Bench Carpet                                       | 1    |
| P4     | Table Leg                                 | 4    | C1     | Leg Leveler (Factory Installed)                    | 4    |
| P5     | Bench Seat Assembly                       | 2    | C2     | Dampener Piston (Factory Installed)                | 4    |
| P6     | Bench Leg                                 | 4    | C3     | 1/2" Phillips Head Hinge Screw (Factory Installed) | 48   |
| P7     | Bench Support                             | 4    | C4     | Blower with A/C Cord                               | 1    |
|        |                                           |      | C5     | Manual Scorer (Factory Installed)                  | 2    |
|        |                                           |      | K1     | Hardware Kit                                       | 1    |
|        |                                           |      | M1     | Instruction Manual                                 | 1    |

# 90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

## NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.