 


SILVERBACK

MULTI-SPORT
REBOUNDER

MODEL NO.
B8455W

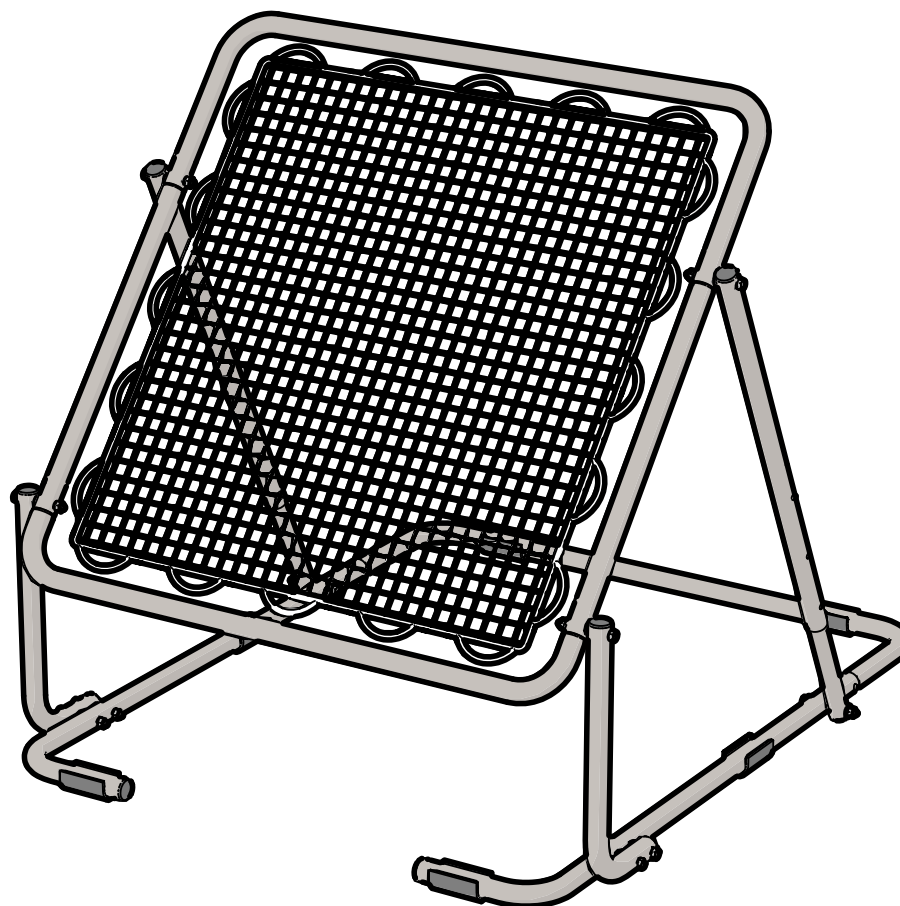

**Please Do Not Return This
Product to the Store!**

Contact Escalade® Sports customer service department at:
Phone: 1-800-467-1421
E-mail: customerservice@escaladesports.com

ESCALADE®
SPORTS

2L-8061-00

2025 Escalade® Sports

WARNING

- Not suitable for children under 3 years of age.
- Pass Back is a rebounder and will propel the ball towards the thrower at high speeds. Be sure that the user and - observers are safely positioned before using.
- When in use, make sure the pass back is set up in a clear area to avoid injury and/or damage to property.
- Do not use pass back for anything other than its intended use.
- Do not stand or jump on net or other parts of the product.
- Do not install the pass back in a location where errant balls could strike or cause damage to people or structures.
- Strangulation hazard, keep young children away from netting.
- Check before each use for loose hardware, excessive wear, and signs of corrosion and repair before using.
- Children should not operate the pass back adjustment, adjustments should be made by an adult.
- To prevent injury, children should not use the pass back until properly instructed.
- When adjusting the angle via the rear telescoping tubes, do not let go of the supports until the buttons are re-engaged.

4L-8957-00

CAUTION

**ONLY ADULTS SHOULD ASSEMBLE THIS PRODUCT.
DO NOT ALLOW CHILDREN IN THE ASSEMBLY
AREA UNTIL ASSEMBLY IS COMPLETE.**

CAUTION

**WHEN SLIDING THE TUBE SECTIONS TOGETHER DO
NOT GET HANDS OR FINGERS BETWEEN TUBES.**

PRE - ASSEMBLY TIPS

1. **Read this manual carefully before starting assembly.** Read each step completely before beginning each step.
2. **Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.**
3. **To make assembly easier, use the Hardware & Parts Identifiers on pages 4, 5 & 6 to identify and sort all fasteners & Parts. Check all cartons for kits. All hardware may not be located in one kit.**
4. **Do not tighten hardware until instructed to do so. If hardware is tightened too soon, mounting holes may not align and parts may not easily fit together.**
5. **Save these instructions and your proof of purchase (receipt) in the event that the manufacturer has to be contacted for replacement parts.**



ESCALADE®
S P O R T S

Please visit our Website at:

www.escaladesports.com

ON-LINE TROUBLE SHOOTING TECHNICAL ASSISTANCE
ON-LINE PARTS REQUESTS FREQUENTLY ASKED QUESTIONS
ADDITIONAL ESCALADE®SPORTS PRODUCT INFORMATION



Please Do Not Return This Product To The Store!

Contact Escalade® Sports customer service department at:

Phone: 1-800-467-1421

E-mail: basketball@escaladesports.com

Escalade Sports

Physical Location:

817 Maxwell Ave.

 
Evansville, IN 47711

Mailing Address: (Correspondence Only)


PO Box 889

Evansville, IN 47706


PARTS LIST (NOT ACTUAL SIZE)

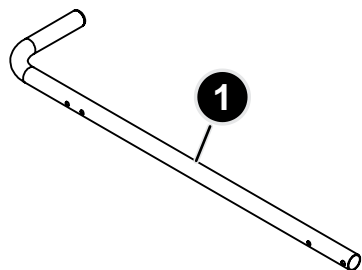

 
BASE SIDE TUBE WITH PLUG
4A-8962-00
QTY. 2

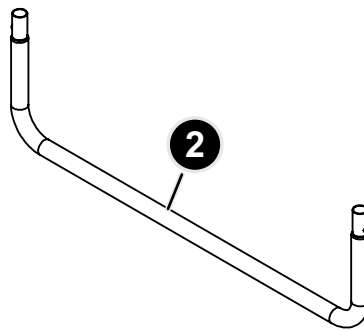

 
BACK BASE TUBE WITH BUTTON PINS
4A-8963-00
QTY. 1




GROUND FOOT
2M-6982-00
QTY. 6

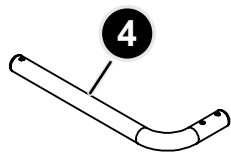 

 BASE SIDE RAISING TUBE WITH PLUGS
4A-8964-00
QTY. 2

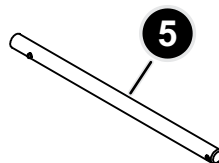


 MALE EXTENDING TUBE WITH BUTTON PIN
4A-8965-00
QTY. 2

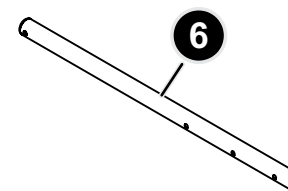


FEMALE EXTENDING TUBE WITH PLUG
4A-8961-00
QTY. 2

 
PARTS LIST (NOT ACTUAL SIZE)

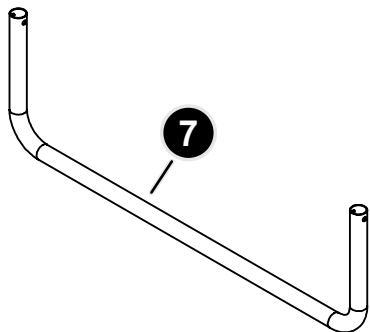


TOP NET FRAME TUBE
8S-8635-00
QTY. 1

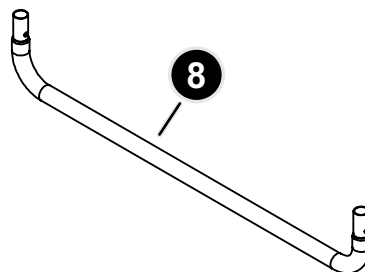 


BOTTOM NET FRAME TUBE
8S-8633-00
QTY. 1

 


SIDE NET FRAME TUBE
8S-8634-00
QTY. 2

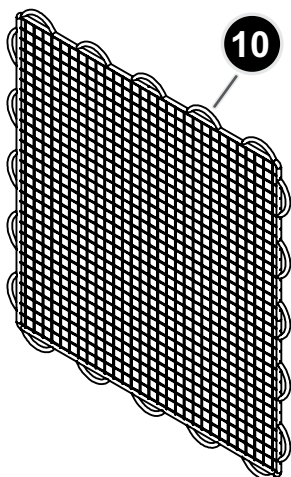 

NET
3F-6089-00
QTY. 1

 


BALL CLASP
4A-8685-00
QTY. 20

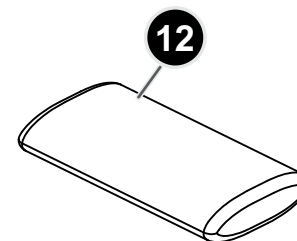 


BLACK SAND BAG
2F-7218-00
QTY. 2

 
HARDWARE IDENTIFIER (ACTUAL SIZE)

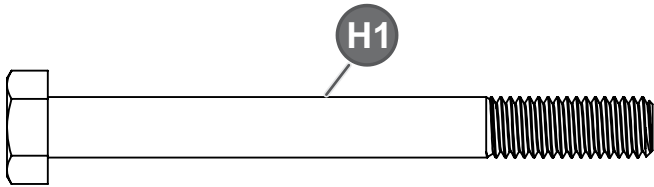

 
M8-1.25 MM X 80 MM HEX HEAD SCREW
1B-7305-00
QTY. 10

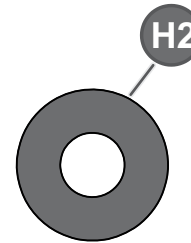

 
M8 FLAT WASHER 8.4 MM ID, 15 MM OD
Nylon Plastic Washer
2B-6876-00
QTY. 12

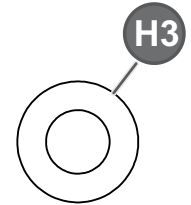


M8 WASHER FLAT
2B-6797-00
QTY. 18

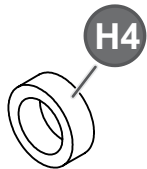 

 M8 Polyethylene Unthreaded Spacer
7B-8600-00
QTY. 2

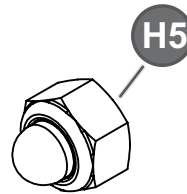

 M8-1.25 CAP LOCKNUT NYLON END
2B-6877-00
QTY. 10

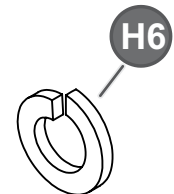

M8 LOCK WASHER
2B-6851-00
QTY. 10

FRAME ASSEMBLY INSTRUCTIONS

PARTS NEEDED

2X ① Base Side Tube

1X ② Back Base Tube

6X ③ Ground Foot

STEP 1

Snap on two Ground Feet (#3) to each Base Side Tube (#1) and Back Base Tube (#2) as shown in Figure 1.

NOTICE

Do not lay the parts on a rough surface until you attach the Ground Feet (#3), as it may scratch the finish or paint.

NOTICE

TWO ADULTS ARE REQUIRED TO COMPLETE THE FOLLOWING ASSEMBLY STEPS.



CAUTION

ONLY ADULTS SHOULD ASSEMBLE THIS PRODUCT. DO NOT ALLOW CHILDREN IN THE ASSEMBLY AREA UNTIL ASSEMBLY IS COMPLETE.

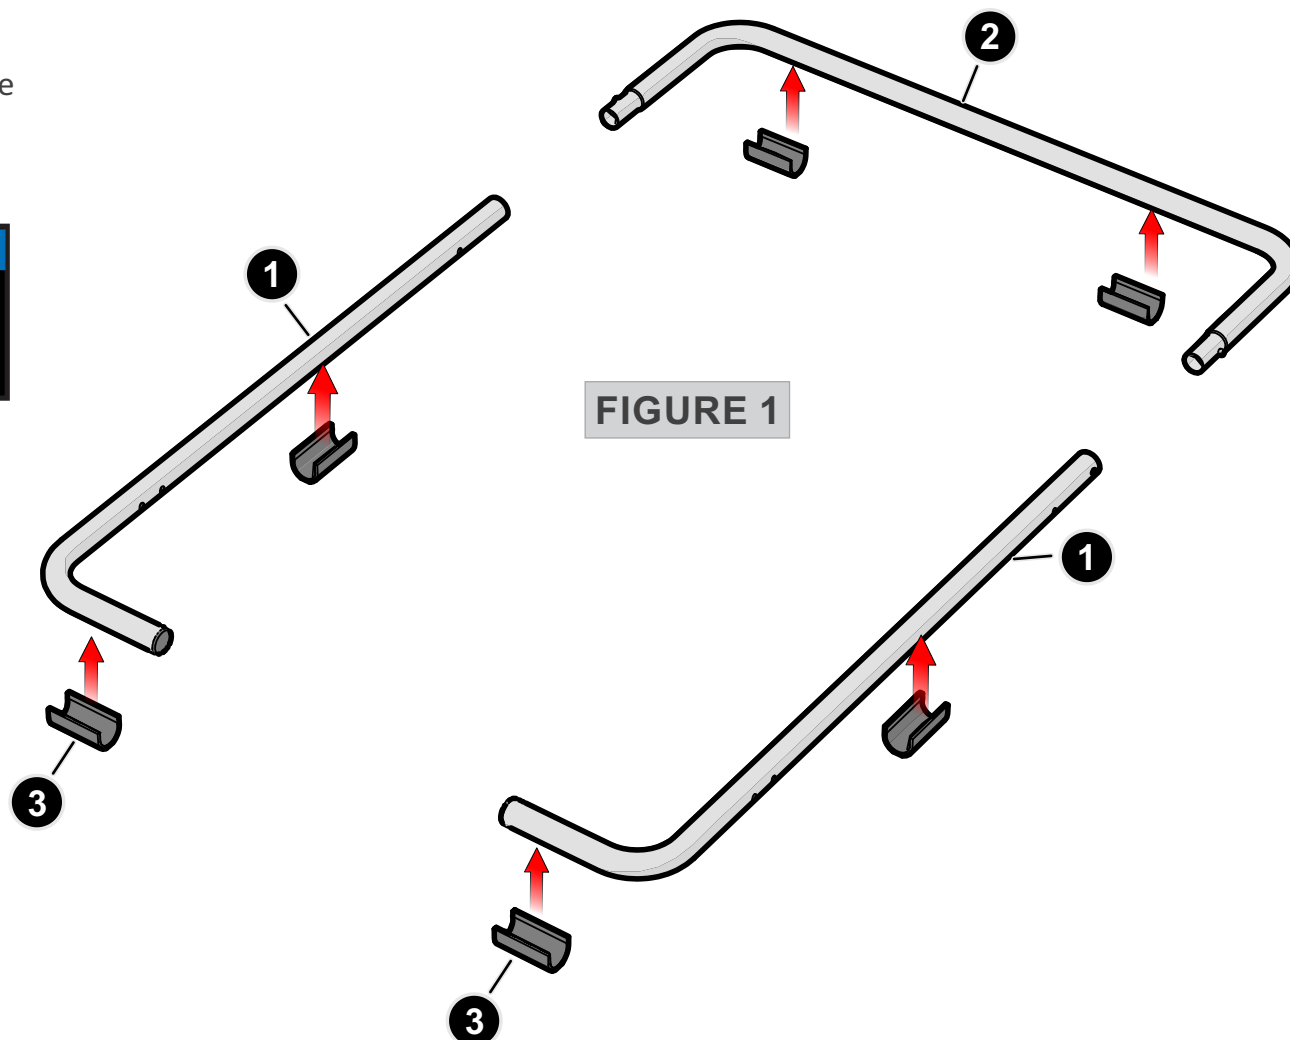 


FIGURE 1

PARTS NEEDED

2X **4** Base Side Raising Tube

STEP 2

Assemble Base Side Raising Tube (**#4**) and Base Side Tube (**#1**) together using hardware as shown in **Detail A**.

DETAIL A

Make sure to place the H5 Nuts on the Base Side Tube side.


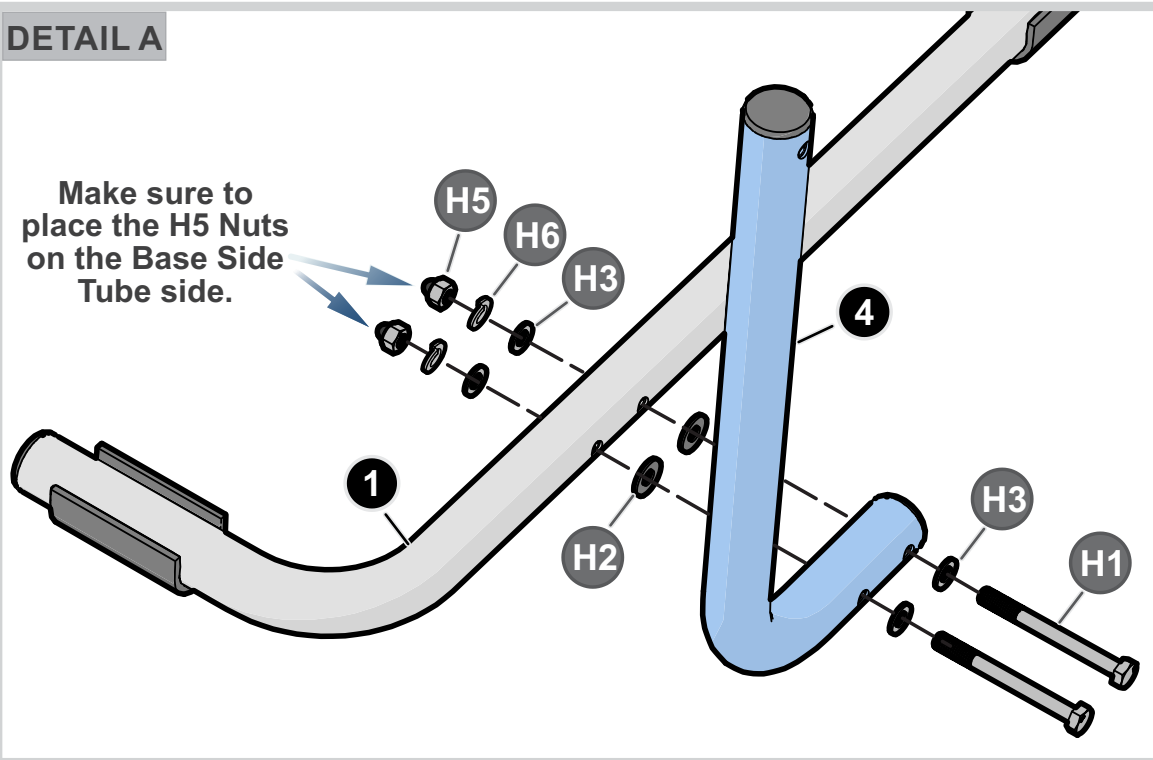 


FIGURE 2

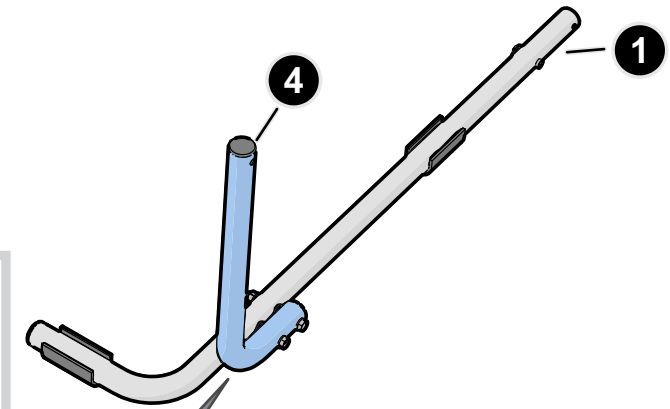 


PARTS NEEDED

2X ⑤ Male Extending Tube

2X ⑥ Female Extending Tube

STEP 3

 Assemble the Female Extending Tube (#6) and Male Extending Tube (#5) using the Button Pin, as shown in **Figure 3**. Repeat step to make a second assembly.

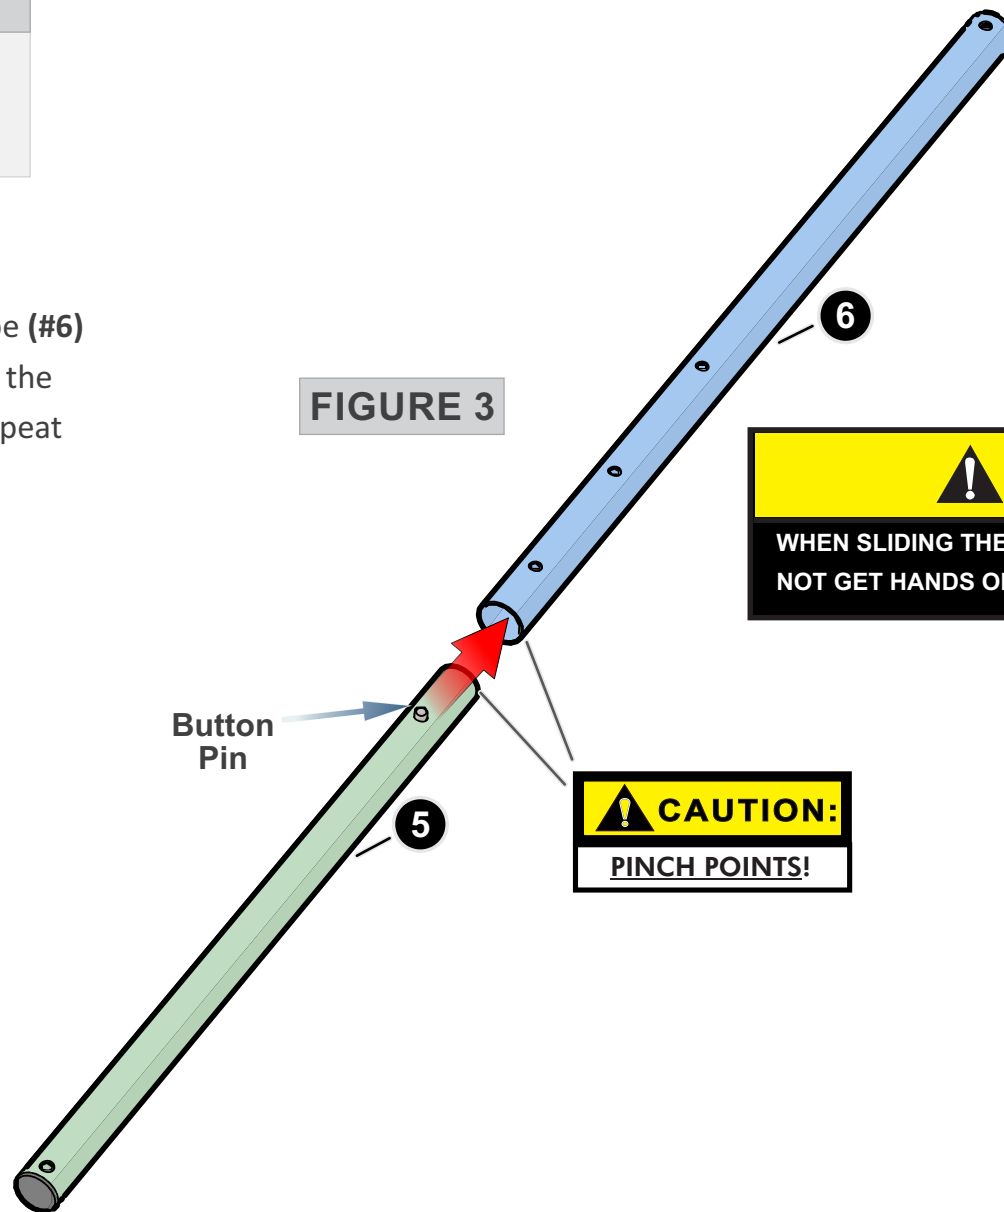

PARTS NEEDED

2X Extending Tube Assemblies

STEP 4

Assemble Extending Tube assemblies from last step to the outside of the Base Side Tube (#1) with hardware as shown in **Figure 4** & **Detail A**. Lay down both extending tube assembly so they are out of the way for the next step. See **Detail B**.


 
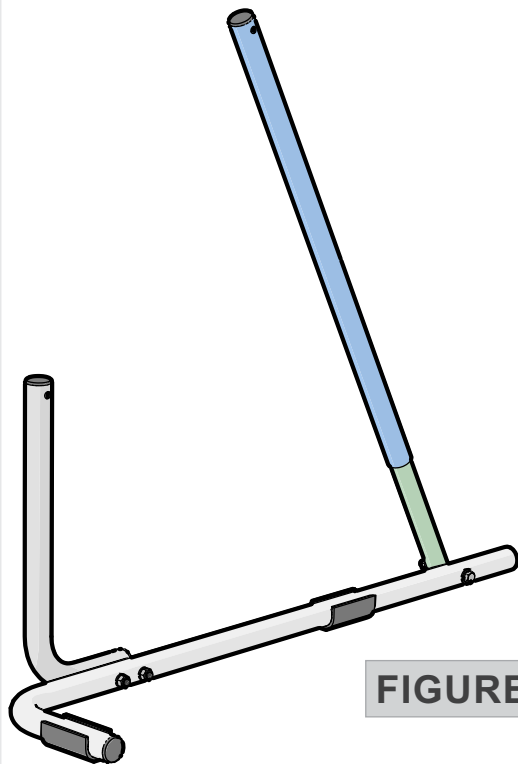 


FIGURE 4

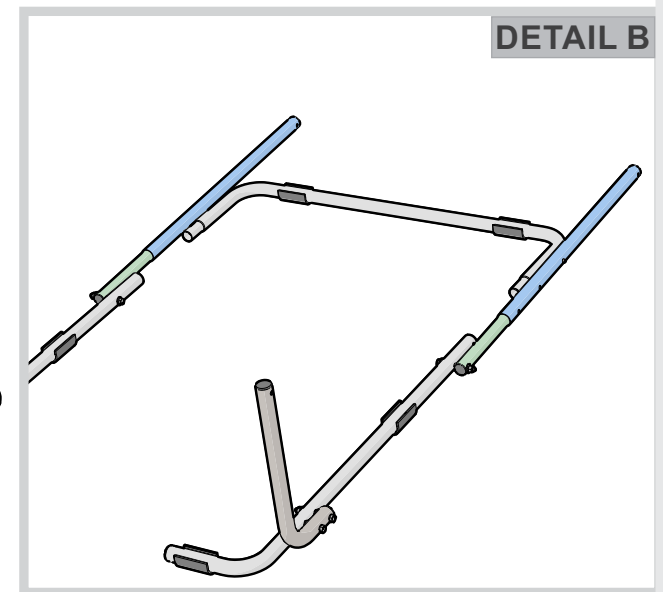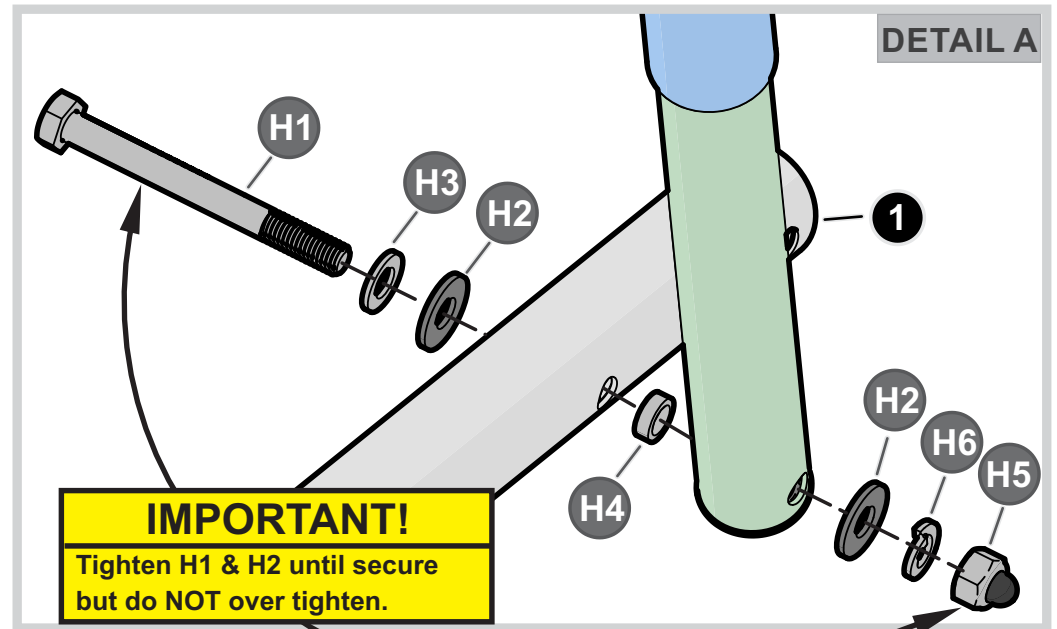 

DETAIL B

PARTS NEEDED

1X **8** Bottom Net Frame Tube

2X **9** Side Net Frame Tube

STEP 5

Slide the Side Net Frame Tubes (**#9**) onto each swedge of the Bottom Net Frame Tube (**#8**) and attach them to the Base Side Raising Tube (**#4**) with the hardware as shown in **Detail A**.


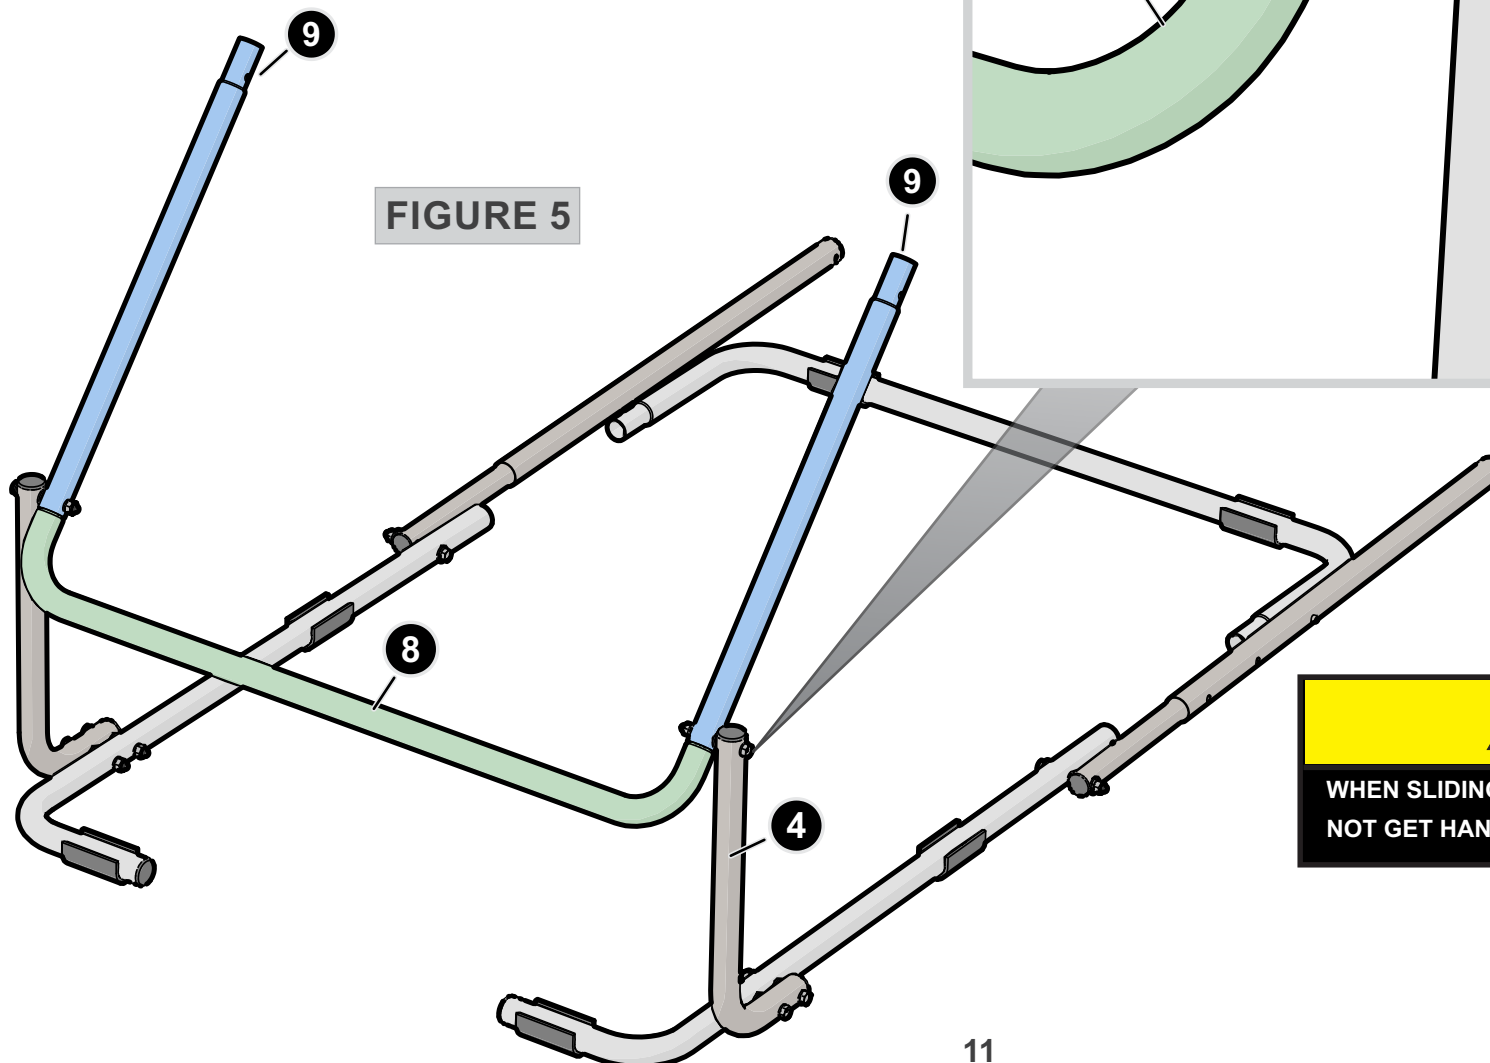 


FIGURE 5

 Place the H5 Nuts on the inside of the assembly.



DETAIL A

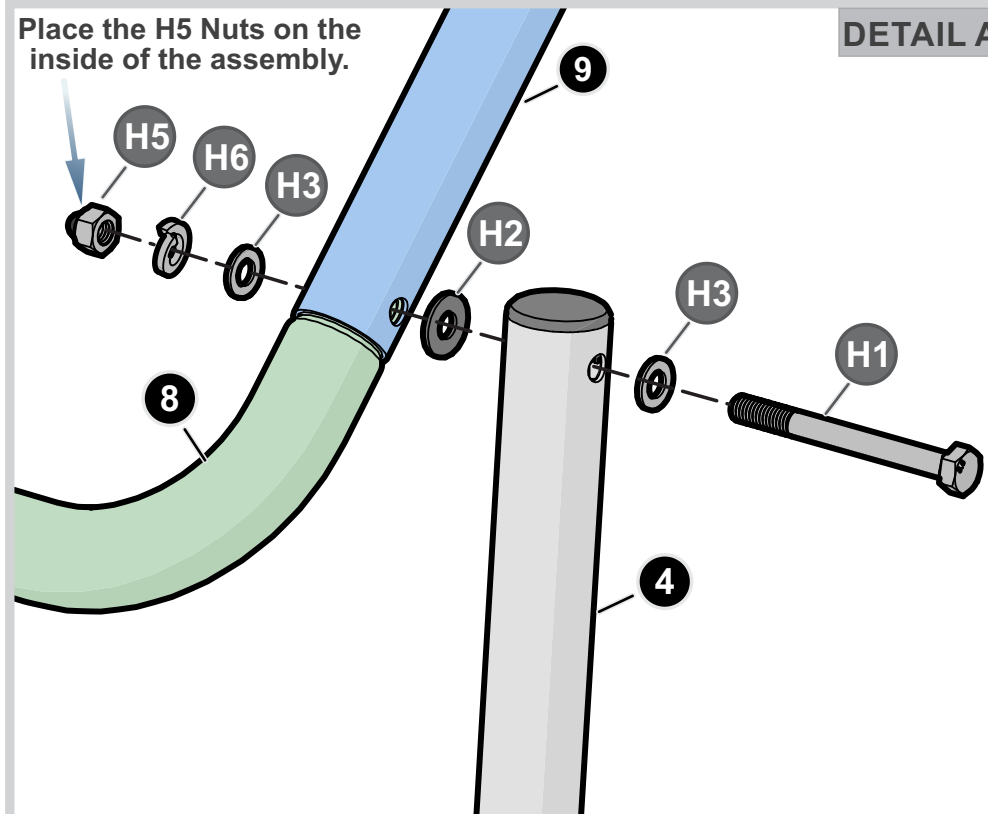

CAUTION

 
 
WHEN SLIDING THE TUBE SECTIONS TOGETHER DO NOT GET HANDS OR FINGERS BETWEEN TUBES.

PARTS NEEDED

1X 7 Top Net Frame Tube

STEP 6

Slide the Top Net Frame Tube (#7) onto the swedge of the Side Net Frame Tubes (#9). Then Swing up the Extended Tube Assemblies and attach it with the hardware. See **Detail A**.

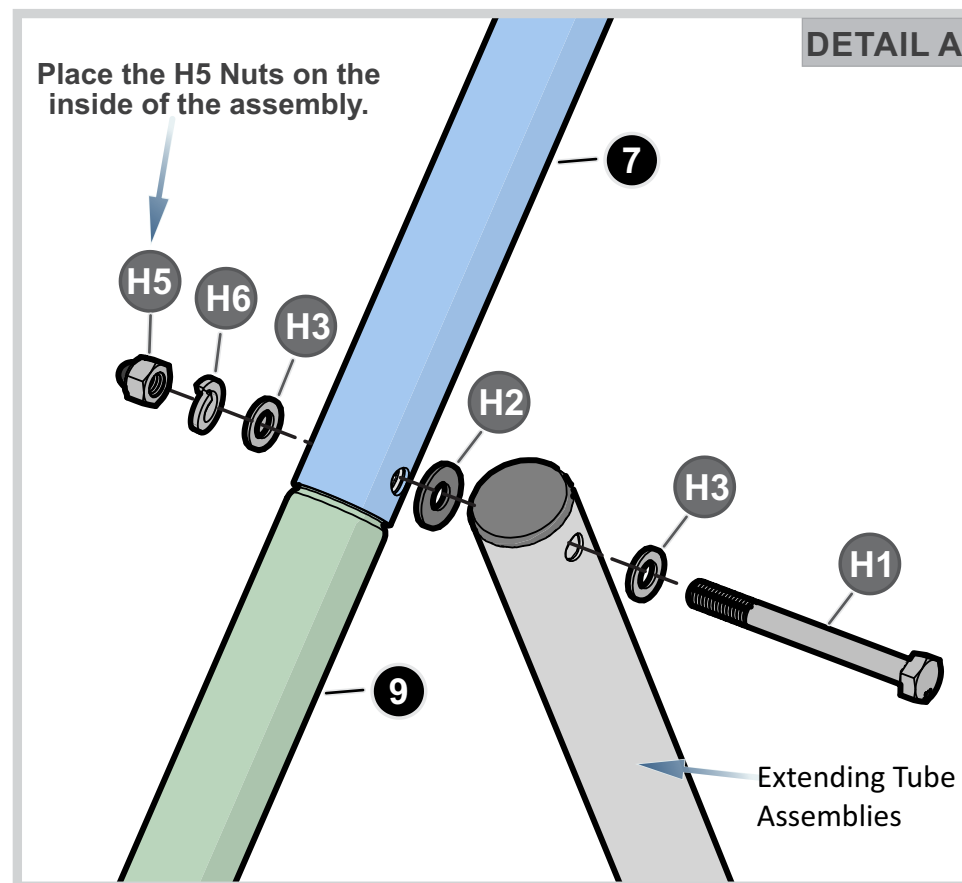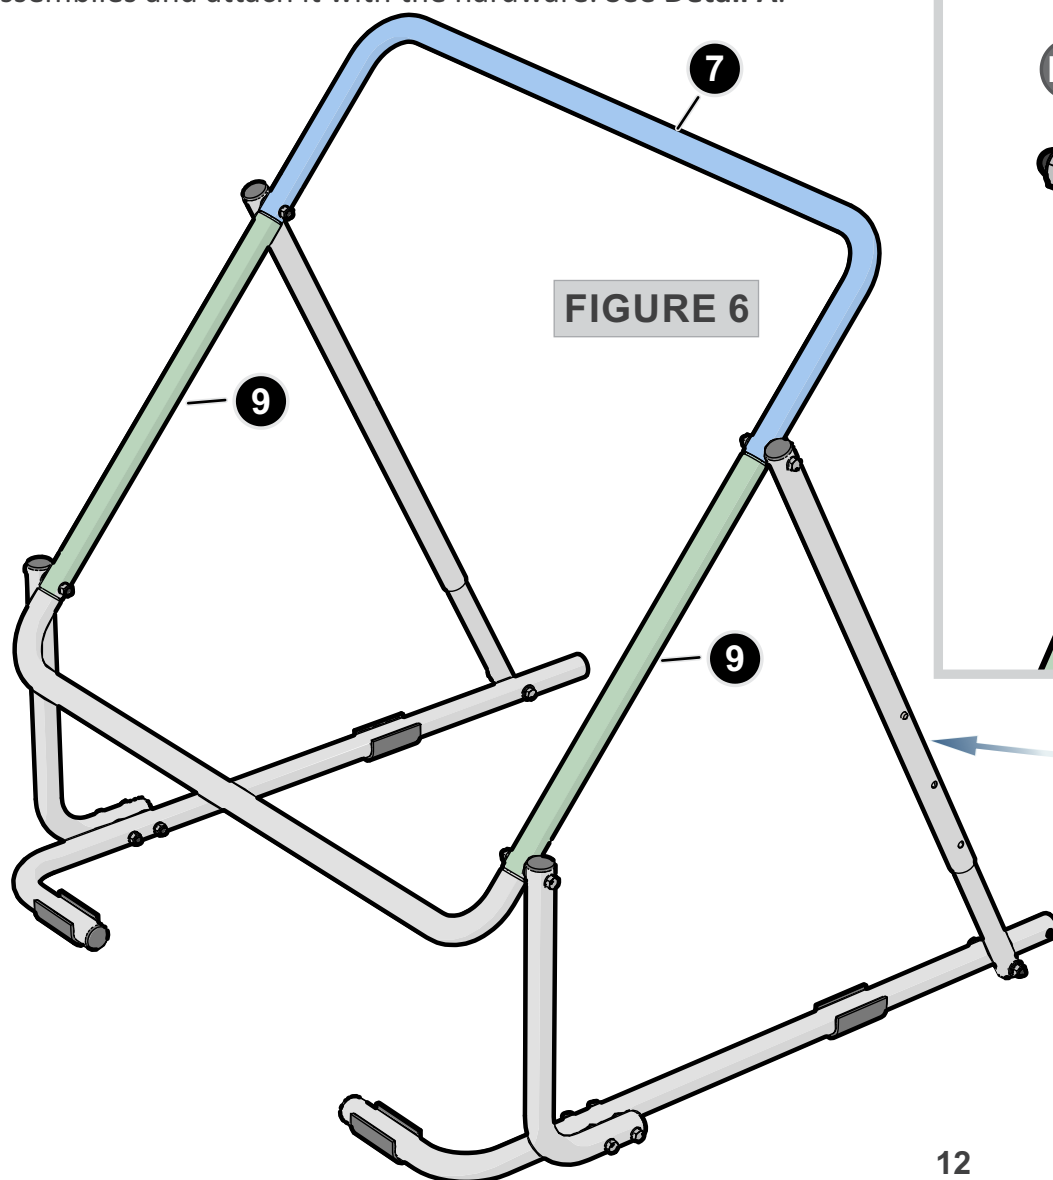

Extending Tube Assemblies

 


CAUTION

WHEN SLIDING THE TUBE SECTIONS TOGETHER DO NOT GET HANDS OR FINGERS BETWEEN TUBES.


STEP 7

When using with a **Silverback NXT 54 or NXT 50 Portable Basketball System**, the multi-sport rebounder can be used in two different ways around the ballast of the portable system: **A.** The Back Base Tube can be left off, as shown in **Figure 7**. Or, **B.** The Back Base Tube can be positioned beneath the wheels of the ballast, as shown in **Detail A**.

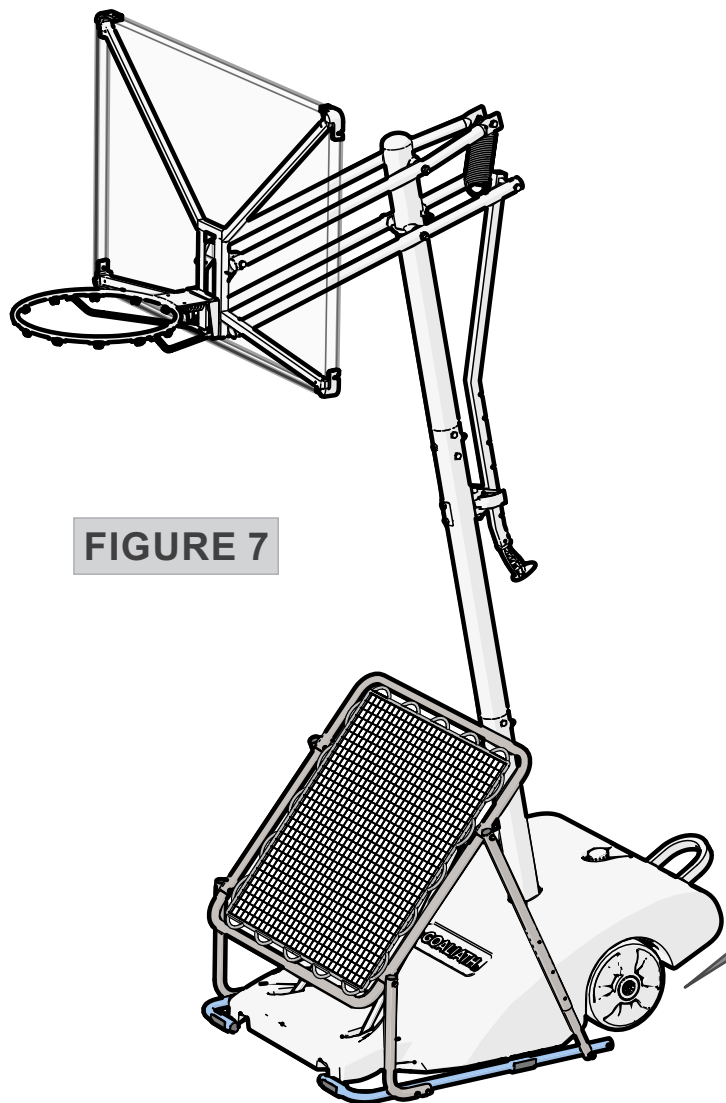

PARTS NEEDED

 1X 2 Back Base Tube with Feet

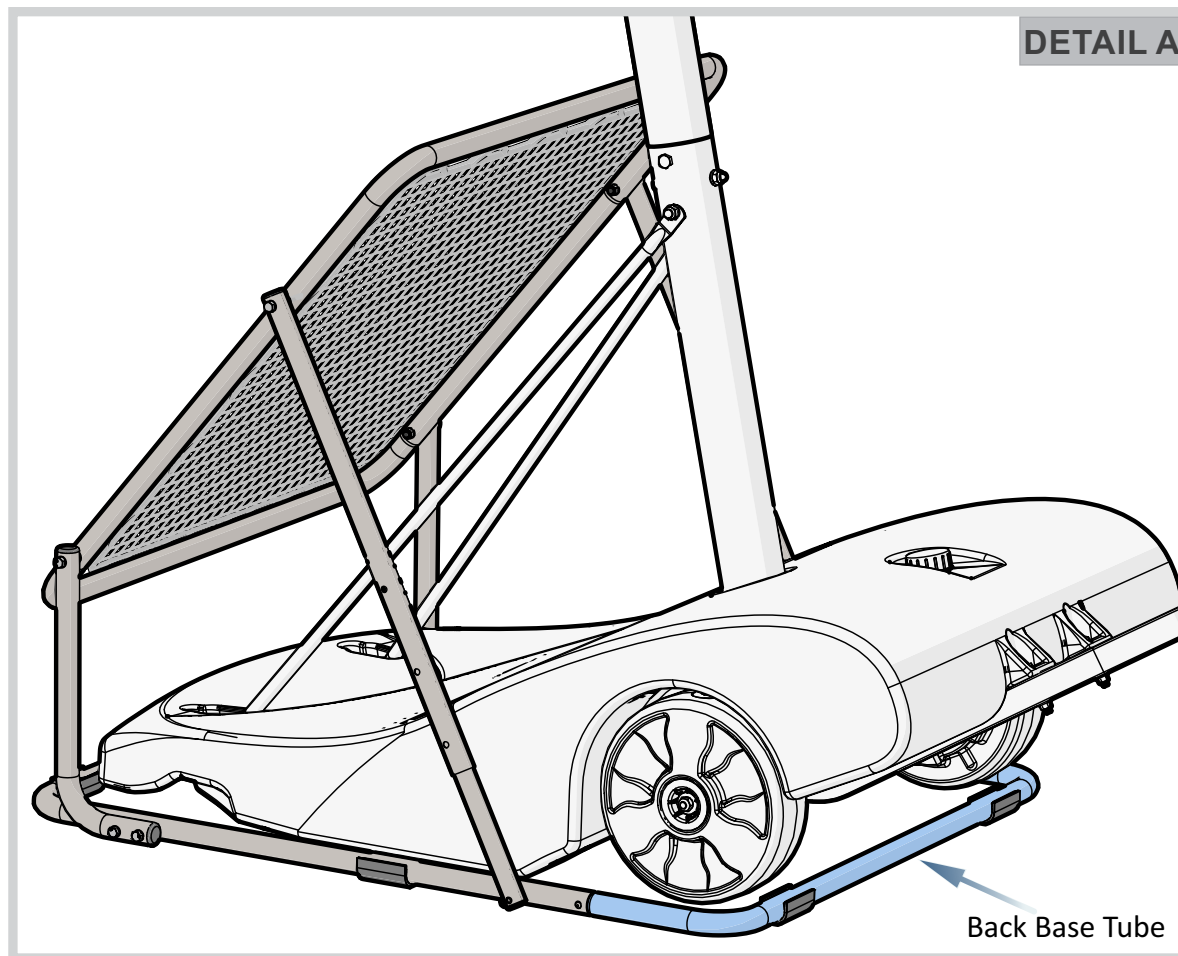

CAUTION

 
WHEN SLIDING THE TUBE SECTIONS TOGETHER DO NOT GET HANDS OR FINGERS BETWEEN TUBES.

PARTS NEEDED


1X 2 Back Base Tube with Feet

STEP 8

Attach the Back Base Tube (#2) to the Base Side Tubes (#1) using pre-installed button pins as shown in **Figure 8** & **Detail A**.

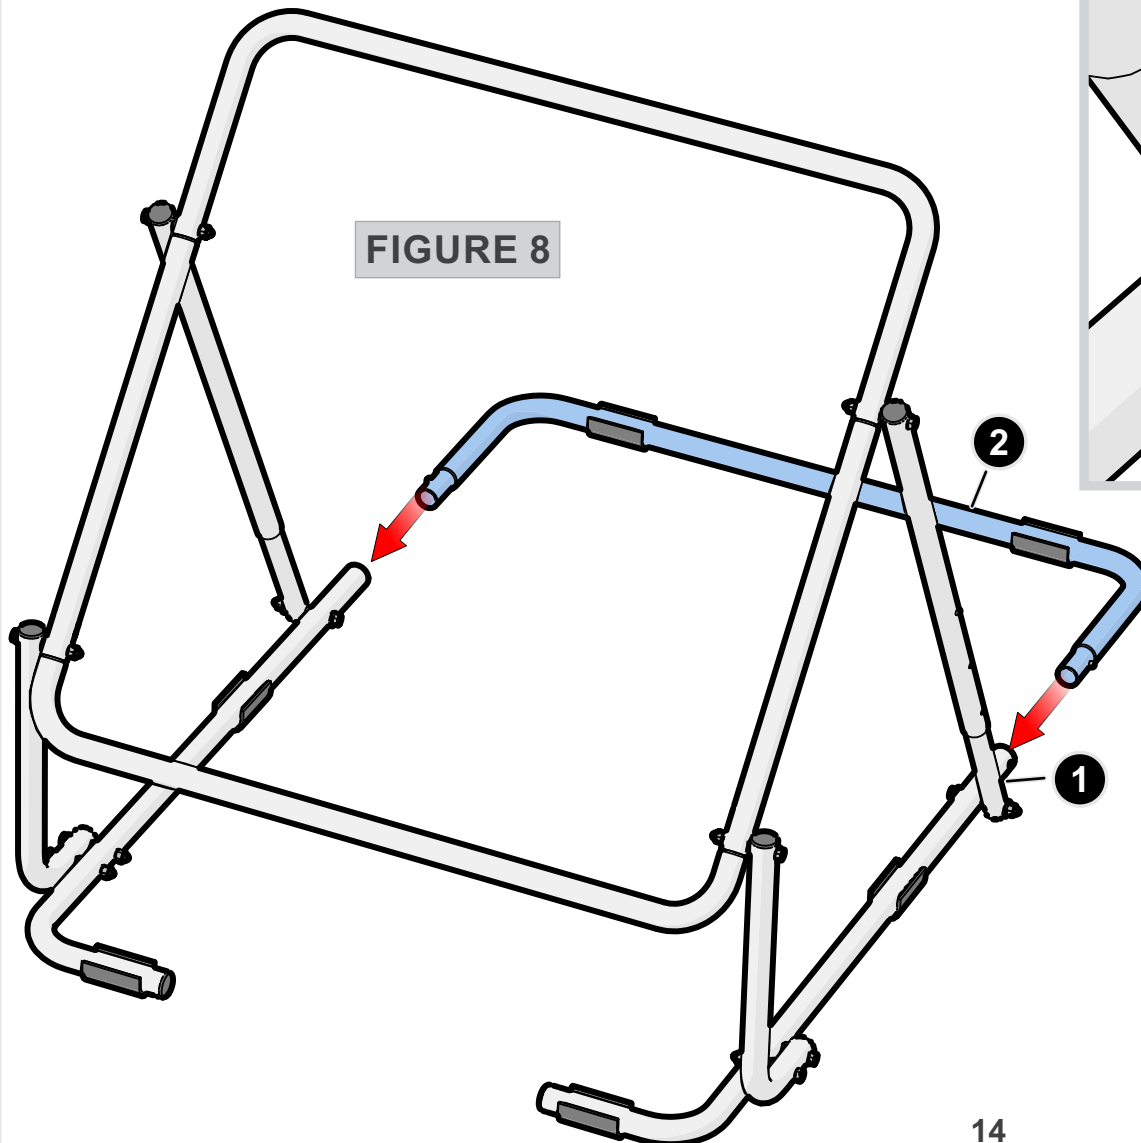

DETAIL A

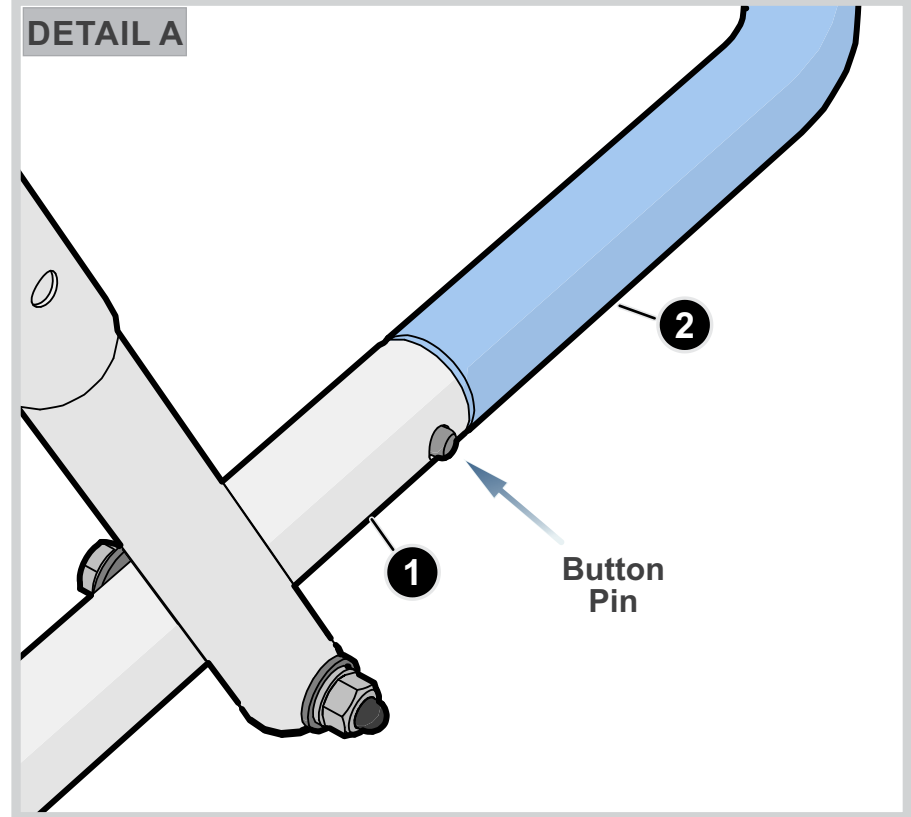 

CAUTION

WHEN SLIDING THE TUBE SECTIONS TOGETHER DO NOT GET HANDS OR FINGERS BETWEEN TUBES.

PARTS NEEDED

1X **10** Net

20X **11** Ball Clasps

 
 
NOTICE

Position the two red tags on the net at the top left and top right of the frame. See Detail A.

STEP 9

To attach the Net (#10) to the frame, begin by connecting two Ball Clasps (#11) to each corner of the frame first. Then, secure one Ball Clasp in each of the center loops of the net. Finally, attach the remaining Ball Clasps (#11) to the open loops of the net. See **Detail A** & **Detail B**.

DETAIL B

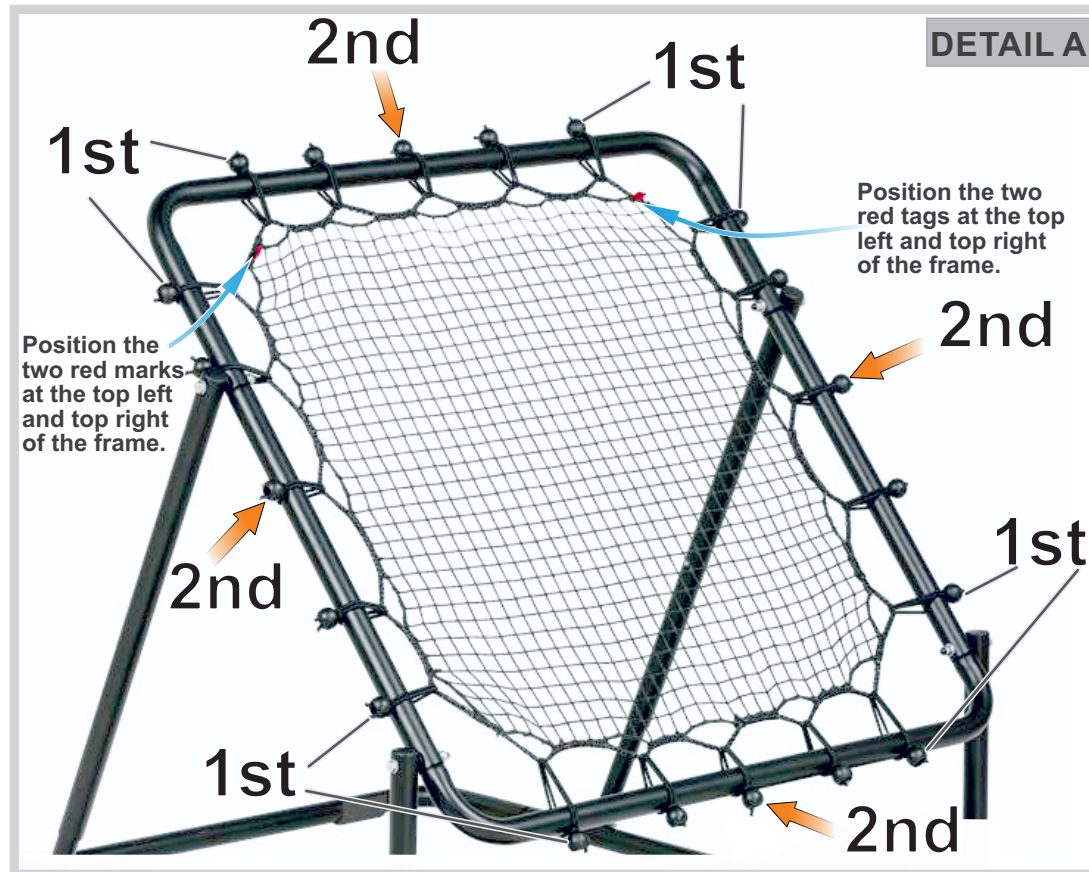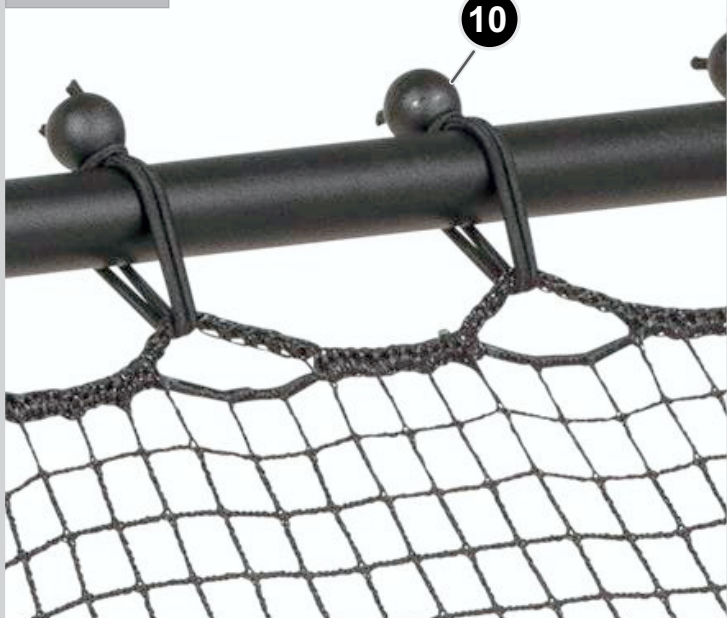

CAUTION

TO AVOID PINCHING HAZARDS, KEEP FINGERS CLEAR WHEN ATTACHING NET BALL CLASPS.

CAUTION

THE NET WILL BE UNDER EXTREME TENSION AND MUST BE ATTACHED CAREFULLY. ADULT ASSEMBLY IS REQUIRED.

PARTS NEEDED

2X **12** Black Sand Bag

STEP 10

Fill each Black Sand Bag (#12) with approximately **20 lbs** of sand to make two weighted bags and seal them securely.

NOTICE

Use **ONLY SAND** to fill the Sand Bags (#12). Water is not recommended.

STEP 11

Placing the weighted bags at the front of the system is recommended most of the time. However, bags can also be positioned on the sides or back, provided that the trainer remains stable. See **Detail A**.

⚠ WARNING

DO NOT allow children to climb on this Multi Trainer.

⚠ WARNING

 
DO NOT allow children to use this Multi Trainer unsupervised.

DETAIL A



ADJUSTMENTS

DETAIL A

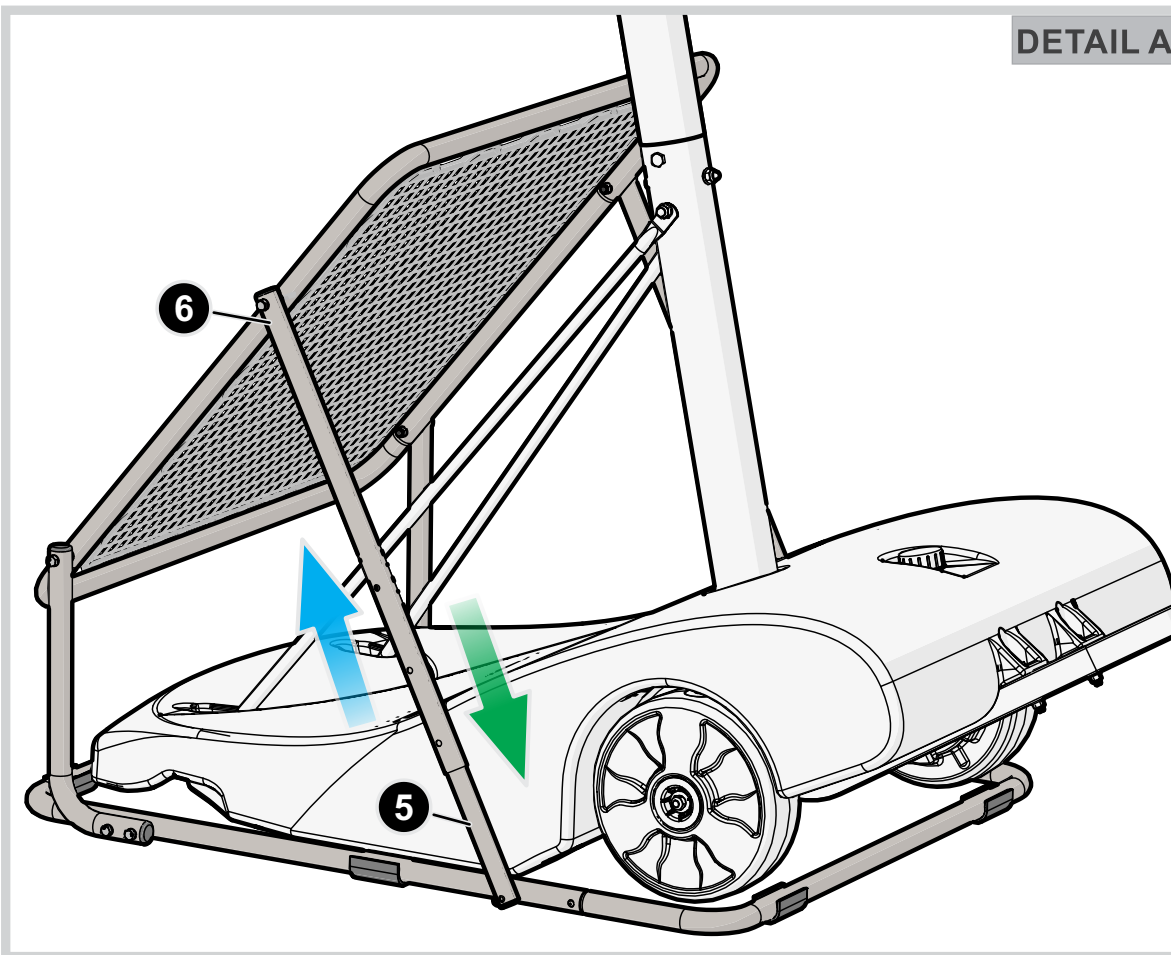

The angle of the frame can be adjusted by pushing in the button pin to unlock the telescoping tubes (**#5 & #6**) on both sides and adjusting them to the desired angle. See **Detail A**.



CAUTION

WHEN ADJUSTING THE ANGLE VIA THE REAR TELESCOPING TUBES, DO NOT LET GO OF THE SUPPORTS UNTIL THE BUTTONS ARE RE-ENGAGED.

CARE AND MAINTENANCE

- When not using the trainer for long periods of time or during inclement weather, such as storms, windy conditions, or extreme temperatures, store the trainer indoors to prevent damage and prolong the life of the system.
- Do not use or store near abrasive or sharp objects as this can damage/harm the trainer.

1(ONE) YEAR LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any Escalade® Sports Product (hereinafter referred to as the "Product").

WARRANTY COVERAGE: Escalade® Sports warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL OR WORKMANSHIP.

Subject to proper installation and normal use, Escalade® Sports warrants, subject to the limitations below, to the original retail purchaser all structural components of the All Season Trainer™ to be free of defects in material and workmanship for the duration of ownership by the original retail purchaser.

Merchandise must be shipped prepaid with a copy of proof of purchase to Escalade® Sports factory for examination to determine if the trainer needs to be repaired or replaced. Any labor costs, travel expenses and any other changes involved in the removal, installation or replacement of the defective/repaired parts from/to your All Season Trainer™ will be the purchaser's responsibility. Shipping charges for replaced or warranted merchandise sent back to the customer from Escalade® Sports factory must be prepaid by the customer in advance. If not, the replacement shipment will be sent out collect.

Escalade® Sports reserves the right to examine photographs or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to authorization of warranty claims. A "Returned Goods Authorization" number may be required, please call for details (see information below) prior to the return of any photographs or merchandise.

This one year limited warranty is expressly in lieu of all warranties, expressed or implied, including warranties of merchantability or fitness for use. Escalade® Sports does not assume or authorize any person or representative to assume for us, any other liability in connection with the sale of our products.

The remedy of repair or replacement stated above is Escalade® Sports exclusive remedy. Escalade® Sports will not be liable for any other damages or expenses which may incur, including but not limited to incidental or consequential damages. Escalade® Sports assumes no other obligations or liability on the part of the purchaser, and Escalade® Sports neither assumes nor authorizes any other person to assume for it any other liability in connection with the goods sold.

This warranty shall not apply in any manner to parts or accessories not manufactured by Escalade® Sports.

NOT COVERED BY THIS 1(ONE) YEAR LIMITED WARRANTY

- Sand Bags, Bungee Ball Loop connectors and Rebound Net are warranted for a period of 60 days from the original purchase under normal use and proper care.
- Any merchandise subjected to abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of Escalade® Sports.
- Paint or rusted parts. If rust should appear, remove loose paint, sand lightly, primer and paint with black exterior flat matte finish enamel paint.
- Shipping charges both ways. Note: Any merchandise shipped to Escalade® Sports collect will be refused.
- Dealer service charges, labor charges and travel expenses associated with replacement of repair of warranty item.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS. EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you. LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

WARRANTY GUIDELINES IS REQUIRED FOR ALL WARRANTY CLAIMS

1. Proof of Purchase (original retail purchaser) is required for all warranty claims.
2. Call or write Escalade® Sports to receive a Return Authorization # and determine specific needs. Phone: 1-800-467-1421 / Warranty Dept. or Write Escalade® Sports at: Escalade® Sports -P.O. Box 889, Evansville, IN 47706 Attn: Warranty Dept. or E-mail us at: customerservice@escaladesports.com