



TRIUMPH

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Or write to:

Escalade Sports

Customer Service Department

P.O. Box 889

Evansville, IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your date code when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.


Your Model Number **45-6705W**

Date Code: **2 - 45-6705W - - NY**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

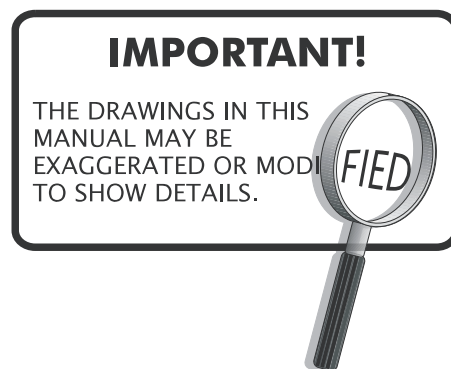

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS 32" CONVERTIBLE HOCKEY TABLE

Tools Required (not provided):

Phillips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



WARNING:

- 1) Do not mix old and new batteries.
- 2) Do not mix alkaline, standard (carbon zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
- 3) Do not dispose of batteries in fire, batteries may explode or leak.




ATTENTION:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO PUT THIS HOCKEY TABLE
TOGETHER.**

HARDWARE IDENTIFIER

(To Scale)

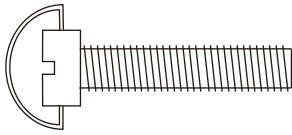

H1 - 6 mm x 28 mm
Wing Bolt
(12 pcs)

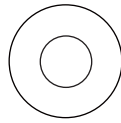


H2 - 6.5 mm x 15 mm
Flat Washer
(12 pcs)



H3 - 3 mm x 14 mm
Phillips Round Head Screw
(4 pcs)

ACCESSORIES IDENTIFIER

 (Not to Scale)

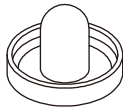

A1 - Striker (2 pcs)



A2 - Puck (2 pcs)




A3 - Felt Pad (2 pcs)

NOTE:
A3 Felt Pads may already
be attached to A1 Strikers.

PARTS IDENTIFIER

(Not to Scale)

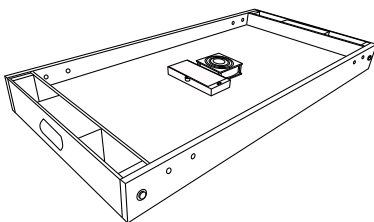


P1 - Air Hockey Cabinet
(1 pc)




P2 - Left Leg
(2 pcs)



 P3 - Right Leg
(2 pcs)

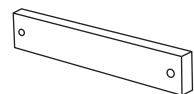

P4 - End Leg Panel
(2 pcs)

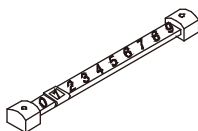

P4 - Manual Scorer
(2 pcs)



WARNING:
CHOKING HAZARD
Small parts.
Not for children under 3 yrs.

PARTS REQUIRED:


- 8 pcs - **H1** Wing Bolt
- 8 pcs - **H2** Flat Washer
- 1 pc - **P1** Air Hockey Cabinet
- 2 pcs - **P2** Left Leg
- 2 pcs - **P3** Right Leg

STEP 1:

Leave **P1** Air Hockey Table Cabinet face down in carton to assemble.

Install **P2** Left Legs and **P3** Right Legs onto **P1** Air Hockey Cabinet using **H1** Wing Bolts and **H2** Flat Washers as shown in **FIGURE 1**.

Do not tighten H1 Bolts during this step.

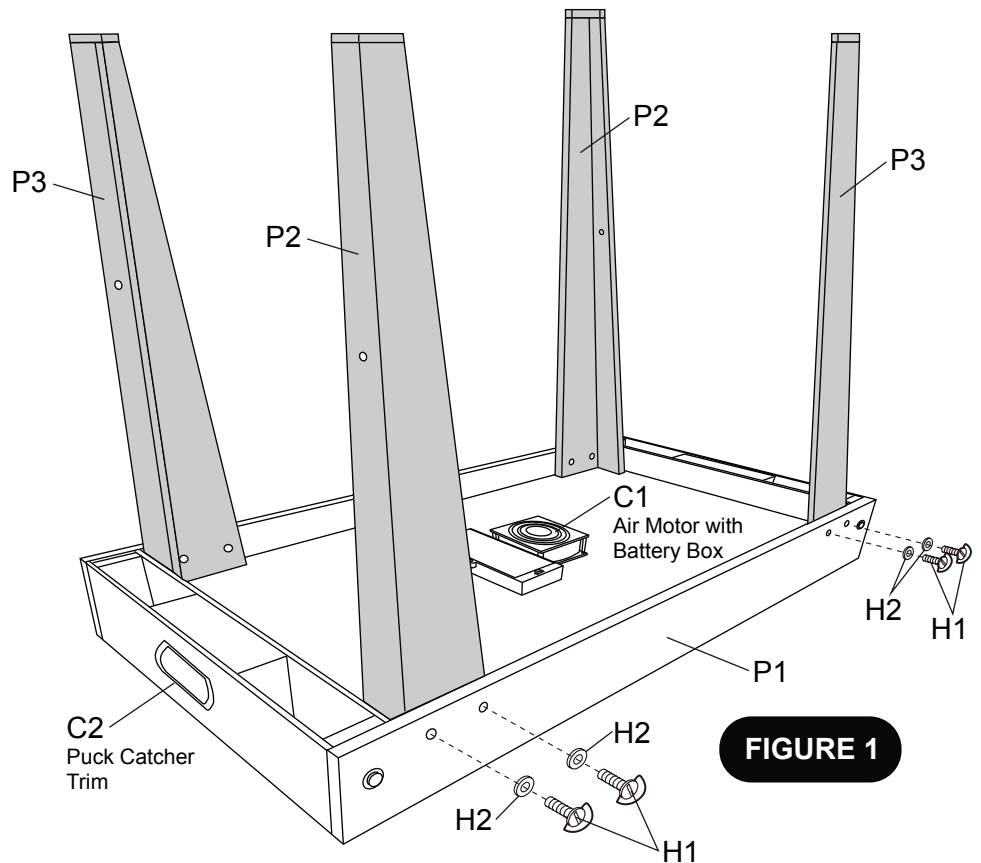

PARTS REQUIRED:

- 4 pcs - **H1** Wing Bolt
- 4 pcs - **H2** Flat Washer
- 2 pcs - **P4** End Leg Panel
- 8 pcs - **1.5V AA** Batteries (not provided)


STEP 2:

Install **P4** End Leg Panels using **H1** Wing Bolts and **H2** Flat Washers as shown in **FIGURE 2**.

Tighten all H1 Bolts at this time from STEP 1.

All H1 Wing Bolts should be tightened with a screwdriver (not provided).

Next, Open battery compartment cover on the underside of the table by turning the screw counter-clockwise using Phillips Screwdriver (not provided). Install 8 pieces 1.5V AA batteries (not provided) in the proper (-) (+) positions as indicated inside battery compartment. Replace the cover and turn the screw back clockwise to secure it into place.

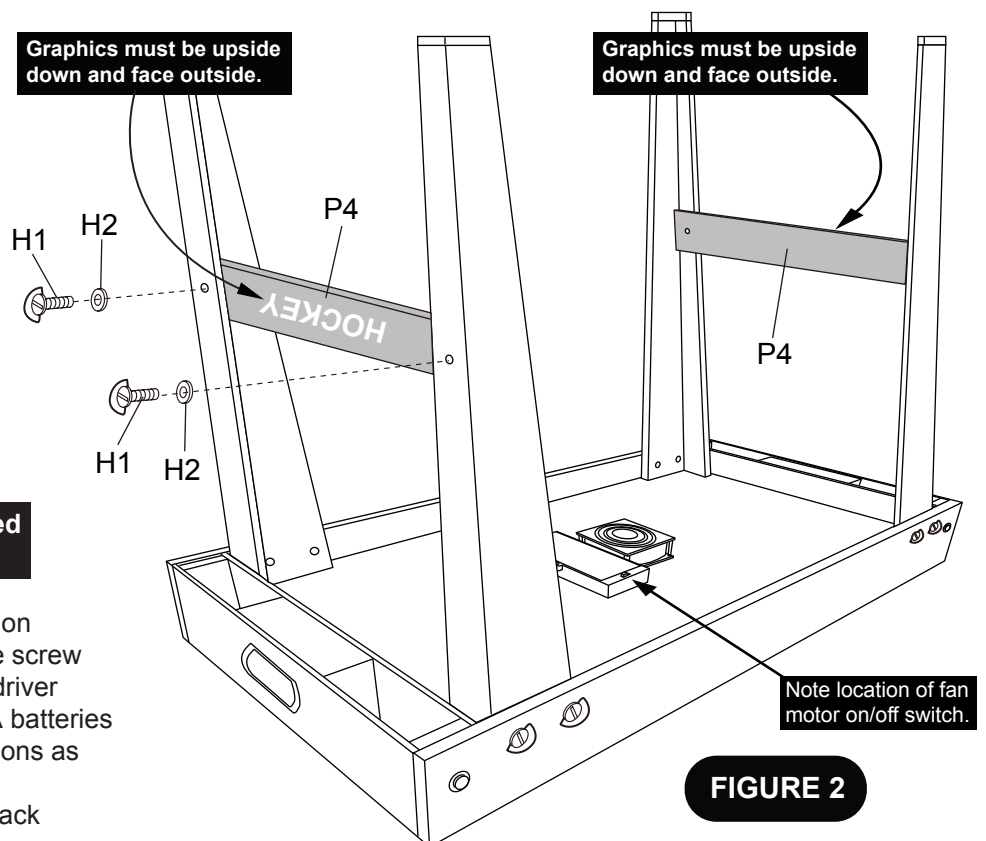

WARNING:

THIS STEP REQUIRES TWO ADULTS.

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL, THE TABLE IS HEAVY.

PARTS REQUIRED:


4 pcs - **H3** Phillips Round Head Screw
2 pcs - **P5** Manual Scorer

STEP 3:

Install **P5** Manual Scorer onto **P1** Air Hockey Cabinet using pre-drilled pilot holes with **H3** Screws as shown in **FIGURE 3**.

Tighten, do not strip out H3 Screws.



Lastly, Turn the power switch ON from battery compartment (underneath table) to play your hockey table.

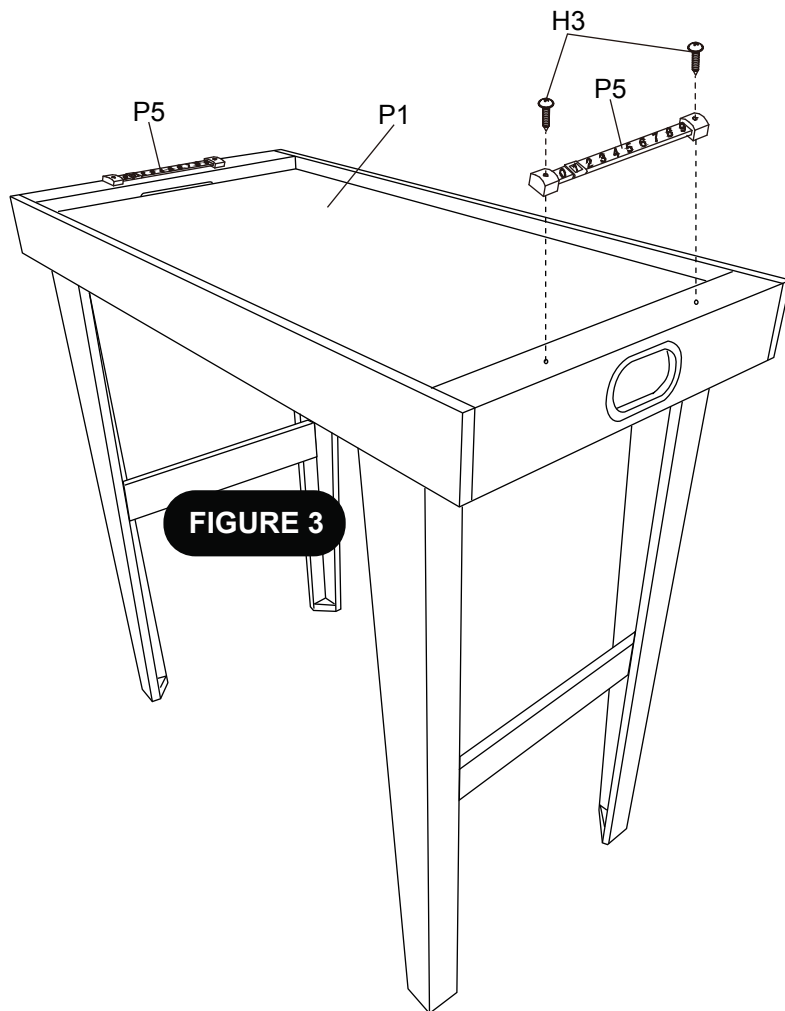

FOR TABLE TOP PLAY:

Carefully remove **H1** Wing Bolts and **H2** Flat Washers as shown in **FIGURE 4**.

NOTE: Do not remove this Allen Head Bolt.

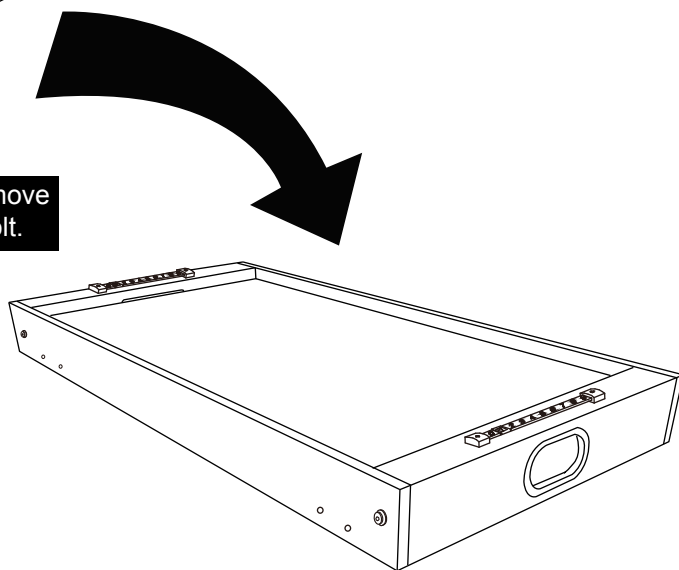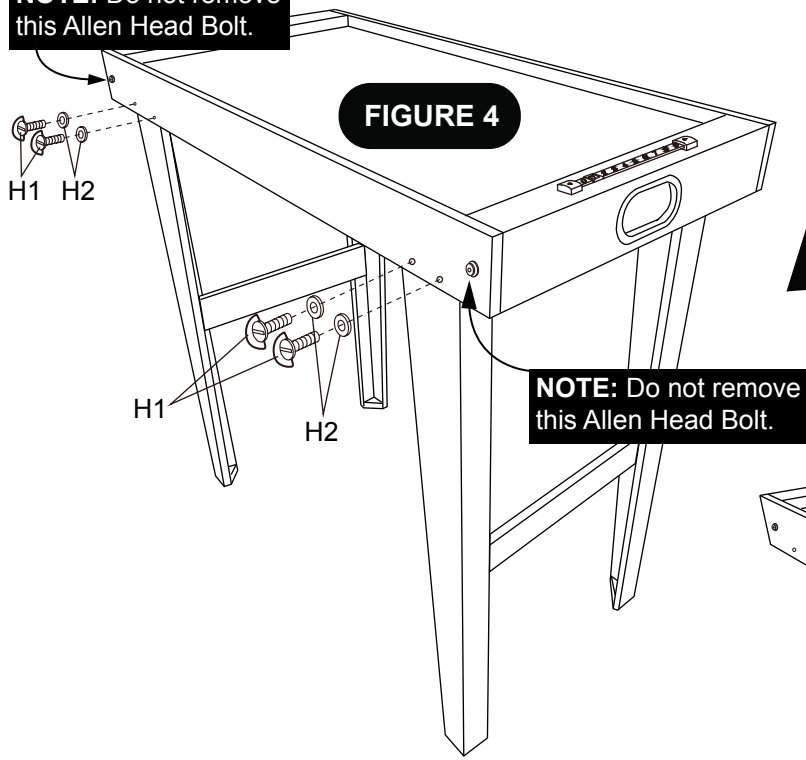

Congratulations! You have now assembled your hockey table. Please note the Care and Use instructions below to insure many years of trouble free use of your hockey table.

CARE AND USE OF YOUR HOCKEY TABLE

1. For long life and best play from your air hockey table, apply spray furniture polish to clean cloth and wipe down the playfield with air motor running to make the pucks slide faster before first play and frequently thereafter.
2. This product is intended for **INDOOR** use only.
3. **DO NOT** operate the motor if the battery compartment is damaged in any way.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the legs.
6. **DO NOT** set drinks on the table.

Product Parts List

45-6705

Key#	Part#	Description	Qty
H1	45-6705NYH1	6 mm x 28 mm Wing Bolt	12
H2	45-6705NYH2	6.5 mm x 15 mm Flat Washer	12
H3	45-6705NYH3	3 mm x 14 mm Phillips Round Head Screw	4
A1	45-6705NYA1	Striker	2
A2	45-6705NYA2	Puck	2
A3	45-6705NYA3	Felt Pad (Pre-installed)	2
P1	45-6705NYP1	Air Hockey Cabinet (no motor & battery box)	1
P2	45-6705NYP2	Left Leg	2
P3	45-6705NYP3	Right Leg	2
P4	45-6705NYP4	End Leg Panel	2
P5	45-6705NYP5	Manual Scorer	2
C1	45-6705NYC1	Air Motor with Battery Box (Pre-installed)	1
C2	45-6705NYC2	Puck Catcher Trim	2
K1	45-6705NYK1	Hardware Kit	1
M1	45-6705NYM1	Owner's Manual	1

Battery Caution:

1. Loading or replacing batteries should be done by an adult.
2. Exhausted batteries are to be removed from this product.
3. Load the batteries in the correct polarity as indicated.
4. Do not mix old and new batteries.
5. Do not mix batteries of differences types, such as alkaline with standard (carbon zinc), or rechareable (ni-cad, ni-mh, etc.) batteries.
6. Do not mix old batteries with new batteries.
7. Do not place batteries near fire as they may explode.
8. Do not dispose of batteries in fire, batteries may explode or leak.
9. Do not recharge non-rechargeable batteries.
10. Dispose of old used batteries properly.
11. Batteries are not to be short-circuited.
12. Charge rechargeable betteries under adult supervision only.
13. Only use the recommended type of batteries.
14. Remove the batteries while not using the unit.



WARNING:

- 1) Do not mix old and new batteries.
- 2) Do not mix alkaline, standard (carbon zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
- 3) Do not dispose of batteries in fire, batteries may explode or leak.

Batteries Replacement

1. Undo screws to unlock the battery compartment cover.
2. Remove batteries and replace them with new batteries. Use the battery type recommended by the manufacturer.
3. Replace the lid and tighten the screws.

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.