



## TRIUMPH SPORTS ADVENTURE FAIRWAY GOLF

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

**DO NOT RETURN IT TO THE STORE,**

please contact us toll free @:

**1-800-467-1421**

**gameroom@escaladesports.com**

**Mailing Address: (Correspondence Only)**

Escalade Sports  
PO Box 889  
Evansville, Indiana 47706-0889

**Physical Location:**

Escalade Sports  
817 Maxwell Ave.  
Evansville, Indiana 47711

Please visit our Web site at:

**[www.escaladesports.com](http://www.escaladesports.com)**



Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: 45-6005W/F

Date Code: 2 - 45-6005W/F- - JL

Purchase Date: \_\_\_\_\_

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

# SAFETY INSTRUCTIONS

**FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.**

*Owner must ensure that all players know and follow these rules for safe operation of the system.*

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.  
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least one capable adults are required to assemble this product.
- Inspect all parts before each use.
- **DO NOT** use broken or damaged parts.

## **CAUTION**

**BEFORE SWINGING THE GOLF CLUB, MAKE SURE THERE ARE NO PEOPLE, PETS, OR OBJECTS IN DANGER OF BEING WITHIN THE GOLF SWING RADIUS OR PATH OF THE BALL. ONLY AIM AT THE GOLF TARGET**

**IMPORTANT! READ EACH STEP  
IN THIS MANUAL BEFORE YOU  
BEGIN THE ASSEMBLY.**

**IMPORTANT!**

THE DRAWINGS IN THIS  
MANUAL MAY BE  
EXAGGERATED OR MODIFIED  
TO SHOW DETAILS.




## **ASSEMBLY TIPS**

Make sure you understand the following tips before you begin to assemble your golf game.


1. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
2. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
3. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

# HARDWARE IDENTIFIER

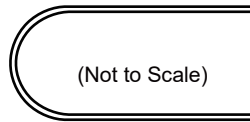


T1 - Ground Stake  
(2 pcs)

# PARTS IDENTIFIER (Not to Scale)

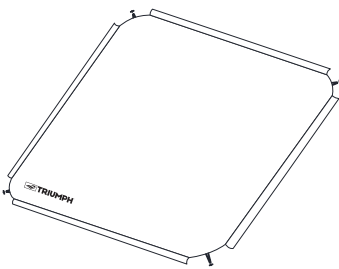


P1 - Golf Target  
(1 pc)

 

P2 - Metal Tube  
Combination A  
(4 pcs)



 P3 - Metal Tube  
Combination B  
(2 pcs)




P4 -3 Way Connector  
(4 pcs)


# ACCESSORIES IDENTIFIER (Not to Scale)



A1 - Sticky Ball  
(Red/Blue/Green/Yellow)  
(12 pcs)

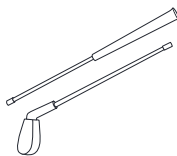

A2 - Golf Club  
(1 pc)

 

A3 - Grass Mat  
(1 pc)




A4 - Storage Bag  
(1 pc)

## PARTS REQUIRED (For Step 1 - Step 4)

|                                           |                                           |
|-------------------------------------------|-------------------------------------------|
| 1pc - <b>P1</b> Golf Target               | 4pcs - <b>P2</b> Metal Tube Combination A |
| 2pcs - <b>P3</b> Metal Tube Combination B | 4pcs - <b>P4</b> 3 Way Connector          |

### STEP 1

Unfold the **P2 & P3** Metal Tube Combination assembly and connect the tubes according to the position of the elastic rope as shown in **FIGURE 1**.

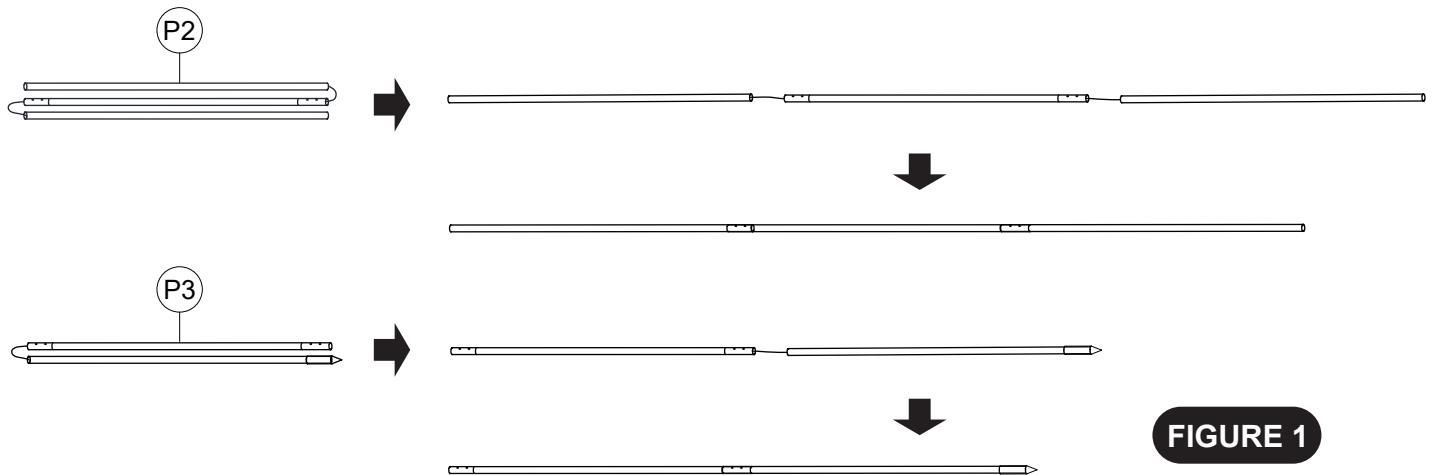


**FIGURE 1**

### STEP 2

Thread the **P2** Metal Tube Combination A through the pipeline of **P1** Golf Target, then install the **P4** 3 Way Connector onto the **P2** Metal Tube Combination A as shown in **FIGURE 2A, 2B & 2C**.

Ensure that the circular hole of all the **P4** is facing upwards **FIGURE 2A & DETAIL A**.

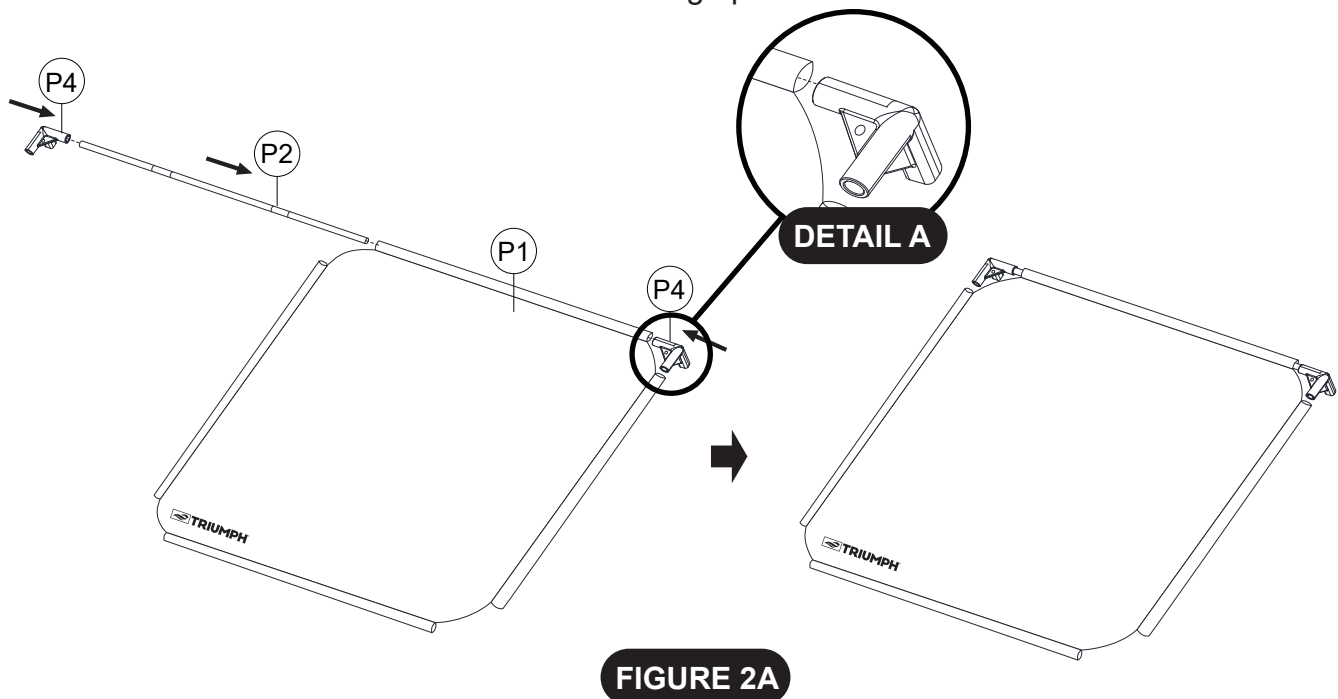

**FIGURE 2A**

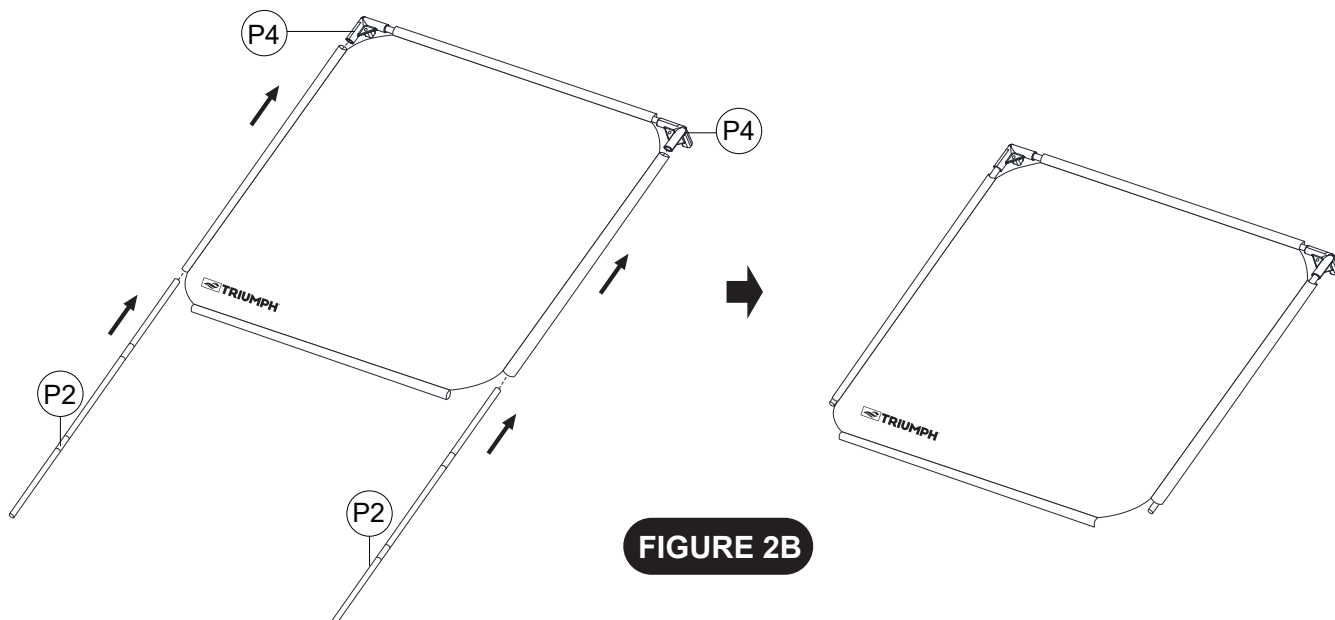


FIGURE 2B

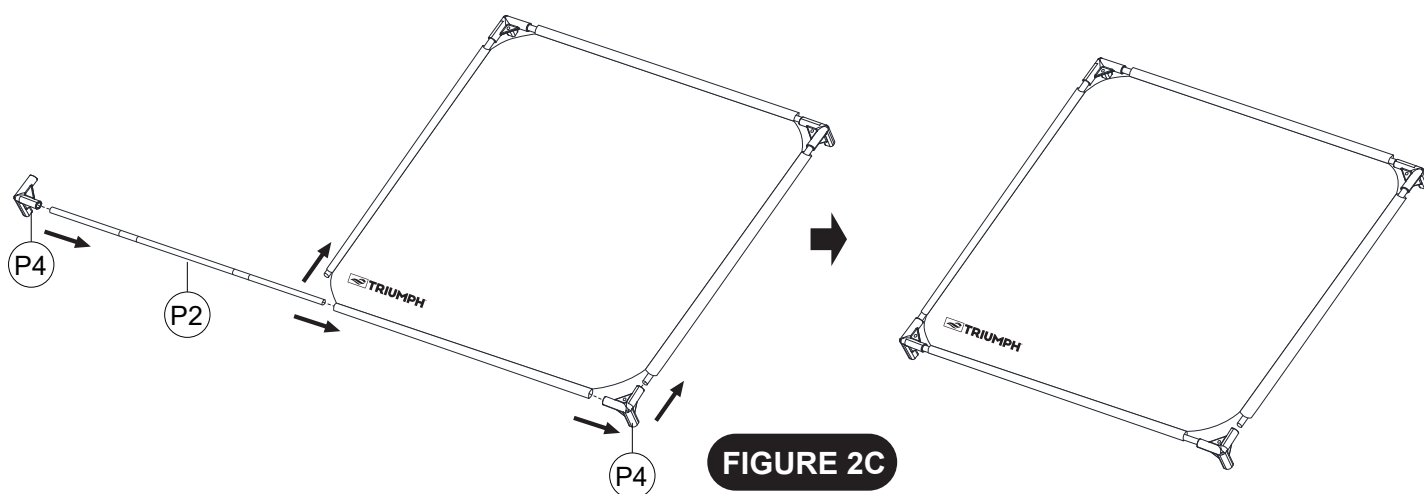


FIGURE 2C

### STEP 3

Install the **P3** Metal Tube Combination B onto the **P4** 3 Way Connector as shown in **FIGURE 3**.


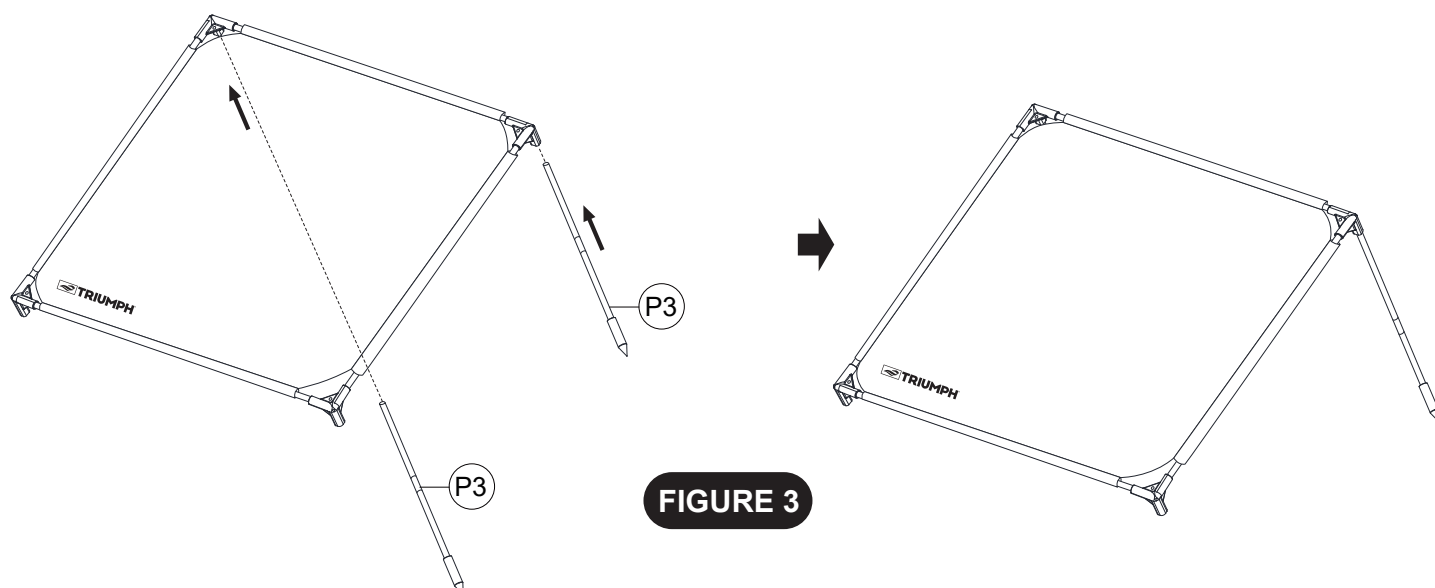


FIGURE 3

## STEP 4

Secure the buckle through **P4** 3 Way Connector in all four corners as shown in **FIGURE 4 & DETAIL A**.

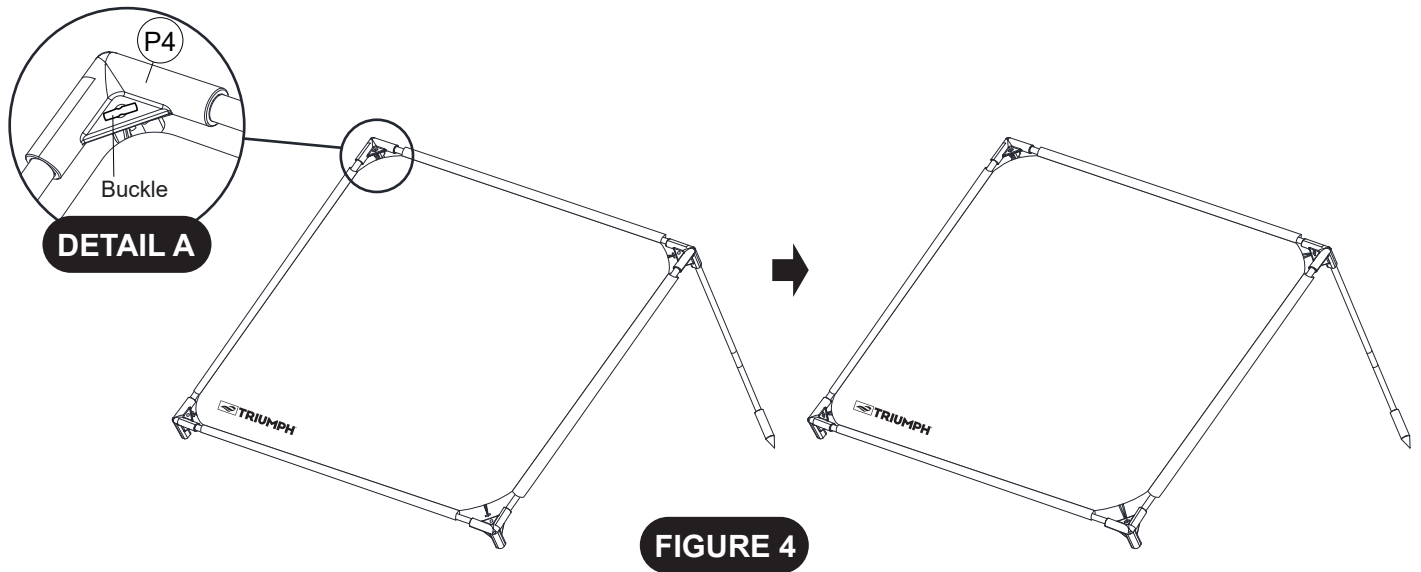


### PARTS REQUIRED (For Step 5 - Step 6)

1pc - **T1** Ground Stake

1pc - **A2** Golf Club


## STEP 5

Install **T1** Ground Stake onto **P2** Metal Tube Combination when playing outside as shown in **FIGURE 5**.

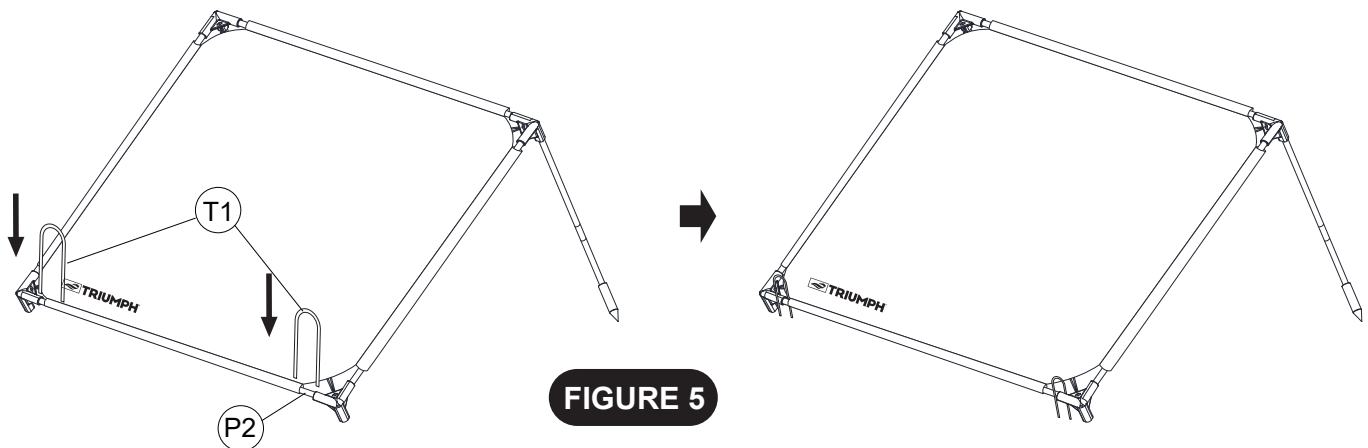

## STEP 6

Install **A2** Ground Stake onto **P2** Metal Tube Combination when playing outside as shown in **FIGURE 6**.

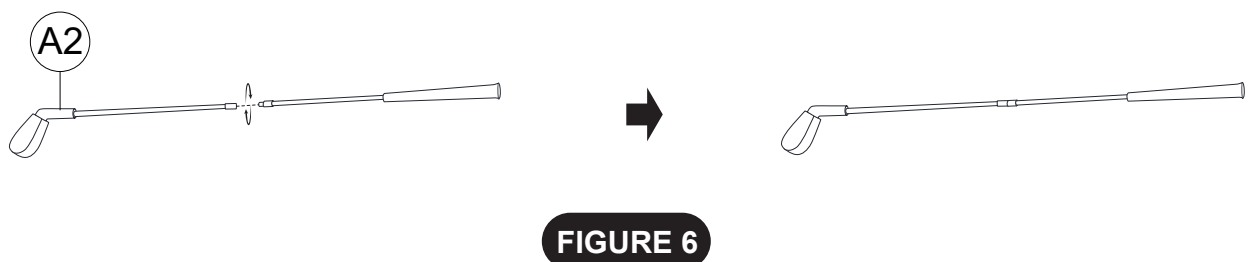


# How to rotate the head of golf club

## STEP 1

Pull the head of the golf club open as shown in **FIGURE 1**.


## STEP 2

Rotate the head of the golf club and secure it in the slot as shown in **FIGURE 2**.

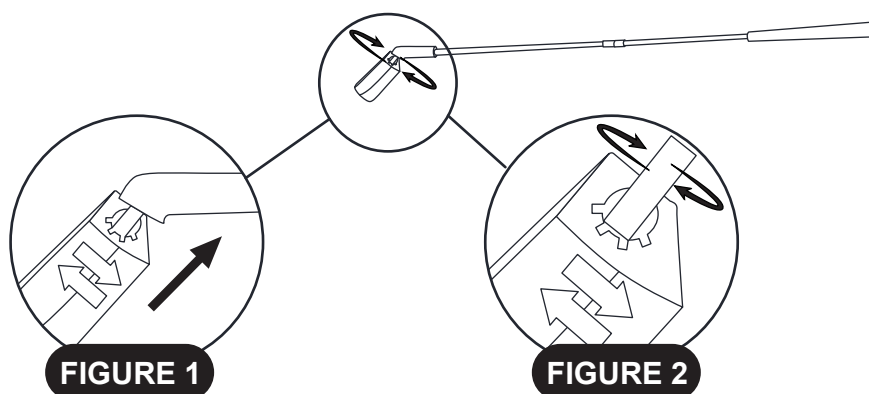

# How to play

1. Place the 12 sticky balls on the mat.
2. Each player takes turns aiming and chipping the balls towards the marked scoring area.
3. The closer the ball sticks to the hole, the more points the player earns.
4. Be aware of the sand traps and water obstacles, which result in negative points.

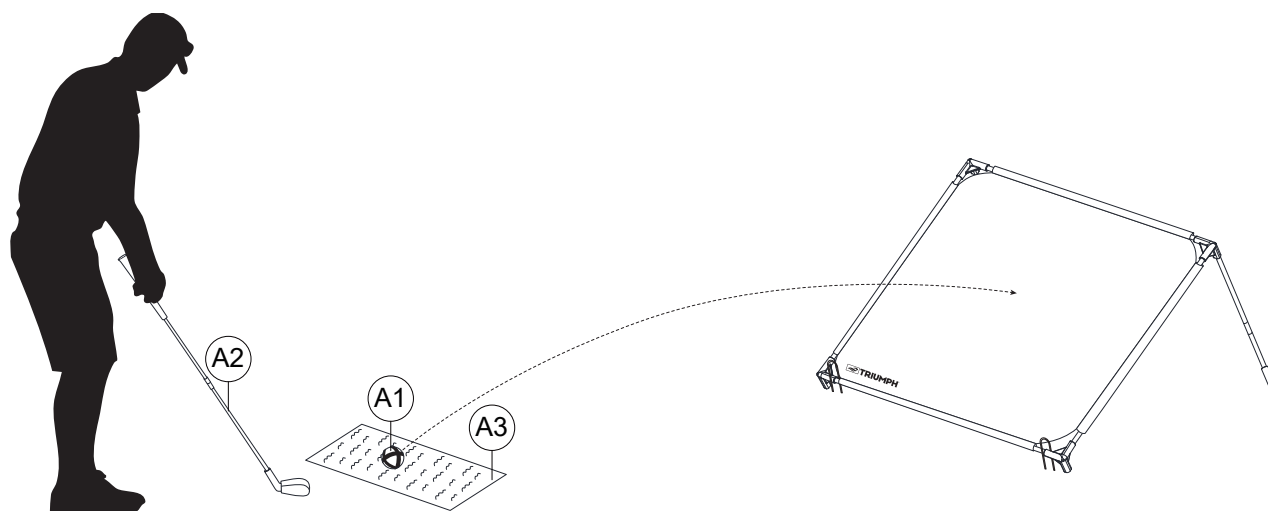

## ⚠ CAUTION

**BEFORE SWINGING THE GOLF CLUB, MAKE SURE THERE ARE NO PEOPLE, PETS, OR OBJECTS IN DANGER OF BEING WITHIN THE GOLF SWING RADIUS OR PATH OF THE BALL. ONLY AIM AT THE GOLF TARGET**

Congratulations! You have now assembled your golf game. Please note the Care and Use instructions below to ensure many years of trouble-free use of your golf game.

## CARE AND USE FOR YOUR PRODUCT

1. Product can be used in the dry **OUTDOORS**, but must be stored **INDOORS**.
2. **DO NOT** sit, climb or lean on the golf target.
3. Inspect all parts before each use.
4. **DO NOT** use broken or damaged parts.

## PRODUCT PARTS LIST FOR MODEL # 45-6005W/F

| Key # | Part #      | Description                            | Qty. |
|-------|-------------|----------------------------------------|------|
| T1    | 45-6005JLT1 | Ground Stake                           | 2    |
| P1    | 45-6005JLP1 | Golf Target                            | 1    |
| P2    | 45-6005JLP2 | Metal Tube Combination A               | 4    |
| P3    | 45-6005JLP3 | Metal Tube Combination B               | 2    |
| P4    | 45-6005JLP4 | 3 Way Connector                        | 4    |
| A1    | 45-6005JLA1 | Sticky Ball<br>(Red/Blue/Green/Yellow) | 12   |
| A2    | 45-6005JLA2 | Golf Club                              | 1    |
| A3    | 45-6005JLA3 | Grass Mat                              | 1    |
| A4    | 45-6005JLA4 | Storage Bag                            | 1    |
| K1    | 45-6005JLK1 | Hardware Kit                           | 1    |
| M1    | 45-6005JLM1 | Owner's Manual                         | 1    |

## 90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

**WARRANTY DISCLAIMERS:** ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

### NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.