



Omega Bristle dartboard Round Wood Cabinet Set with LED Lighting



Please keep this instruction manual for future reference

If you have any problems with your new product, please visit our website www.triumphsportsusa.com for the fastest expedited service possible for your replacement part ordering needs. Please have a copy of your receipt of purchase. For any technical support or warranty issues, please contact Triumph Sports USA at 1-866-815-4173 or email us at csr@triumphsportsusa.com

Limited 90-Day Triumph Sports USA, Inc. Warranty

All Triumph Sports USA, Inc. (TSU) games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



WARNING: Choking Hazard—Product contains small balls and/or small parts.
Not for children under 3 years of age.

Be sure to check out all the exciting games  **has to offer.**

Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES



 
 
 
DARTBOARDS

Triumph Sports USA
11327 W Lincoln Ave.
West Allis, WI 53227

www.triumphsportsusa.com

©2015 Triumph Sports USA. All Rights Reserved.

Parts List

1  Wood piece 1pc	2  3.5x33mm Screw 2pcs	3  Color pen 1pc	4  Eraser 1pc
5  Wall Anchor 2pcs	6  4x40mm Screw 2pcs	7  Battery box 1pc	8  3x14mm Screw 2pcs
9  Steel tip dart 6pcs			

Batteries

 
This dartboard requires 3 AA Batteries to operate. BATTERIES NOT INCLUDED. Do NOT mix old and new batteries and do not mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.

Do not dispose of batteries in fire, batteries may explode or leak.

Step 1

Connect the marker holder (#1) to the main cabinet using two screws (#2) as shown in FIG 1.

 
Fig. 1

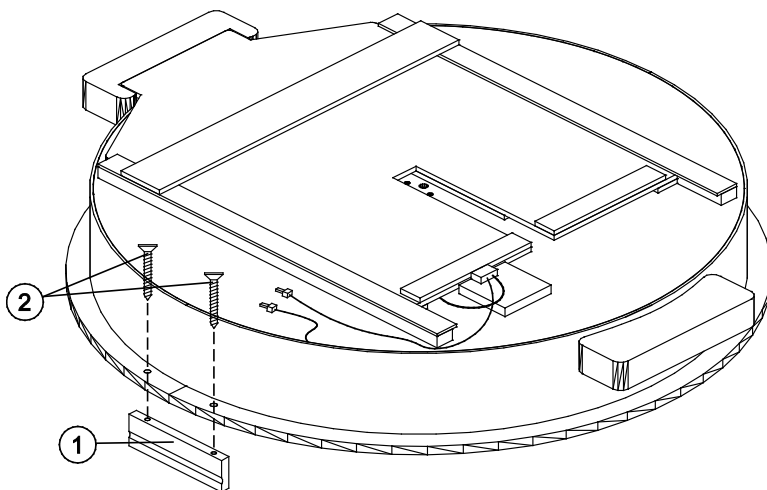

Step 2

 
 
Secure the battery box to the main cabinet on the bottom of cabinet using two screws (#8)
Insert three AA batteries into the battery box and then slide and close the battery box cover.
Connect the battery box wires to the connector feeds from the cabinet as shown in FIG 2. The On / Off switch is located on the battery box.
The switch turns on the lights for both the main cabinet and the scoreboard.

Fig. 2

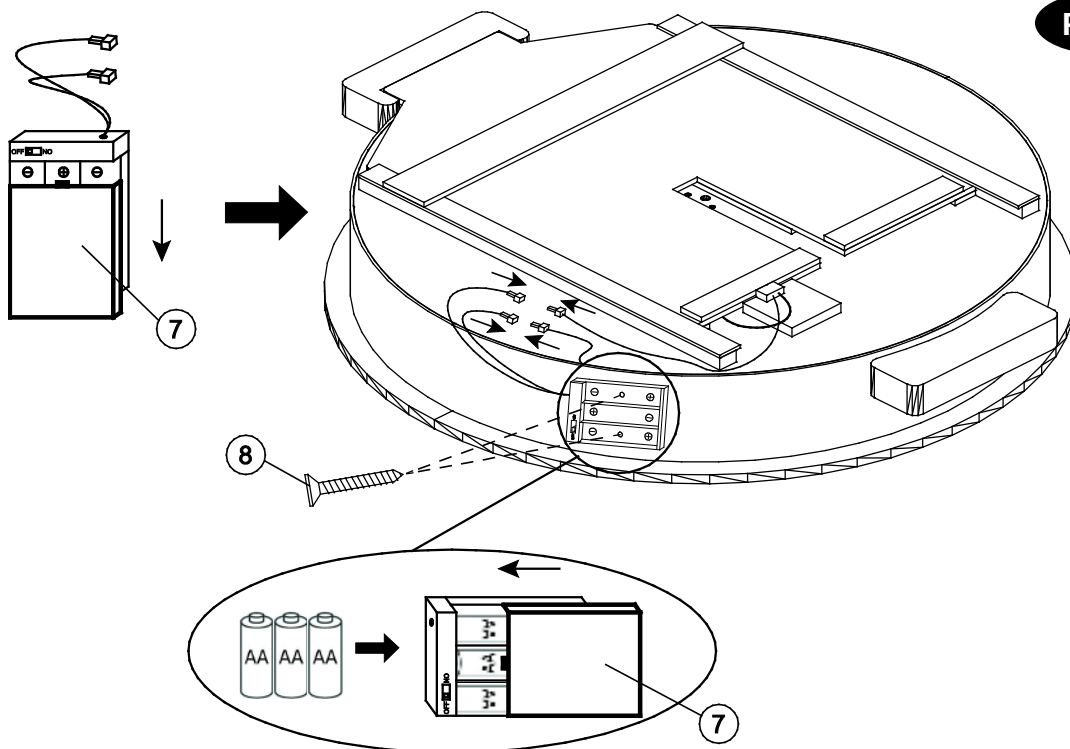

Step 3

It is best if you first find a wall stud on the wall in your hanging location for the cabinet. To determine the mounting height for the cabinet, follow these steps. Measure the distance between the top of the triangle shaped mount brackets to the center of the bulls eye on the dartboard. Its easiest to do this from the backside of the cabinet measuring the center screw to the triangle brackets. You will add this distance to 68 inches to determine the total height for your 2 screw holes to be drilled into the wall to hold the cabinet. Mounting height for your screws to hang the cabinet on should be 76.5 inches from the ground. Make a small pencil mark at the height that you have determined. Then make another pencil mark 16" to the right of the first mark. Before you drill holes into these marks you have made, make sure you are comfortable with the hang location. The triangle shaped hang brackets should line up exactly with the guide holes. Once you verify they line up, drill 2 screws (#6) into the wall leaving the screw heads exposed to hang the cabinet on. If you do not have wall studs in your hanging location, you will need to first secure the wall anchors (#5) to the marks you have made. You will need a rubber mallet to gently tap the wall anchors into the wall and then drill the 2 screws (#6) into the wall anchors as shown. If using the wall anchors, you also will need to leave the screw head exposed to hang the cabinet onto the screw as shown.

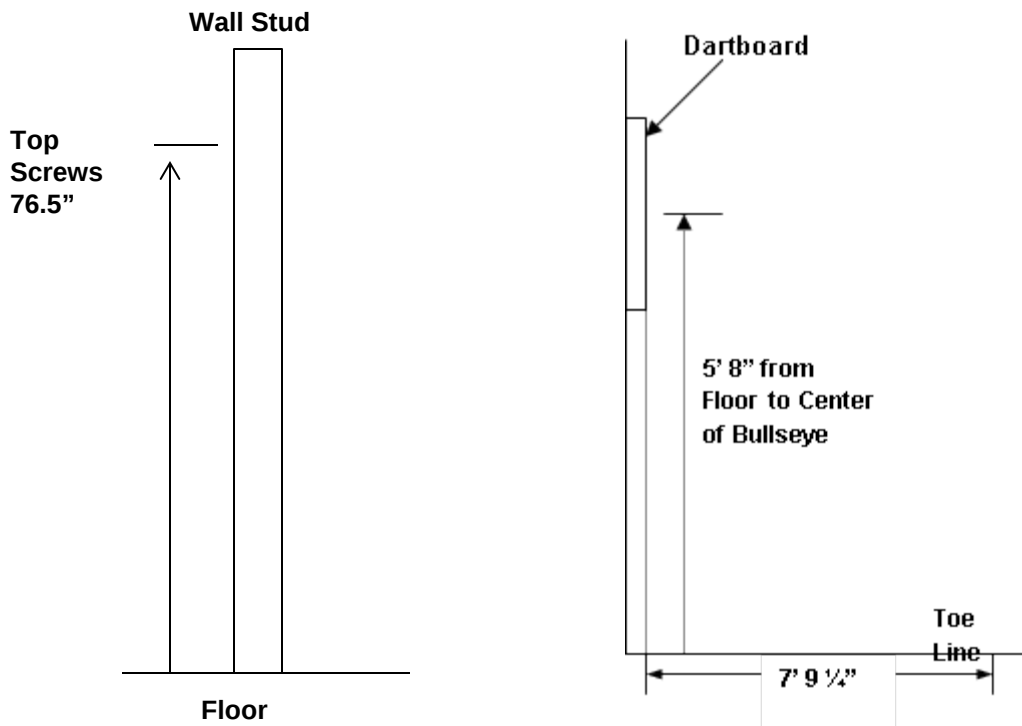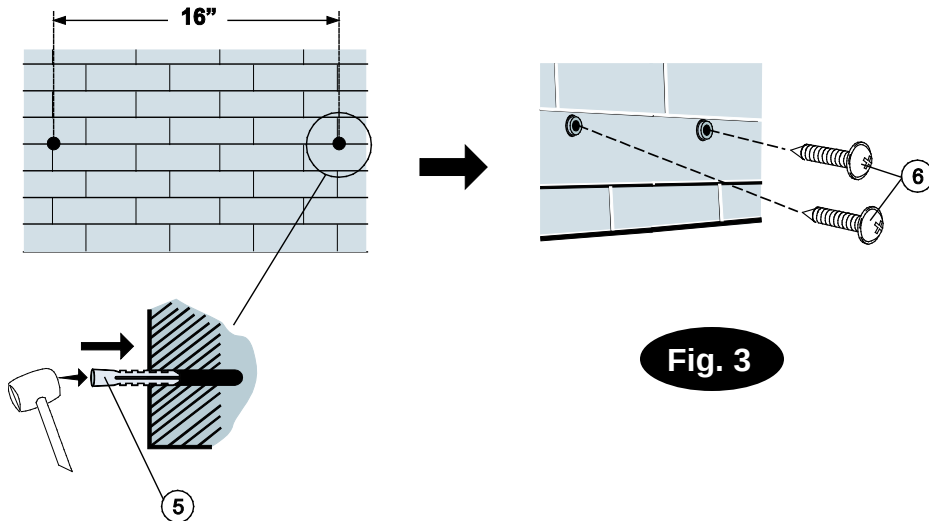

Step 4

The concealed slide out scoreboard is located on the right side of the cabinet. Pull the slide out scoreboard away from the cabinet to reveal the scoreboard and slide towards the cabinet to stow away when not in use. Be sure to shut off the lights when putting the scoreboard away or when not in use. Dart holders for your darts are located at the inner base of the dartboard when not in use.

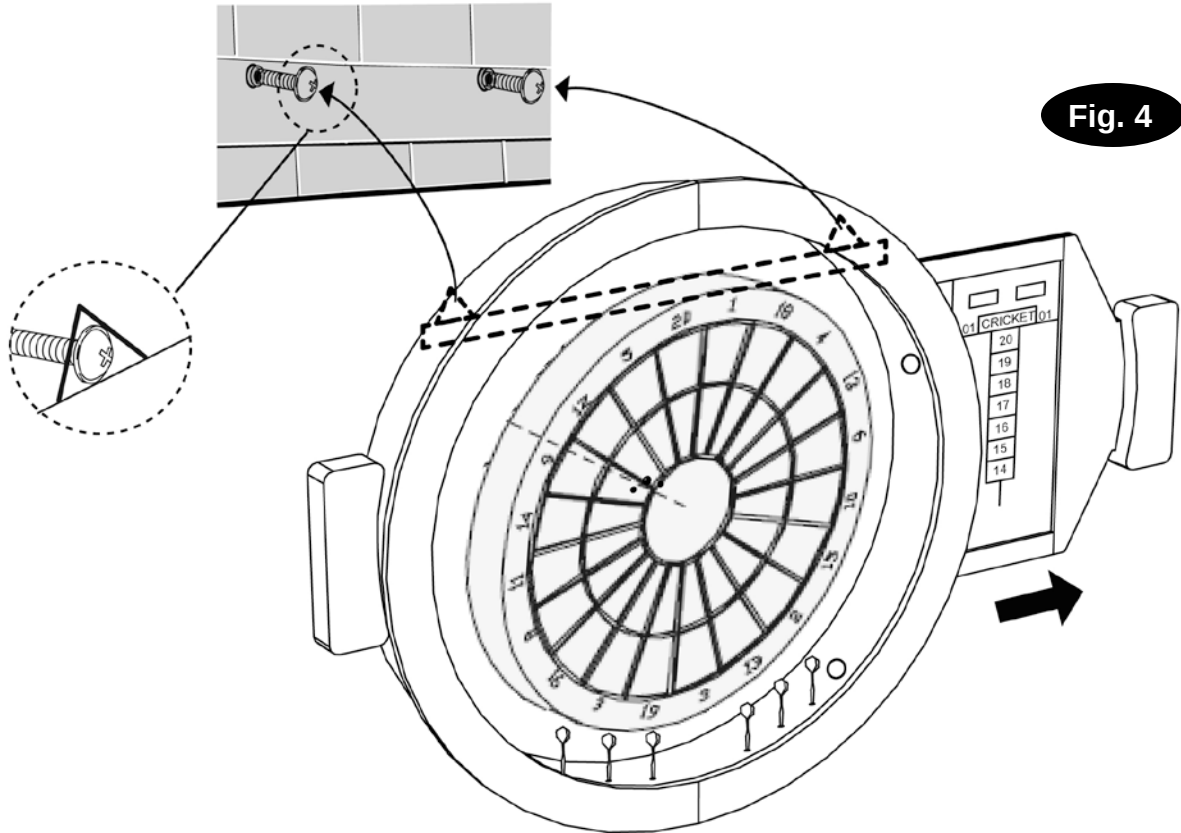 


Fig. 4