



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number **G04000**

Date Code **2 - G04000- - SY**

Purchase Date _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS ATOMIC 9' SHUFFLEBOARD TABLE Featuring: LED Side Lights and Bowling

Tools Required:

Allen Wrench (Included)
Furniture Polish and Soft Cotton Cloth
Phillips Screwdriver
Carpenters Level

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your game table.

 
1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



ATTENTION:

**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO ASSEMBLE THIS GAME TABLE.**


HARDWARE IDENTIFIER (To Scale)




H1 - 8mm x 50mm
Hex Head Bolt
(8 pcs)



H2 - M8 Lock Washer
(8 pcs)

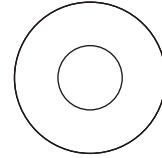


H3 - M8 Flat Washer
(8 pcs)

 

H4 - 3.5 x 15mm
Phillips Flat Head Screw
(4 pcs)




H5 - 3.5 mm x 28 mm
Phillips Round Head Screw
(24 pcs)

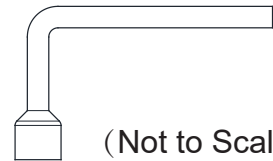

(Not to Scale)
T1 - Socket Head Wrench
(1 pc)


PARTS IDENTIFIER (Not to Scale)

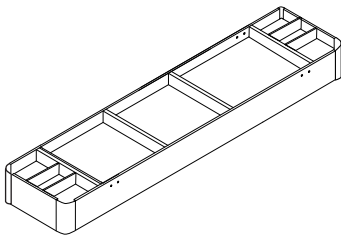

P1 - Main Cabinet
(1 pc)




P2 - Leg
(4 pcs)

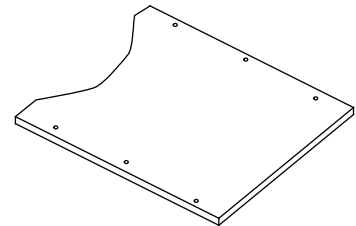

P3 - Leg Panel
(4 pcs)



P4 - Leg Leveler
(4 pcs)

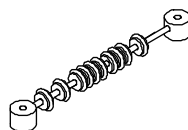

P5 - Manual Scorer
(2 pcs)

ACCESSORIES IDENTIFIER (Not to Scale)



A1 - Shuffleboard Playfield Wax
(1 pc)



A2 - Black Puck
(4 pcs)



A3 - Gray Puck
(4 pcs)

 


CAUTION:


1. Contains material not suitable for human consumption.
2. Shake contents before applying to shuffleboard playfield.
3. Prep playfield surface with furniture polish before applying shuffleboard wax.

Note:

A wide variety of shuffleboard waxes are available on the internet.



A4 - A/C Adapter
(1 pc)

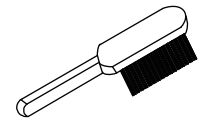

A5 - Playfield Brush
(1 pc)

PARTS REQUIRED

1pc - **P1** Main Cabinet
4pcs - **P2** Leg


8pcs - **H1** Hex Head Bolt
8pcs - **H2** Lock Washer
8pcs - **H3** Flat Washer

STEP 1

Attach the **P2** Legs onto the **P1** Main Cabinet using the **H1** Hex Head Bolts, **H2** Lock Washers and **H3** Flat Washers as shown in **FIGURE 1**.

Do not tighten H1 bolts at this time.

NOTE:
All legs are on the
inside of the cabinet.

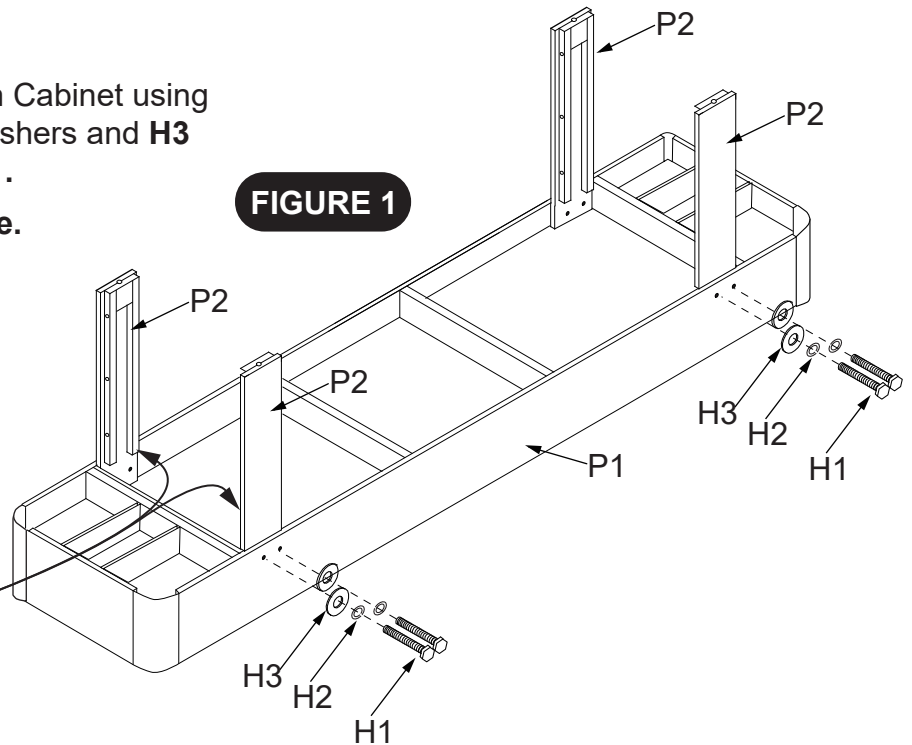

PARTS REQUIRED

4pcs - **P3** Leg Panel
4pcs - **P4** Leg Leveler

24pcs - **H5** Phillips Round Head Screw


STEP 2

Attach the **P3** Leg Panels onto the **P2** Legs using the **H5** Phillips Round Head Screws and the pilot holes in the legs as shown in **FIGURE 2**.

Tighten the H5 screws using a Phillips Screwdriver. DO NOT strip out the screws.

Tighten the H1 bolts now using the enclosed T1 Socket Head Wrench.

Thread **P4** Leg levelers to legs as shown in **FIGURE 2**.

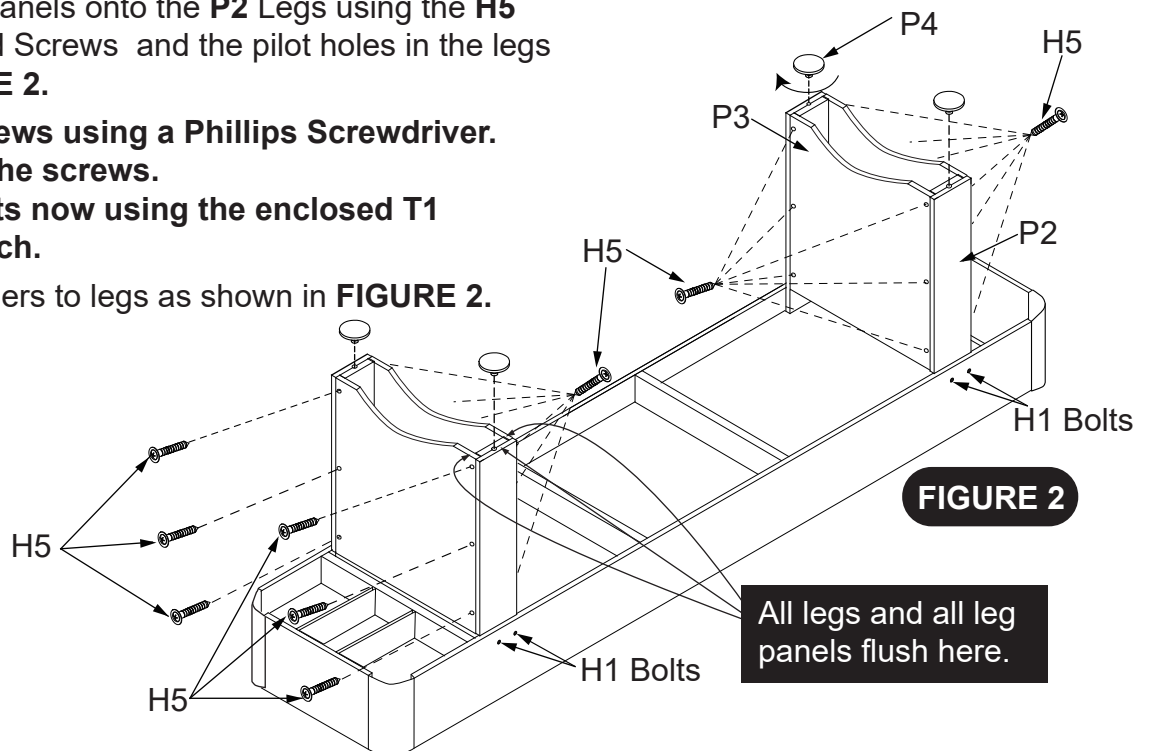


WARNING:

THIS STEP REQUIRES FOUR OR MORE ADULTS.

WHILE FLIPPING THE TABLE OVER, DO NOT ALLOW TABLE TO REST ON THE SIDE OF LEGS AS THIS COULD DAMAGE THEM.

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

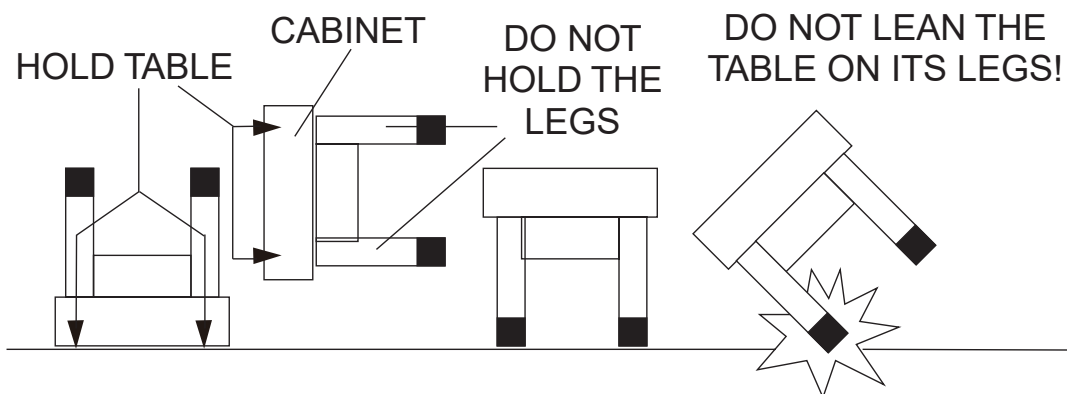

PARTS REQUIRED


2pcs - **P5** Manual Scorer

4pcs - **H4** Phillips Flat Head Screw

STEP 3

Attach the **P5** Manual Scorers onto the top rails using the pilot holes and the **H4** Phillips Flat Head Screws as shown in **FIGURE 3**.

Tighten the screws using a Phillips Screwdriver. DO NOT strip out the screws.

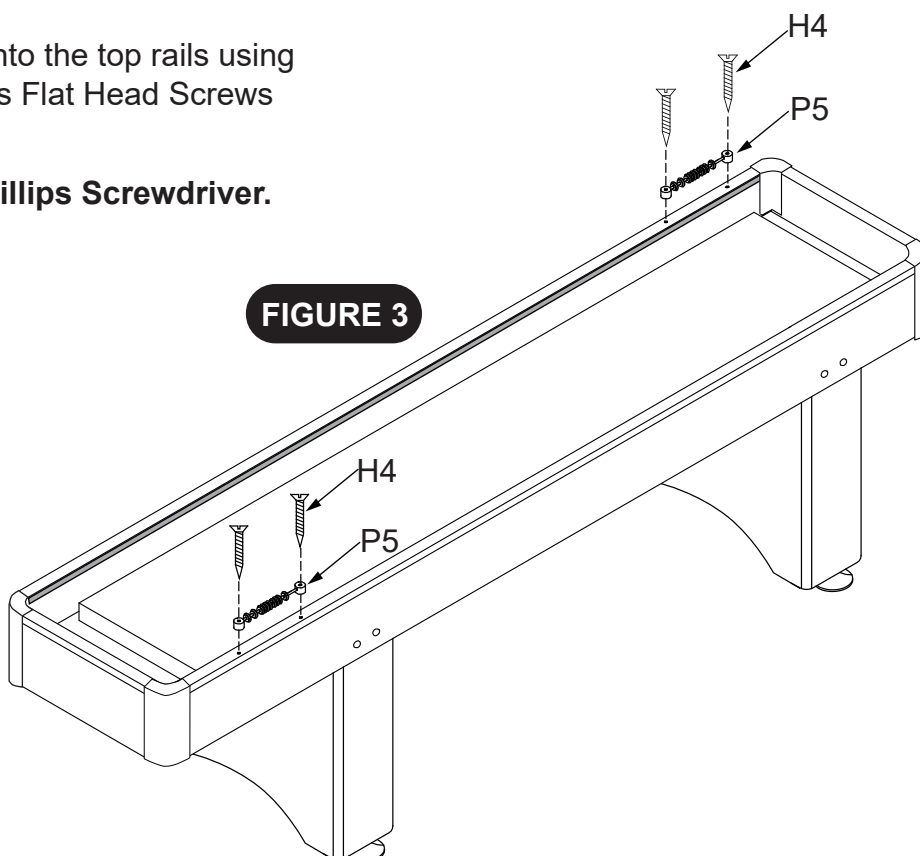

Replacement of LED Light Strip(s)




STEP ONE :

Should the LED lights not be working in the side rail - First , make sure the A/C Adapter is plugged in to a live A/C outlet properly. Second , make sure the A/C Adapter cord (**A4**) is tightly plugged in to the cord on the ON/OFF Switch (**C2**) under the table . Lastly, make sure all LED Strip light connections are snugly plugged into the connection on the ON/OFF Switch (**C2**) . At this point , should the LED Strip Lights still not be working , please disconnect the A/C power to the table before proceeding . **A call will be required to our Customer Service Department to acquire the necessary replacement part(s)** .

STEP TWO :

If the LED Light Strip needs to be replaced on the **P1** Cabinet inner side, **carefully pry the C1 Aluminum LED Strip Base out of the apron with the help of a flat blade screwdriver as shown in DETAIL A.**


The LED Light Wire Connection will need to be disconnected first , the connection is under the table , please see page 9 .

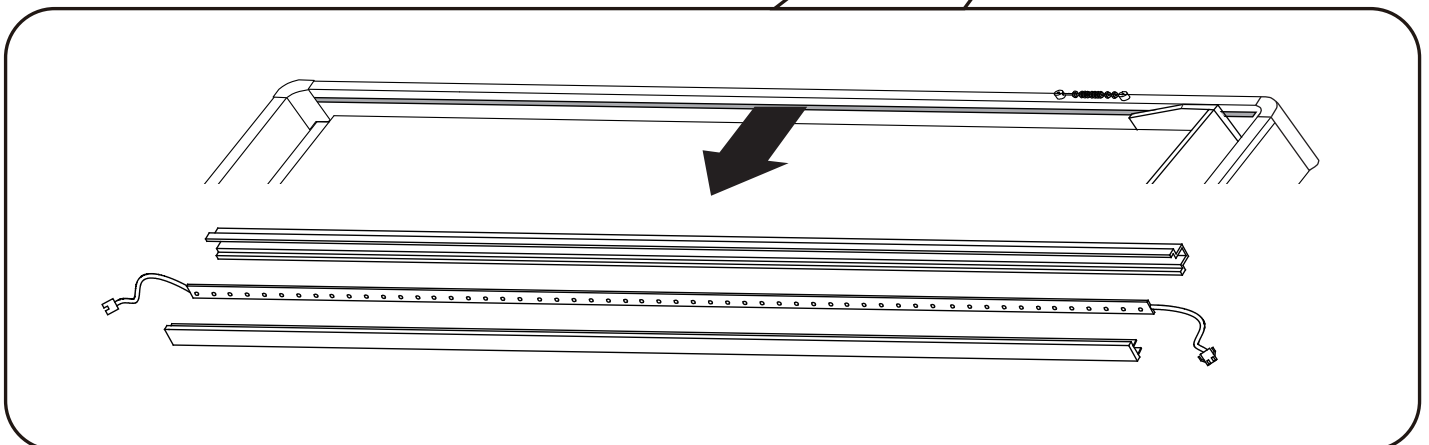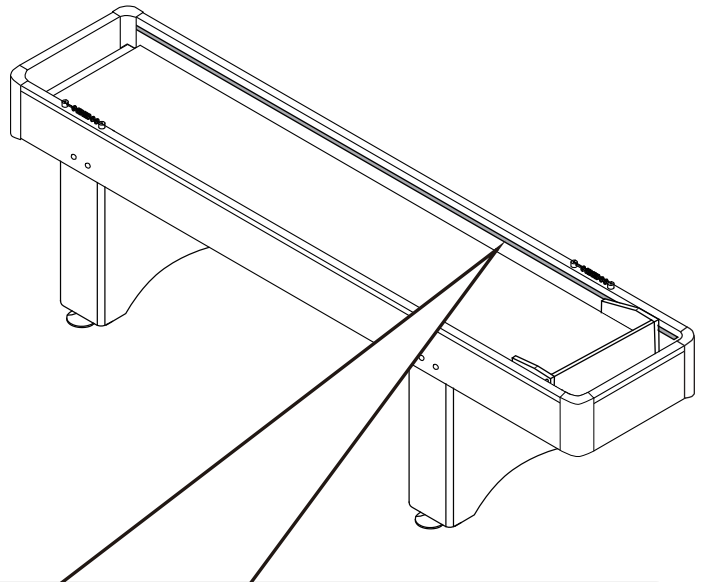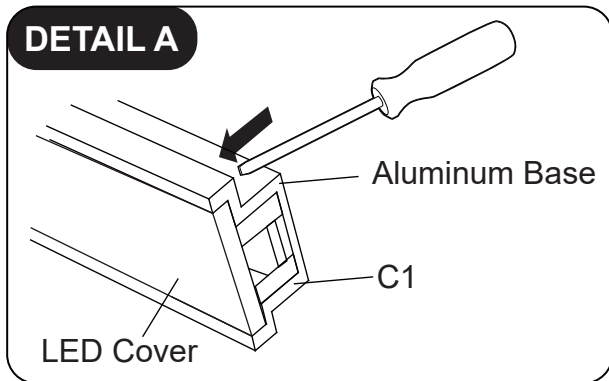

ELECTRONIC CONNECTIONS

These 2 connections are pre-connected, but need to be disconnected and reconnected if replacing the C1 LED Strips. See page 8.

These 2 LED Litght Strip connections are factory connected, please double check by gently pushing together each connection.

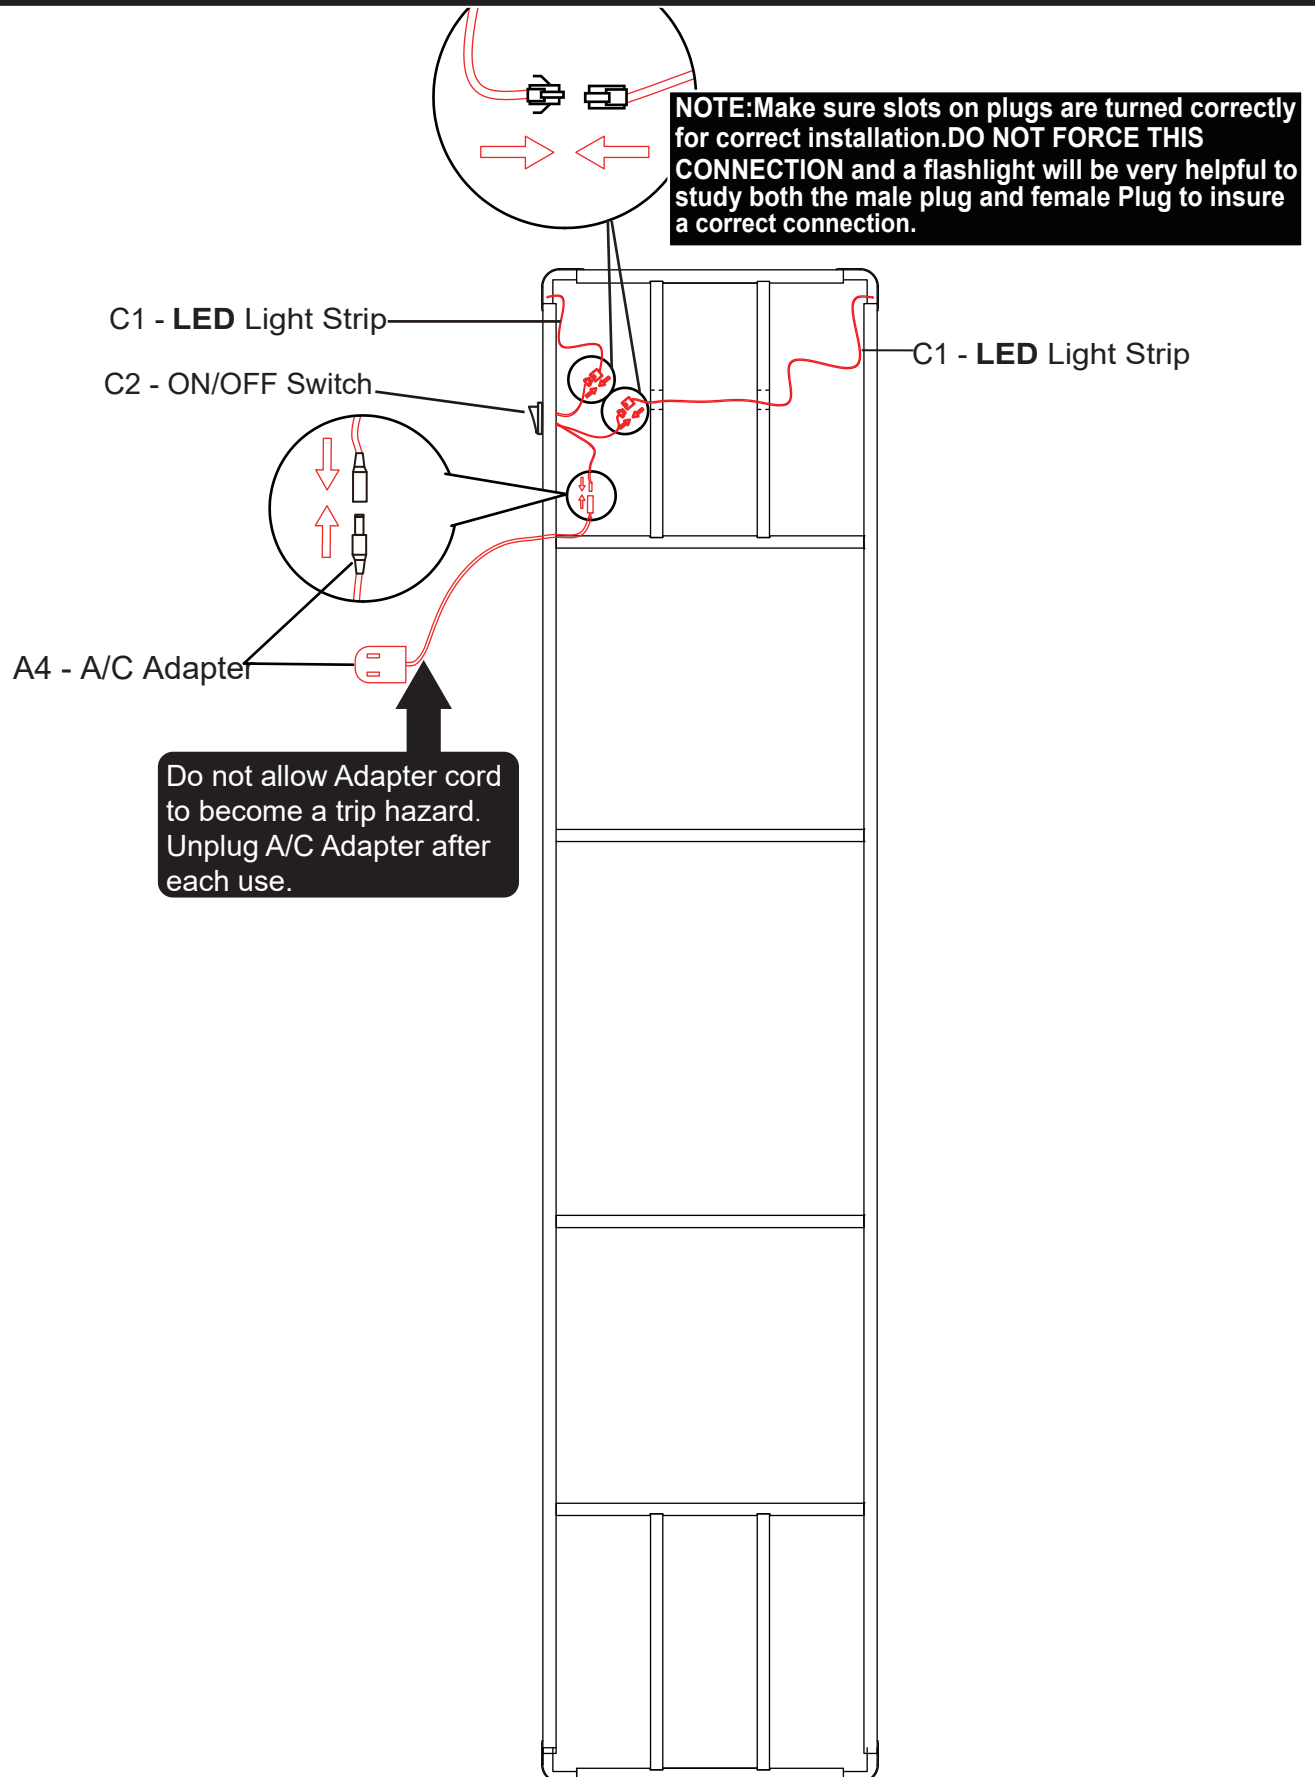

Congratulations! You have now assembled your game table. Please note the Care And Use instructions below to insure many years of trouble free use of your game table.



CAUTION:

TO PLAY THIS GAME AND ACHIEVE A HIGH SKILL LEVEL
REQUIRES A SOFT AND GENTLE TOUCH.
OVER THROWING THE PUCKS WILL CAUSE DAMAGE TO
THE ENDS OF THE TABLE.

CARE AND USE OF YOUR TABLE

1. Before first use and frequently there after, apply furniture polish to shuffleboard playfield to insure long life of playfield and the most competitive level of play.
2. Always shake shuffleboard wax before applying to table.
3. Apply an adequate amount of shuffleboard wax over the entire length of shuffleboard playfield so puck will always "float" consistently over the entire length of the playfield.
4. Use spray furniture polish to clean all exterior surfaces of your game table.
5. This product is intended for **INDOOR** use only.
6. **DO NOT** sit, climb or lean on the table.
7. **DO NOT** drag the table when moving it. This will damage the legs.
8. **DO NOT** set drinks on the table.
9. Use a carpenters level to properly level the table using the leg levelers.
10. The purchase of a table cover will both protect and help keep clean the entire top of the table.

PRODUCT PARTS LIST FOR MODEL

#G04000

Key #	Part #	Description	Qty.
H1	G04000SYH1	8mm x 50mm Hex Head Bolt	8
H2	G04000SYH2	M8 Lock Washer	8
H3	G04000SYH3	M8 Flat Washer	8
H4	G04000SYH4	3.5 mm x 15mm Phillips Flat Head Screw	4
H5	G04000SYH5	3.5 mm x 28mm Phillips Round Head Screw	24
T1	G04000SYT1	Socket Head Wrench	1
P1	G04000SYP1	Main Cabinet	1
P2	G04000SYP2	Leg	4
P2	G04000SYP2	Leg Panel	4
P4	G04000SYP4	Leg Leveler	4
P5	G04000SYP5	Manual Scorer	2
A1	G04000SYA1	Shuffleboard Wax	1
A2	G04000SYA2	Black Puck	4
A3	G04000SYA3	Gray Puck	4
A4	G04000SYA4	A/C Adapter	1
A5	G04000SYA5	Playfield Brush	1
C1	G04000SYC1	LED Light Strip (Pre-installed)	2
C2	G04000SYC2	ON/OFF Switch (Pre-installed)	1
K1	G04000SYK1	Hardware Kit	1
M1	G04000SYM1	Instruction Manual	1

Shuffleboards Game Rules - Information on how to play shuffleboard including rules and instructions on how to keep score in the most common shuffleboard games.

Common Shuffleboard Game Rules

Have you ever wondered how to play shuffleboard? Here are the most common shuffleboard rules that generally apply to most games. The rules usually require that you alternately take turns sliding, by hand, all 4 of your weights against the ones from your opponent. Try to make it to the highest scoring area on the shuffleboard without falling off the end of the board into the alley. In order to earn points your weights need to be the farthest down the board. Some of the strategy and fun really comes into play when you knock off your opponents' weights, outdistance them or use your weights to protect your other highest scoring weights.

Usually the most common games are played either to 15 or 21 points. The sections below cover the shuffleboard game rules for the most famous (and fun) shuffleboard games.

Shuffleboard Game Rules Scoring:

EXAMPLE: If a Red Weight is the most distant Weight from the playing end at the completion of a round, Red becomes the winner of the round, and only Red can score. To determine Red's score, total the value of each Red Weight that lies ahead of the leading Blue Weight. Red Weights which are either blocked or which lie behind the leading Blue Weight are not scored. If there are no Blue Weights remaining on the board, all remaining Red Weights are scored.

Knock Off Shuffleboard Rules:

Knock Off shuffleboard is one of the simplest and most common ways to play the game. However, just because the rules are simple to remember does not mean the game is easy to play. Any game of shuffleboard can be improved with patience and strategy, and this one is no different. Learn more about the Knock Off Game Rules.

Horse Collar Shuffleboard Rules:

Need a high scoring affair? Horse Collar shuffleboard is played one-on-one or with teams, and the winner must score 51 points. With a fun betting element for those who can't score and huge shots worth 26 points, Horse Collar is a game that everyone will be wanting to play. Learn more about the Horse Collar Game Rules.

Tap & Draw Shuffleboard Rules:

Unlike Knock Off participants, Tap & Draw players who get to shuffle the first puck have the best advantage.

Tap & Draw is played and scored similarly to other versions of the game, but there is one major difference.

In Tap & Draw, you can attempt to send your own puck farther up the board by tapping it with another one of your pucks. Learn more about the Tap & Draw Game Rules.

Crazy Eight Shuffleboard Rules:

As far as physically throwing the pucks and keeping score, Crazy Eight presents a version of shuffleboard that is pretty similar to many of the classic games people play. However, Crazy Eight is a fun and challenging version of shuffleboard due to the way that points are actually scored. Learn more about the Crazy Eight Game Rules.

Target Shuffleboard Rules:

Just like darts, archery and rifle, this shuffleboard game gives you the chance to aim and shoot at a target. With hopes of scoring one, two, three or four-points, use your skills to shoot for a target and bring home the winning game. Only the winner scores in each round, so choose your play wisely. Learn more about Target Game Rules.

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADE SPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-888-996-2729 / Customer Service Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Customer Service Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such replacement of in-warranty Products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.