



ORIGINAL WASHER TOSS

INSTRUCTION MANUAL



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



This is not a toy and is intended for use by or under the supervision of adults. Ensure the flight path is clear of people or pets when playing this game. Impact from flying Washer could cause minor or moderate injury.

Be sure to check out all the exciting games Escalade Sports has to offer. Visit our web site at:

ESCALADE
SPORTS

ESCALADESPORTS.COM



Bag Toss



Net Games



Lawn Games

Escalade Sports

Physical Location:

817 Maxwell Ave.
Evansville, IN 47711


Mailing Address: (Correspondence Only)

PO Box 889
Evansville, IN 47706

Parts List

1


Target Board

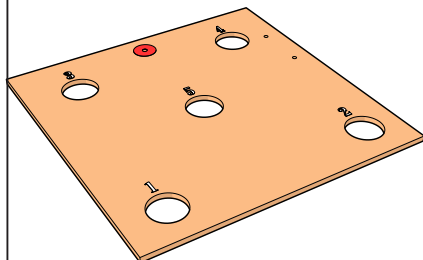

Qty. 2

2


Backboard

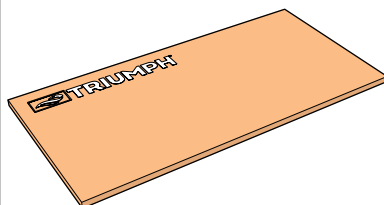

Qty. 2

3


Hinge

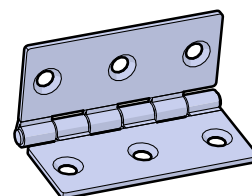

Qty. 6

4


Washer - Black

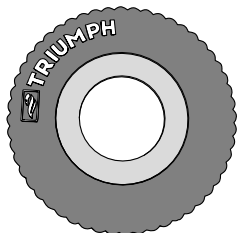

Qty. 3

5


Washer - Grey

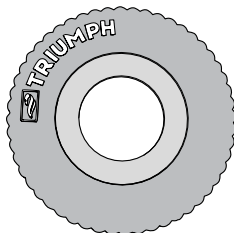

Qty. 3

6


White Pin

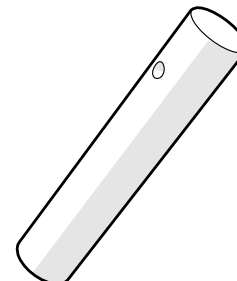

Qty. 2

7


Cotter Pin

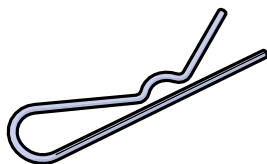

Qty. 2

8

Allen Bolt

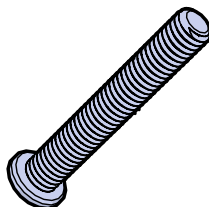

Qty. 2

9


Flat Washer



Qty. 2

10

 Lock Washer



Qty. 2

11

Hinge Screw



Qty. 36

12

Rope Handle



Qty. 2

13

Allen Wrench



Qty. 1

Assembly Instructions - Installing the Hinges

1. On a dry and clean surface place a Target Board (#1) facing down, locate the pre-drilled holes and attach Hinges (#3) with Screws (#11). See **Figure 1** & **Detail A**.


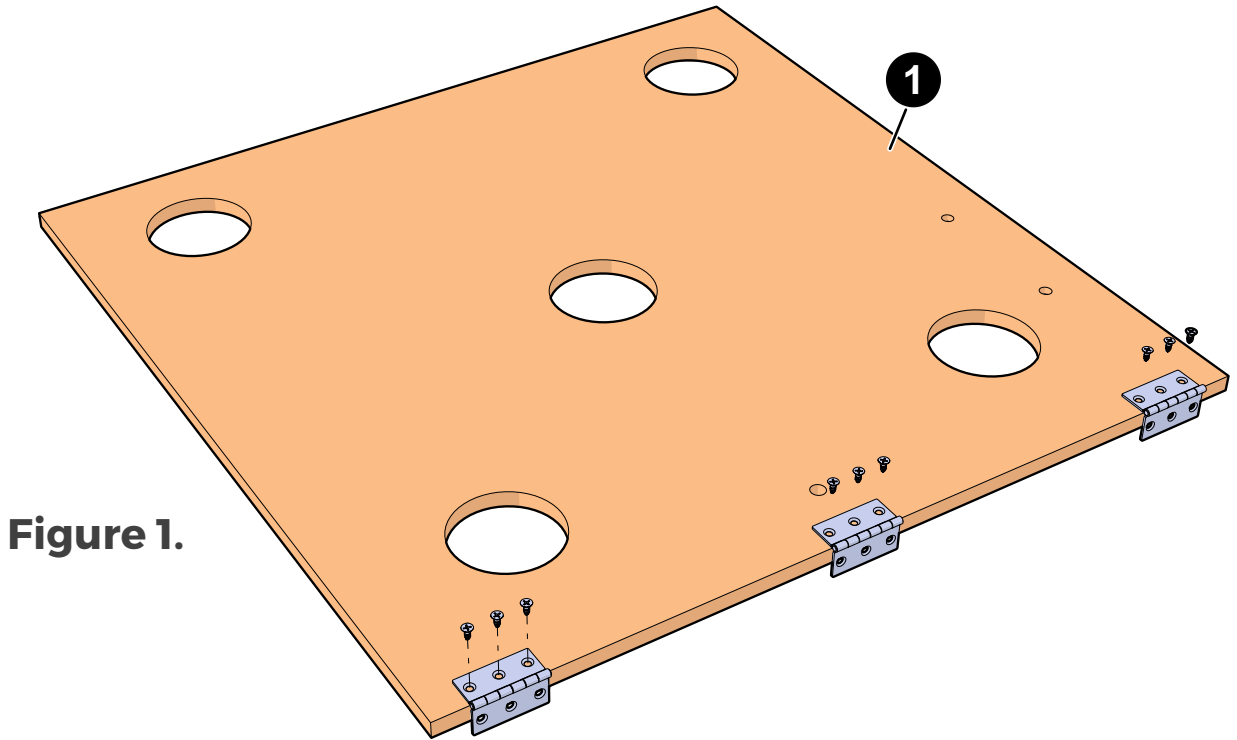


Figure 1.

NOTICE

FOR CORRECT & PROPER
INSTALLATION PLEASE MAKE
SURE TO INSTALL HINGES (#3)
USING THE PRE-DRILLED HOLES
FOR **STEP 4** (SEE NEXT PAGE).

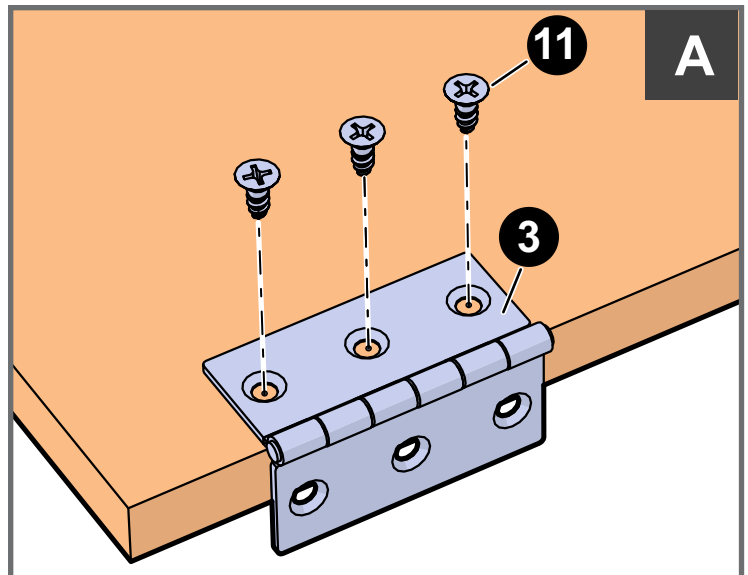




Assembly Instructions - Installing the Backboard

2. On a dry and clean surface place Backboard (#2) with the logo facing up. See **Figure 2**.
3. Line up the hinges on the Target board (#1) with the Pre-drilled holes on the Backboard (#2). Then attach the Screws (#11) until secure. See **Figure 3** & **Detail B**.
4. Continue to **Step 5** on the next page right away. Do not leave the Target Board unattended while in the vertical position.



CAUTION.

DO NOT leave the Target Board unattended while in the Vertical position.

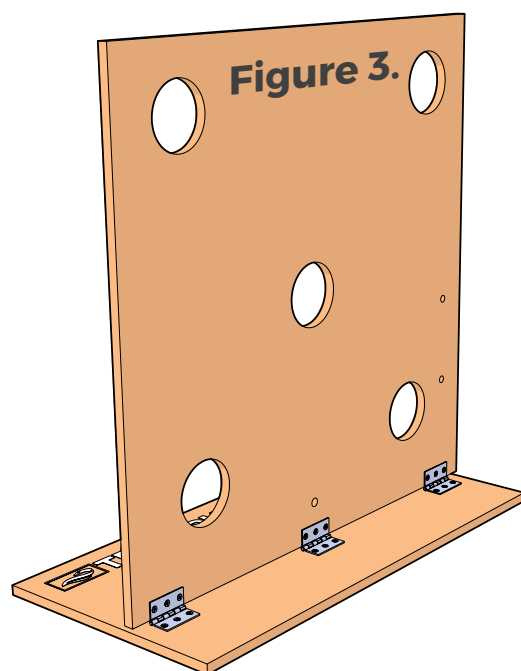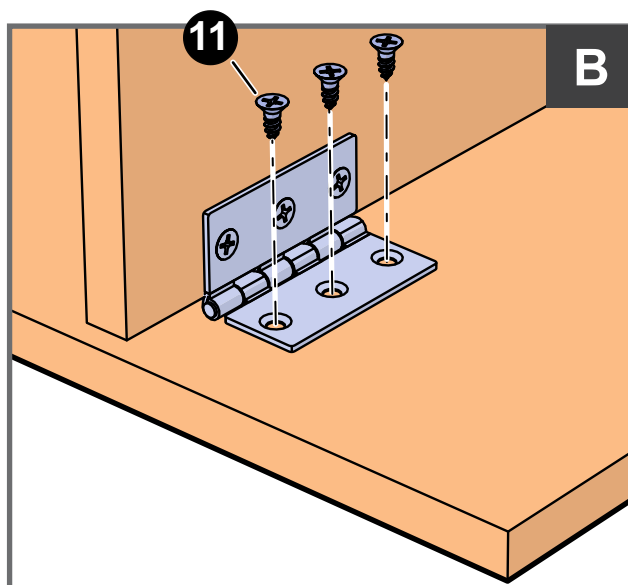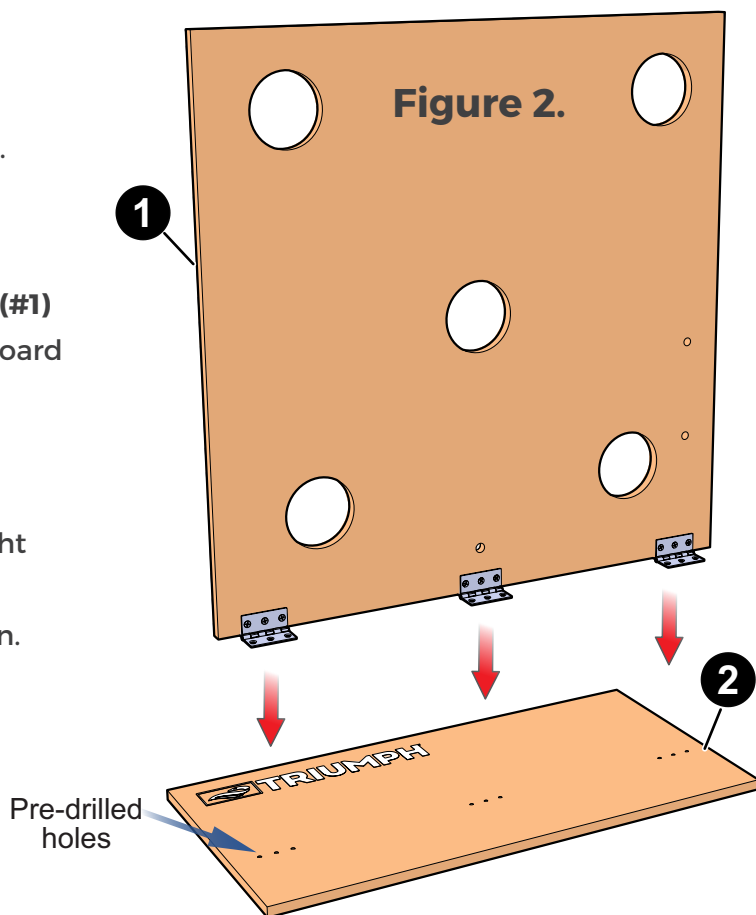



Assembly Instructions - Play Position

5. Carefully Rotate the board assembly from the previous step until it is in the play position. See **Figure 4**.

6. Install the White Pin (#6) with an Allen Bolt (#8), a Lock Washer (#10) and a Flat Washer (#9) using Allen Wrench (#13) as shown in **Detail C & Figure 4**.

7. Insert the loose end of the Rope Handle (#12) into the hole on the target board, and tie a knot underneath. One end of the rope will be tied already.


6. Repeat steps 1- 7 to assemble a second Washer Toss assembly then you are ready to play!

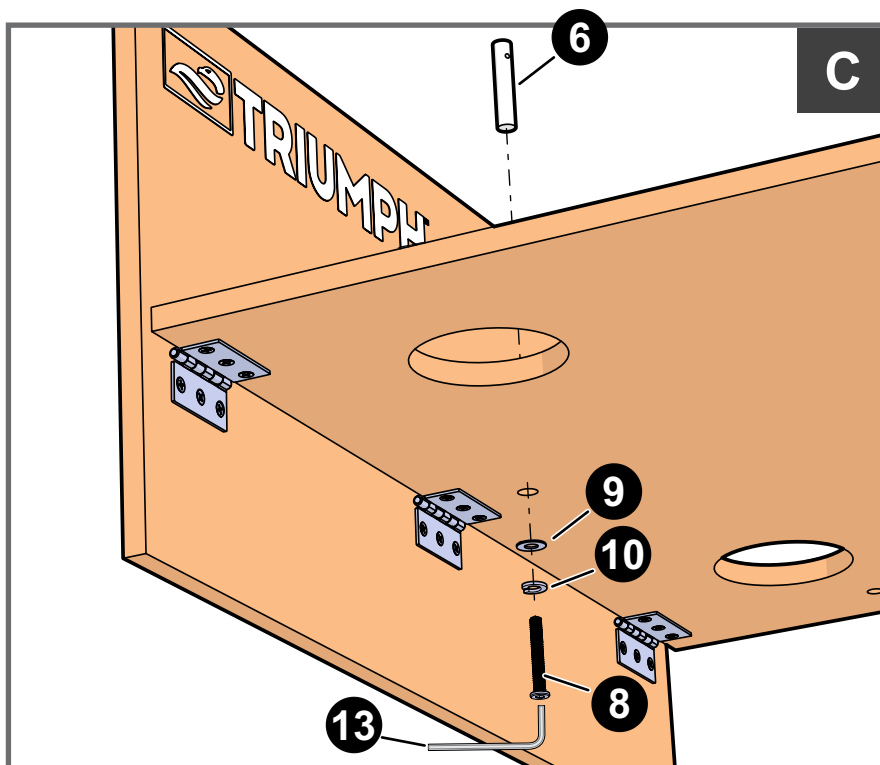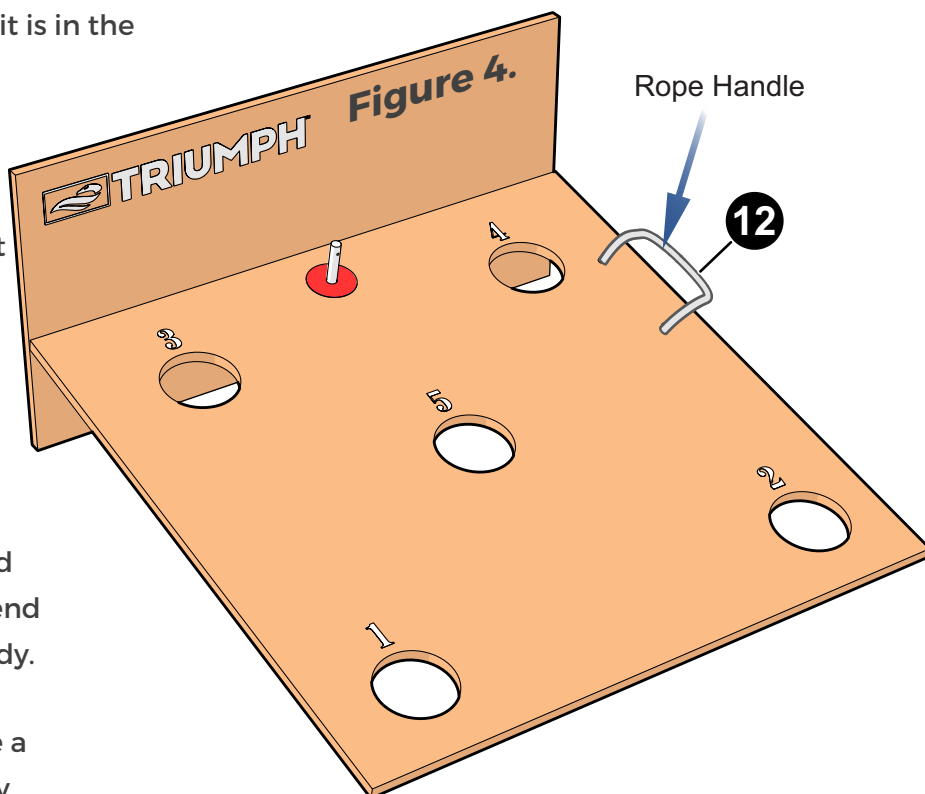

Game Setup

GAME SETUP:

1. Playing Area - Select a flat open area. Target Boards should be 20' apart or about 7 paces from the front of each target. Allow children to set the distance with their own stride. The width of the court depends on the skill level of the players.
2. Game can be set up for singles or doubles.
 - 1 vs 1:** Both players throw to the same Target Board.
 - 2vs 2:** One member from each team will stand next to each board on opposite sides.

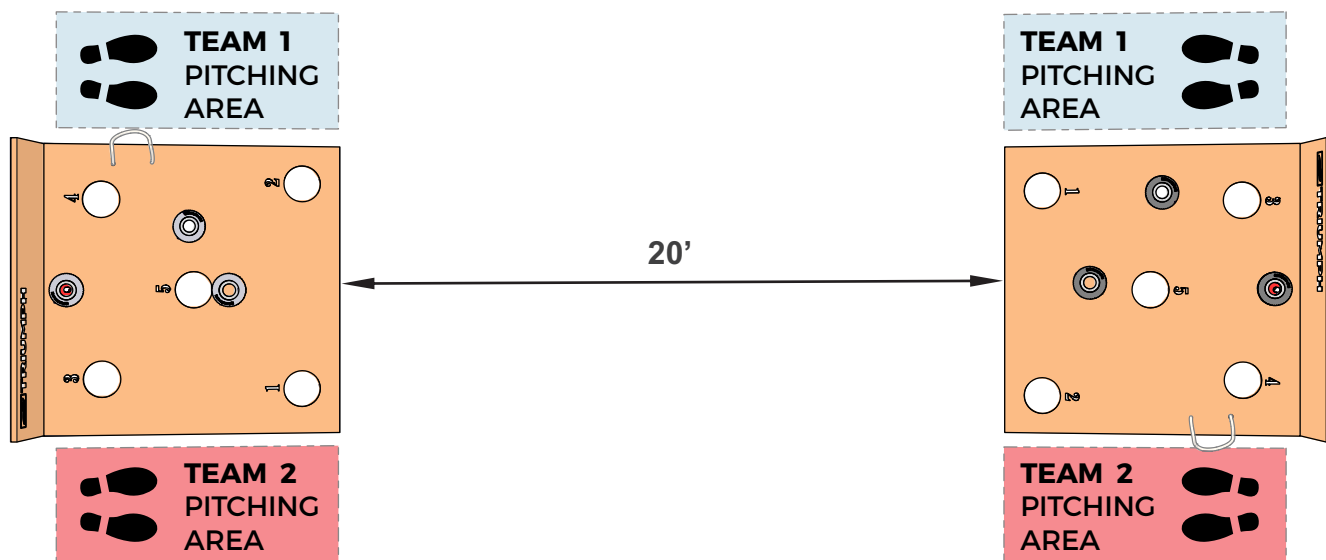

CAUTION

This is not a toy and is intended for use by or under the supervision of adults. Ensure the flight path is clear of people or pets when playing this game. Impact from flying washers could cause minor or moderate injury.

Game Play

Game Play

To determine who will throw first at the start of the game, each player/team will toss one washer toward the opposite target. Whoever gets closest or makes it into the center hole/5 will be the first to throw their washer. Players alternate tossing their washers until all 6 have been thrown.

Scoring

1. Scoring is based off what hole number the washer goes in. For example if it the washer goes in the middle 5 hole you get 5 points
2. Only one player can score per round
3. Washers cannot bounce from the ground
4. If at any time, a players' washer lands on the white pin, that is an instant winner for the team.

First team or player to reach **21 Points** wins. Compare your score to your opponents each round. Each team's points cancel each other out so only one team can score per round. For example if **Team 1** scores 8 points and **Team 2** scores 5, Team 1 adds 3 points to their score.



Optional Rules

Skunk Rule: The team that scores 11 points before the other team scores wins the game.

Exacta Rule: A team must score 21 points without going over. If a team goes over, their score goes back to 15 points.

Storage

1. Stack the washers onto the White Pins and slide the Cotter Pin (#7) until it locks in place. See **Figure 5 & Detail D**.

NOTE: Game can be played outdoors but must be stored indoors in a dry place.

