



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Or write to:

Escalade Sports

Customer Service Department

P.O. Box 889

Evansville, IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your date code when inquiring about parts.

When contacting Escalade Sports please provide your model number, serial number (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.


Model Number: **G03618W**

Date Code: **2-G03618W- -WJ**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

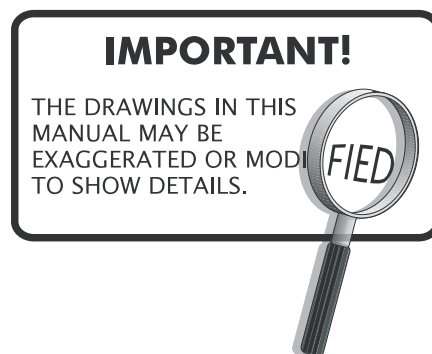

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS HOT SHOT 6FT HOCKEY TABLE

Tools Required:

Wrench T1–Included with the table
Philips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



WARNING:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION,
AND SAFETY INSTRUCTIONS CAREFULLY. AT LEAST
TWO ADULTS ARE NEEDED TO PUT THIS HOT SHOT
6FT HOCKEY TABLE TOGETHER.**

HARDWARE IDENTIFIER

(To Scale)



H1 - 6mm x 25mm
Allen Head Bolt (16)

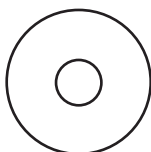

H2 - 6mm x 19mm
Flat Washer (16)



H3 - 4mm x 18mm
Philip Round
Head Screw (2)



(Not to Scale)

H4 - Leg Leveler (4)




(Not to Scale)

T1 - Allen Wrench (1)

PARTS IDENTIFIER

(Not To Scale)

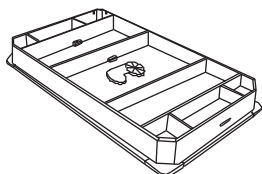

P1 - Hockey Table (1)



 
P2 - Leg (4)



P3 - Electronic
Scorer (1)

ACCESSORY IDENTIFIER

(Not To Scale)



A1 - Striker (2)



A2 - Puck (2)



A3 - Felt Pad (2)

PARTS REQUIRED:


- 16 pcs - **H1** Bolt
- 16 pcs - **H2** Washer
- 4 pcs - **H4** Leg Leveler
- 4 pcs - **P2** Leg
- 1 pc - **T1** Allen Wrench

STEP 1:

Leave **P1** Hockey Table face down in carton lid to assemble.

Per **FIGURE 1**, attach each **P2** Leg using **H1** Bolts with **H2** Washers. Use **T1** Allen Wrench to tighten Bolts.

Thread **H4** Leg Levelers into each leg as shown.

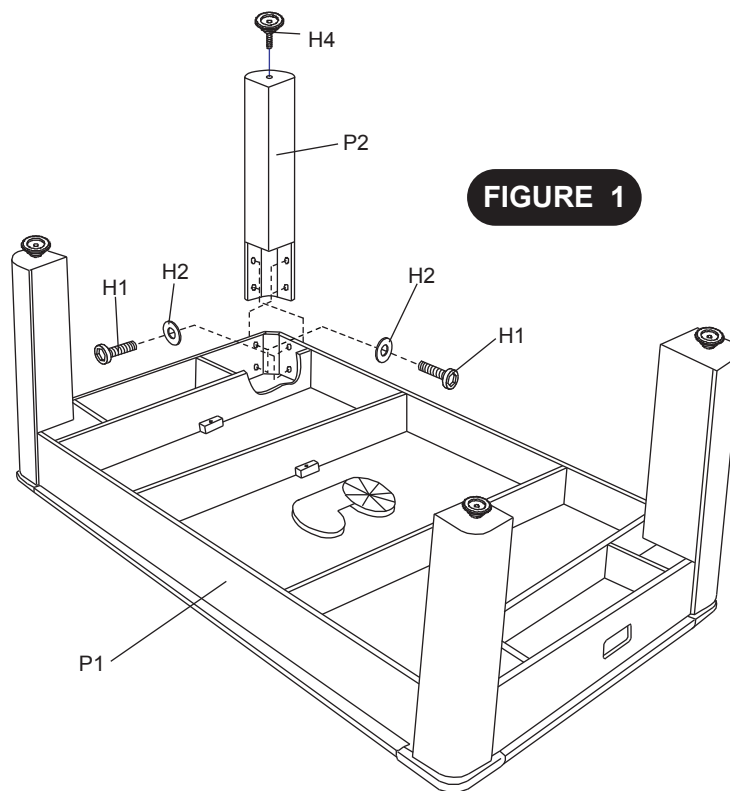**PARTS REQUIRED:**

- 2 pcs - **H3** Screws
- 1 pc - **P3** Electronic Scorer
- 4 pcs - **AA** Batteries
(not included)


STEP 2:

With the help of another adult, carefully lift and rotate table into upright position.

Next, use pilot holes provided and attach **P3** Electronic Scorer with **H3** Screws. Feed the scoring leads from under the table through side apron and into back side of electronic scorer.


Note **inset**, back view.

Install 4 "**AA**" batteries into electronic scorer.

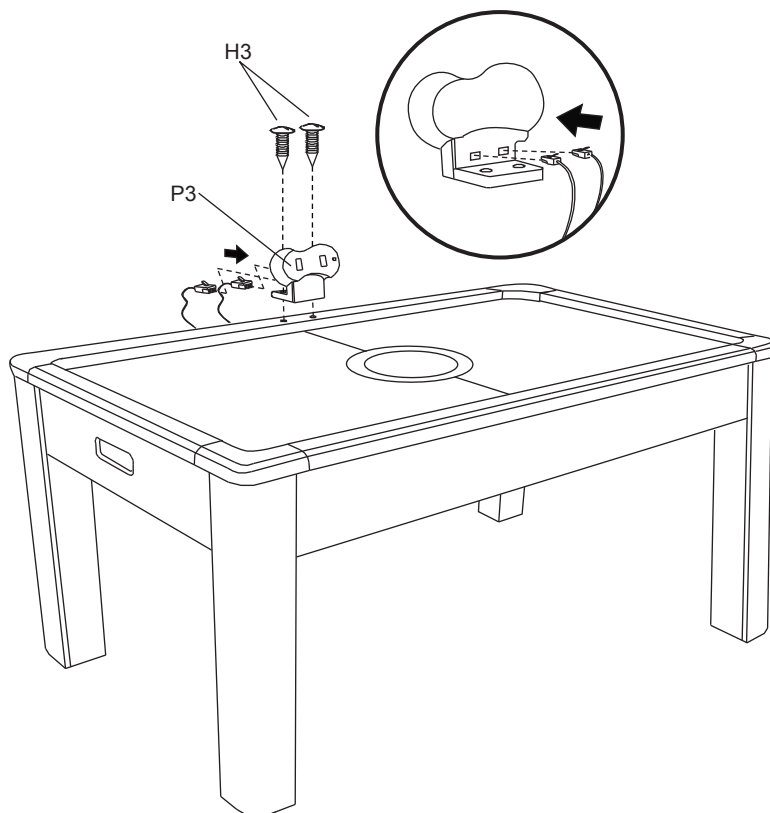

STEP 3:

Peel the backing off **A3** Felt Pad and attach to **A1** Striker as shown in **FIGURE 3**.

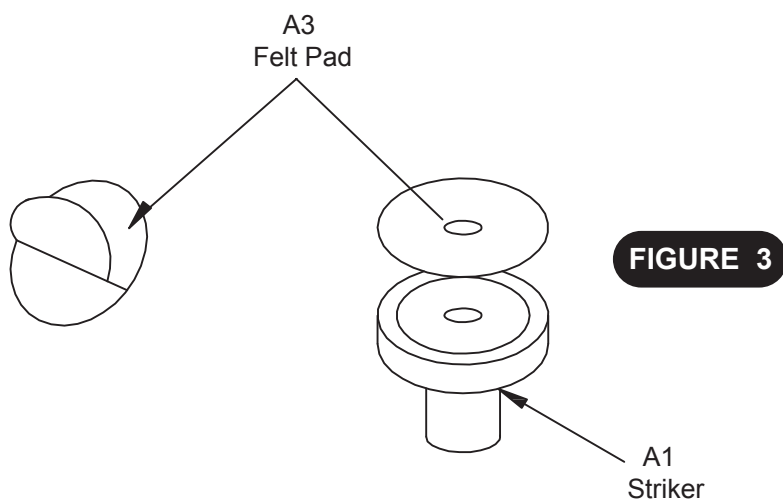

PRODUCT PARTS LISTS

Part#	Description	Qty	Part#	Description	Qty
03618WJH1	6mm x 25mm Allen Head Bolt	16	03618WJP5	Puck Catcher	2
03618WJH2	6mm x 19mm Flat Washer	16	03618WJA1	Striker	2
03618WJH3	4mm x 18mm Round Head Screw	2	03618WJA2	Puck	2
03618WJH4	Leg Leveler	4	03618WJA3	Felt Pad	2
03618WJP1	Hockey Table (No Motor)	1	03618WJT1	Allen Wrench	1
03618WJP2	Leg	4	03618WJK1	Hardware Kit	1
03618WJP3	Electronic Scorer	1	03618WJM1	Owners Manual	1
03618WJP4	Blower Motor	1			

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADESPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-888-996-2729 / Customer Service Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Customer Service Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements, no charge will be made for such replacement of in-warranty products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.