



SILVERBACK

Instructions for: 18" Silverback LED Mini Hoop

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

arcadegames@escaladesports.com

Or write to:

Escalade Sports
Customer Service Department
P.O. Box 889
Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Model Number: **G02300W**

Date Code: **CPSIA#2-G02300W- -DP**

Purchase Date: _____

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**



Assembly Tips

Make sure you understand the following tips before you begin to assemble your mini hoop:

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



WARNING:

READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND SAFETY INSTRUCTIONS CAREFULLY.

WARNING: Do not attempt to service the electronics contained in this product yourself. Opening or removing any electrical covers could expose you to chemicals.



CAUTION:

- THIS PRODUCT IS NOT DESIGNED TO SUPPORT A PLAYER HANGING FROM THE RIM OR ANY OTHER COMPONENT.
- WEAR MOUTH GUARD WHEN PLAYING TO AVOID DENTAL INJURIES.
- USE ONLY BALL PROVIDED - OTHER BALLS CAN DAMAGE PRODUCT AND RISK INJURY TO PLAYER.

CARE AND USE OF YOUR MINI HOOP

1. This product is intended for **INDOOR** use only.

NOTE: Peel protective covering from backboard before assembly.

STEP 1

 
Insert the three Long Screws **H1** through Back plate **P2**, Backboard **P1** and into Rim Assembly **P3**. Fasten with **T1** Allen Wrench until Rim is secure but **DO NOT** over tighten.

STEP 2

Attach both Mounting Brackets **P5** to the **back** of the Backboard **P1** with Short Screws **H2**. Fasten with **T1** Allen Wrench until secure but **DO NOT** over tighten.

STEP 3

Attach Net **P4** to Rim Assembly **P3**. Loop net over metal loop and tuck under as shown in **Detail 1** and **Detail 2**.

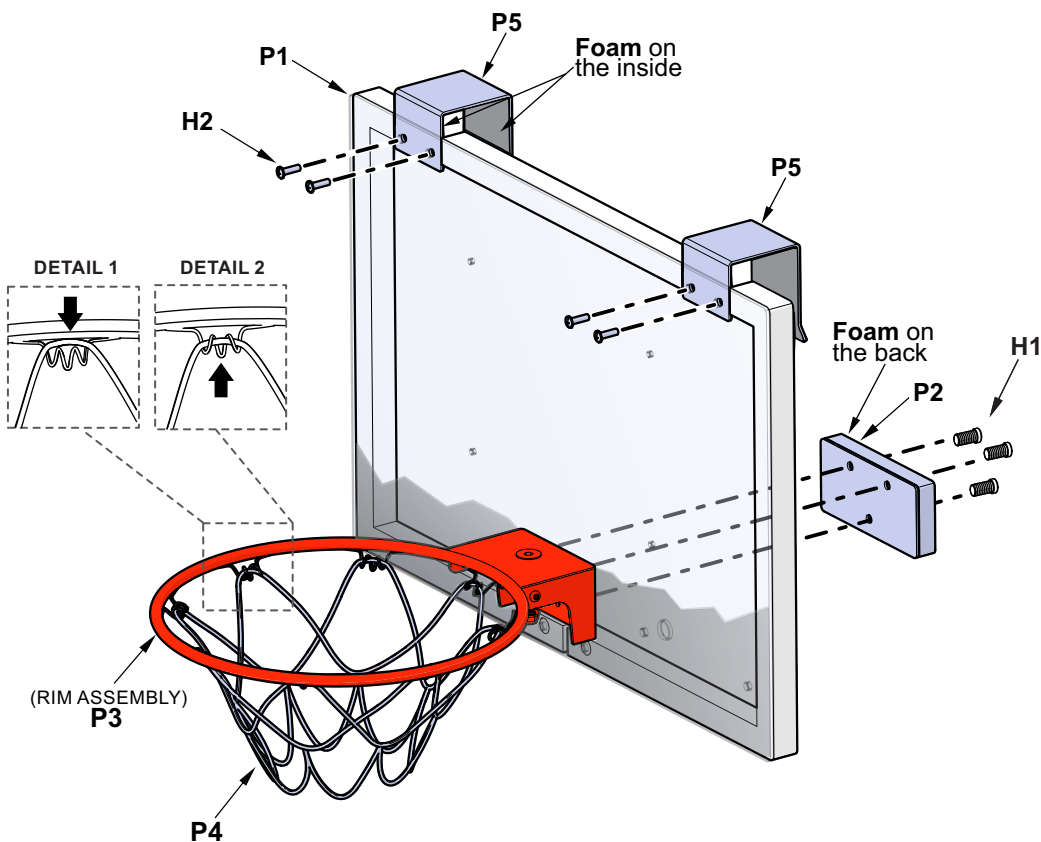

STEP 4

Carefully insert the **H8** clips into the four holes in the front of the Backboard.

STEP 5

Attach LED Panel **P6** to the back of the backboard. Insert the **H8** clips from previous step into the holes of the LED Panel **P6** until the **H8** clips are all the way through and the panel is secure.

STEP 6

 
Attach Control unit /Battery box **P7** to the back of the backboard matching up the button and hole in the backboard. Insert **H9 (4 x 15mm)** Bolts **through the front holes** in the backboard, then through **P7** and into **H10** Acorn nuts. Tighten until **nuts H10** are snug and **P7** is securely attached. **Do not over-tighten.**

STEP 7

Carefully Insert male wire connector from LED panel **P6** to Female connector in Control unit /Battery box with IR Sensor **P7**. **See Detail 3.**

STEP 8

Peel double tape from two White Foam **P8** and attach to the back of LED Panel **P6**.

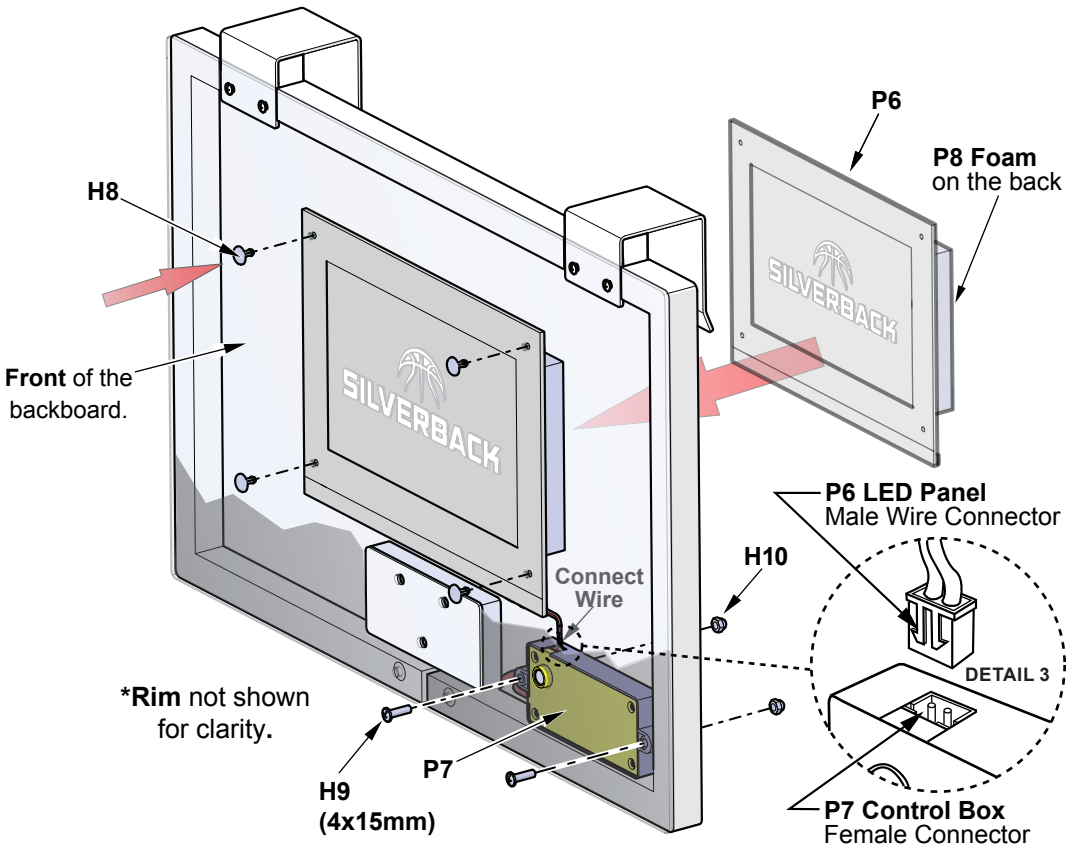

STEP 9

 
Insert IR Sensor from Control/Battery Box **P7** to the holes in front of the backboard. Insert two Bolts **H11 (4 x 20mm)** through the back of the backboard and through the IR Sensor **P7** and fasten with 2 acorn nuts **H10**.

STEP 10

Tuck wire in the space between the gap in the bottom of the backboard.

STEP 11

Unscrew Battery box cover and install three AAA Batteries (not provided). Reinstall cover and secure with cover screw.

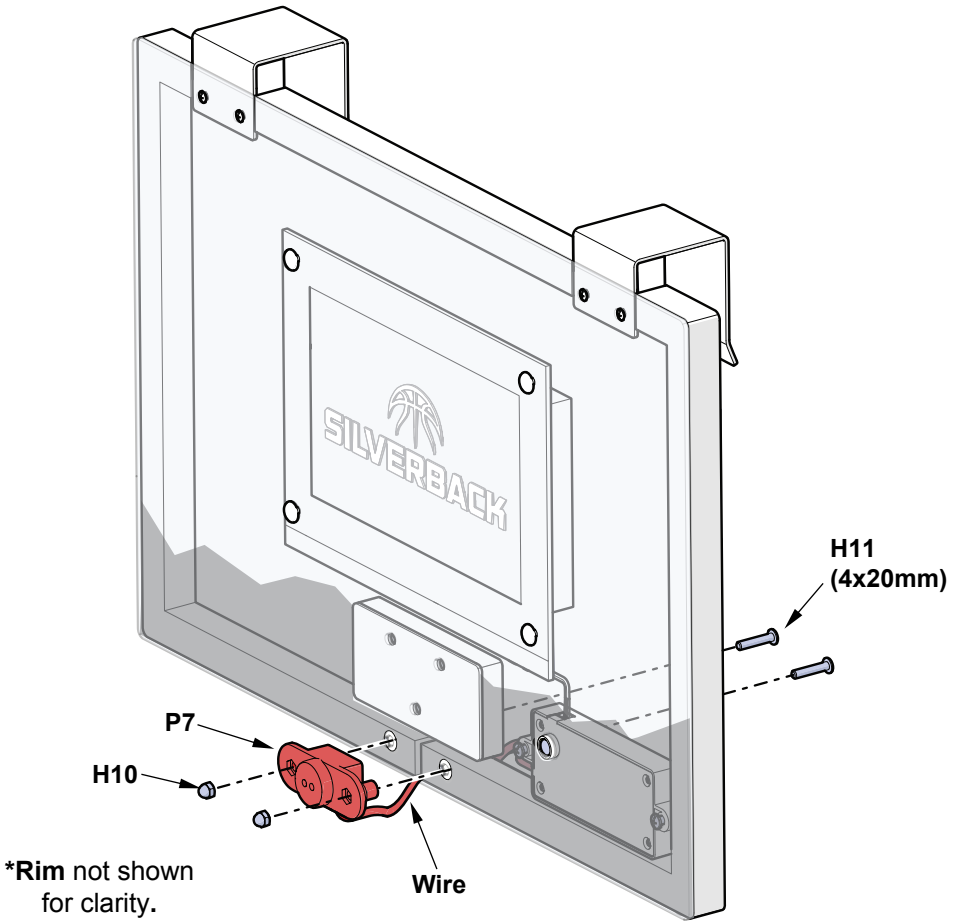

Replacement Parts for Silverback LED Mini Hoop - G02300W

H1	2300DPH1	Long Allen Head Bolt for Rim	3
H2	2300DPH2	Allen Head Bolt for Brackets	4
H3	2300DPH3	Breakaway Rim Bolt	1
H4	2300DPH4	Breakaway Rim Washer	1
H5	2300DPH5	Breakaway Rim Lock Nut	1
H6	2300DPH6	Rim Bolt (small)	2
H7	2300DPH7	Rim Lock Nut (small)	2
H8	2300DPH8	Plastic Clip	4
H9	2300DPH9	Control/Battery Box Bolt (4x15mm)	2
H10	2300DPH10	Control/Battery Box & IR Sensor Nut	4
H11	2300DPH11	IR Sensor Bolt (4x20mm)	2
T1	2300DPT1	Allen Wrench	2
P1	2300DPP1	Mini Hoop Backboard Assembly	1
P2	2300DPP2	Rim Mounting Plate	1
P3	2300DPP3	Mini Hoop Rim Assembly	1
P4	2300DPP4	Net	1
P5	2300DPP5	Mounting Bracket	1
P6	2300DPP6	LED Panel with Wire	2
P7	2300DPP7	Control/Battery Box with IR Sensor	1
P8	2300DPP8	White Foam	1
A1	2300DPA1	Mini Hoop Ball	2
A2	2300DPA2	Air Pump with Needle	1
K1	2300DPK1	Hardware Kit	1
M1	2300DPM1	Owner's Manual	1

